



Your Artificial Intelligence Companion

ERS-7

Explore the world with AIBO!

The ERA-7C1B is a soft carrying bag for taking out AIBO ERS-7 and accessories with you easily.

AIBO Carrying Bag for ERS-7

Operating instructions ERA-7C1B

The AIBO ERS-7 carrying bag consists of:



Notes on use

- For details on handling of AIBO, refer to the operating instructions supplied with "AIBO" ERS-7.
- This carrying bag is dedicated for AIBO ERS-7 model.
- Do not drop or bump the bag while AIBO is stored, as this may damage AIBO. When you store AIBO in the bag, be sure not to put extra strain onto any particular parts of AIBO.
- When you travel by air with AIBO, be sure to carry it with you onto the airplane.
- Do not store objects heavier than 6 kg in total.
- Do not leave AIBO when you store it in, or take it out from the bag.
- Do not leave the bag in direct sunlight or in a very hot place, such as a car parked in the sun or near a heater, as this may cause the colour of the bag to fade or deform or damage AIBO and the accessories. Store the bag in a dry, cool place.
- Design and specifications are subject to change without notice.
- Sony cannot be held responsible for any damages to the AIBO ERS-7, its accessories or any other items placed in this carrying bag as a result of negligent use.

Storing AIBO

1

Place AIBO into pause mode and remove the battery pack.

- > Press the pause button on AIBO's back and wait until the green light turns off.
- > Open AIBO's stomach cover, check that the battery pack/"Memory Stick" lock indicator is not red, then remove the battery pack.

Store the Accessory case as illustrated.

- > Ensure that the Accessory case is placed in the correct direction as illustrated.
- > Once all items are secured, close the AIBO Carrying bag with the zippers.

Now, let's go out with AIBO!

6



2



Open the AIBO case and place AIBO as illustrated.

- > Check that AIBO is stored properly and close the AIBO case.

Lift flap to reveal bottom department and store the station marker as illustrated.

- > Check that the station marker is flat before securing the flap.

3



4



Store the AC adapter, the battery pack, the pink ball, the energy station, the energy station foot stopper in the Accessory case as illustrated.

- > After storing the accessories, make sure that everything is secured, then close the zipper of the accessory case.

5



Store the AIBO case, the AIBOne toy holder, the energy station pole and AIBO cards as illustrated.

- > Ensure that the AIBO case is placed in the correct direction as illustrated.

like.no.other™

SONY

www.eu.aibo.com

© 2006 Sony Entertainment Robot Europe. All rights reserved. Sony, AIBO, Memory Stick and their logos are trademarks of Sony Corporation, Japan. Features and specifications are subject to change without notice. Sony disclaims any liability or responsibility for any typographical errors in this document.
Sony Entertainment Robot Europe, a division of Sony Service Centre (Europe) N.V., The Corporate Village, Da Vincilaan 7 D-1, B-1935 Zaventem, Belgium. ©, January 2006.