

SONY[®]



Operation Guide
NWZ-A726B / A728B / A729B

Digital Media Player

NWZ-A726B / NWZ-A728B / NWZ-A729B

About the Manuals


The following manuals are included with the player. Additionally, after installing software from the supplied CD-ROM, you can refer to the help provided within each software.

- Quick Start Guide explains set up, enabling you to import songs, videos and photos to a computer, and to transfer them to the player.
- Precautions explains important notes to prevent accidents.
- Troubleshooting explains symptoms, causes and remedies when the player has problems.
- This Operation Guide explains standard and advanced features, enabling you to make full use of the player and troubleshoot problems.

Browsing the Operation Guide




To use the buttons in the Operation Guide

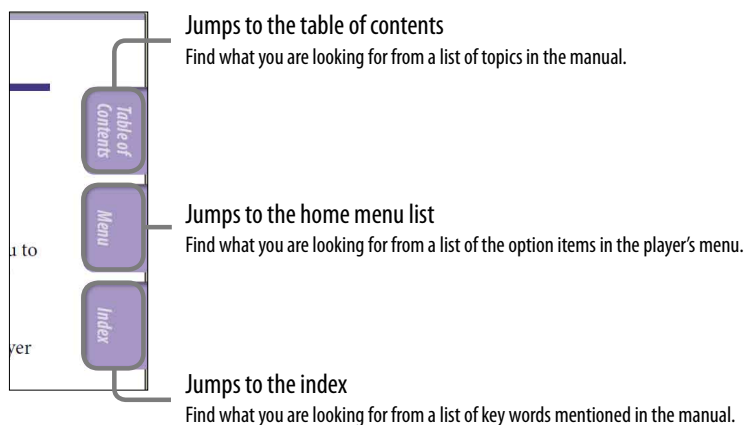Click the buttons located in the upper right of this manual to jump to “Table of Contents,” “Home Menu List,” or “Index.”




Continued ↓

Hints

- You can jump to the indicated page by clicking a page number in the table of contents, in the Home menu list, or in the index.
- You can jump to the indicated page by clicking a page reference indication (e.g.,  page 4) on each page.
- To search for a reference page by keyword, click the “Edit” menu, select the “Search” feature of the Adobe Reader to display the navigation frame, type the keyword into the Search text box, and click “Search.”
- Once you jump to another page, you can jump to the previous or next page by clicking the  or  button located at the bottom of the Adobe Reader screen.
- Operation procedures may differ, depending on your Adobe Reader version.

To change the page layout

The buttons at the bottom of the Adobe Reader screen enable you to select how pages are displayed.

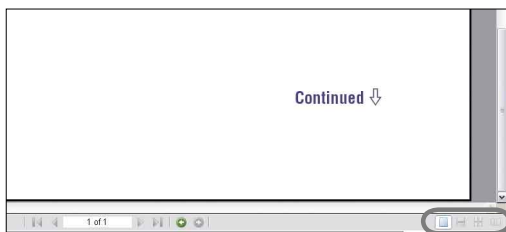

Single Page

Pages are displayed one at a time. When you scroll, the display changes to a previous or succeeding page.

Continuous

Pages are displayed as a continuous roll of pages. When you scroll, the previous or next pages scroll up or down continuously.

Continuous - Facing

Two pages are displayed side by side with each pair part of a continuous roll of pages. When you scroll, the previous or next pairs of pages scroll up or down continuously.

Facing

Two pages are displayed side by side. When you scroll, the display changes to previous or succeeding pairs of pages.

Table of Contents

Supplied Accessories	8
About the bundled software	9
Parts and Controls	10
Front	10
Rear	12
Player Controls and Screens	13
How to use the 5-way button and screen....	14
Displaying the “Now Playing” Screen	19
Using the OPTION Button	20

Getting Started

Preparing the Player	21
Charging the Player	21
Turning the Player On and Off	22
Getting Data	23
Transferring Data	24

Playing Music

Searching for Songs (Music Library)	28
Searching for songs by song name.....	28
Searching for songs by album.....	29
Searching for songs by artist.....	30
Searching for songs by genre.....	31
Searching for songs by release year	32
Searching for songs by folder	33
Searching for songs by Rhapsody Channel	33
Searching for Songs by Initial Letter	34
Playing a Playlist	35
Searching for Songs Based on the Currently Playing Song	36
Playing Songs in Random Order (Intelligent Shuffle)	37
Playing songs released in the same year in random order (Time Machine Shuffle)	37
Playing all songs in random order.....	39
Displaying the Now Playing Screen Each Time the Songs Switch (New Song Pop Up)	40
Deleting Songs from Music Library	41
Displaying the Music Option Menu	42

Setting the Music

Setting the Play Mode (Play Mode)	44
Setting the Playback Range	46
Setting the Album Display Format	47
Setting the Sound Quality (Equalizer) ...	49
Changing the sound quality	49
Customizing sound quality.....	51
Making the Sound More Vibrant (VPT(Surround))	52
Listening with Clear Stereo Sound (Clear Stereo)	54
Correcting Sound in the High Range (DSEE(Sound Enhancer))	55
Adjusting the Volume Level (Dynamic Normalizer)	57

Playing Videos

Playing a Video	58
Setting the Video Orientation	60
Setting the Display of the Video Screen	62
Setting the Zoom Function	63
Playing Videos Continuously	65
Setting the Video List Display Format	66
Playing Only Video Sound	67
Deleting Videos from the Video Library	68
Displaying the Video Option Menu	69

Playing Photos

Displaying a Photo.....	70
Setting the Photo Orientation	72
Setting the Display of the Photo Screen	74
Playing a Slide Show	75
Setting the Slide Show Play Mode.....	76
Setting the Interval of a Slide Show	77
Setting the Photo List Display Format	78
Deleting Photos from Photo Library	79
Displaying the Photo Option Menu....	80

Common Settings

Limiting the Volume (AVLS (Volume Limit))	81
Turning Off the Beep Sound	82
Setting a Screensaver Type.....	83
Setting a Screensaver Time	84
Adjusting the Brightness of the Screen (Brightness)	85
Setting the Current Time (Set Date-Time).....	86
Setting the Date Format.....	88
Setting the Time Format.....	89
Displaying the Player Information (Unit Information).....	90
Resetting to Factory Settings (Reset all Settings)	91
Formatting Memory (Format)	92

Using Rhapsody Service

Listening to Rhapsody Channels	94
Adding songs transferred from Rhapsody Channels to the “Music Library”.....	95
Displaying the Account Information	96

Useful Facts

Maximizing Battery Life	97
What are Format and Bit Rate?.....	98
What is audio format?	98
What is video format?	99
What is photo format?.....	99
Storing Data	100
Upgrading the Player’s Firmware	101

Troubleshooting

Troubleshooting.....	102
Messages.....	114

Additional Information

Precautions	118
About Copyrights	125
Specifications	128
Index	133

Note

- Depending on the country/region in which you have purchased the player, some models may not be available.

Home Menu List

You can display the Home menu by pressing and holding the BACK/HOME button of the player. The Home menu is the starting point of each function, such as playing songs, videos and photos, searching for songs and changing settings.



Intelligent Shuffle

- Time Machine Shuffle 37
- Shuffle All..... 39

Initial Search

- Artist 34
- Album 34
- Song 34

Rhapsody Channels 94

Photo Library 70

Music Library

- All Songs..... 28
- Album 29
- Artist 30
- Genre 31
- Release Year..... 32
- Folder..... 33
- Rhapsody Channels 33

Video Library 58

Continued ↓

**Settings**

— Music Settings	
— Play Mode	44
— Playback Range.....	46
— Equalizer.....	49
— VPT(Surround)	52
— DSEE(Sound Enhance)	55
— Clear Stereo.....	54
— Dynamic Normalizer	57
— Album Display Format.....	47
— New Song Pop Up	40
— Video Settings	
— Zoom Settings.....	63
— Video Orientation	60
— Display	62
— Continuous Playback.....	65
— Video List Format	66
— On-Hold Display	67
— Photo Settings	
— Photo Orientation	72
— Display	74
— Slide Show Repeat	76
— Slide Show Interval	77
— Photo List Format	78
— Common Settings	
— Unit Information.....	90
— AVLS (Volume Limit).....	81
— Beep Settings.....	82
— Screensaver.....	83
— Brightness.....	85
— Set Date-Time.....	86
— Date Display Format.....	88
— Time Display Format.....	89
— Reset all Settings.....	91
— Format	92
— Account Information	96

**Playlists 35****Now Playing 19**

Supplied Accessories

Please check the accessories in the package.

- Headphones (1)
- USB cable (1)
- Earbuds (Size S,L) (1)
- Attachment (1)
Use when connecting the player to the optional cradle, etc.



- Stand (1)



- CD-ROM*¹*² (1)
 - Best Buy Digital Music Store
 - MP3 Conversion Tool
 - Media Manager for WALKMAN
 - Windows Media Player 11
 - Operation Guide (PDF file)

- Quick Start Guide (1)

*¹ Do not attempt to play this CD-ROM in an audio CD player.

*² Depending on the country/region in which you have purchased the player, the bundled software may be different.


How to install the earbuds correctly

If the earbuds do not fit your ears correctly, low bass sound may not be heard.

To enjoy better sound quality, change the size of the earbuds or adjust the earbud position to sit on your ears comfortably and fit your ears snugly.

At purchase, M size earbuds are installed. If the earbuds do not fit your ears, try one of the other supplied sizes, S or L.

When you change the earbuds, turn to install them firmly on the headphones to prevent the earbud from detaching and remaining in your ear.

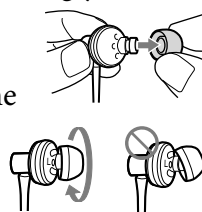

About the serial number

The serial number provided for this player is required for customer registration. The number is shown on the rear of the player.

Continued ↓

About the bundled software

Best Buy Digital Music Store

With the Best Buy Digital Music Store, you can purchase individual songs, and/or sign up for a membership to create a subscription account. Songs that are purchased, subscribed to, or ripped from CDs using this software can be transferred to your player. However, to transfer purchased or subscription songs, you need to apply for a membership. For details, refer to the Help dropdown in the software, or visit the following web site:

<http://www.bestbuy.com/digitalmusic>

Windows Media Player 11

Transferable files: Music (MP3, WMA), Photo (JPEG)

Windows Media Player can import audio data from CDs and transfer data to the player. When you use copyright protected WMA audio files, use this software.

For details on operation, refer to the Help of the software or visit the following website.

<http://www.support.microsoft.com/>

Hint

- Some computers that already have Windows Media Player 10 installed may encounter file limitation (AAC, video files, etc.) that can be transferred by dragging and dropping. If you install Windows Media Player 11 from the supplied CD-ROM, you can solve this problem, then you can transfer by dragging and dropping again. Before installing Windows Media Player 11 on your computer, make sure to check whether your software or service corresponds to Windows Media Player 11.

Media Manager for WALKMAN

Transferable files: Music (MP3, WMA/AAC^{*1}, WAV), Photo (JPEG), Video (MPEG-4 Simple Profile, AVC (H.264/AVC) Baseline Profile), RSS feed (music, video)

Media Manager for WALKMAN can transfer music, photos or videos from the computer to the player and import audio data from CDs. Media Manager for WALKMAN can also subscribe to RSS feeds and transfer the music and video files that have been downloaded from RSS channels.

For details on operation, refer to the Help of the software. Audio files (AAC) or videos can be also transferred by dragging and dropping using Windows Explorer as well as Media Manager for WALKMAN.

^{*1} DRM files are not compatible.


MP3 Conversion Tool

ATRAC files need to be converted using bundled MP3 Conversion Tool. (Audio data purchased from a music distribution service on the Internet cannot be converted.)

Note that when converting ATRAC files to MP3 files, the ATRAC files are not deleted. You can also delete the ATRAC files by configuring the setting.

Parts and Controls

Front

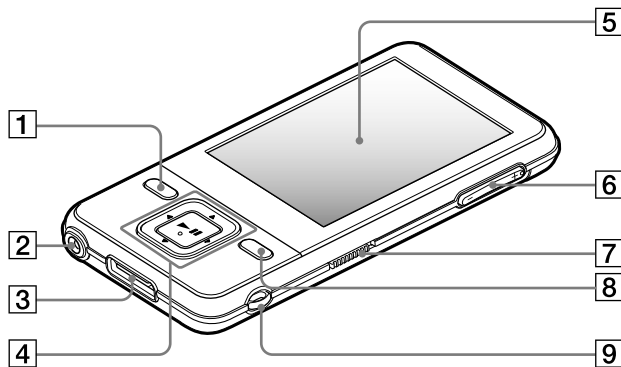

1 BACK/HOME button*¹

Press to go up one list screen level, or to return to the previous menu. Press and hold the BACK/HOME button to display the Home menu (☞ page 13).

2 Headphone jack

For connecting the headphones. Insert the jack pin until it clicks into place. If the headphones are connected improperly, the sound from the headphones may not sound right.

3 WM-POR-T jack

Use this jack to connect the supplied USB cable, or optional peripheral devices, such as supported accessories for the WM-POR-T.

4 5-way button*²

Starts playback and enables navigation of the player's on-screen menus (☞ page 14).

5 Display


The display may vary, depending on functions (☞ page 13).

6 VOL +*²/- button


Adjusts the volume.

Continued ↓

7 HOLD switch

You can protect the player against accidental operation by using the HOLD switch when carrying it. By sliding the HOLD switch to the direction of the arrow , all operation buttons are disabled. If you slide the HOLD switch to the opposite position, the HOLD function is released.

8 OPTION/PWR OFF button*¹

Displays the option menu ( page 20, 42, 69, 80).

If you press and hold the OPTION/PWR OFF button, screen turns off and the player enters standby mode.


If you press any button while the player is in standby mode, the “Now Playing” screen, etc., appears and the player is ready for operation.


Furthermore, if you leave the player in standby mode for about a day, the player turns completely off automatically. If you press any button when the player is turned off, the start up screen appears first, then the “Now Playing” screen appears.

Note

- The player consumes battery power very slightly even when it is in standby mode. Therefore, the player might turn completely off in a short time, depending on the power remaining in the battery.

9 Strap hole


Used to attach a strap (sold separately). You can attach the supplied stand and a strap at the same time ( page 12).

*¹ Functions marked with  on the player are activated if you press and hold the corresponding buttons.

*² There are tactile dots. Use them to help with button operations.

Continued 

Rear

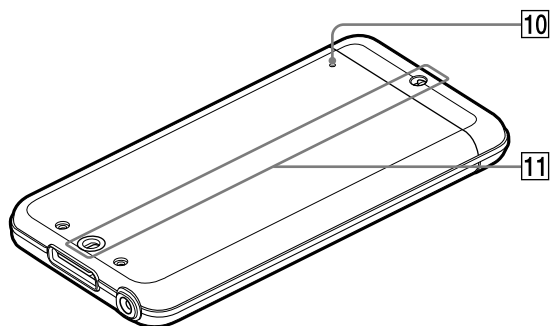

10 RESET button


Resets the player when you press the RESET button with a small pin, etc. (☞ page 102).

11 Accessory hole (type I)

Used to attach the supplied stand or the optional accessories.

Using the supplied stand

You can stand up the player using the supplied stand.

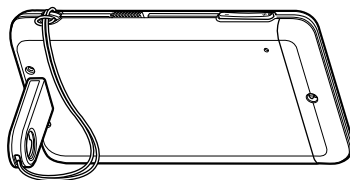


Notes

- When standing the player with the stand, be careful not to press down or knock the player.
- Stand up the player horizontally as shown. Do not stand it up vertically.

Player Controls and Screens


Use the 5-way button and the BACK/HOME button to navigate through screens, play songs, videos and photos, and to change the player's settings. The Home menu appears when you press and hold the BACK/HOME button. The diagram below shows how the screen changes when you press various operation buttons. For example, the player's screen changes as shown below when you select "Music Library" – "Album" from the Home menu.

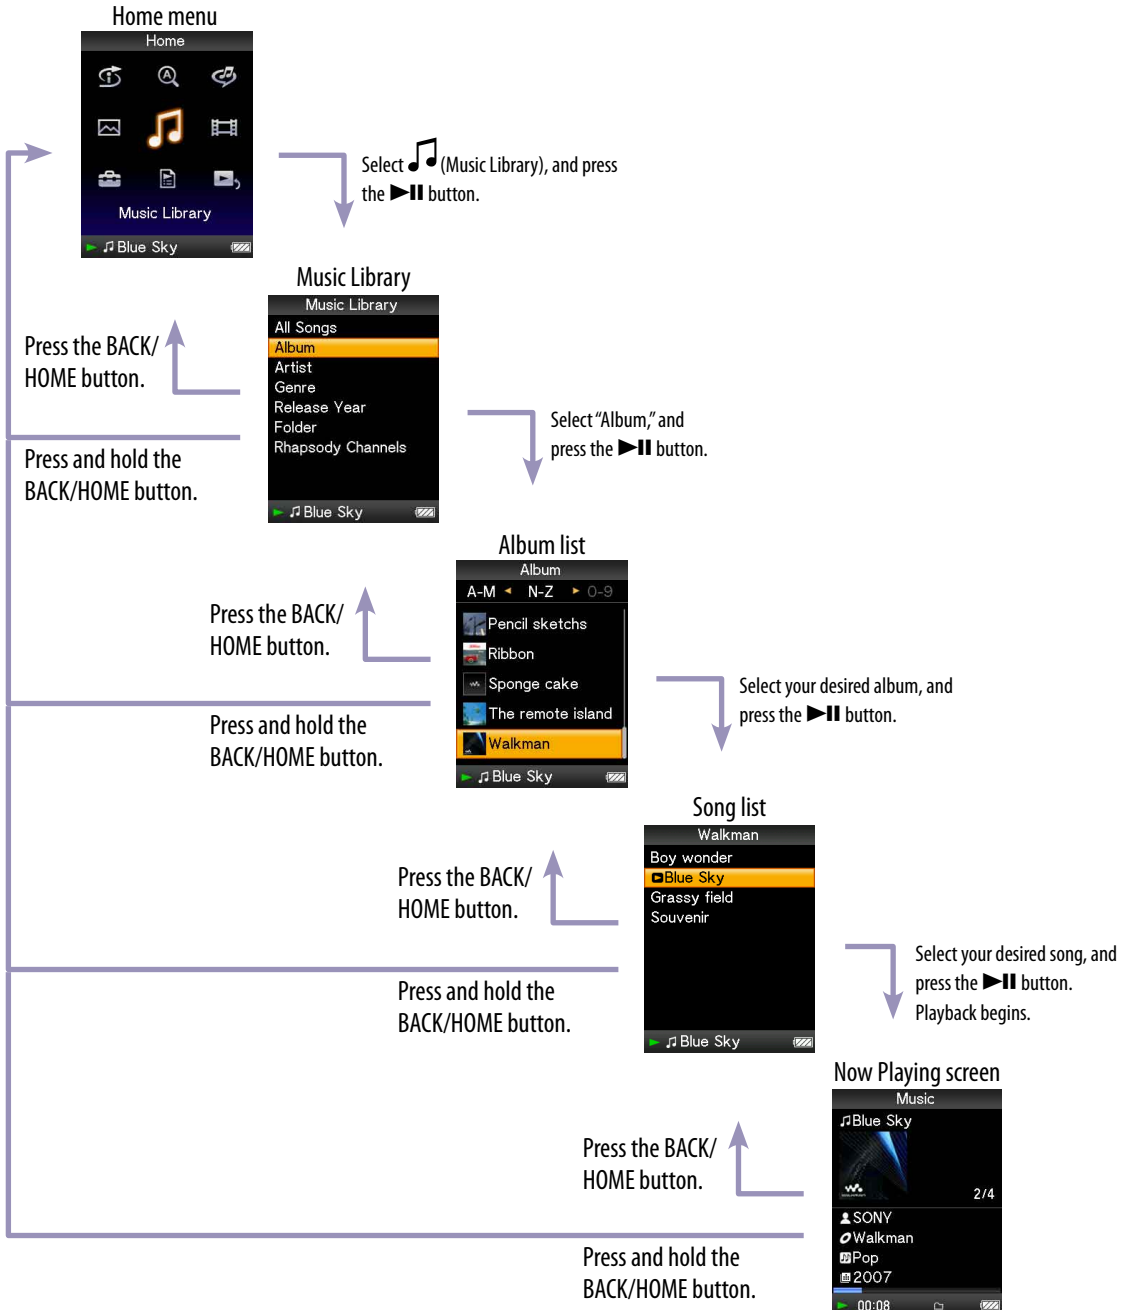

How to use the 5-way button and screen


The 5-way button performs different functions on the list screens, on the thumbnail screens, and on the “Now Playing” screen.

*1 There are tactile dots. Use them to help with button operations.

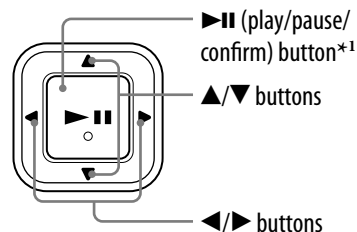

How to use the 5-way button on the list screen

Music

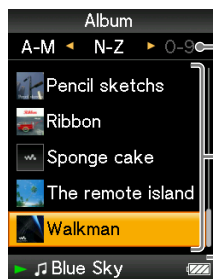

Index

The initials of song and album, etc., names in the list section appear.


List

Information area

The information of the song, icons, etc., appears (☞ page 18).

Buttons	Description
▶	Confirms the item of the list. Press and hold to play back all songs in the selected item.
▲/▼	Moves the cursor up or down. Press and hold to scroll up or down faster.
◀/▶	Changes screens, or, when an index is displayed, moves the cursor left or right to display a list of items. Displays the previous or next screen of the list, when the index is not displayed.


Video

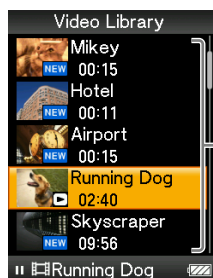

List


Buttons	Description
▶	Confirms the item of the list.
▲/▼	Moves the cursor up or down. Press and hold to scroll up or down faster.
◀/▶	Displays the previous or next screen of the list.

Photo

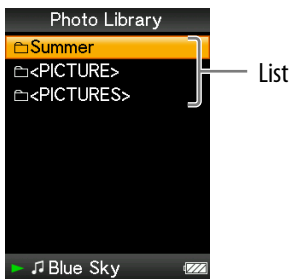

Buttons	Description
▶	Confirms the item of the list. Press and hold to play back a slide show of photos in the selected item.
▲/▼	Moves the cursor up or down. Press and hold to scroll up or down faster.
◀/▶	Displays the previous or next screen of the list.

How to use the 5-way button on the thumbnail*¹ screen

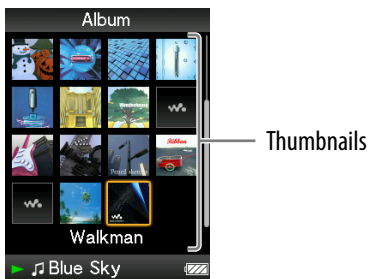


Buttons	Description
▶	Displays the song list of the selected item during music operation, or displays the selected item during photo operation. Starts play back of the selected item during video operation.
▲/▼	Moves the cursor up or down. Press and hold to scroll up or down faster.
◀/▶	Move the cursor left or right. Press and hold to move the cursor left or right faster and then scroll up or down through the thumbnail screens.

*¹Thumbnail refers to a reduced size image of a piece of cover art, one scene of a video, or a photo. To display thumbnails for albums, see [☞](#) page 47; for video files, see [☞](#) page 66.

How to use the 5-way button on the “Now Playing” screen

Music

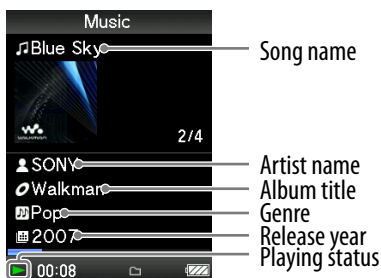


Buttons	Description
▶	Starts song playback. When playback starts, ▶ appears on the display, and if the ▶ button is pressed again, appears and playback pauses.* ¹ This pause and resume feature is available only on the “Now Playing” screen.
▲/▼	Press the ▲/▼ button to display the cursor and scroll through the displayed items. When genre, album title, or other characteristic is selected by the cursor, press the ▶ button to display a list of artists matching the genre of the currently playing song or the song lists of the album that is currently playing.* ²
◀/▶	Moves playback to the beginning of the current, previous, or next song when pressed once or repeatedly. Press and hold to scan a playing song backwards or forwards quickly.

*¹ If there is no operation for more than 3 minutes while a song is paused, the screen turns off and the player enters standby mode.

*² When playing back Rhapsody Channels, you cannot search for the list of songs, albums, or artists by pressing the ▲/▼ button to select the displayed items and pressing the ▶|| button.

Continued ↓

Video

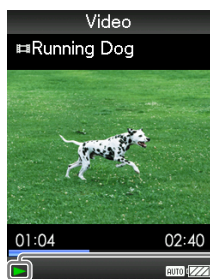

Playing status

When you change the display orientation to horizontal, the ▲/▼/◀/▶ button orientation and functions will also be changed.


Buttons	Description
▶	Starts video playback. When playback starts, ▶ appears on the display, and if the ▶ button is pressed again, appears and playback pauses.* ¹ You can play and pause videos only from the “Now Playing” screen of the video.
▲/▼	Press the ▲/▼ button to find the beginning of the next, previous or the currently playing video.* ²
◀/▶	Press the ◀/▶ button to scan a playing video backwards or forwards quickly. During playback, the speed of fast forward/backward changes through 3 levels by repeatedly pressing the ◀/▶ button ((×10), (×30), (×100)). By pressing and holding, the speed increases 1 level, and by releasing, returns to the normal playback. While pausing playback, the scene moves forward or backward slightly by pressing the ◀/▶ button.

*¹ If there is no operation for more than 3 minutes while a video is paused, the screen turns off and the player enters standby mode.

*² If “Continuous Playback” is set to “On,” you can find the beginning of the previous or next video from the currently playing video (🔍 page 59).

Continued ↓

Photo

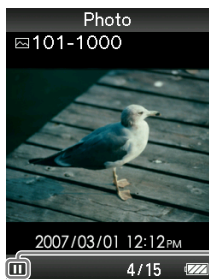

Playing status

When you change the display orientation to horizontal, the ▲/▼/◀/▶ button orientation and functions will also be changed.

Buttons	Description
▶	▶ appears on the display and a slide show starts. If the ▶ button is pressed again, appears and playback pauses.* ¹
◀/▶	Displays the previous or next photo.

*¹ When playing songs while a slide show is paused, the screen goes dark if there is no operation for the period set in “Screensaver Timing” (☞ page 84). When the song playback and a slide show accompanying it are paused, and there is no operation for more than 3 minutes, the screen turns off and the player enters standby mode.

About the information area


The icons, shown in the table below, appears in the information area. The icons vary by the playback status, settings or the screens.


For details about the icons, see each reference pages.

Icons	description
▶, , ▶▶, ◀◀, ▶▶, ◀◀, ◀, ▶, ◀, ▶, etc	The icons of the playback status <ul style="list-style-type: none"> Play back, Pause, Fast forward/backward, Move to the beginning of the next, current or previous song Go forward /backward slightly or quickly (☞ page 59)
🎵, 👤, 📺, 🖼️	The icons of the song title, the artist name, the video title or the photo title
↻, SHUF, etc	The icons of the play mode <ul style="list-style-type: none"> The play mode is set to “Repeat” or “Shuffle” (☞ page 45). “Slide Show Repeat” is set to “On” (☞ page 76)
📁	The icons of the playback range <ul style="list-style-type: none"> The playback range is set to “Selected Range” (☞ page 46)
🔊, H, etc	The icons of the sound effect setting (☞ page 50)
CONT, AUTO, FULL	The icons of the video setting <ul style="list-style-type: none"> “Continuous Playback” is set to “On” (☞ page 65) “Zoom Settings” is set to “Auto” or “Full” (☞ page 63)
🔋	The icon of the remaining of the battery (☞ page 21)

Displaying the “Now Playing” Screen

You can quickly display “Now Playing” screen from various screens.

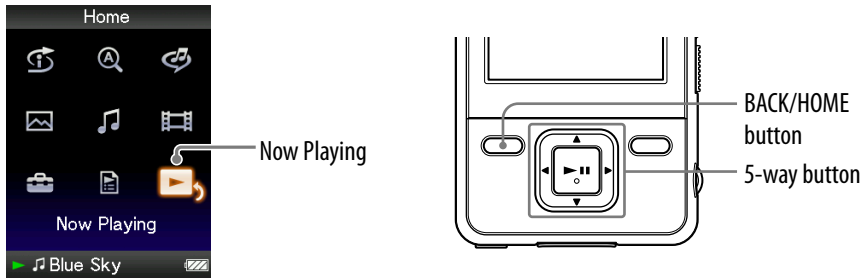


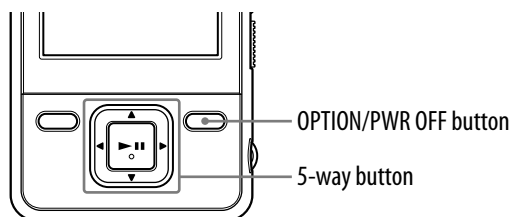
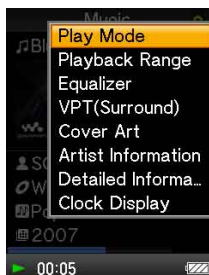
- 1 **Press and hold the BACK/HOME button until the Home menu appears.**
- 2 **Press the ▲/▼/◀/▶ button to select  (Now Playing), and then press the ►|| button to confirm.**
Detailed information about the currently playing content file appears.

Hints

- You can display the “Now Playing” screen by pressing the OPTION/PWR OFF button to select “Now Playing.”
- When playing videos or photos, you can select “Go to the song playback screen” from the option menu to display the song playback screen.

Using the OPTION Button

You can change various settings of each function when you press the OPTION/PWR OFF button. The OPTION/PWR OFF button is useful since you can display the setting screen immediately without selecting setting items from the  (Settings) menu of the Home menu.



1 Press the OPTION/PWR OFF button.

The option menu appears.

2 Press the ▲/▼/◀/▶ button to select the item, and then press the ►|| button to confirm.

The screen of the selected setting item appears or the selected command is performed. The items of the option menu differ, depending on the screen on which you press the OPTION/PWR OFF button.

For details, see the following pages.

- “Displaying the Music Option Menu” (🔗 page 42)
- “Displaying the Video Option Menu” (🔗 page 69)
- “Displaying the Photo Option Menu” (🔗 page 80)


Hint


- When there are multiple menus, display other menus by pressing the ◀/▶ button.


Preparing the Player


Charging the Player

The player's battery is recharged while the player is connected to a running computer.


When you connect the player to your computer, use the supplied USB cable. When you insert the connector of the USB cable into the player, do so with the  mark facing up.

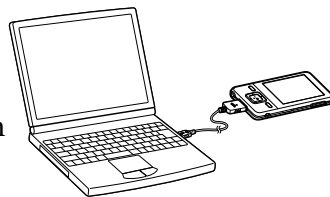

When the remaining battery indication of the display shows: , charging is completed (charging time is approx. 3 hours).

When you use the player for the first time, or if you have not used the player for a long time, recharge it fully (to  in the remaining battery indication of the display).

Recharging the player

The battery icon in the display changes as shown below. See  page 131 on battery duration.




As the battery power gets lower, the bar of the icon decreases. If “LOW BATTERY. Please Charge.” appears, you cannot use the player. In this case, charge the battery by connecting to your computer.

Notes

- Charge the battery in an ambient temperature of between 5 to 35 °C (41 to 95 °F).
- The number of times the battery can be recharged before it is used up is approximately 500 times. This number may vary, depending on the conditions under which you use the player.
- The battery indicator on the display is only an estimate. For example, one section of black in the indicator will not always indicate exactly one-fourth of the battery's charge.
- “Do not disconnect.” appears in the display while the player accesses the computer. Do not disconnect the supplied USB cable while “Do not disconnect.” appears or the data being transferred may be damaged.
- The control buttons on the player are all disabled while it is connected to a computer.
- Some USB devices connected to the computer may interfere with the proper operation of the player.
- We do not guarantee the recharge of the battery using personally assembled computers or modified computers.
- If the computer enters a power saving mode, such as the sleep or hibernation mode, while the player is connected via the USB cable, the player's battery is not charged. Instead, the player continues to draw power from the battery, discharging it.
- Do not leave the player connected for extended periods to a laptop computer that is not connected to AC power, because the player may discharge the computer's battery.

Continued 

Turning the Player On and Off

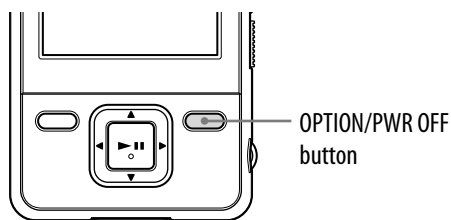

To turn on the player

Press any button to turn the player on.

To turn off the player


If you press and hold the OPTION/PWR OFF button (see page 11), the player enters the standby mode and the screen turns off to save battery power. If you press any button while in the standby mode, the “Now Playing” screen, etc., appears and the player is ready for operation.

Furthermore, if standby mode is retained for about a day, the player turns off completely automatically. If you press any button when the player is turned off, the start up screen appears first, then the “Now Playing” screen appears.

Getting Data

To enjoy transferring data to the player, you need to import data, such as audio, video or photos from the Internet, audio data from CDs, photo data from a digital camera, or video data from a video camera to your computer before using the player. To import audio data from CDs, you need to use appropriate software for importing.


For details about supported file formats, see “Supported file format” (🔍 page 128).

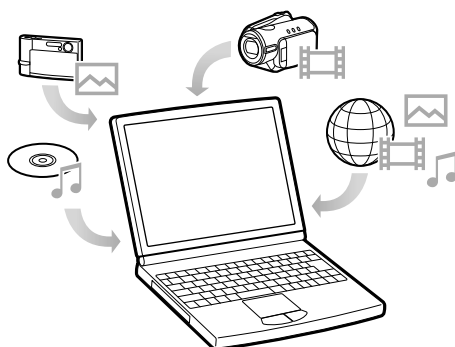

Transferring Data

You can directly transfer data by dragging and dropping using Windows Explorer on your computer.

Playable data hierarchy has rules. To transfer data properly, see the following instructions.

For details about the bundled software that can transfer data, see  page 9.


Hints

- Some computers that already have Windows Media Player 10 installed may encounter file limitation (AAC, video files, etc.) that can be transferred by dragging and dropping. If you install Windows Media Player 11 (for details, see “Installing the Operation Guide and software” of “Quick Start Guide”) from the supplied CD-ROM, you can solve this problem, then you can transfer by dragging and dropping again. Before installing Windows Media Player 11 on your computer, make sure to check whether your software or service corresponds to Windows Media Player 11.
- Data hierarchy may differ, depending on your computer environment.

Notes

- Do not disconnect the USB cable while “Do not disconnect.” appears on the player or the data being transferred may be damaged.
- You cannot change folder names or delete the “MUSIC,” “MP_ROOT,” “VIDEO,” “PICTURES” and “PICTURE” folders.
- Do not change folder or file names directly under the “MP_ROOT” folder or “MPE_ROOT” folder. Otherwise, they will not be displayed on the player.

1 Connect the player to your computer using the supplied USB cable.

Insert the connector of the USB cable into the player with the  mark facing up.

2 Select the player on Windows Explorer, and then drag and drop files.

The player appears on Windows Explorer as [WALKMAN.]


Continued 

For songs

(On Windows Explorer)

Drag and drop files or folders into the “MUSIC” folder.

However, beyond the 8th level, neither files nor folders will be recognized.

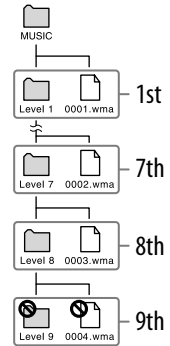

(On the player)

Folders are displayed in the folder name order first, then files are displayed in the file name order. In this case, upper or lower case letters are not distinguished.




Continued ↓

For videos

(On Windows Explorer)

Drag and drop files or folders into the “VIDEO” folder.

On the 1st level, the “VIDEO” folder will recognize either a file or a folder. Files on the 2nd level will be recognized. However, folders beyond the 1st level and files beyond the 2nd level will not be recognized.

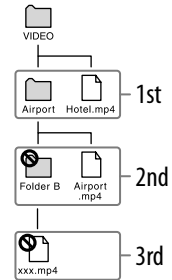

(On the player)

Video files are displayed in the order they are transferred by dragging and dropping. (The latest data is at the top.)



Hint

- You can set JPEG files as a thumbnails of video files, by placing JPEG files in the corresponding video folders. When you display the video list, you can see the thumbnails (small pictures to display on the menu) for the video files on the player.

To display a thumbnail for a video file, create a JPEG file (horizontal 160 × vertical 120 dots, extension: .jpg) and name it the same as the desired video file, then store it in the video file folder.




Continued ↓

For photos

(On Windows Explorer)

Drag and drop files or folders into the “PICTURE” folder.


On the 1st level, the “PICTURE” folder will recognize either a file or a folder. Only files on the 2nd level will be recognized by “PICTURE” folder. However, beyond the 2nd level, neither files nor folders will be recognized.

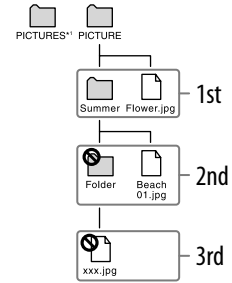

*1 Data hierarchy of “PICTURES” is the same as the “PICTURE” folder.

(On the player)



Folders under the “PICTURE” folder is displayed in alphabetical order. Files in the 1st level of the “PICTURE” folder are stored in the <PICTURE> folder.

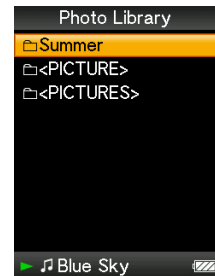


Searching for Songs (Music Library)

Songs transferred by Windows Explorer, or another transfer capable software can be played back on the player.

You can search for songs by title of songs, albums, artist, and genre, etc.

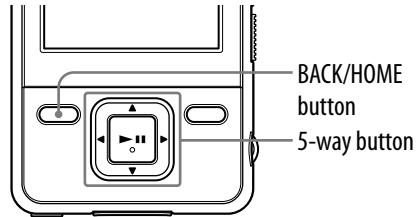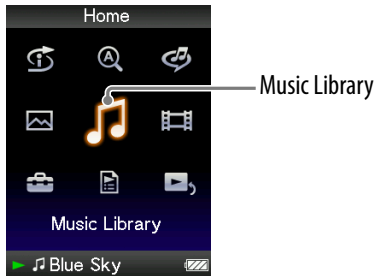


Searching for songs by song name



- 1 **Press and hold the BACK/HOME button until the Home menu appears.**
- 2 **Press the ▲/▼/◀/▶ button to select  (Music Library), and then press the ►|| button to confirm.**
The “Music Library” screen appears.
- 3 **Press the ▲/▼/◀/▶ button to select “All Songs,” and then press the ►|| button to confirm.**
The song list appears.
- 4 **Press the ▲/▼/◀/▶ button to select a song, and then press the ►|| button to confirm.**
The song you selected starts to play back and the playback of songs continues in order.

Continued ↓

Searching for songs by album


- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Music Library), and then press the ►|| button to confirm.**
The “Music Library” screen appears.
- 3 Press the ▲/▼/◀/▶ button to select “Album,” and then press the ►|| button to confirm.**
The album list appears.
- 4 Press the ▲/▼/◀/▶ button to select an album, and then press the ►|| button to confirm.**
The song list for the selected album appears.
- 5 Press the ▲/▼/◀/▶ button to select a song, and then press the ►|| button to confirm.**
The song you selected starts to play back and the playback of songs continues in order.

Hints



- You can play all songs of a list item by selecting the item from the list and pressing and holding the ►|| button in step **4**.
- You can change the display format of the album list ( page 47).
- You can select the playback range of songs ( page 46).

Continued ↓

Searching for songs by artist


- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Music Library), and then press the ►|| button to confirm.**
The “Music Library” screen appears.
- 3 Press the ▲/▼/◀/▶ button to select “Artist,” and then press the ►|| button to confirm.**
The artist list appears.
- 4 Press the ▲/▼/◀/▶ button to select an artist, and then press the ►|| button to confirm.**
The album list for the selected artist appears.
- 5 Press the ▲/▼/◀/▶ button to select an album, and then press the ►|| button to confirm.**
The song list for the selected album appears.
- 6 Press the ▲/▼/◀/▶ button to select a song, and then press the ►|| button to confirm.**
The song you selected starts to play back and the playback of songs continues in order.

Hints



- You can play all songs of a list item by selecting the item from the list and pressing and holding the ►|| button in steps **4** to **5**.
- You can change the display format of the album list ( page 47).
- You can select the playback range of songs ( page 46).

Continued ↓

Searching for songs by genre


- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Music Library), and then press the ►|| button to confirm.**
The “Music Library” screen appears.
- 3 Press the ▲/▼/◀/▶ button to select “Genre,” and then press the ►|| button to confirm.**
The genre list appears.
- 4 Press the ▲/▼/◀/▶ button to select a genre, and then press the ►|| button to confirm.**
The artist list for the selected genre appears.
- 5 Press the ▲/▼/◀/▶ button to select an artist, and then press the ►|| button to confirm.**
The album list for the selected artist appears.
- 6 Press the ▲/▼/◀/▶ button to select an album, and then press the ►|| button to confirm.**
The song list for the selected album appears.
- 7 Press the ▲/▼/◀/▶ button to select a song, and then press the ►|| button to confirm.**
The song you selected starts to play back and the playback of songs continues in order.

  Hints


- You can play all songs of a list item by selecting the item from the list and pressing and holding the ►|| button in steps **4** to **6**.
- You can change the display format of the album list ( page 47).
- You can select the playback range of songs ( page 46).

Continued ↓

Searching for songs by release year

- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Music Library), and then press the ►|| button to confirm.**
The “Music Library” screen appears.
- 3 Press the ▲/▼/◀/▶ button to select “Release Year,” and then press the ►|| button to confirm.**
The list of release years appears.
- 4 Press the ▲/▼/◀/▶ button to select a year, and then press the ►|| button to confirm.**
The artist list for the selected release year appears.
- 5 Press the ▲/▼/◀/▶ button to select an artist, and then press the ►|| button to confirm.**
The song list for the artist, selected from the release year, appears.
- 6 Press the ▲/▼/◀/▶ button to select a song, and then press the ►|| button to confirm.**
The song you selected starts to play back and the playback of songs continues in order.

Hints

- You can play all songs of a list item by selecting the item from the list and pressing and holding the ►|| button in steps **4** to **5**.
- You can select the playback range of songs ( page 46).

Continued ↓

Searching for songs by folder

When you transfer data to the “MUSIC” folder by dragging and dropping in Windows Explorer, up to the 8th level under the “MUSIC” folder will appear and can be played back. Even if you use another transfer capable software for transferring songs, you can still search for songs by folder.

1 Press and hold the BACK/HOME button until the Home menu appears.

2 Press the ▲/▼/◀/▶ button to select  (Music Library), and then press the ►|| button to confirm.

The “Music Library” screen appears.


3 Press the ▲/▼/◀/▶ button to select “Folder,” and then press the ►|| button to confirm.

The folder list or the song appears.

4 Press the ▲/▼/◀/▶ button to select a folder or song, and then press the ►|| button to confirm.

When you select a folder in step **3**, the song or folder list(s) appear. When you select a song in step **3**, the playback screen appears, then the song playback starts. Repeat step **4** if necessary until the desired song appears. The song you selected starts to play back and the playback of songs continues in order.

Hint

- You can select the playback range of songs ( page 46).

Notes



- Up to 8 folder levels can be recognized.
- You cannot play all songs of a folder even if you select a folder from the list and press and hold the ►|| button in step **4**.


Searching for songs by Rhapsody Channel

When you add songs transferred from Rhapsody Channels into the “Music Library”, you can search for the songs by Rhapsody Channel. For details, see “Adding songs transferred from Rhapsody Channels to the “Music Library”” ( page 95).

Searching for Songs by Initial Letter



You can search for songs by the initial letter of the artist name, album title, or song name.

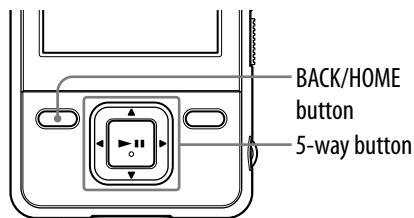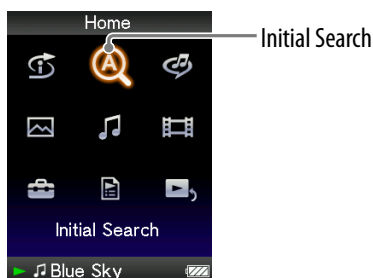


- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Initial Search), and then press the ►|| button to confirm.**
The list of categories you can search appears.
- 3 Press the ▲/▼/◀/▶ button to select a category, and then press the ►|| button to confirm.**
A screen appears that enables you to select a character.
- 4 Press the ▲/▼/◀/▶ button to select an initial character, and then press the ►|| button to confirm.**
When the search finishes, the results are displayed.
When you select “Artist” or “Album,” you can narrow the search results and select a specific song.
When “Artist” or “Album” is selected and you press and hold the ►|| button, all songs on the item are played.

Playing a Playlist

You can play lists of songs (playlists). Also, you can create playlists using the bundled Windows Media Player 11, or another transfer capable software. However, some playlists may not be recognized by the player, depending on software. For details on operation, refer to the Help or maker of the software.

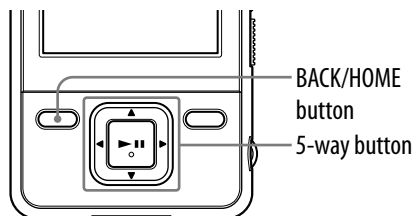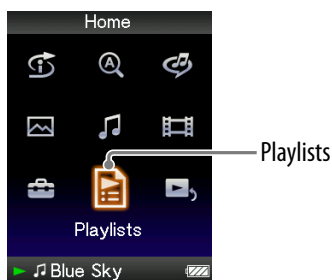



- 1 **Press and hold the BACK/HOME button until the Home menu appears.**
- 2 **Press the ▲/▼/◀/▶ button to select  (Playlists), and then press the ►|| button to confirm.**
The list of playlists appears.
- 3 **Press the ▲/▼/◀/▶ button to select a playlist, and then press the ►|| button to confirm.**
The song list appears.
- 4 **Press the ▲/▼/◀/▶ button to select a song, and then press the ►|| button to confirm.**
The song you selected starts to play back and the playback of songs continues in order.


Hint

- You can play all songs of a playlist by selecting the playlist from the list of playlists and pressing and holding the ►|| button in step 3.

Searching for Songs Based on the Currently Playing Song



You can search for other songs, albums, and artists by the song information of the currently playing song.

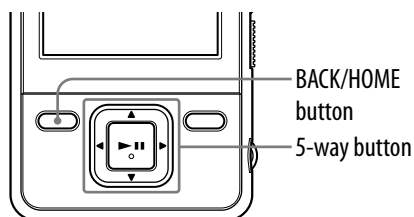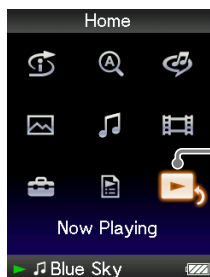

- 1 **Press and hold the BACK/HOME button until the Home menu appears.**
- 2 **Press the ▲/▼/◀/▶ button to select , (Now Playing), and then press the ►|| button to confirm.**
The “Now Playing” screen of the currently playing song appears.
- 3 **Press the ▼ button to display a cursor and select an item in which you want to search for songs, and then press the ►|| button to confirm.**
The following lists appear, depending on the item you selected.
 - “Artist”: The album list of the currently playing artist.
 - “Album”: The song list of the currently playing album.
 - “Genre”: An artist list in the same genre as the currently playing artist.
 - “Release Year”: An artist list from the same release year as the currently playing song.

Playing Songs in Random Order (Intelligent Shuffle)

The player offers 2 different random modes (also known as shuffle play).

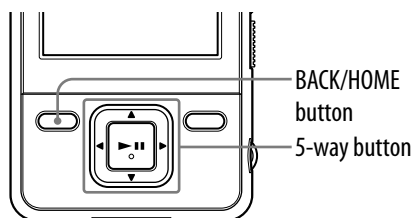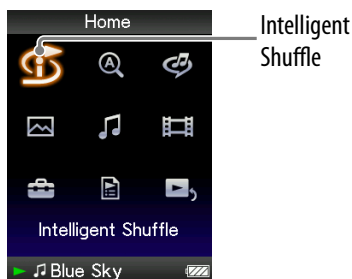

Playing songs released in the same year in random order (Time Machine Shuffle)

The player randomly selects a release year and plays all transferred songs of that year in random order.

1 Press and hold the BACK/HOME button until the Home menu appears.



2 Press the ▲/▼/◀/▶ button to select  (Intelligent Shuffle), and then press the ►|| button to confirm.

The screen used to select a shuffle mode appears.

3 Press the ▲/▼/◀/▶ button to select “Time Machine Shuffle,” and then press the ►|| button to confirm.

A release year is randomly selected, the songs of that year are shuffled, and playback starts.

  Hints

- When you start “Intelligent Shuffle” play, the play mode changes to “Shuffle” or “Shuffle&Repeat” ( page 45). Even if you cancel “Intelligent Shuffle,” the “Shuffle” or “Shuffle&Repeat” setting for the play mode is kept.
- When you start the “Time Machine Shuffle” play, the playback range is set to “Selected Range” ( page 46). Even if you cancel “Time Machine Shuffle,” the setting of the “Selected Range” is kept.
- “Intelligent Shuffle” play is automatically canceled by any of the following operations:
 - Starting playback of a song by selecting it from the “Music Library,” etc.
 - Changing the play mode.
 - Changing the playback range.
 - Playing a video.

Continued ↓

Notes


- While the animation that appears when the player is selecting a release year is displayed, the controls of the player cannot be operated.
- Songs with no release year data are not selected in “Time Machine Shuffle” play and are not played.
- A shuffle play of all songs begins if none of the songs on the player have a release year assigned to them.
- If all the songs on the player that have a release year assigned have the same release year, or some of songs have the same release year and the rest of them have no release year assigned, the animation that appears while release year is being selected is not displayed and playback starts.

Continued ↓

Playing all songs in random order


All the songs stored on the player are played in random order.

- 1 Press and hold the BACK/HOME button until the Home menu appears.**


- 2 Press the ▲/▼/◀/▶ button to select  (Intelligent Shuffle), and then press the ►|| button to confirm.**
The screen used to select a shuffle mode appears.



- 3 Press the ▲/▼/◀/▶ button to select “Shuffle All,” and then press the ►|| button to confirm.**
All songs are shuffled, and playback starts.


Hints

- When you start “Intelligent Shuffle” play, the play mode changes to “Shuffle” or “Shuffle&Repeat” ( page 45). Even if you cancel “Intelligent Shuffle,” the “Shuffle” or “Shuffle&Repeat” setting for the play mode is kept.
- “Intelligent Shuffle” play is automatically canceled by any of the following operations:
 - Starting playback of a song by selecting it from the “Music Library,” etc.
 - Changing the play mode.
 - Changing the playback range.
 - Playing a video.

 Displaying the Now Playing Screen Each Time the Songs Switch (New Song Pop Up)

If you set the screensaver to “Clock” or “Blank” ( page 83) and there is no operation for a while, the screen changes to the clock display or blank screen. However, if you set “New Song Pop Up” to “On,” the screen turns on automatically whenever a song changes to another song.

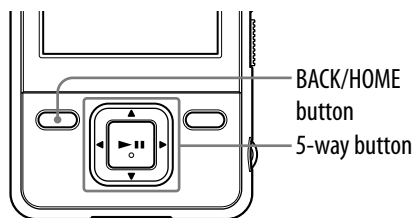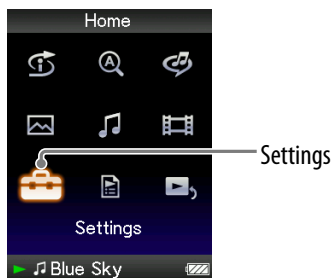

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select  (Settings), and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Music Settings,” and then press the **▶||** button to confirm.
The list of “Music Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “New Song Pop Up,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select “On,” and then press the **▶||** button to confirm.
The “Now Playing” screen appears whenever a song switches to another song.

If you do not want to display the “Now Playing” screen

Select “Off” in step 5. In this case, the “Now Playing” screen does not appear when a song switches to another song.

Note

- This function is deactivated when displaying photos during song playback.

Deleting Songs from Music Library

When you delete songs from “Music Library,” use the software you used to transfer the songs, or Windows Explorer.

For details about using the software, see the Help of the software.

Displaying the Music Option Menu

You can display the Music option menu by pressing the OPTION/PWR OFF button on a list screen (including the thumbnail screen), such as a song list, or on the music “Now Playing” screen. From the Music option menu, various settings of music are available.







The option items shown on the option menu vary, depending on the screen from which you display the option menu.

Option items appear on the list screen

Option items	Description/reference page
Now Playing	Displays the “Now Playing” screen.
Detailed Information	Displays the detailed information of a song, such as playing time, audio format, bit rate, and file name.
Play	Plays back all songs in the song list.
Album Display Format	Selects the album list format (🔍 page 47).

 Continued ↓

Option items appear on the “Now Playing” screen

Option items	Description/reference page
Play Mode	Sets the play mode ( page 44).
Playback Range	Sets the playback range ( page 46).
Equalizer	Customizes the sound quality ( page 49).
VPT(Surround)	Customizes the “VPT(Surround)” settings ( page 52).
Cover Art* ¹	Displays a cover art.
Detailed Information* ²	Displays the detailed information of a song, such as playing time, audio format, bit rate, and file name.
Artist Information	Displays the artist information* ³ ( page 95).
Clock Display	Displays the current time ( page 83).

*1 “Cover Art” screen



While the cover art screen is displayed, you can move songs to the previous or the next one by pressing the ◀▶ button.

- If the songs do not have cover art information, the default picture of the player will be displayed.
- The cover art only appears if the cover art information is included. You can set cover art using the supplied Windows Media Player 11, or another transfer capable software for setting cover art. For details on operation, refer to the Help or maker of the software. The cover art may not be displayed, depending on the cover art file format.

*2 “Detailed Information” screen





When you display this screen from the “Now Playing” screen, you can move songs to the previous or the next one by pressing the ◀▶ button.



- Playback time
- File format
- Bit rate
- Copyrighted files
- While playing back variable bit rate songs, “VBR” is shown. The displayed playback time and the progress bar are approximate.
- File name

- *³The artist information only appears when the currently playing song is from Rhapsody service. However, depending on the artist, the artist information may not exist.

Setting the Play Mode (Play Mode)

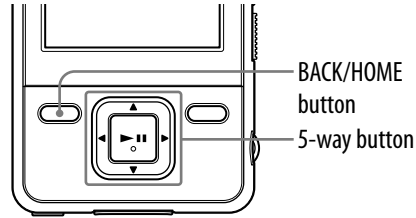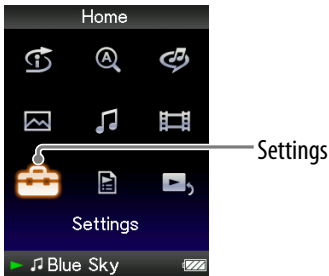The player offers a variety of play modes, including random play and selected repeat play.




- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select  (Settings), and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Music Settings,” and then press the **▶||** button to confirm.
The list of “Music Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “Play Mode,” and then press the **▶||** button to confirm.
The list of play modes appears.
- 5 Press the **▲/▼/◀/▶** button to select a play mode ( page 45), and then press the **▶||** button to confirm.
The list of “Music Settings” options reappears.




Hint

- You can also select the play mode from the “Now Playing” screen. Press the **OPTION/PWR OFF** button, and select “Play Mode” from the option menu.

Continued 

The list of play modes

The playback contents differ, depending on the setting of the playback range ( page 46).



Play mode type/icon	description
Normal/No icon	The songs within the playback range are played back in the song list order.
Repeat/ 	The songs within the playback range are played back in the song list order and the playback repeats.
Shuffle/ SHUF	The songs within the playback range are played back in random order.
Shuffle&Repeat/  SHUF	The songs within the playback range are played back in random order and the playback repeats.
Repeat 1 Song/ 	The current song or the song selected from a song list is played back repeatedly.



Note

- When you start “Intelligent Shuffle” play, the play mode changes to “Shuffle” or “Shuffle&Repeat.”

Setting the Playback Range

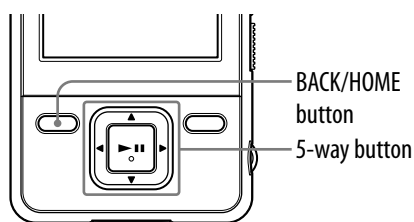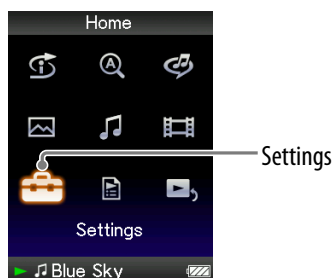You can set the playback range of songs.



- 1 **Press and hold the BACK/HOME button until the Home menu appears.**
- 2 **Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ►|| button to confirm.**
- 3 **Press the ▲/▼/◀/▶ button to select "Music Settings," and then press the ►|| button to confirm.**
The list of "Music Settings" options appears.
- 4 **Press the ▲/▼/◀/▶ button to select "Playback Range," and then press the ►|| button to confirm.**
The screen used to select the playback range appears.
- 5 **Press the ▲/▼/◀/▶ button to select the playback range, and then press the ►|| button to confirm.**
The player offers 2 types of playback range.
 - "All Range": Plays back all the songs in the "Music Library." When you want to play back albums in the "Music Library" in the song list order, select this.
 - "Selected Range":  appears on the display, and plays back songs only in the lists from which the playback starts (album list, artist list, etc.). (Default setting)

Hint


- You can select the playback range of songs from the "Now Playing" screen. Press the OPTION/PWR OFF button, and then select "Playback Range" from the option menu.

Notes


- When "Time Machine Shuffle" play starts, the playback range is automatically set to "Selected Range."
- When playing back Rhapsody Channels, you cannot set the playback range.

Setting the Album Display Format

The player offers 3 types of album list formats “Title Only,” “Title & Cover Art,” and “Cover Art Only.”

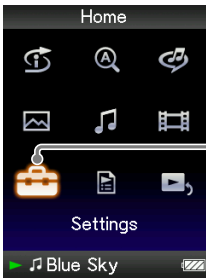


Settings

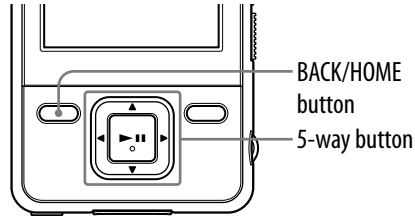


Notes


- The cover art only appears if the cover art information is included. You can set cover art using the bundled Windows Media Player 11, or another transfer capable software for setting cover art. For details on operation, refer to the Help or maker of the software.
- Some cover art is not displayed, depending on its file format.

- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ►|| button to confirm.**
- 3 Press the ▲/▼/◀/▶ button to select “Music Settings,” and then press the ►|| button to confirm.**
The list of “Music Settings” options appears.
- 4 Press the ▲/▼/◀/▶ button to select “Album Display Format,” and then press the ►|| button to confirm.**
The list of album display formats appears.
- 5 Press the ▲/▼/◀/▶ button to select the display format, and then press the ►|| button to confirm.**
The player offers 3 types of formats.

“Title Only”

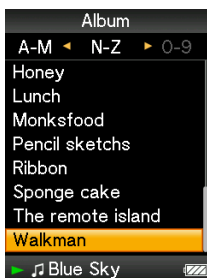

“Title & Cover Art” (Default setting)

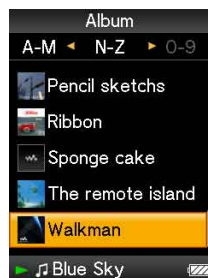

“Cover Art Only”





 **Hint**

- You can also select the album display format on the album list screen. Press the OPTION/PWR OFF button on the album list screen, and select “Album Display Format” from the option menu.



Setting the Sound Quality (Equalizer)

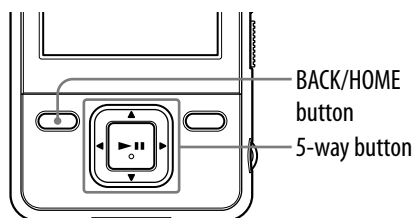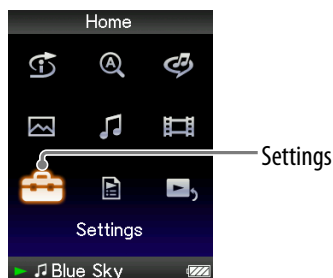You can set the sound quality according to the music genre, etc.



Changing the sound quality

You can customize the player's sound quality.

- 1 **Press and hold the BACK/HOME button until the Home menu appears.**
- 2 **Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ►|| button to confirm.**
- 3 **Press the ▲/▼/◀/▶ button to select "Music Settings," and then press the ►|| button to confirm.**
The list of "Music Settings" options appears.
- 4 **Press the ▲/▼/◀/▶ button to select "Equalizer," and then press the ►|| button to confirm.**
The list of equalizer settings appears.
- 5 **Press the ▲/▼/◀/▶ button to select the desired setting, and then press the ►|| button to confirm.**
The selected sound setting is applied, and the list of "Music Settings" options reappears.
For details of each equalizer option, see  page 50.

Continued ↓

To return to the normal sound quality

Select “None” in step 5, and then press the ►|| button to confirm.

Hint

 
 
 
 
 
 
 
- You can also set the sound quality from the “Now Playing” screen. Press the OPTION/PWR OFF button, and select “Equalizer” from the option menu.

Notes

- If your personal settings saved as “Custom 1” and “Custom 2” seem to produce a different volume level than the other settings, you may have to adjust the volume manually to compensate.
- The “Equalizer” setting is not applied while playing a video.

List of equalizer settings


The sound settings appear on the screen as the letters in parentheses.

Setting/icon	Description
None	Sound quality setting is not activated. (Default setting)
Heavy ( H)	Emphasizes high and low ranges for a powerful sound.
Pop ( P)	Stresses the middle range audio, ideal for vocals.
Jazz ( J)	Emphasizes high and low ranges for a lively sound.
Unique ( U)	Emphasizes high and low ranges, so that a small sound can be listened easily.
Custom 1 ( 1)	User-customizable sound settings for which you can adjust each frequency range individually. See  page 51 for details.
Custom 2 ( 2)	

Continued ↓

Customizing sound quality

You can preset the value of CLEAR BASS (bass) and 5 bands Equalizer as “Custom 1” or “Custom 2.”

- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ►|| button to confirm.**
- 3 Press the ▲/▼/◀/▶ button to select “Music Settings,” and then press the ►|| button to confirm.**

The list of “Music Settings” options appears.
- 4 Press the ▲/▼/◀/▶ button to select “Equalizer,” and then press the ►|| button to confirm.**

The list of equalizer settings appears.
- 5 Press the ▲/▼/◀/▶ button to select “Edit” displayed under “Custom 1” or “Custom 2” to change a value, and then press the ►|| button to confirm.**

The setting screen appears.
- 6 Press the ◀/▶ button to select a cursor for the CLEAR BASS or the frequency range setting, and press the ▲/▼ button to adjust the setting level.**

The CLEAR BASS can be set to any of 4 sound levels, and the 5 frequency ranges can be set to any of 7 sound levels.
- 7 Press the ►|| button to confirm.**

The list of equalizer settings reappears.
After you have adjusted the setting level, be sure to press the ►|| button to confirm. If you press the BACK/HOME button before you confirm, the setting will be canceled.



Note



- The settings of “Custom 1” or “Custom 2” are not applied while playing a video.

Making the Sound More Vibrant (VPT(Surround))

You can choose from “Studio,” “Live,” “Club,” “Arena,” “Matrix” or “Karaoke” according to your song using the “VPT*¹(Surround)” function. Setting to “Studio,” “Live,” “Club” or “Arena,” simulates these sound fields in the headphones.

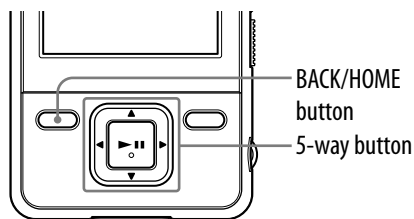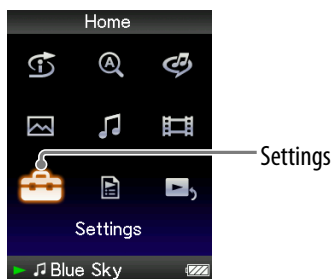Additionally, “Matrix” reproduces a rich acoustic sound field, and “Karaoke” suppresses the vocals.



- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select  (Settings), and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Music Settings,” and then press the **▶||** button to confirm.
The list of “Music Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “VPT(Surround),” and then press the **▶||** button to confirm.
The list of “VPT(Surround)” settings appears.
- 5 Press the **▲/▼/◀/▶** button to select the desired “VPT(Surround)” setting ( page 53), and then press the **▶||** button to confirm.

*¹ VPT, which stands for Virtual Phone Technology, is a proprietary sound processing technology developed by Sony.

To return to the normal sound quality

Select “None” in step 5, and then press the **▶||** button to confirm.

Continued ↓

 **Hint**

- You can also set the “VPT(Surround)” setting from the “Now Playing” screen. Press the OPTION/PWR OFF button, and select “VPT(Surround)” from the option menu.

Note

- The “VPT(Surround)” setting is not applied while playing a video.

List of “VPT(Surround)” settings



The sound settings appear on the screen as the letters in parentheses.


The sound becomes more vibrant in the progression from “Studio,” “Live,” “Club” to “Arena.”

Setting/icon	Description
None	“VPT(Surround)” setting is not activated. (Default setting)
Studio (S)	Creates the sound of a recording studio.
Live (L)	Creates the sound of a concert hall.
Club (C)	Creates the sound of a club.
Arena (A)	Creates the sound of an arena.
Matrix (M)	Reproduces an additional surround effect, and creates a natural, yet richly enhanced sound.
Karaoke (K)	Creates a stage-like sound field by suppressing vocal sound, and adding a surround effect to the music.

Listening with Clear Stereo Sound (Clear Stereo)

“Clear Stereo” enables individual left and right digital processing of the sound.

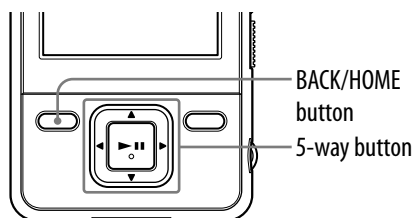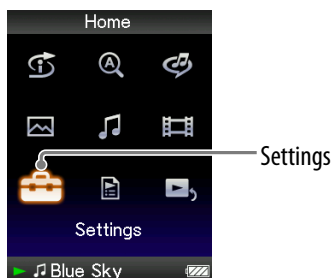


- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select  (Settings), and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Music Settings,” and then press the **▶||** button to confirm.
The list of “Music Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “Clear Stereo,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
 - “On”: Activates the “Clear Stereo” function when you use the supplied headphones.
 - “Off”: Disables the “Clear Stereo” function and plays back normal sound. (Default setting)

Notes


- The “Clear Stereo” setting is not applied while playing a video.
- The “Clear Stereo” function is designed to obtain maximum effect with the supplied headphones. The “Clear Stereo” effect may not be obtained with other headphones. When using other headphones, set “Clear Stereo” to “Off.”

Correcting Sound in the High Range (DSEE(Sound Enhancer))

By activating the “DSEE*¹(Sound Enhancer)” feature, you can hear a rich and natural sound almost exactly like the original source.

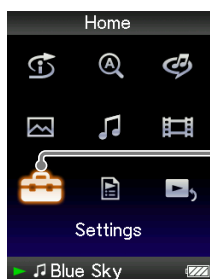

Settings

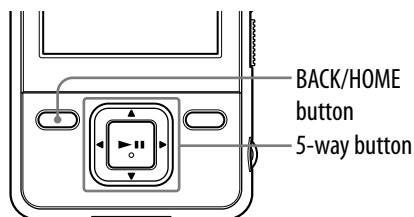

BACK/HOME
button

5-way button

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **⚙️ (Settings)**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “**Music Settings**,” and then press the **▶||** button to confirm.
The list of “Music Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “**DSEE(Sound Enhance)**,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
 - “On”: The “DSEE*¹(Sound Enhancer)” function is activated, and plays back naturally extended sound that is close to the original sound.
 - “Off”: Plays back normal sound. (Default setting)

*¹DSEE, which stands for Digital Sound Enhancement Engine, is a technology developed by Sony, to enhance the sound quality of compressed audio files by restoring high-range sound removed by the compression process.



Continued ↓

Notes

- The “DSEE(Sound Enhancer)” setting is not applied while playing a video.
- The “DSEE(Sound Enhancer)” function is not effective for songs with a file format that is not compressed, or songs that are of a high bit rate with no treble loss.
- In the case of songs of very low bit rate, the “DSEE(Sound Enhancer)” function will not be effective.

Adjusting the Volume Level (Dynamic Normalizer)

You can reduce the volume level between songs. With this setting, when listening to album songs in the shuffle play mode, the volume level between songs is moderated to minimize the difference in their recording levels.

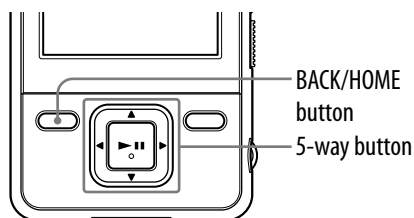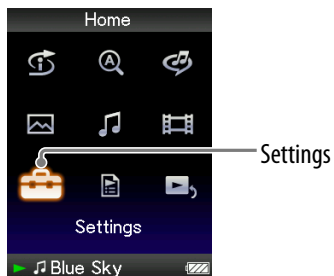


- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “**Music Settings**,” and then press the **▶||** button to confirm.
The list of “Music Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “**Dynamic Normalizer**,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
 - “On”: Minimizes the difference of the volume level between songs.
 - “Off”: Plays back songs with their original volume level as transferred. (Default setting)


Note

- The “Dynamic Normalizer” setting is not applied while playing a video.

 

 
 

Playing a Video

You can play videos by transferring video files to the player using Media Manager for WALKMAN or Windows Explorer. The player offers 2 types of play mode; play back one video file only (one file play) and play back all video files stored on the player continuously (Continuous Playback).

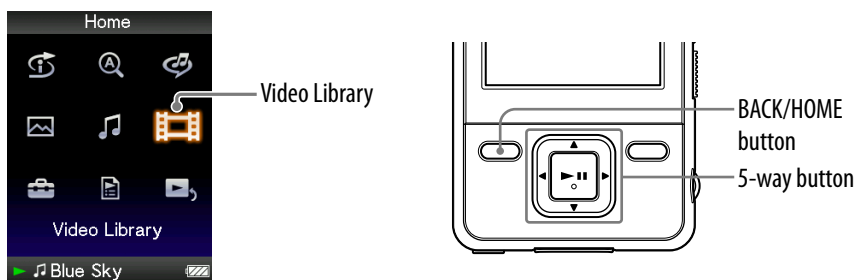

- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Video Library), and then press the ►|| button to confirm.**
The video list appears.
- 3 Press the ▲/▼/◀/▶ button to select a video to play, and then press the ►|| button to confirm.**
Playback starts.

Hints

- The display format of the video list in step **2** can be changed. For details, see “Setting the Video List Display Format” ( page 66).
- A video that has never been played back on the player appears with  icon in the video list.
- Set “Continuous Playback” to “On” when you want to play back all video files ( page 65).
- When “Display” is set to “On” ( page 62), the detailed information, such as the video title, its playback icon, and the elapsed playing time, etc., appears while the video is playing. The information disappears if this setting is set to “Off.”
- You can play back the video that was played back most recently. Press the OPTION/PWR OFF button on the video list, and then select “Most Recent Video” from the option menu.
- You can set thumbnails of video files when the video files are transferred to the player ( page 66).

Note

- Up to 1,000 video files can be displayed in the video lists.

On video playback operations

To (icon)	5-way button operation
Find the beginning of the next video (▶▶) ^{*1}	Press the ▼ button.
Find the beginning of the current video (◀◀) ^{*2}	Press the ▲ button.
Go forward slightly (●→) ^{*3}	Press the ▶ button while the video is paused.
Go backward slightly (←●) ^{*3}	Press the ◀ button while the video is paused.
Go forward quickly over the paused video (▶▶) ^{*4}	Press and hold the ▶ button while the video is paused.
Go backward quickly over the paused video (◀◀) ^{*4}	Press and hold the ◀ button while the video is paused.
Go forward quickly (▶▶ ₁ , ▶▶ ₂ , ▶▶ ₃)	Forward speed changes through 3 levels by repeatedly pressing the ▶ button (▶▶ ₁ (×10), ▶▶ ₂ (×30), ▶▶ ₃ (×100)). Press the ▶ button to exit the operation.
Go backward quickly (◀◀ ₁ , ◀◀ ₂ , ◀◀ ₃)	Backward speed changes through 3 levels by repeatedly pressing the ◀ button (◀◀ ₁ (×10), ◀◀ ₂ (×30), ◀◀ ₃ (×100)). Press the ▶ button to exit the operation.

*¹ Activates when “Continuous Playback” is set to “On” (ⓘ page 65).



*² When “Continuous Playback” is set to “On,” you can find the beginning of the previous video from the currently playing video by pressing the ▲ button twice.


*³ The interval used when going forward or backward varies, depending on the video.

*⁴ Fast forward/backward speed varies, depending on the length of the video.

Setting the Video Orientation

You can set the video orientation to “Vertical,” “Horizontal (right),” or “Horizontal (left).”

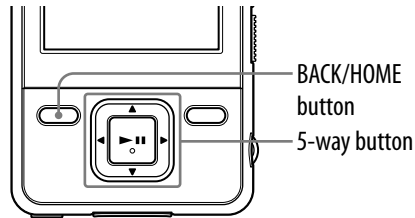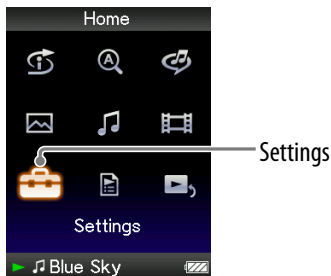

- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ►|| button to confirm.**
- 3 Press the ▲/▼/◀/▶ button to select “Video Settings,” and then press the ►|| button to confirm.**

The list of “Video Settings” options appears.
- 4 Press the ▲/▼/◀/▶ button to select “Video Orientation,” and then press the ►|| button to confirm.**

Continued ↓


5 Press the ▲/▼/◀/▶ button to select the desired setting, and then press the ►|| button to confirm.

- “Vertical”: Displays at 240×180 pixels. (Default setting)
- “Horizontal (right)” or “Horizontal (left)”: Displays at 320×240 pixels. The operation of the 5-way button is switched according to the setting of “Video Orientation” (🔧 page 17).

“Vertical”



4:3 source

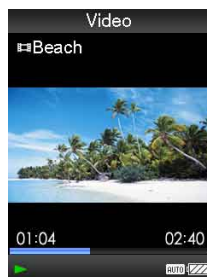

16:9 source

“Horizontal”



4:3 source



16:9 source

💡 Hints



- The video orientation can be set on the “Now Playing” screen of the video. Press the OPTION/PWR OFF button, and select “Video Orientation” from the option menu.
- When “Display” is set to “On” (🔧 page 62), the detailed information, such as the video title, its playback icon, and elapsed playing time, etc., appears. The information disappears if this setting is set to “Off.”

Note

- If “Video Orientation” is set to “Horizontal (right),” or “Horizontal (left),” the title of the video is not displayed.

Setting the Display of the Video Screen

You can display or hide the detailed information of a video, such as its title, playback icon, and elapsed playing time, etc., during playback.

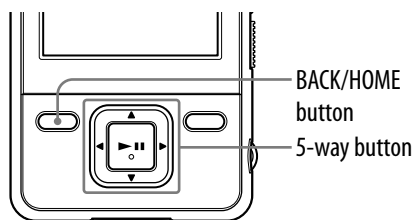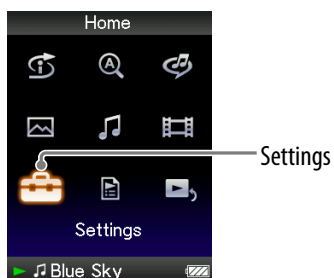

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Video Settings,” and then press the **▶||** button to confirm.
The list of “Video Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “Display,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
 - “On”: Displays the video title, playback status, or the elapsed time, etc.
 - “Off”: Hides the detailed information of the currently playing video and displays it only when you operate the player. (Default setting)

Hint



- The display setting can be set on the “Now Playing” screen of the video. Press the **OPTION/PWR OFF** button, and select “Display” from the option menu.


Note

- If “Video Orientation” is set to “Horizontal (right)” or “Horizontal (left),” the title of the video is not displayed.

Setting the Zoom Function

You can zoom in the currently playing video.

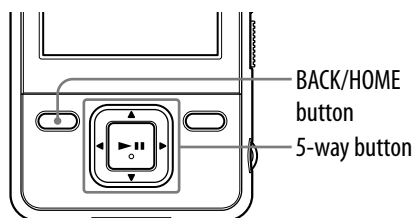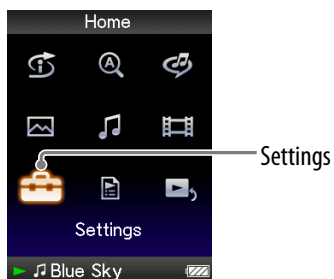


- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ►|| button to confirm.**
- 3 Press the ▲/▼/◀/▶ button to select "Video Settings," and then press the ►|| button to confirm.**

The list of "Video Settings" options appears.
- 4 Press the ▲/▼/◀/▶ button to select "Zoom Settings," and then press the ►|| button to confirm.**

Continued ↓

5 Press the ▲/▼/◀/▶ button to select the desired setting, and then press the ►|| button to confirm.

- “Auto”: The video image is enlarged/reduced by fully fitting it to the available display area, keeping the aspect ratio. When a 16:9 video image (oblong) is displayed, it appears with the long side of the video image fully fit to the screen, and black bands up and down on the screen. (Default setting)
- “Full”: The video image is enlarged/reduced by fully fitting it to the available display area, keeping the aspect ratio. When a 16:9 video image (oblong) is displayed, it appears with the short side of the video image fully fit to the available display area, with the right and left of the video image cut to fit.
- “Off”: The video image is not enlarged/reduced, and appears at the original resolution. If video resolution is too large, the left, right, top and bottom of the screen will be cut.

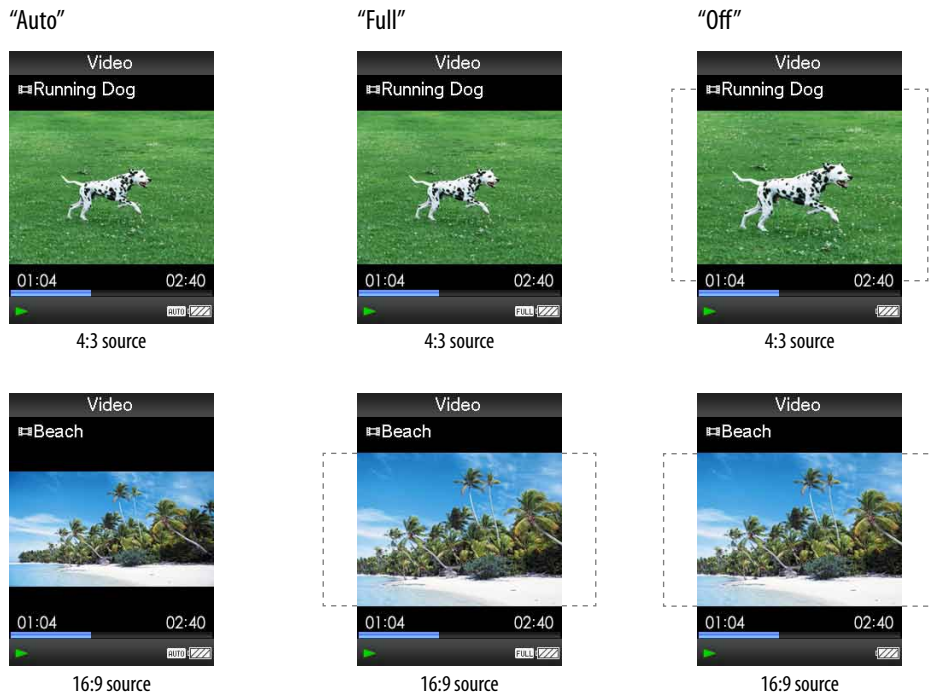


The dotted line frame represents the original video image size.

Hint


- The zoom setting can be set on the “Now Playing” screen of the video. Press the OPTION/PWR OFF button, and select “Zoom Settings” from the option menu.

Playing Videos Continuously

You can play back all videos stored on the player continuously.

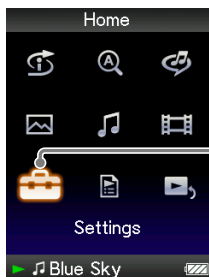

Settings

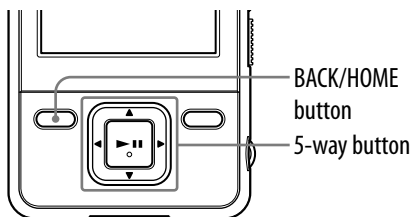


- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Video Settings,” and then press the **▶||** button to confirm.
The list of “Video Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “Continuous Playback,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
 - “On”: Plays back all videos stored on the player.
 - “Off”: Plays back one selected video. (Default setting)

Hint


- If you set “Continuous Playback” to “Off,” the player remembers the position where each video was stopped the last time. Therefore, you can start playback from the position where you last stopped the video.

Setting the Video List Display Format

The player offers 3 display formats. You can set the display format of the video list as “Title Only,” “Title With Thumbnail*1,” or “Thumbnail Only.”

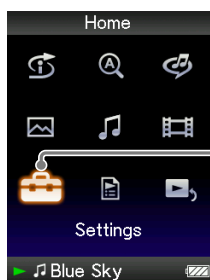


Settings

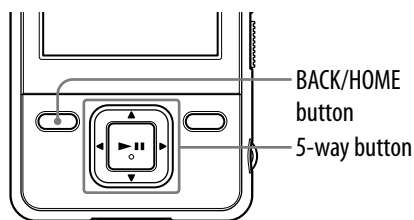

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Video Settings,” and then press the **▶||** button to confirm.
The list of “Video Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “Video List Format,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
 - “Title Only”: Displays only video titles in the video list.
 - “Title With Thumbnail”: Displays thumbnails, video titles, and the playing time. (Default setting)
 - “Thumbnail Only”: Displays only thumbnails in the video list.

*1Thumbnail refers to a reduced size image of one scene of a video.

Hints

- The video list display format can be set on the video list screen. Press the **OPTION/PWR OFF** button, and select “Video List Display Format” from the option menu.
- You can set thumbnails of video files when the video files are transferred to the player ( page 26).



Note


- Thumbnails may not be displayed, depending on the file format.

Playing Only Video Sound

You can choose options while the player is on hold during the playback of videos, either by playing a video normally or by turning off the screen and listening only to the sound of those videos.

Setting this option to “No” saves battery power and battery life will last longer.

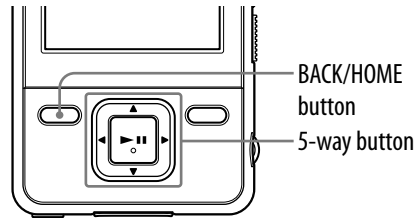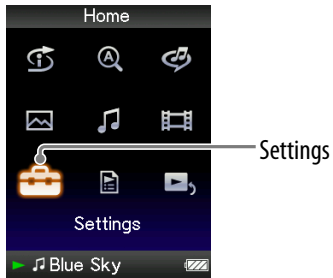

- 1 **Press and hold the BACK/HOME button until the Home menu appears.**
- 2 **Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ►|| button to confirm.**
- 3 **Press the ▲/▼/◀/▶ button to select “Video Settings,” and then press the ►|| button to confirm.**
The list of “Video Settings” options appears.
- 4 **Press the ▲/▼/◀/▶ button to select “On-Hold Display,” and then press the ►|| button to confirm.**
- 5 **Press the ▲/▼/◀/▶ button to select the desired setting, and then press the ►|| button to confirm.**
 - “Yes”: When the player is on hold, the button controls are deactivated, but videos will be played back normally. (Default setting)
 - “No”: When the player is on hold, the button controls are deactivated and the screen turns off, but the sound of the current video is played back.

Deleting Videos from the Video Library

When you delete the videos from “Video Library,” use Media Manager for WALKMAN or Windows Explorer.

For details about using Media Manager for WALKMAN, see its Help.

Displaying the Video Option Menu

You can display the Video option menu by pressing the OPTION/PWR OFF button on a list screen (including the thumbnail screen), such as the video list, or on the video “Now Playing” screen. From the Video option menu, various video settings are available.

The option items shown on the option menu vary, depending on the screen from which you display the option menu.


Option items appear on the list screen



Option items	Description/reference page
Now Playing	Displays the “Now Playing” screen.
Play from beginning	Finds the beginning of the video (☞ page 59).
Detailed Information	Displays file information, such as file size, resolution, video/audio compression format, and file name, etc.
Video List Display Format	Sets the video list display format (☞ page 66).
Most Recent Video	Starts playback of the video that was played most recently.
Go to the song playback screen	The “Now Playing” screen of the last played song appears.


Option items appear on the “Now Playing” screen

Option items	Description/reference page
Play from beginning	Finds the beginning of the video (☞ page 59).
Zoom Settings	Sets the zoom function (☞ page 63).
Video Orientation	Sets the video orientation (☞ page 60).
Display	Sets to display/not display video information (☞ page 62).
Detailed Information	Displays file information, such as file size, resolution, video/audio compression format, and file name, etc.
Brightness	Adjusts the brightness of the screen (☞ page 85).
Clock Display	Displays the current time (☞ page 83).
Go to the song playback screen	The “Now Playing” screen of the last played song appears.

Displaying a Photo


 
You can display photos by transferring photo files to the player using Media Manager for WALKMAN or Windows Explorer. You can either display one photo fully on the screen (single display) or a number of photos continuously (slide show play) ( page 75).

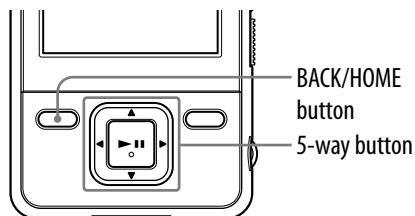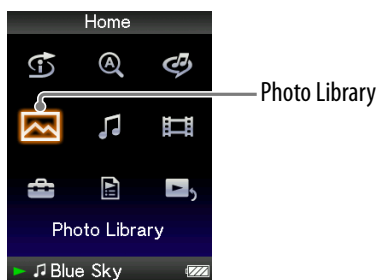


- 1 **Press and hold the BACK/HOME button until the Home menu appears.**
- 2 **Press the ▲/▼/◀/▶ button to select  (Photo Library), and then press the ►|| button to confirm.**
The list of photo folders appears.
- 3 **Press the ▲/▼/◀/▶ button to select a folder, and then press the ►|| button to confirm.**
The photo list appears.
- 4 **Press the ▲/▼/◀/▶ button to select a photo, and then press the ►|| button to confirm.**
The selected photo is displayed.
Press the ◀/▶ button to display the previous or next photos.

Continued ↓

 **Hints**



- Playback of songs continues even while you are searching for photos in the photo folder lists, or photo lists or when the “Now Playing” screen of the Photo is displayed.
- You can display the photos in a selected folder continuously (slide show play) ( page 75).
- You can arrange photos transferred to the player by folder. Select the player (as [WALKMAN]) using Windows Explorer, drag and drop a new folder just under the “PICTURES” or “PICTURE” folder. For details on data hierarchy, see  page 27.


Notes

- Up to 1,000 photo folders can be displayed in the photo folder lists, and up to 10,000 photos can be displayed in the photo lists.
- If there are photos stored in several folders, up to a maximum of 10,000 photos can be displayed.
- If the size of the photo is too large, or the photo file is damaged,  appears, and the photo cannot be displayed.
- If photos are not compliant with DCF 2.0 (or folder/file name is long., etc.), operation time (to display photos or slideshow) may take more time.

Setting the Photo Orientation

You can set the photo orientation to “Vertical,” “Horizontal (right),” or “Horizontal (left).”

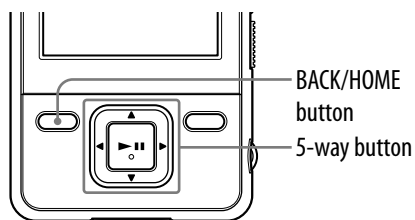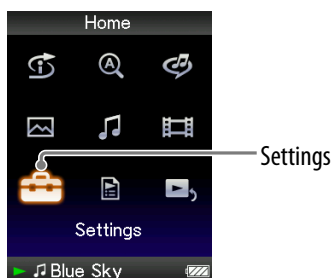

- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ► button to confirm.**
- 3 Press the ▲/▼/◀/▶ button to select “Photo Settings,” and then press the ► button to confirm.**
The list of “Photo Settings” options appears.
- 4 Press the ▲/▼/◀/▶ button to select “Photo Orientation,” and then press the ► button to confirm.**

Continued ↓



5 Press the ▲/▼/◀/▶ button to select the desired setting, and then press the ►|| button to confirm.

- “Vertical”: Displays at 240×180 pixels. (Default setting)
- “Horizontal (right)” or “Horizontal (left)”: Displays at 320×240 pixels. The operation of the 5-way button is switched according to the setting of “Photo Orientation” (🔍 page 18).

“Vertical”



“Horizontal”




💡 Hint

- The photo orientation can be set on the “Now Playing” screen of the photo. Press the OPTION/PWR OFF button, and select “Photo Orientation” from the option menu.

Setting the Display of the Photo Screen

You can display or hide the detailed information of a photo, such as an icon that shows playback status, etc., while displaying a photo.

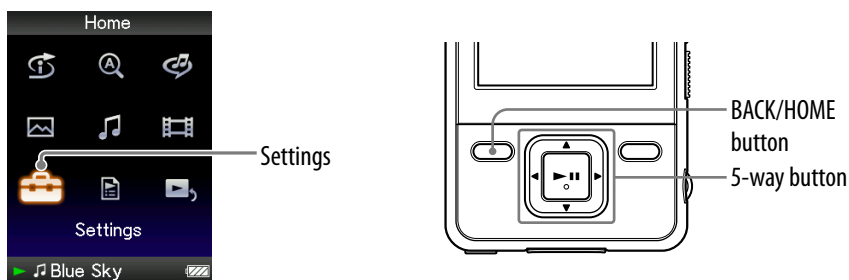


- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “**Photo Settings,**” and then press the **▶||** button to confirm.
The list of “Photo Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “**Display,**” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
 - “On”: Displays the title of the current photo, the shooting date, playback status, photo number, etc.
 - “Off”: Hides the information of the current photo. (Default setting)

Hint


- The display setting can be set on the “Now Playing” screen of the photo. Press the **OPTION/PWR OFF** button, and select “Display” from the option menu.


Note

- If “Photo Orientation” is set to “Horizontal (right),” or “Horizontal (left)” ( page 72), the title of the photo is not displayed, even if “Display” is set to “On.”

Playing a Slide Show

You can display photos in a selected folder continuously.

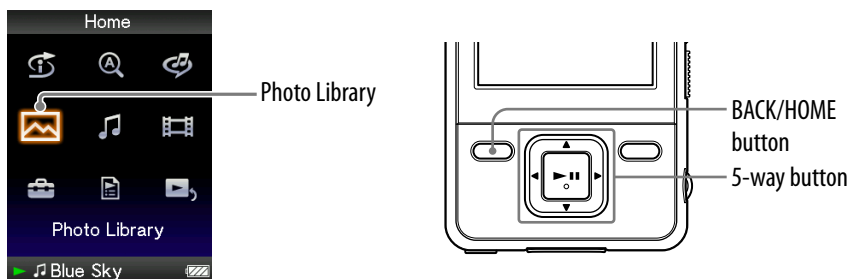


- 1 **Press and hold the BACK/HOME button until the Home menu appears.**
- 2 **Press the ▲/▼/◀/▶ button to select  (Photo Library), and then press the ►|| button to confirm.**
The list of photo folders appears.
- 3 **Press the ▲/▼/◀/▶ button to select a photo folder, and then press and hold the ►|| button.**
A slide show starts.

Hint



- You can start playback of a slide show by any of the following operations:
 - Press and hold the ►|| button in the photo list.
 - Press the ►|| button on the “Now Playing” screen of the photo.
 - Press the OPTION/PWR OFF button on the photo folder list, or a photo list, and then select “Begin slide show” from the option menu.

 Note

- The screen does not turn off automatically or change to a screensaver ( page 83) while a slide show is playing.

Setting the Slide Show Play Mode

You can display photos as a slide show repeatedly.

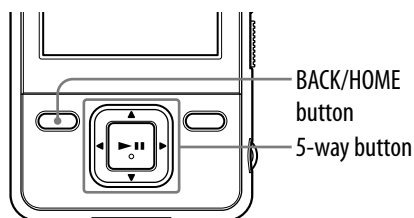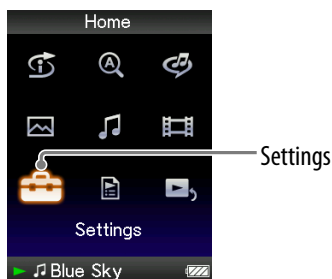


- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Photo Settings,” and then press the **▶||** button to confirm.
The list of “Photo Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “Slide Show Repeat,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
 - “On”: Displays photos in a photo folder continuously and repeatedly.
 - “Off”: Displays photos in a photo folder continuously, to the last photo, then returns to the first photo, and playback pauses. (Default setting)

Hint



- The play mode of a slide show can be set on the “Now Playing” screen of the photo. Press the **OPTION/PWR OFF** button, and select “Slide Show Repeat” from the option menu.

Note

- The screen does not turn off automatically or change to a screensaver ( page 83) while a slide show is playing.

Setting the Interval of a Slide Show

You can set the time each photo is displayed.

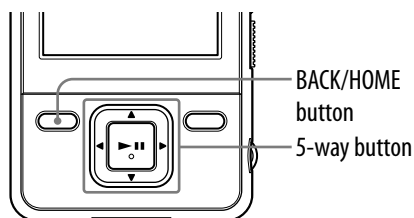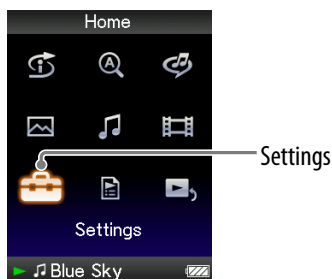

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **⚙️ (Settings)**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select **"Photo Settings,"** and then press the **▶||** button to confirm.
The list of "Photo Settings" options appears.
- 4 Press the **▲/▼/◀/▶** button to select **"Slide Show Interval,"** and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
Photos switch to the next photos at the selected interval from "Short," "Normal" (default setting), or "Long."

Hint



- The slide show interval can be set on the "Now Playing" screen of the photo. Press the **OPTION/PWR OFF** button, and select "Slide Show Interval" from the option menu.

Note

- It may take time to display a photo if its size is large.

Setting the Photo List Display Format

The player offers 3 display formats. You can set the display format of the photo list as “Title Only,” “Title With Thumbnail*¹,” or “Thumbnail Only.”

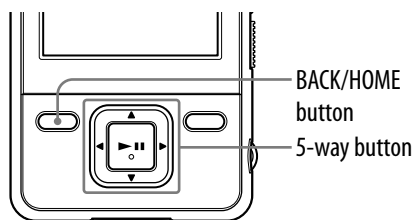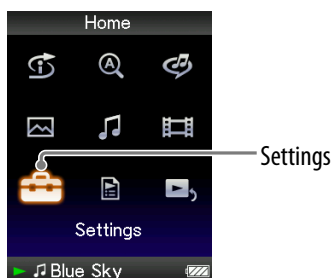

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “**Photo Settings**,” and then press the **▶||** button to confirm.
The list of “Photo Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “**Photo List Format**,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
 - “Title Only”: Displays only a photo title in the photo list.
 - “Title With Thumbnail”: Displays a photo title with a thumbnail image in the photo list.
 - “Thumbnail Only”: Displays only thumbnails in the photo list. (Default setting)

*¹Thumbnail refers to a reduced size image of a photo.

Hint

- The photo list display format can be set on the photo list screen. Press the **OPTION/PWR OFF** button, and select “Photo List Display Format” from the option menu.

Note

- Thumbnails may not be displayed, depending on the file format.



Deleting Photos from Photo Library

When you delete the photos from “Photo Library,” use Media Manager for WALKMAN or Windows Explorer.

For details about using Media Manager for WALKMAN, see its Help.

Note

- Media Manager for WALKMAN cannot delete photos whose name has been changed using Windows Explorer.



Displaying the Photo Option Menu

You can display the Photo option menu by pressing the OPTION/PWR OFF button on a list screen (including the thumbnail screen), such as the photo folder list, or on the photo “Now Playing” screen. From the Photo option menu, various photo settings are available.

The option items shown on the option menu vary, depending on the screen from which you display the option menu.

Option items appear on the list screen

Option items	Description/reference page
Now Playing	Displays the “Now Playing” screen.
Begin slide show	Starts a slide show (☞ page 75).
Detailed Information	Displays file information, such as file size, resolution, and file name, etc.
Photo List Display Format	Sets the photo list display format (☞ page 78).
Most Recent Photo	Starts playback of the photo that was played most recently.
Go to the song playback screen	The “Now Playing” screen of the last played song appears.

Option items appear on the “Now Playing” screen



Option items	Description/reference page
Photo Orientation	Sets the photo orientation (☞ page 72).
Display	Sets to display/not display photo information (☞ page 74).
Detailed Information	Displays file information, such as file size, resolution, and file name, etc.
Slide Show Repeat	Selects the slide show play mode (☞ page 76).
Slide Show Interval	Selects the slide show interval (☞ page 77).
Brightness	Adjusts the brightness of the screen (☞ page 85).
Clock Display	Displays the current time (☞ page 83).
Go to the song playback screen	The “Now Playing” screen of the last played song appears.




Limiting the Volume (AVLS (Volume Limit))

You can set “AVLS (Volume Limit)” (Automatic Volume Limiter System) to limit the maximum volume to prevent auditory disturbance or distraction. With “AVLS (Volume Limit),” you can listen to music at a comfortable volume level.

“Off” is set by default.

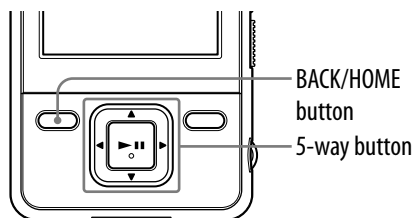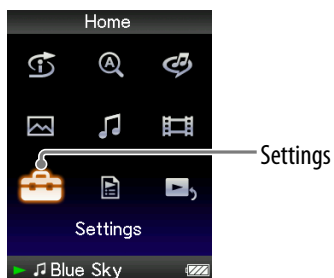

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select  (Settings), and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Common Settings,” and then press the **▶||** button to confirm.
The list of “Common Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “AVLS (Volume Limit),” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select “On,” and then press the **▶||** button to confirm.
The volume is kept to a moderate level.

To set this item to off



Select “Off” in step 5, and then press the **▶||** button to confirm.



Turning Off the Beep Sound

You can turn off the beep sounds of the player.

“On” is set by default.

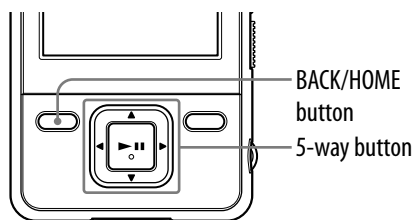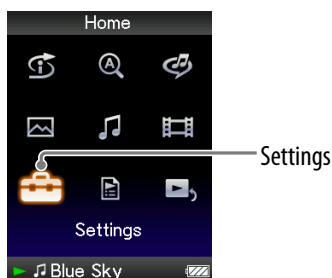

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “**Common Settings**,” and then press the **▶||** button to confirm.
The list of “Common Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “**Beep Settings**,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select “**Off**,” and then press the **▶||** button to confirm.



To set this item to on

Select “On” in step 5, and then press the **▶||** button to confirm.



Setting a Screensaver Type

You can set the screensaver to either a “Clock” or “Blank” for when there is no operation for a while during song playback. You can also select “None” for no screensaver.

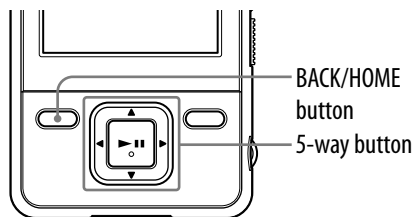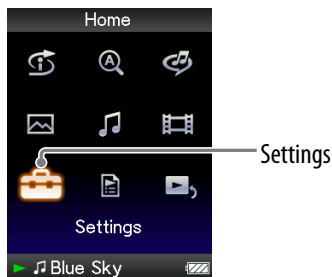

1 Press and hold the BACK/HOME button until the Home menu appears.

2 Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ►|| button to confirm.

3 Press the ▲/▼/◀/▶ button to select “Common Settings,” and then press the ►|| button to confirm.

The list of “Common Settings” appears.

4 Press the ▲/▼/◀/▶ button to select “Screensaver,” and then press the ►|| button to confirm.

5 Press the ▲/▼/◀/▶ button to select “Type,” and then press the ►|| button to confirm.

The list of screensaver types appears.

6 Press the ▲/▼/◀/▶ button to select a desired type, and then press the ►|| button to confirm.



After confirming, the screen in step **5** appears again.


- “Clock”: When there is no operation for a while, a clock appears as a screensaver. (Default setting)
- “Blank”: When there is no operation for a while, the screen goes off.
- “None”: The screen does not change to a screensaver.



Setting a Screensaver Time

You can set the time for the screensaver to activate to 15, 30, or 60 seconds.

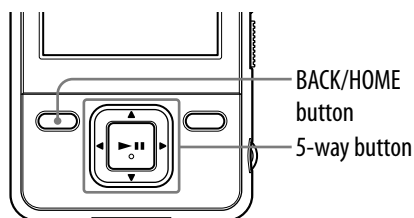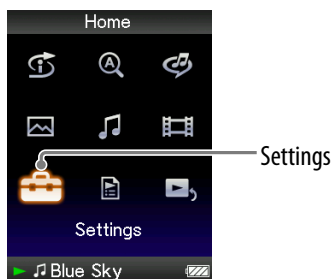

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select  (Settings), and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Common Settings,” and then press the **▶||** button to confirm.
The list of “Common Settings” appears.
- 4 Press the **▲/▼/◀/▶** button to select “Screensaver,” and then press the **▶||** button to confirm.
- 5 Press the **▲/▼/◀/▶** button to select “Screensaver Timing,” and then press the **▶||** button to confirm.
The list of screensaver time appears.
- 6 Press the **▲/▼/◀/▶** button to select a desired type, and then press the **▶||** button to confirm.
After confirming, the screen in step 5 appears again.
You can select the setting time as “After 15 sec,” “After 30 sec” (default setting) or “After 60 sec.”



Hints


- While characters are scrolling on the screen, the screen does not change to the screensaver.
- If you select “None” from “Type” of “Screensaver,” you cannot set “Screensaver Timing.”




Adjusting the Brightness of the Screen (Brightness)

You can set the display brightness to one of 5 levels.

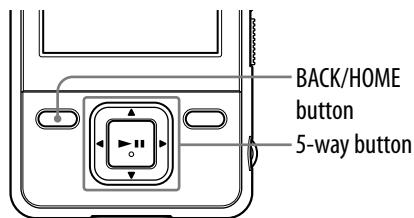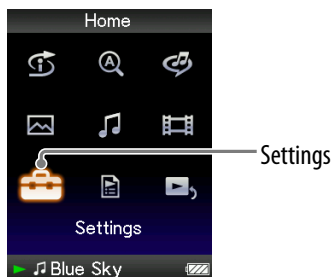

- 1 **Press and hold the BACK/HOME button until the Home menu appears.**
- 2 **Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ►|| button to confirm.**
- 3 **Press the ▲/▼/◀/▶ button to select “Common Settings,” and then press the ►|| button to confirm.**
The list of “Common Settings” appears.
- 4 **Press the ▲/▼/◀/▶ button to select “Brightness,” and then press the ►|| button to confirm.**
The brightness adjustment screen appears.
- 5 **Press the ▲/▼/◀/▶ button to select a level, and then press the ►|| button to confirm.**
“3” is set by default.
After you have adjusted the setting level, be sure to press the ►|| button to confirm. If you press the BACK/HOME button before you confirm, the setting will be canceled.


Hints

- You can adjust the brightness of the screen while you are playing a video or photo. Press the OPTION/PWR OFF button, and then select “Brightness” from the option menu.
- If you adjust the brightness of the screen to a lower level, the charge will last longer ( page 97).




Setting the Current Time (Set Date-Time)

You can set the current time by adjusting it manually.

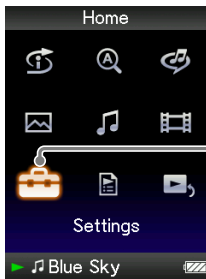

Settings

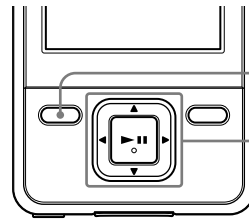

BACK/HOME
button

5-way button

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **⚙️ (Settings)**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select **“Common Settings,”** and then press the **▶||** button to confirm.
The list of “Common Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select **“Set Date-Time,”** and then press the **▶||** button to confirm.
The screen used to set the date and time appears.
- 5 Press the **◀/▶** button to select a year, and press the **▲/▼** button to increment/decrement the value, and then press the **▶||** button to confirm.
- 6 As you did in step 5, adjust the settings for month, date, hour, and minute.

 
 
Continued ↓



To display the current time

Press the OPTION/PWR OFF button on the “Now Playing” screen and select “Clock Display” from the option menu.

Hint

- You can select the date format from among “YYYY/MM/DD,” “MM/DD/YYYY,” and “DD/MM/YYYY.” Furthermore, you can select the time format from either “12-hour” or “24-hour.” For details, see “Setting the Date Format” (Date Display Format) ( page 88), or “Setting the Time Format” (Time Display Format) ( page 89).


Notes

- If the battery power is used up, for example, when the player is not used for a long time, your settings for date and time may be reset and “-” will be displayed instead of the current date and time.
- The clock may gain or lose up to 60 seconds per month. In this case, set the clock again.




Setting the Date Format

You can set the date format displayed for the current time (☞ page 86) as “YYYY/MM/DD,” “MM/DD/YYYY,” or “DD/MM/YYYY.”

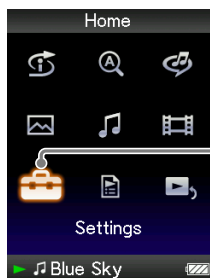

Settings


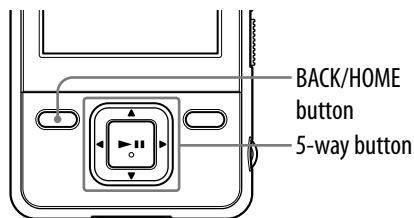


- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “**Common Settings**,” and then press the **▶||** button to confirm.
The list of “Common Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “**Date Display Format**,” and then press the **▶||** button to confirm.
The screen used to set the display format appears.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
You can select the format from the following 3 types.
 - “YYYY/MM/DD”: The date appears as year/month/day.
 - “MM/DD/YYYY”: The date appears as month/day/year.
 - “DD/MM/YYYY”: The date appears as day/month/year.



Setting the Time Format

You can select the time format displayed for the current time (🔍 page 86) from either a “12-hour” or “24-hour” display.

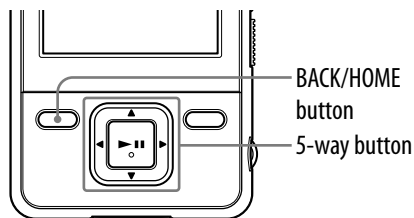
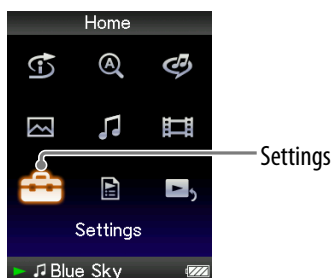


- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “**Common Settings**,” and then press the **▶||** button to confirm.
The list of “Common Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select “**Time Display Format**,” and then press the **▶||** button to confirm.
The screen used to set the display format appears.
- 5 Press the **▲/▼/◀/▶** button to select the desired setting, and then press the **▶||** button to confirm.
 - “12-hour”: Displays the current time in the 12-hour format.
 - “24-hour”: Displays the current time in the 24-hour format.



Displaying the Player Information (Unit Information)

Information such as model name, firmware version, etc., can be displayed.

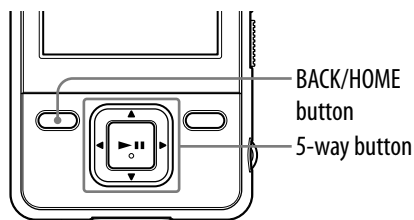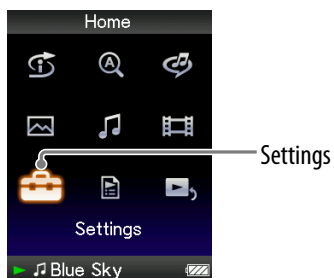

- 1 Press and hold the **BACK/HOME** button until the Home menu appears.
- 2 Press the **▲/▼/◀/▶** button to select **Settings**, and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select **“Common Settings,”** and then press the **▶||** button to confirm.
The list of “Common Settings” options appears.
- 4 Press the **▲/▼/◀/▶** button to select **“Unit Information,”** and then press the **▶||** button to confirm.
The list of available player information options appears.



Available player information

Option	Description
Model:	Displays the model name of the player.
Firmware:	Displays version information for the player's firmware.
Total songs:	Displays the total number of songs stored on the player.
Total videos:	Displays the total number of videos stored on the player.
Total photos:	Displays the total number of photos stored on the player.
WM-PORT:	Displays the version information for WM-PORT.



Resetting to Factory Settings (Reset all Settings)

You can reset the player to the default settings. Resetting the player does not delete data such as audio and photo data.

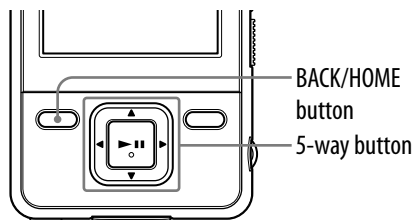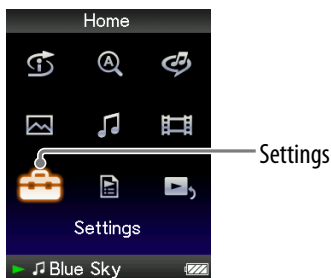

Note

- This function is only available in the pause mode.

- 1 Press and hold the BACK/HOME button in the pause mode until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select (Settings), and then press the ►|| button to confirm.**
- 3 Press the ▲/▼/◀/▶ button to select "Common Settings," and then press the ►|| button to confirm.**
The list of "Common Settings" options appears.
- 4 Press the ▲/▼/◀/▶ button to select "Reset all Settings," and then press the ►|| button to confirm.**
The confirmation screen to set back to the factory settings appears.
- 5 Press the ▲/▼ button to select "Yes," and then press the ►|| button to confirm.**
"Restored factory settings." appears.

To cancel the operation


Select "No" in step **5** and press the ►|| button to confirm. You can also cancel the operation by pressing the BACK/HOME button in step **5**.
The setting procedure is canceled, and the list of the "Common Settings" options reappears.




Formatting Memory (Format)

You can format the built-in flash memory of the player.

If the memory is formatted, all data and settings will be erased. Be sure to verify the data stored in memory prior to formatting and export any important data to the hard disk of your computer.

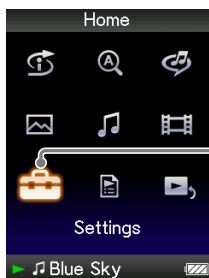

Settings

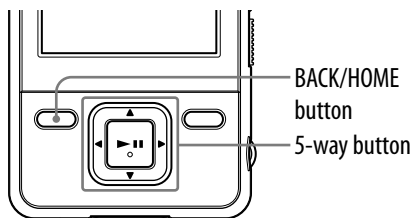


BACK/HOME
button

5-way button

Note

- This function is only available in the pause mode.

- 1 Press and hold the BACK/HOME button in the pause mode until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Settings), and then press the ►|| button to confirm.**
- 3 Press the ▲/▼/◀/▶ button to select "Common Settings," and then press the ►|| button to confirm.**
The list of "Common Settings" options appears.
- 4 Press the ▲/▼/◀/▶ button to select "Format," and then press the ►|| button to confirm.**
"All data including songs will be deleted. Proceed?" appears.
- 5 Press the ▲/▼ button to select "Yes," and then press the ►|| button to confirm.**
"All data will be deleted. Proceed?" appears.
- 6 Press the ▲/▼ button to select "Yes," and then press the ►|| button to confirm.**

While the memory is being formatted, an animated display appears. When initialization finishes, "Memory formatted." appears.

**To cancel the operation**


Select “No” in step 5 or 6 and press the ►|| button to confirm. You can also cancel the operation by pressing the BACK/HOME button in step 5 or 6.

Note


- Do not format the built-in flash memory using software or Windows Explorer.

Listening to Rhapsody Channels


You can listen to Rhapsody Channels transferred from Best Buy Digital Music Store to the player. First you need to install Best Buy Digital Music Store from the supplied CD-ROM onto your computer, and then follow the on-screen instructions to create your account for Rhapsody membership. For details about usage or support of the software, refer to the following web site:
<http://www.bestbuy.com/digitalmusic>

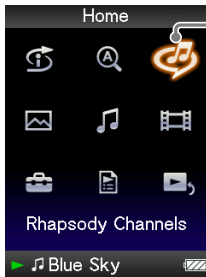

Rhapsody Channels

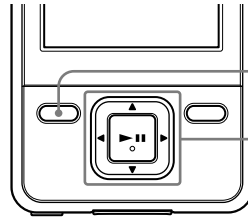
BACK/HOME
button






5-way button

- 1 Press and hold the BACK/HOME button until the Home menu appears.**
- 2 Press the ▲/▼/◀/▶ button to select  (Rhapsody Channels), and then press the ►|| button to confirm.**
The Rhapsody Channel list screen appears.
- 3 Press the ▲/▼/◀/▶ button to select a channel, and then press the ►|| button to confirm.**
The channel you selected starts to play back and the playback of songs continues in order.

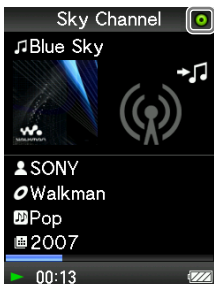About the subscription indicator

During song playback, the subscription indicator appears in the upper right of the “Now Playing” screen.

Subscription
indicator

	indicates free trial membership.*
	indicates more than 8 days remain of subscription.
	indicates less than 7 days remain of subscription.
	indicates less than 2 days remain of subscription.
	indicates your subscription is expired.

* The indicated number shows days remaining of your trial membership.

Displaying artist information

You can display the artist information by pressing the OPTION/PWR OFF button and selecting “Artist Information” on the “Now Playing” screen.

Hints

- The Rhapsody Channel list screen can be also displayed by selecting (Music Library) in step 2, and then selecting “Rhapsody Channels”.
- As the days pass and your subscription expiration gets near, a notice appears in the display when the player turns on. When the message appears, follow the instructions to renew your license.
- You can add the currently playing song on a Rhapsody Channel to the “Music Library” from the option menu.


Notes

- When playing back a Rhapsody Channel, you cannot set the play mode or playback range from the option menu on the “Now Playing” screen.
- Rhapsody Channels do not have song lists.
- The currently playing song/total number of songs is not displayed on the “Now Playing” screen.

Adding songs transferred from Rhapsody Channels to the “Music Library”

You can add songs transferred from Rhapsody Channels to the “Music Library.” When the player is connected to Rhapsody service, songs transferred from Rhapsody Channels, once played back, will be deleted on the player. However, the songs added from Rhapsody Channels to the “Music Library” can be searched from “Music Library” or managed just like songs transferred from other than Rhapsody Channels.

- 1 Press the OPTION/PWR OFF button and select “Add to Library” on the “Now Playing” screen.

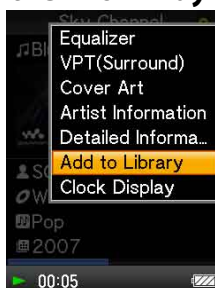

The message asking if you want to add the currently playing song to the “Music Library” appears.

- 2 Press the button to select “Yes,” and then press the button to confirm.


The song is added to the “Music Library.”

Hint


- The song added to the “Music Library” is displayed with the icon in the “Now Playing” screen.

Displaying the Account Information

You can see information such as user ID, etc., to renew your subscription.

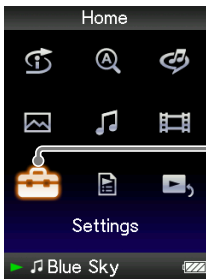


Settings

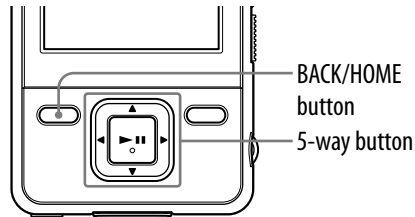


BACK/HOME
button

5-way button

Note

- If you do not use Rhapsody service, “Account Information” is not displayed in  (Settings) menu.

- 1 Press and hold the **BACK/HOME** button until the **Home** menu appears.
- 2 Press the **▲/▼/◀/▶** button to select  (Settings), and then press the **▶||** button to confirm.
- 3 Press the **▲/▼/◀/▶** button to select “Account Information,” and then press the **▶||** button to confirm.
The “Account Information” screen appears.

Account Information

Option	Description
User ID:	Your user ID appears.
Updated:	The date you last renewed your subscription appears.
Expires:	The date that your subscription will expire appears.
Please renew your licenses within [XX] days.	Period of time that you have to renew your subscription appears in [XX].
Licenses have expired. Please renew.	If this message appears, renew your license.*

* To renew your license, connect the player to Rhapsody service.

Maximizing Battery Life

By adjusting the settings or managing the power supply properly, it is possible to save the battery power and use the player for a longer time.

Turn off the player manually

If you press and hold the OPTION/PWR OFF button, the player enters standby mode and the screen turns off to save battery power. Furthermore, if standby mode continues for more than about a day, the player turns completely off automatically.

Changing the settings

You can save battery power by setting as follows.

Settings for screen	“Brightness” (☞ page 85)	“1”
	“Type” of “Screensaver” (☞ page 83)	“Blank”
	“Screensaver Timing” (☞ page 84)	“After 15 sec”
	“New Song Pop Up” (☞ page 40)	Deactivate.
Settings for sound effect	“Equalizer” (☞ page 49)	Deactivate.
	“VPT(Surround)” (☞ page 52)	
	“DSEE(Sound Enhancer)” (☞ page 55)	
	“Clear Stereo” (☞ page 54)	
	“Dynamic Normalizer” (☞ page 57)	
Settings for video	“On-Hold Display” (☞ page 67)	“No”

Adjust data format and bit rate

Playing time will vary, as battery charge can be affected by the format and bit rate of songs, videos or photos that are played.

For details on charging time and usage time, see ☞ page 130, 131.

What are Format and Bit Rate?

What is audio format?

Audio format refers to the method used when importing audio data from the Internet or audio CDs to a computer and saving it as an audio file. Common formats include MP3 and WMA, etc.

MP3: MP3 (MPEG-1 Audio Layer3) is a common audio compression technology developed by the MPEG working group of the ISO (International Organization for Standardization).

MP3 can compress audio files to about 1/10 the size of standard CD audio files.

WMA: WMA (Windows Media Audio) is a common audio compression technology developed by Microsoft Corporation. The WMA format produces the same sound quality as that of the MP3 format with a smaller file size.

AAC: AAC (Advanced Audio Coding) is a common audio compression technology developed by the MPEG working group of the ISO (International Organization for Standardization). The AAC format produces the same sound quality as that of the MP3 format, with a smaller file size.

Linear PCM: Linear PCM is an audio recording format without digital compression. You can listen to the sound with the same quality as CD music by recording with this format.

What is bit rate?

Bit rate refers to the amount of data used to store each second of audio. Generally, higher bit rates provide better sound quality, but require more storage space for the same length of audio.

What is the relationship between bit rate, sound quality, and storage size?

Generally, higher bit rates provide better sound quality, but require more storage space for the same length of audio, so you can store fewer songs on the player. Lower bit rates enable you to store more songs, but at a lower sound quality.

Note

- If you import a song from a CD to your computer at a low bit rate, you cannot improve the song's sound quality by selecting a high bit rate when transferring the song from the computer to the player.

Continued ↓

What is video format?

Video format refers to the method used when importing video and audio data to a computer and saving it as a video file.

Common formats include MPEG-4 and AVC, etc.

MPEG-4: MPEG-4 refers to Moving Picture Experts Group phase 4, developed by the MPEG working group of the ISO (International Organization for Standardization). The compression format is for video and audio data.

AVC: AVC refers to Advanced Video Coding, developed by the MPEG working group of the ISO (International Organization for Standardization). It enables production of more vivid images at a lower bit rate. AVC files include four profiles, and “AVC Baseline Profile” is one of them. AVC format is based on the MPEG-4 AVC standard of the ISO (International Organization for Standardization), and since AVC is standardized as the MPEG-4 Part 10 Advanced Video Coding, it is commonly referred to as MPEG-4 AVC/H.264 or H.264/AVC.

What is photo format?

Photo format refers to the method used when importing images to a computer and saving them as image files.

Common formats include JPEG, etc.

JPEG: JPEG (Joint Photographic Experts Group) is a common image compression format developed by the JPEG. JPEG can compress an image file to about 1/10 to 1/100 the size of original image files.



For details on acceptable formats and bit rates for this player

- For details on supported file formats and bit rates, see [📖](#) page 128.

Storing Data

You can store computer data into the built-in flash memory of the player by transferring the data from your computer using Windows Explorer, or another transfer capable software. If the player is connected to the computer, the built-in flash memory appears in Windows Explorer as [WALKMAN.]

Notes

- Do not use the supplied software while using Windows Explorer to interact with the built-in flash memory of the player.
- Do not disconnect the supplied USB cable while “Do not disconnect.” that appears during data transfer is displayed. The data could be damaged.
- Do not format the built-in flash memory using Windows Explorer. If you format the built-in flash memory, format it on the player (🔗 page 92).
- You cannot change folder names or delete the “MUSIC,” “MP_ROOT,” “VIDEO,” “PICTURES,” and “PICTURE” folders.
- Do not change folder or file names directly under the “MP_ROOT” or “MPE_ROOT” folder. Otherwise, they will not be displayed on the player.

Upgrading the Player's Firmware

You can update the player's firmware, ensuring you to add new features for the player by installing the latest player's firmware to the player. For details about the latest firmware information and how to install it, visit the following web site:


<http://www.sony.com/walkmansupport>

-
- 1 Download the update program to your computer from the web site.**
 - 2 Connect the player to your computer, and then start up the update program.**
 - 3 Follow the on-screen instructions to update the player's firmware.**
Firmware update is complete.
-

Troubleshooting

If the player does not function as expected, try the following steps to resolve the issue.

- 1 Find the symptoms of the issue in the following troubleshooting tables, and try any corrective actions listed.**
- 2 Connect the player to your computer to charge the battery.**
You may be able to resolve some issues by charging the battery.
- 3 Press the RESET button with a small pin, etc.**
If you press the RESET button while operating the player, stored data and settings on the player may be deleted.
- 4 Check the information about the issue in the Help of each software.**
- 5 Look for information about the issue on the following support web site.**
<http://www.sony.com/walkmansupport>
- 6 If the approaches listed above fail to resolve the issue, consult your nearest Sony dealer.**

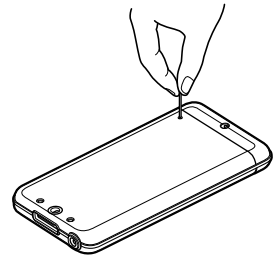

Continued ↓

Operation

Symptom	Cause/Remedy
There is no sound.	<ul style="list-style-type: none"> • The volume level is set to zero. <ul style="list-style-type: none"> → Turn the volume up (☞ page 10). • The headphone jack is not connected properly. <ul style="list-style-type: none"> → Connect the headphone jack properly (☞ page 10). • The headphone plug is dirty. <ul style="list-style-type: none"> → Clean the headphone plug with a soft dry cloth. • No songs or video files are stored on the player. <ul style="list-style-type: none"> → Follow the instructions in the displayed message, and transfer songs or videos from the computer.
No data is played.	<ul style="list-style-type: none"> • The battery is consumed. <ul style="list-style-type: none"> → Charge the battery fully (☞ page 21). → If the player does not react, even after charging the battery, press the RESET button to reset the player (☞ page 102). • No data is stored on the player. <ul style="list-style-type: none"> → Follow the instructions in the displayed message, and transfer data from the computer. • Transferred files are not in a playable format. For details, see “Supported file format” of “Specifications” (☞ page 128). <ul style="list-style-type: none"> → Convert the ATRAC audio data using the bundled MP3 Conversion Tool. → Songs or videos may not be played back, depending on the file format (☞ page 128). → Photos may not be displayed, depending on the file size or the file format (☞ page 128). • You are placing audio MP4 files in a video folder by dragging and dropping. <ul style="list-style-type: none"> → Place them in the “MUSIC” folder by dragging and dropping. • The playback limitation period of the song has expired due to subscription conditions, etc. <ul style="list-style-type: none"> → Songs with an expired playback limitation period cannot be played back. Update them using the software used for transferring. • After dragging and dropping in Windows Explorer, data hierarchy levels do not correspond to the player (☞ page 24).

Continued ↓

Operation (continued)

Symptom	Cause/Remedy
Transferred data is not displayed in its list.	<ul style="list-style-type: none"> ● The maximum number of files that can be displayed is reached. The maximum number of files is 1,000 files for videos, 10,000 files for photos. Also, the maximum number of folders is 1,000 folders for photos in the photo folder list. <ul style="list-style-type: none"> → Delete unnecessary data. ● Data was placed in the wrong location by dragging and dropping. <ul style="list-style-type: none"> → Place the data in the correct place by dragging and dropping (☞ page 24). ● Available capacity is insufficient. <ul style="list-style-type: none"> → Delete unnecessary data to increase free space on the player. ● After dragging and dropping in Windows Explorer, data hierarchy levels do not correspond to the player (☞ page 24). ● Transferred files are not in a playable format. For details, see “Supported file format” of “Specifications” (☞ page 128). <ul style="list-style-type: none"> → Convert the ATRAC files using the bundled MP3 Conversion Tool software.
When “All Songs” or “Album” is selected, all the songs will appear, but some songs will not appear when “Folder” is selected.	<ul style="list-style-type: none"> ● The audio files are not in folders under the “MUSIC” folder. <ul style="list-style-type: none"> → Place them in folders under the “MUSIC” folder by dragging and dropping.
Songs are played back within a limited playback range only, such as within one album.	<ul style="list-style-type: none"> ● “Playback Range” (☞ page 46) is set to “Selected Range.” <ul style="list-style-type: none"> → Change the playback range setting.
Data cannot be deleted on the player.	<ul style="list-style-type: none"> ● You cannot delete songs, videos and photos on the player. <ul style="list-style-type: none"> → Delete them using the software you used to transfer the data, or Windows Explorer.

Continued ↓

Operation (continued)

Symptom	Cause/Remedy
Noise is generated.	<ul style="list-style-type: none"> • A device emitting radio signals, such as a mobile phone is being used near the player. <ul style="list-style-type: none"> → When using devices such as mobile phones, keep them away from the player. • Music data imported from CDs, etc., is damaged. <ul style="list-style-type: none"> → Delete the data, then import and transfer it again. When importing data to your computer, close any other applications to avoid data damage. • Transferred files are not in a playable format. For details, see “Supported file format” of “Specifications” (☞ page 128). <ul style="list-style-type: none"> → Convert the ATRAC audio data using the bundled MP3 Conversion Tool. → Some songs may not play back, depending on certain file specifications.
“VPT(Surround)” setting or “Clear Stereo” function is not effective.	<ul style="list-style-type: none"> • When outputting to external audio speakers using the optional cradle, “VPT(Surround)” settings and the “Clear Stereo” function may not be effective because the player is designed for compatible headphones only. This is not a malfunction.
Cannot see the video, but can hear it.	<ul style="list-style-type: none"> • The file is a .3gp file. (.3gp only supports audio.) • The video file is not in a video folder. <ul style="list-style-type: none"> → Place the video files in a video folder by dragging and dropping.
Buttons do not work.	<ul style="list-style-type: none"> • The HOLD switch is set to the HOLD position. <ul style="list-style-type: none"> → Slide the HOLD switch to the opposite position (☞ page 11). • The player contains moisture condensation. <ul style="list-style-type: none"> → Wait a few hours to let the player dry. • The remaining battery power is low or insufficient. <ul style="list-style-type: none"> → Charge the battery by connecting the player to a running computer (☞ page 21). → If you charge the battery and nothing changes, press the RESET button to reset the player (☞ page 102). • While “Connecting” is being displayed, you cannot operate the player. <ul style="list-style-type: none"> → Disconnect the USB connection, then operate the player.
Playback does not stop.	<ul style="list-style-type: none"> • With this player, there is no difference between stopping and pausing. When you press the ► button, appears and playback pauses/stops.

Operation (continued)

Symptom	Cause/Remedy
The player does not work.	<ul style="list-style-type: none"> ● The remaining battery power is insufficient. <ul style="list-style-type: none"> → Charge the battery by connecting the player to a running computer (☞ page 21). → If you charge the battery and nothing changes, press the RESET button to reset the player (☞ page 102).
Transferred data cannot be found.	<ul style="list-style-type: none"> ● The built-in flash memory of the player was formatted using Windows Explorer. <ul style="list-style-type: none"> → Format the built-in flash memory on the player (☞ page 92). ● The supplied USB cable was disconnected from the player while data was being transferred. <ul style="list-style-type: none"> → Transfer usable files back to your computer and format the built-in flash memory on the player (☞ page 92). ● After dragging and dropping in Windows Explorer, data hierarchy levels do not correspond to the player (☞ page 24). ● Transferred files are not in a playable format. For details, see “Supported file format” of “Specifications” (☞ page 128). <ul style="list-style-type: none"> → Convert the ATRAC audio data using the bundled MP3 Conversion Tool. → Songs or videos may not be played back, depending on the file format (☞ page 128). → Photos may not be displayed, depending on the file size or the file format (☞ page 128).
The volume is not loud enough.	<ul style="list-style-type: none"> ● “AVLS (Volume Limit)” is enabled. <ul style="list-style-type: none"> → Disable “AVLS (Volume Limit)” (☞ page 81).
There is no sound from the right channel of the headphones. Or the right channel sound is heard from both sides of the headphones.	<ul style="list-style-type: none"> ● The headphone jack is not fully inserted. <ul style="list-style-type: none"> → If the headphones are not connected correctly, sound will not be output properly. Insert the connecting pin of the headphones into the jack until it clicks (☞ page 10).
Playback has stopped suddenly.	<ul style="list-style-type: none"> ● The remaining battery power is insufficient. <ul style="list-style-type: none"> → Charge the battery by connecting the player to a running computer (☞ page 21). ● The songs or video files that cannot be played are played. <ul style="list-style-type: none"> → Play back the other song or video files.


Continued ↓

Operation (continued)

Symptom	Cause/Remedy
<p>Thumbnails are not displayed.</p>	<ul style="list-style-type: none"> ● Songs do not have cover art information whose file format is supported by the player. Thumbnails are displayed only when songs have cover art information whose file format is supported by the player. → Transfer again using the bundled Windows Media player, or another transfer capable software. ● Thumbnail name does not match its video file, or the video file is not in the correct location. → Place a JPEG file of the same name as the video file into the folder under the “VIDEO” folder. ● If the photos do not have thumbnails that are complied with Exif file format, the thumbnails cannot be displayed. → Retransfer the photos using supplied Media Manager for WALKMAN.
<p>Cover art is not displayed.</p>	<ul style="list-style-type: none"> ● Cover art information is not included with the data. → The cover art only appears if the cover art information is included. You can set cover art using the bundled Windows Media Player 11, or another transfer capable software for setting cover art. For details on operation, refer to the Help or maker of the software. ● Some cover art is not displayed, depending on its file format.
<p>The player cannot format.</p>	<ul style="list-style-type: none"> ● The remaining battery is low or insufficient. → Charge the battery by connecting the player to a running computer (☞ page 21).
<p>The player’s power was inadvertently turned off, and then on again.</p>	<ul style="list-style-type: none"> ● If a malfunction occurs, the player turns off, and then on again automatically.
<p>The player does not work properly.</p>	<ul style="list-style-type: none"> ● The computer is started or restarted while the player is connected to it. → Reset the player by pressing the RESET button of the player. Disconnect the player when you start or restart the computer.

Continued ↓

Rhapsody Channels

Symptom	Cause/Remedy
No artist information is displayed in the “Artist Information” screen.	<ul style="list-style-type: none"> • The artist information may not exist, depending on the artist.
Though the subscription has not expired yet, the message of subscription expiration notice or  appears.	<ul style="list-style-type: none"> • Your settings for date and time may have been reset because the battery power was used up. <ul style="list-style-type: none"> → Connect the player to your computer and recharge the battery (☞ page 21), then connect to Rhapsody service using Best Buy Digital Music Store (☞ page 94).
Cannot search for other songs, albums, and artists by the song information of the currently playing song.	<ul style="list-style-type: none"> • When playing back Rhapsody Channels, this function is not available.

Display

Symptom	Cause/Remedy
“□” appears for a title.	<ul style="list-style-type: none"> • Characters that cannot appear on the player are included in the title. <ul style="list-style-type: none"> → Rename the title with appropriate characters using the software you used to transfer or Windows Explorer.
“Unknown” is displayed for an album or artist name, etc.	<ul style="list-style-type: none"> • The data has no data information, such as an album or artist name, etc.
The screen darkens while displaying a photo.	<ul style="list-style-type: none"> • There was no operation attempted for the time selected in “Screensaver Timing” (☞ page 84). <ul style="list-style-type: none"> → Press any button.
The screen turns off.	<ul style="list-style-type: none"> • There was no operation attempted for more than 3 minutes while the player was in the pause mode. <ul style="list-style-type: none"> → Press any button. • There was no operation attempted for the period you set in “Screensaver Timing” when “Screensaver” is set to “Blank” (☞ page 84). <ul style="list-style-type: none"> → Press any button. → Set “Screensaver” to other than “Blank.” • “On-Hold Display” is set to “No.” <ul style="list-style-type: none"> → Slide the HOLD switch to the opposite position (☞ page 11). → Set “On-Hold Display” to “Yes” (☞ page 67). You can play back a video even when the HOLD function is activated.
A message appears.	<ul style="list-style-type: none"> • See the “Messages” (☞ page 114).

Power

Symptom	Cause/Remedy
Battery life is short.	<ul style="list-style-type: none"> • The operating temperature is below 5 °C (41 °F). → Battery life becomes shorter due to the battery characteristics. This is not a malfunction. • Battery charging time is not sufficient. → Charge the battery until 100% appears. • By adjusting the settings or managing the power supply properly, it is possible to save the battery power and use the player for a longer time (ⓘ page 97). • You have not used the player for a prolonged period. → The efficiency of the battery will be improved by repeatedly charging and discharging it. • When usable battery life becomes half the usual time, even after charging the battery fully, the battery should be replaced. → Consult your nearest Sony dealer. • Copyright-protected contents are played. → When copyright-protected contents are played, battery life may be shorter.
The player cannot charge the battery.	<ul style="list-style-type: none"> • The USB cable is not connected to a USB port on your computer properly. → Disconnect the USB cable, and then reconnect it. → Use the supplied USB cable. • The battery is charged in an ambient temperature out of the range of 5 °C (41 °F) to 35 °C (95 °F). → Charge the battery in an ambient temperature of 5 °C (41 °F) to 35 °C (95 °F). • The computer is not on. → Turn on the computer. • Your computer has entered sleep or hibernation status. → Release the computer from sleep or hibernation status.
The player turns off automatically.	<ul style="list-style-type: none"> • To avoid unnecessary battery consumption, the player automatically turns off. → Press any button to turn the player on.
Charging completes very quickly.	<ul style="list-style-type: none"> • If the battery is already almost fully charged when charging begins, little time is needed to reach full charge.

Continued ↓

Connection with a computer

Symptom	Cause/Remedy
MP3 Conversion Tool or Media Manager for WALKMAN does not start up.	<ul style="list-style-type: none"> Your computer's system environment has changed, perhaps due to an update of the Windows operating system.
"Connecting" does not appear when connected to the computer with the supplied USB cable.	<ul style="list-style-type: none"> The USB cable is not connected to a USB port on your computer properly. <ul style="list-style-type: none"> → Disconnect the USB cable, and then reconnect it. → Use the supplied USB cable. A USB hub is being used. <ul style="list-style-type: none"> → Connecting the player via a USB hub may not work. Connect the player to your computer using the supplied USB cable. The computer is running another software other than the one used for transferring. <ul style="list-style-type: none"> → Disconnect the USB cable, wait a few minutes, and reconnect it. If the problem persists, disconnect the USB cable, restart the computer, and then reconnect the USB cable. "Connecting" may not appear on the player, depending on the software environment that is running on your computer. <ul style="list-style-type: none"> → Activate Windows Media Player, or Windows Explorer.
The player is not recognized by the computer when it is connected to the computer.	<ul style="list-style-type: none"> The USB cable is not connected to a USB port on your computer properly. <ul style="list-style-type: none"> → Disconnect the USB cable, and then reconnect it. A USB hub is being used. <ul style="list-style-type: none"> → Connecting the player via a USB hub may not work. Connect the player to your computer using the supplied USB cable. The USB port on your computer may have a problem. Connect the player to another USB port on your computer.

Continued ↓

Connection with a computer (continued)

Symptom	Cause/Remedy
Data cannot be transferred to the player from your computer.	<ul style="list-style-type: none">• Transferring may be stopped due to noise such as static electricity, etc. This happens to protect data information.<ul style="list-style-type: none">→ Disconnect the player, then reconnect it.• If you transfer files by dragging and dropping on some computers that do not have Windows Media Player 11 installed, there may be limited files (AAC, video files, etc.) that can be transferred by dragging and dropping.<ul style="list-style-type: none">→ Install Windows Media Player 11 from the supplied CD-ROM, then transfer files by dragging and dropping again. Before installing the bundled Windows Media Player 11 on your computer, make sure to check whether your software or service corresponds to Windows Media Player 11. For details on usage, or support on Windows Media Player, visit the following web site: http://support.microsoft.com/• The USB cable is not connected to a USB port on your computer properly.<ul style="list-style-type: none">→ Disconnect the USB cable, and then reconnect it.• There is not enough free space in the built-in flash memory.<ul style="list-style-type: none">→ Transfer any unnecessary data back to your computer to increase free space.• Songs with a limited playing period or playing count may not be transferred due to restrictions set by copyright holders. For details on the settings of each audio file, contact the distributor.• Abnormal data exists on the player.<ul style="list-style-type: none">→ Transfer usable files back to your computer and format the built-in flash memory on the player (🔧 page 92).

Continued ↓

Connection with a computer (continued)

Symptom	Cause/Remedy
Data cannot be transferred to the player from your computer. (continued)	<ul style="list-style-type: none"> • The data may be damaged. <ul style="list-style-type: none"> → Delete the data that cannot be transferred from your computer, then import it to your computer again. When importing data to your computer, close any other applications to avoid data damage. • Transferable limit of files and folders has been exceeded. <ul style="list-style-type: none"> → Delete unnecessary data. • You are trying to transfer .m4a, .mp4, .3gp or .m4v files on a computer that already has Windows Media Player 10 installed. <ul style="list-style-type: none"> → Install Windows Media Player 11 from the supplied CD-ROM. • If you transfer data using an appropriate software for transferring, but the transfer is not made, refer to the manufacturer.
Only a small amount of data can be transferred to the player.	<ul style="list-style-type: none"> • There is not enough free space in the built-in flash memory. <ul style="list-style-type: none"> → Transfer any unnecessary data back to your computer to increase free space. • Data that cannot be played on the player is stored on the player. <ul style="list-style-type: none"> → If data other than song, video, or photo data is stored on the player, less data can be transferred. Transfer back data that cannot be played on the player to the computer to increase the available space.
The player becomes unstable while it is connected to the computer.	<ul style="list-style-type: none"> • A USB hub or USB extension cable is being used. <ul style="list-style-type: none"> → Connecting the player via a USB hub or extension cable may not work. Connect the player to your computer using the supplied USB cable.
You cannot delete or rename the folders.	<ul style="list-style-type: none"> • You cannot delete or rename the “MUSIC,” “MP_ROOT,” “VIDEO,” “PICTURES” and “PICTURE” folders.

Continued ↓

Other

Symptom	Cause/Remedy
There is no beep sound when the player is operated.	<ul style="list-style-type: none">• “Beep Settings” is set to “Off.” → Set “Beep Settings” to “On” (☞ page 82).• The beep does not sound when the player is connected to the optional cradle, or another device.
The player gets warm.	<ul style="list-style-type: none">• The player may be warm when the battery is being charged and just after charging. The player also may get warm when a large amount of data is transferred. This behavior is normal and not cause for concern. Set the player aside for a while to allow it to cool down.
The screen turns on whenever songs change.	<ul style="list-style-type: none">• “New Song Pop Up” is set to “On.” → Set “New Song Pop Up” to “Off” (☞ page 40).
The date and time have been reset.	<ul style="list-style-type: none">• If you left the player for a while with the battery used up, the date and time may be reset. This is not a malfunction. Charge the battery until FULL appears on the screen and set the date and time again (☞ page 86).


Messages

Follow the instructions below if a message appears in the display.

Message	Meaning	Remedy
All group numbers have been used.	<ul style="list-style-type: none"> • The total number of list items (except for the song lists) exceeds the limit (8,192 items). • The total number of songs registered in the playlists has reached 65,535. 	<p>Songs exceeding the limit are stored in "Others."</p> <p>→ If you cannot find a song, search for it in the "Others" list first.</p> <p>→ If you do not want to store songs that exceed the limit in the "Others" list, delete unnecessary songs from the player using the software you used to transfer the songs, or Windows Explorer.</p> <p>→ If the total number of playlists registered to the player exceeds 65,535, playlists exceeding this number cannot be displayed. Decrease the number of playlists (delete the playlists) using the software you used to transfer the playlists.</p>
Cannot change "Screensaver Timing" when "Type" is "None."	You are trying to set "Screensaver Timing" while "Type" is set to "None."	Set the screensaver type to other than "None."
Cannot complete during playback. Please pause playback and then try again.	You are trying to select an unselectable item during playback.	Pause playback, and try the operation again.
Cannot display folders beyond this level. Place songs in folders up to the eighth level.	The player cannot play songs beyond the 8th folder level. (🔍 page 25)	Move the song(s) beyond the 8th folder level to a lesser folder level using Windows Explorer.

Continued ↓

Message	Meaning	Remedy
Cannot play; file format is not supported.	<ul style="list-style-type: none"> You are trying to play a file that cannot be played on the player. You transferred an audio file to video folders by dragging and dropping. 	You cannot play a song in an unsupported format file (🔗 page 128). Place them in folders under the “MUSIC” folder.
Cannot play; file is damaged. Please connect to compliant software or device and transfer again.	The file you are trying to play is damaged.	Transfer the file to the player again.
Cannot play; the license is expired.	The playback limitation period of the song has expired.	Update the license information of songs using the software used for transferring.
Could not add this song to Library. Not enough free space in memory.	You could not add the selected song to the “Music Library” because the player’s available capacity is insufficient.	Connect the player to your computer using the supplied USB cable, and then delete any unnecessary data from the player using appropriate software.
Do not disconnect.	The player is connected to a computer or other external devices to transfer data.	This is not an error message. Do not disconnect the USB cable until transferring completes.
Firmware update failed.	Updating the firmware failed to complete.	Follow the instructions displayed on your computer to retry updating the firmware.
Library error encountered. Please connect to compliant software or device and transfer again.	The database for songs, videos or photos is damaged.	<p>➔ Transfer songs, videos, or photos again.</p> <p>➔ If the remedy above does not solve the problem, format the built-in flash memory (🔗 page 92), then transfer the data again.</p>
LOW BATTERY. Please Charge.	The player’s battery is running low.	Charge the battery (🔗 page 21).
No channels available. Please connect to Rhapsody and transfer Rhapsody Channels.	You are trying to select a Rhapsody Channel from the Home menu or “Music Library” when there are no channels on the player.	Connect to Rhapsody service and transfer Rhapsody Channels to the player.

Message	Meaning	Remedy
No items found starting with this letter.	No songs exist that start with the selected initial letter, during the “Initial Search” function.	Press the ▲/▼/◀/▶ button to select other initial letters.
No Library exists. Please connect to compliant software or device and transfer again.	Even after data is transferred, there is no information about data transferred to the player.	Transfer the data again to the player using Windows Explorer, or another transfer capable software.
No photos are available for display.	There are no photos that can be displayed on the player.	Transfer photos in a supported format.
No photos are available for display. Please connect to compliant software or device and transfer photos.	You are trying to display a photo when there are no photos stored on the player.	Transfer photos to the player.
No playable songs are available.	You are trying to start playback by selecting “Play” from the option menu, but there are no songs in the selected folder.	Transfer songs in the supported format, and start playback.
No playlists available. Please connect to compliant software or device and transfer playlists.	When you select  (Playlists) from the Home menu, and there are no playlists on the player, this message appears.	Transfer playlists to the player using Windows Explorer, or another software for transferring.
No songs available for playback. Please connect to compliant software or device and transfer songs.	You are trying to start playback even when there are no songs on the player, or no songs in the selected playlist.	Transfer songs to the player.
No songs in selected item.	There are no songs in the selected folder.	Transfer songs into folders under the “MUSIC” folder using Windows Explorer, or another software for transferring.
No songs in this channel.	No songs exist in the channel you selected from the Rhapsody Channel list.	Re-connect to Rhapsody service and try the same channel again.
No videos available for playback. Please connect to compliant software or device and transfer videos.	You are trying to start playback when there are no videos stored on the player.	Transfer videos to the player.

Message	Meaning	Remedy
Not enough free space in memory. Delete files to ensure free space.	The player's available capacity is insufficient.	Connect the player to your computer using the supplied USB cable, and then delete any unnecessary data from the player using another software used for transferring, or Windows Explorer.
On hold... Cancel HOLD function to activate controls.	The player cannot be operated because the HOLD switch is set to the HOLD position.	To operate the player, slide the HOLD switch to the opposite position (☞ page 11).
The device's memory was not formatted correctly. Please re-format using Settings menu.	<ul style="list-style-type: none"> ● The built-in flash memory was not formatted properly. ● The built-in flash memory was formatted on a computer. 	Select "Settings" - "Common Settings" - "Format" to format the built-in flash memory again (☞ page 92).

Precautions

The following FCC statement applies only to the version of this model manufactured for sale in the USA. Other versions may not comply with FCC technical regulations.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

If you have any questions about this product:

Visit: www.sony.com/walkmansupport

Contact: Sony Customer Information Service Center at 1-(866)-456-7669

Write: Sony Customer Information Service Center
12451 Gateway Blvd., Fort Myers, FL 33913

Declaration of Conformity

Trade Name: SONY
Model No.: NWZ-A726B/A728B/A729B
Responsible Party: Sony Electronics Inc.
Address: 16530 Via Esprillo, San Diego CA 92127 U.S.A.
Telephone Number: 858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Continued ↓

On safety

- Be sure not to short-circuit the terminals of the player with other metallic objects.
- Do not touch the rechargeable battery with bare hands if it is leaking. Since battery liquid may remain in the player, consult your nearest Sony dealer if the battery has leaked. If the liquid gets into your eyes, do not rub your eyes as it may lead to blindness. Wash out your eyes with clean water, and consult a doctor.
Also, if the liquid gets on to your body or clothes, wash it off immediately. If you do not, it may cause burns or injury. If you get burned or injured by the liquid from the battery, consult a doctor.
- Do not pour water or put any foreign object in the player. Doing so may cause fire or electric shock.
If this occurs, turn off the player immediately, disconnect the USB cable from the player, and consult your nearest Sony dealer or Sony Service Center.
- Do not put the player into fire.
- Do not take apart or remodel the player. Doing so can result in electric shock. Consult your nearest Sony dealer or Sony Service Center for exchange of rechargeable batteries, internal checks or repair.

Continued ↓


On installation

- Do not put any heavy object on top of the player or apply a strong shock to the player. It may cause a malfunction or damage.
- Never use the player where it will be subjected to extremes of light, temperature, moisture or vibration. The player may become discolored, distorted or damaged.
- Never leave the player exposed to high temperature, such as in a car parked in the sun or under direct sunlight.
- Do not leave the player in a place subject to excessive dust.
- Do not leave the player on an unstable surface or in an inclined position.
- If the player causes interference to radio or television reception, turn the player off and move it away from the radio or television.
- When using the player, remember to follow the precautions below in order to avoid warping the cabinet or causing the player to malfunction.

— Make sure not to sit down with the player in your back pocket.



— Make sure not to put the player into a bag with the headphones/earphones cord wrapped around it and then subject the bag to strong impact.

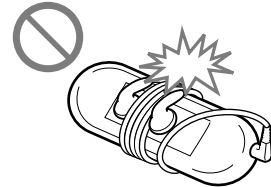

— The earbuds may deteriorate due to long-term storage or use.

- Do not expose the player to water. The player is not waterproof. Remember to follow the precautions below.

— Be careful not to drop the player into a sink or other container filled with water.

— Do not use the player in humid locations or bad weather, such as in the rain or snow.

— Do not get the player wet.

If you touch the player with wet hands, or put the player in a damp article of clothing, the player may get wet and this may cause a malfunction of the player.



- When you unplug the headphones from the player, make sure to hold the headphone plug to unplug it. Pulling the headphone cord itself may cause damage to the headphone cord.

Continued ↓

On heat build-up

Heat may build up in the player while charging if it is used for an extended period of time.

On the headphones

Road safety

Avoid listening with your headphones in situations where hearing must not be impaired.

Preventing hearing damage

Avoid using the headphones at a high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.

Do not turn the volume up high all at once, especially when using headphones. Turn up the volume gradually so that loud sound will not hurt your ears.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Warning

If there is lightning when you are using the player, take off the headphones immediately.

If you experience an allergic reaction to the supplied headphones, stop using them at once and contact a doctor.

On the use

- When using a strap (sold separately), be careful to avoid hooking it on objects you pass by. Furthermore be careful not to swing the player by the strap to avoid bumping people.
- Refrain from using the player according to the in-flight announcements during take off or landing in an aircraft.
- Note that condensation may form temporarily in cases such as when the player is moved quickly from a low-temperature environment to a high-temperature environment or used in a room that has a heater just turned on. Condensation creates a phenomenon where moisture in the air adheres to surfaces such as metal panels, etc., and then changes to liquid. If condensation forms in the player, leave it turned off until the condensation disappears. If you use the player with condensation present, a malfunction may result.

On the LCD

- Do not apply strong force to the surface of the LCD. This may cause a distortion in colors or brightness, or cause a malfunction of the LCD.
- If you use the player in a cold location, images may appear with black bands around them. This is not a malfunction of the player.

On cleaning

- Clean the player's case with a soft cloth, such as a cleaning cloth for eyeglasses.
- If the player's case becomes very dirty, clean it with a soft cloth slightly moistened with water or a mild detergent solution.
- Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene, as it may mar the finish of the case.
- Be careful not to let water get into the player from the opening near the connector.
- Clean the headphone plug periodically.
- To clean the earbuds, remove them from the headphones, and hand wash with a mild detergent solution. Dry off sufficiently before use after washing.

If you have any questions or problems concerning the player, please consult your nearest Sony dealer.

Continued ↓

Important Notice

- Copyright laws prohibit reproducing the software or the manual accompanying it in whole or in part, or renting the software without the permission of the copyright holder.
- In no event will SONY be liable for any financial damage, or loss of profits, including claims made by third parties, arising out of the use of the software bundled with this player.
- In the event a problem occurs with this software as a result of defective manufacturing, SONY will replace it. However, SONY bears no other responsibility.
- The software provided with this player cannot be used with equipment other than that to which it is so designated.
- Please note that, due to continued efforts to improve quality, the software specifications may be changed without notice.
- Operation of this player with software other than that provided is not covered by the warranty.
- The ability to display the languages on bundled software will depend on the installed OS on your computer. For better results, please ensure that the installed OS is compatible with the desired language you want to display.
 - We do not guarantee all the languages will be able to be displayed properly on the bundled software.
 - User-created characters and some special characters may not be displayed.
- The explanations in this manual assume that you are familiar with the basic operations of Windows.

For details on the use of your computer and operating system, please refer to the respective manuals.

Continued ↓

About sample data*¹

The player is pre-installed with sample data.

If you delete the sample data, you cannot restore it, and we will not supply any replacement data.

*¹ In some countries/regions some sample data is not installed.

- The recorded song is limited to private use only. Use of the song beyond this limit requires permission of the copyright holders.
- Sony is not responsible for incomplete recording/downloading or damaged data due to problems of the player or computer.
- Depending on the type of the text and characters, the text shown on the player may not be displayed properly on device. This is due to:
 - The capacity of the connected player.
 - The player is not functioning normally.
 - Content information is written in language or character that are not supported by the player.

About the customer support Web site

If you have any questions or issues with this product, or would like information on compatible items with this product, visit the following web site.

<http://www.sony.com/walkmansupport>

About Copyrights

- ATRAC is trademark of Sony Corporation.
- “WALKMAN” and “WALKMAN” logo are registered trademarks of Sony Corporation.
- **DSEE** and **CLEAR BASS** are trademarks of Sony Corporation.
Digital Sound Enhancement Engine
- Microsoft, Windows, Windows Vista and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe, Adobe Reader and Adobe Flash Player are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- IBM and PC/AT are registered trademarks of International Business Machines Corporation.
- Macintosh is a trademark of Apple Inc.
- QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.



- Pentium is a trademark or a registered trademark of Intel Corporation.
- This software is based in part on the work of the Independent JPEG Group.
- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR
 - ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD (“MPEG-4 VIDEO”) AND/OR
 - DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO.
 NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpeg-la.com)

- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO
 - (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD (“AVC VIDEO”) AND/OR
 - (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://MPEGLA.COM](http://MPEGLA.COM)
- US and foreign patents licensed from Dolby Laboratories.
- Information on Expat

Copyright ©1998, 1999, 2000 Thai Open Source Software Center Ltd and Clark Cooper.

Copyright ©2001, 2002, 2003, 2004, 2005, 2006 Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS,” WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, TM and [®] marks are not specified.

Continued ↓

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

Content providers are using the digital rights management technology for Windows Media contained in this device (“WM-DRM”) to protect the integrity of their content (“Secure Content”) so that their intellectual property, including copyright, in such content is not misappropriated.

This device uses WM-DRM software to play Secure Content (“WM-DRM Software”). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content (“Secure Content Owners”) may request that Microsoft revoke the WM-DRM Software’s right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software’s ability to play unprotected content. A list of revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation lists onto your device on behalf of Secure Content Owners.

Program ©2008 Sony Corporation
Documentation ©2008 Sony Corporation

Specifications

Supported file format

Music			
File format	MP3(MPEG-1 Layer3) file format, ASF file format, MP4 file format, Wave-Riff file format		
File extension	MP3 (.mp3), WMA* ¹ (.wma), AAC-LC* ² (.mp4, .m4a, .3gp), Linear PCM (.wav)		
Codec	MP3	Bit rate: 32 to 320 kbps (Supports variable bit rate (VBR)) Sampling frequency* ³ : 32, 44.1, 48 kHz	
	WMA* ¹	Bit rate: 32 to 192 kbps (Supports variable bit rate (VBR)) Sampling frequency* ³ : 44.1 kHz	
	AAC-LC* ²	Bit rate: 16 to 320 kbps (Supports variable bit rate (VBR))* ⁴ Sampling frequency* ³ : 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, 48 kHz	
	Linear PCM	Bit rate: 1,411 kbps Sampling frequency* ³ : 44.1 kHz	
Video			
File format	MP4 file format, "Memory Stick" video format		
File extension	.mp4, .m4v		
Codec	Video	AVC (H.264/AVC)	Profile: Baseline Profile Level: Max. 1.3 Bit rate: Max. 768 kbps
		MPEG-4	Profile: Simple Profile Bit rate: Max. 2,500 kbps
	Frame rate: Max. 30 fps Resolution: Max. QVGA (320 × 240)		
	Audio	AAC-LC	Channel number: Max. 2 channels Sampling frequency* ³ : 24, 32, 44.1, 48 kHz Bit rate: Max. 288 kbps per 1 channel
File size	Max. 2 GB		
The number of files	Max. 1,000		
Photo* ⁵			
File format	Compatible with DCF 2.0/Exif 2.21file format		
File extension	.jpg		
Codec	Profile: Baseline Profile Number of pixels: Max. 4,000 × 4,000 pixels (16,000,000 pixels)		
The number of files	Max. 10,000		

*¹ WM-DRM 10 files are compatible.

*² Copyright protected AAC-LC files cannot be played back.

*³ Sampling frequency may not correspond to all encoders.

*⁴ Non-standard bit rates or non-guaranteed bit rates are included depending on the sampling frequency.

*⁵ Some photo files cannot be played back, depending on their file formats.

Continued ↓

Maximum recordable number of songs and time (Approx.)

The approximate times are based on the case in which you transfer or record only 4 minutes songs (not including videos and photos) in the MP3 format. Other playable audio file format song numbers and times may differ from MP3 format.

NWZ-A726B			NWZ-A728B	
Bit rate	Songs	Time	Songs	Time
48 kbps	2,450	163 hr. 20 min.	5,050	336 hr. 40 min.
64 kbps	1,850	123 hr. 20 min.	3,750	250 hr. 00 min.
128 kbps	925	61 hr. 40 min.	1,850	123 hr. 20 min.
256 kbps	460	30 hr. 40 min.	945	63 hr. 00 min.
320 kbps	370	24 hr. 40 min.	755	50 hr. 20 min.

NWZ-A729B		
Bit rate	Songs	Time
48 kbps	10,200	680 hr. 00 min.
64 kbps	7,650	510 hr. 00 min.
128 kbps	3,800	253 hr. 20 min.
256 kbps	1,900	126 hr. 40 min.
320 kbps	1,500	100 hr. 00 min.

Maximum recordable time of videos (Approx.)

The approximate recordable times are estimated in the case where only videos are transferred. The time may differ, depending on the conditions under which the player is used.

	NWZ-A726B	NWZ-A728B	NWZ-A729B
Bit rate	Time	Time	Time
Video Format: 384 kbps Audio Format: 128 kbps	15 hr. 00 min.	30 hr. 40 min.	62 hr. 00 min.
Video Format: 768 kbps Audio Format: 128 kbps	8 hr. 30 min.	17 hr. 30 min.	35 hr. 30 min.

Maximum recordable number of photos that can be transferred (Approx.)

Max. 10,000

Recordable number of photos may be less depending on file sizes.

Continued ↓

Capacity (User available capacity)*¹

NWZ-A726B: 4 GB (Approx. 3.57 GB = 3,840,573,440 bytes)

NWZ-A728B: 8 GB (Approx. 7.30 GB = 7,840,890,880 bytes)

NWZ-A729B: 16 GB (Approx. 14.7 GB = 15,841,755,136 bytes)

*¹ Available storage capacity of the player may vary.

A portion of the memory is used for data management functions.

Output (headphones)

Frequency response

20 to 20,000 Hz (when playing data file, single signal measurement)

Interface

Headphone: Stereo mini-jack

WM-PORT (multiple connecting terminal): 22 pins

Hi-Speed USB (USB 2.0 compliant)

Operating temperature

5 °C to 35 °C (41 °F to 95 °F)

Power source

- Built-in rechargeable lithium-ion battery
- USB power (from a computer via the supplied USB cable)

Charging time

USB-based charging

Approx. 3 hours (full charge), Approx. 1.5 hours (approx. 80 %)

Continued ↓

Battery life (continuous playback)

By setting as follows, a longer battery life can be expected.

The times below are approximated when “New Song Pop Up” (☞ page 40), “Clear Stereo” (☞ page 54), “DSEE(Sound Enhancer)” (☞ page 55), “Dynamic Normalizer” (☞ page 57), “Equalizer” (☞ page 49) and “VPT(Surround)” (☞ page 52) are deactivated, and “Screensaver” (☞ page 83) is set to “Blank.”

Furthermore, for videos, the time approximated when the brightness of the screen (☞ page 85) is set to “3.”

The time below may differ depending on ambient temperature or the status of use.

NWZ-A726B/A728B/A729B	
Music	
Playback at MP3 128 kbps	Approximately 36 hours
Playback at WMA 128 kbps	Approximately 35.5 hours
Playback at AAC-LC 128 kbps	Approximately 33.5 hours
Playback at Linear PCM 1411 kbps	Approximately 34.5 hours
Video	
Playback at MPEG-4 384 kbps	Approximately 10 hours
Playback at MPEG-4 768 kbps	Approximately 9 hours
Playback at AVC 384 kbps	Approximately 8 hours
Playback at AVC 768 kbps	Approximately 8 hours

Display

2.4-inch, TFT color display with white LED-backlight, QVGA (240 × 320 pixels), 262,144 colors

Dimensions (w/h/d, projecting parts not included)

50.2 × 93.6 × 9.3 mm ($2 \times 3 \frac{3}{4} \times \frac{3}{8}$ inches)

Dimension (w/h/d)

51.0 × 93.9 × 9.3 mm ($2 \frac{1}{8} \times 3 \frac{3}{4} \times \frac{3}{8}$ inches)

Mass

Approx. 58 g (Approx. 2.1 oz)

Continued ↓

System Requirements

- **Computer**
IBM PC/AT or compatible computer preinstalled with the following Windows operating systems*1:
Windows XP Home Edition (Service Pack 2 or later) / Windows XP Professional (Service Pack 2 or later) / Windows Vista Home Basic / Windows Vista Home Premium / Windows Vista Business / Windows Vista Ultimate
Not supported by 64 bit version OS.
Not supported by OSs other than above.
*1 Excluding OS Versions not supported by Microsoft.
- **CPU:** Pentium 4 1.0 GHz or higher
- **RAM:** 512 MB or more
- **Hard Disk drive:** 380 MB or more of available space
- **Display:**
 - Screen Resolution: 800 × 600 pixels (or higher) (recommended 1,024 × 768 or higher)
 - Colors: 8 bit or higher (16 bit recommended)
- **CD-ROM drive** (supporting Digital Music CD playback capabilities using WDM)
To create original CDs, a CD-R/RW drive is required.
- **Sound board**
- **USB port** (Hi-Speed USB is recommended)
- **Microsoft .NET Framework 2.0 or 3.0, QuickTime 7.2, Internet Explorer 6.0 or 7.0, Windows Media Player 10 or 11** (Windows Media Player 11 recommended. Some computers that already have Windows Media Player 10 installed may encounter file limitation (AAC, video files, etc.) that can be transferred by dragging and dropping.).
- **Adobe Flash Player 8 or higher** needs to be installed.
- **Broadband Internet connection** is required to use Electronic Music Distribution (EMD) or to visit the web site.

We do not guarantee operation for all computers even if they meet the above System Requirements.

Not supported by the following environments:

- Personally constructed computers or operating systems
- An environment that is an upgrade of the original manufacturer-installed operating system
- Multi-boot environment
- Multi-monitor environment
- Macintosh

Design and specifications are subject to change without notice.

Index

Symbols

5-way button	10, 13
↶ (Repeat)	45
SHUF (Shuffle)	45
↶SHUF (Shuffle&Repeat)	45
↶1 (Repeat 1 song)	45
⏮H (Heavy)	50
⏮P (Pop)	50
⏮J (Jazz)	50
⏮U (Unique)	50
⏮1 (Custom 1)	50
⏮2 (Custom 2)	50
⏮S (Studio)	53
⏮L (Live)	53
⏮C (Club)	53
⏮A (Arena)	53
⏮M (Matrix)	53
⏮K (Karaoke)	53

A

AAC	98
AAC-LC	128
Accessories	8
Accessory hole	12
Adobe Reader	3
Album Display Format	47
All Range	46
Arena	53
Attachment	8
Audio format	98
AVC	99, 128
AVLS (Volume Limit)	81

B

BACK/HOME button	10, 13
Battery	21, 97, 131
Beep Settings	82
Best Buy Digital Music Store	9
Bit rate	98, 128
Brightness	85

C

Capacity	130
Clear Stereo	54
Club	53
Computer	132
Continuous Playback	65
Cover art	47
Custom	50, 51

D

Data	100
Date-Time	86, 88, 89
Date Display Format	88
Display	62, 74
DSEE (Sound Enhance)	55
Dynamic Normalizer	57

E

Equalizer	49
Explorer	100

F

Firmware	101
Format (Initialize)	92

H

Headphones	8, 121
Heavy	50
HOLD switch	11
Home menu	6

I

Information	90
Initialize (Format)	92
Initial Search	6, 34
Intelligent Shuffle	6, 37
Interval	77

J

Jazz	50
JPEG	99, 128

K

Karaoke 53

L

Linear PCM 98, 128
Live 53

M

Matrix 53
Media Manager for WALKMAN 9
Messages 114
Model 90
MP3 98, 128
MP3 Conversion Tool 9
MPEG-4 99, 128
Music Library 6, 28

N

Normal 45
Now Playing 7
Now Playing screen 19

O

On-Hold Display 67
OPTION/PWR OFF button 11, 20
Option menu 20, 42, 69, 80

P

Photo format 99
Photo Library 6, 70
Photo List Display Format 78
Photo Orientation 72
Playback Range 46
Playlists 7, 35
Play Mode 44, 45
Pop 50
Power 11, 97, 109

R

Recharging 21, 97
Release Year 32
Remaining battery 21
Repeat 45
RESET (the player) 102
Reset all Settings 91
RESET button 12
Rhapsody Channels 94
 Account Information 96
 Artist information 95
 Subscription indicator 94

S

Screensaver 83
Search for songs 28
 album 29
 artist 30
 genre 31
 initial letter 34
 playlists 35
 release year 32
 Rhapsody Channel 33
 song name 28
Selected Range 46
Serial number 8
Set Date-Time 86
Settings 7
Shuffle All 39
Shuffle play 37
 Shuffle All 39
 Time Machine Shuffle 37
Slide show 75
 Slide Show Interval 77
 Slide Show Repeat 76
Sound quality 49
Stand 12
Studio 53

T

Thumbnail 15, 66, 78, 107
Time Display Format 89
Time Machine Shuffle 37
Time setting 86
Total photos 90
Total songs 90
Total videos 90
Troubleshooting 102
Turning off the player manually 97

U

Unique.....	50
Upgrading.....	101
USB cable.....	8

V

Video format	99
Video Library	6, 58
Video List Display Format.....	66
Video Orientation	60
VOL+/- button	10
Volume.....	57
VPT(Surround)	52

W

Windows Explorer.....	58, 100
Windows Media Player.....	9
WM-PORT	10, 90
WMA	98, 128

Z

Zoom.....	63
-----------	----