

# ***Compact Disc Recorder***

---

## Operating Instructions

### Owner's Record

The model and serial numbers are located on the rear panel. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. RCD-W3

Serial No. \_\_\_\_\_




## ***RCD-W3***

## WARNING

**To prevent fire or shock hazard, do not expose the unit to rain or moisture.**

**To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.**

This appliance is classified as a CLASS 1 LASER product. The label is located on the rear exterior.

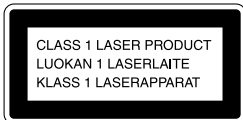

The following caution label is located inside the unit.



AC power cord must be changed only at the qualified service shop.


To prevent fire, do not cover the ventilation of the apparatus with news papers, table-cloths, curtains, etc. And do not place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.



Don't throw away the battery with general house waste, dispose of it correctly as chemical waste.

For the customers in the U.S.A.

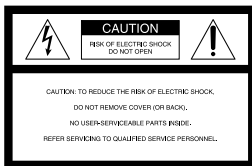

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.


This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## CAUTION

The use of optical instruments with this product will increase eye hazard.

As the laser beam used in this CD player is harmful to eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

The following caution label is located on the side exterior.

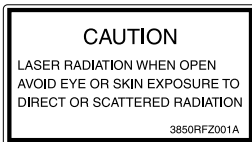

## CAUTION

You are cautioned that any changes or modification not expressly approved in this manual could void your authority to operate this equipment.

## INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## NOTICE FOR THE CUSTOMERS IN CANADA

### CAUTION:

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

This Class B digital apparatus complies with Canadian ICES-003.

## Welcome

Thank you for purchasing the Sony Compact Disc Recorder. Before operating the recorder, please read this manual thoroughly and retain it for future reference.

# Precautions

## On safety

- Should any solid object or liquid fall into the cabinet, unplug the recorder and have it checked by qualified personnel before operating it any further.
- The use of optical instruments with this product will increase the risk of eye hazard.

## On power sources

- Before operating the recorder, check that the operating voltage of the deck is identical with your local power supply. The operating voltage is indicated on the nameplate at the rear of the recorder.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- If you are not going to use the recorder for a long time, be sure to disconnect the recorder from the wall outlet. To disconnect the AC power cord, grasp the plug itself; never pull the cord.
- AC power cord must be changed only at a qualified service shop.

## On condensation in the recorder

If the recorder is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the recorder. Should this occur, the recorder may not operate properly. In this case, remove the CD, CD-R, or CD-RW and leave the recorder turned on for about an hour until the moisture evaporates.

## On handling Discs

- To keep the disc clean, handle it by its edge. Do not touch the surface.
- Do not stick adhesive papers or tapes onto the disc.



- Only regular circular discs can be used in this recorder. Irregularly shaped discs, such as star- or heart-shaped discs may damage the recorder.
- If there is glue or a similar substance on the disc, remove it completely before using the disc.

## On storage

- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight as there can be a considerable rise in temperature inside the car.
- Store discs in their cases. Do not store discs either stacked horizontally or standing vertically without their cases.

## On cleaning

- Fingerprints or dust on the disc may cause poor sound reproduction or sound dropout.
- Before playing a disc, clean it with a cleaning cloth. Wipe the disc from the center out.



- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for vinyl LPs.

## Note on High-Speed CD to CD-R or CD-RW Synchro-Recording

Certain CD conditions may cause sound dropout or noise in the recording results, or even create unwanted tracks on the CD-R or CD-RW. If this happens, clean the CD as instructed in “On cleaning” above, and record material to the CD-R or CD-RW using normal-speed CD to CD-R or CD-RW Synchro-Recording only.

## Note on CD-R or CD-RW playback

When you playback a CD-R or CD-RW recorded by a CD-R or CD-RW recorder, you may not be able to playback, depending on the recording conditions (e.g., dirty disc, etc.). Also, you should note that you need to finalize a CD-R or CD-RW before playing back on another system other than the one used to make the recording. (Finalizing is a process to complete the recording.)

After finalizing a CD-R disc, you can play it in any conventional CD player. However, depending on the state of the recording, there may be sound skips during playback.

After finalizing a CD-RW disc, you can play it in a CD-RW compatible player only.

# Contents

---

## Getting Started

Unpacking .....	5
Hooking Up the System .....	5
This Recorder Can Use the Following Discs .....	6

---

## Basic Operations

Playing a CD .....	7
Using the display .....	8
Locating a Specific Track .....	10
Locating a Particular Point in a Track .....	11
Playing Tracks Repeatedly (Repeat Play) .....	11
Playing in Random Order (Shuffle Play) .....	12
Creating Your Own Program (Program Play) .....	12
Alternating Discs from One Tray to the Other (Relay Play) .....	13

---

## Recording on CDR

Recording a CD to CD-R or CD-RW disc at Normal Speed .....	14
Recording a CD to CD-R or CD-RW disc at High Speed .....	15
Recording on a CD-R or CD-RW disc Manually .....	17
Auto/Manual Track Increment .....	18
Finalizing a CD-R or CD-RW disc .....	19
Unfinalizing a CD-RW disc .....	20
Erasing a single track of CD-RW disc .....	21
Erasing an Entire CD-RW disc .....	21

---

## Additional Information

Error Messages .....	22
System Limitations .....	22
Troubleshooting .....	23
Specifications .....	Back cover


## Unpacking


Check that you received the following items:

- Audio connecting cord (2)
- Remote commander (remote) (1)
- Size AA (R6) batteries (2).

### Inserting batteries into the remote

You can control the recorder using the supplied remote.

Insert two size AA (R6) batteries by matching the ⊕ and ⊖ ends on the batteries to the markings inside the compartment. When using the remote, point it at the remote sensor  on the recorder.

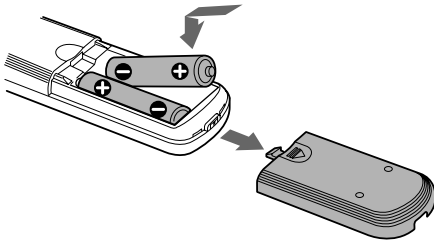

#### Notes

- Do not leave the remote near an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not drop any foreign object into the remote casing, particularly when replacing the batteries.
- Do not expose the remote sensor to direct light from the sun or lighting apparatus. Doing so may cause a malfunction.
- If you don't use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.


## Hooking Up the System

### Overview

This section describes how to hook up the CD recorder to an amplifier. Be sure to turn off the power of each component before making the connections.


Use the audio connecting cord (supplied) (2).

#### RCD-W3

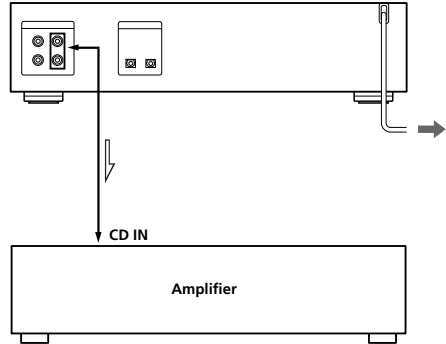

### The cord you need to hook up your recorder

- Audio connecting cords (supplied) (2)

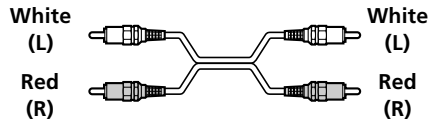


continued

## Hookups

### Connecting the recorder to an amplifier

Connect the amplifier to the ANALOG IN/OUT jacks using the audio connecting cords (supplied), making sure to match the color-coded cords to the appropriate jacks on the components: red (R) to red and white (L) to white. Be sure to make connections firmly to prevent hum and noise.

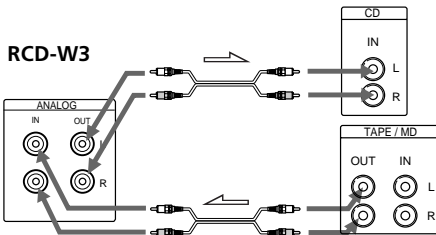

➡: Signal flow


### Connecting the recorder to a digital component such as CD player, DAT deck, or MD deck

Connect the component through the DIGITAL OPTICAL IN/OUT connectors with two optical cables (not supplied).

#### When using the optical cables

Take the caps off the connectors and then insert the plugs parallelly until they click into place.

Be sure not to bend or tic together the optical cables.

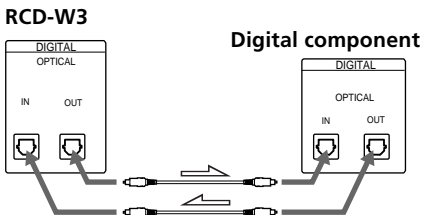

➡: Signal flow

### Connecting the AC power cord

Connect the AC power cord to a wall outlet.

#### Note

Do not connect the AC power cord to a switched outlet.

## This Recorder Can Use the Following Discs

This recorder can use three types of discs as follows:



Discs with the logo above (Audio CD) can be played by both DECK A (the CD player section) and DECK B (the CD-R or CD-RW recording section) of the recorder.



Discs with the logo above (Audio CD-R) are recordable only one time. When you finalize (page 19) the disc, you can play it in either DECK A (the CD player section) or DECK B (the CD-R or CD-RW recording section), and you can play it in any conventional CD player, including home, car, and portable models (A unfinalized disc can be played only in DECK B). When you buy a CD-R disc, please note that you must buy an audio CD-R disc. A CD-R disc designed for computer use will not work in the recorder.



Discs with the logo above (Audio CD-RW) are recordable, and also re-writable. When you finalize (page 19) the disc, you can play it in either DECK A (the CD player section) or DECK B (the CD-R or CD-RW recording section), and CD-RW compatible players. They will not play back in most current CD players unless the player is CD-RW compatible (A unfinalized disc can be played only in DECK B). When you buy a CD-RW disc, please note that you must buy an audio CD-RW disc. A CD-RW disc designed for computer use will not work in the recorder.





This logo means that a unit is compatible with Audio CD-R discs and Audio CD-RW discs (both Audio CD-R discs and Audio CD-RW discs can be used).


# Playing a CD

This recorder has two decks. When using the remote, set SELECT to CD for operations on DECK A (the CD player section), or to CDR for operations on DECK B (the CD-R or CD-RW recording section).

In this manual, the CD player section is just called DECK A, and the CD-R and CD-RW recording section is called DECK B.

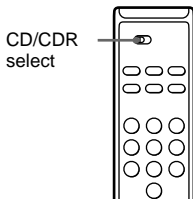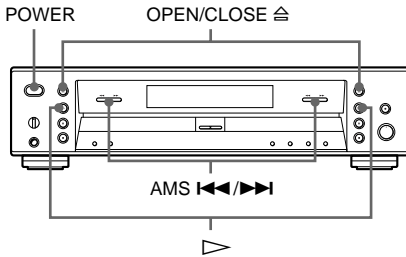

- 1** Turn on the amplifier and set the source selector to the recorder.
- 2** Press POWER.
- 3** Press  $\square$  and place a disc on the inner circle of DECK A (or B). Press  $\square$  again to close the disc tray.

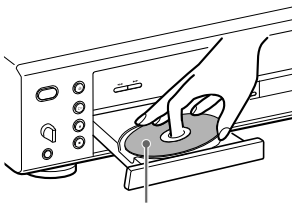

With the label side up

- 4** Press  $\triangleright$ .  
The recorder starts playing. Adjust the volume on the amplifier.

To	Do the following:
Stop playback	Press $\blacksquare$ .
Pause playing	Press $\parallel$ . Press the button again or press $\triangleright$ to resume playing.
Select a track	Press AMS* $\blacktriangleright$ .
Go to the beginning of the current track or the preceding track	Press AMS* $\blacktriangleleft$ .
Take out the disc	Press $\square$ on DECK A or B, which ever contains the disc you want to remove after stopping play.

\* AMS: Automatic Music Sensor

**Tips**

You can start playing with the track selected in Step 4.

- 1** Press AMS  $\blacktriangleleft$  or  $\blacktriangleright$  (or press  $\blacktriangleleft$  or  $\blacktriangleright$  on the remote) to select the track you want to play using the display\*.
- 2** Press  $\triangleright$ .

\*See "Using the Display" on page 8.

**Tips**

You can remove and load discs while playing another disc. Press  $\square$  of the deck that is not currently playing to open that tray, and remove or load a disc.

 
**Notes**

- You can play unfinalized CD-R or CD-RW discs only in DECK B. If you attempt to play an unfinalized disc in the DECK A, a DISC ERROR message will appear to remind you to play the disc in DECK B. For the detailed explanation about finalizing, see "Finalizing a CD-R or CD-RW disc" on page 19.
- At the end of a listening session, remove the discs from the decks by following the instructions in step 3. Do not leave the disc tray open when the unit is not in use to prevent dust and dirt from entering the unit and to prevent damage to the disc tray.


## Using the display

When you check the total number of tracks and total playing time of the disc while the recorder is stopped, the information appears as follows:

### DECK A




### DECK B

 

## Using the TIME button

You can use the TIME button to check disc and track information such as the total track number, total playing time of the tracks, track number and remaining time of the track currently being played, and remaining recordable time of the CD-R or CD-RW disc.

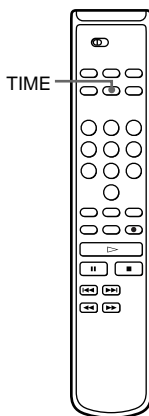

## Checking the information of the disc

 
Each time you press the TIME button while the recorder is playing, the front panel display for any deck that has a disc inside shows information as follows:

### DECK A

The track number and playing time are displayed.



The track number and remaining time of the track currently being played are displayed.



The the total remaining time of the disc is displayed.



### DECK B

The track number and playing time are displayed



The track number and remaining time of the track currently being played are displayed.



The total remaining time of the disc is displayed.



 


## Checking the remaining recordable time


When you placed an unfinalized CD-R or CD-RW in the DECK B, you can also check the remaining recordable time. The information appears as follows:

Before using the remote, set SELECT to CDR for operations on DECK B. Each time you press TIME, the front panel display is change as below.

The total track number and total playing time are displayed




 The total track number and the remaining recordable time are displayed



## On the TOC and CD-R/RW indicator

The CD-R/RW indicator shows which type of recordable disc is in DECK B, and whether the recordable disc has been already finalized.

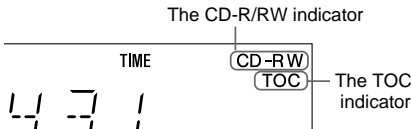

### The CD-R/RW indicator

When you put an unfinalized CD-R disc in the disc tray, the CD-R/RW indicator lights up as “CD-R.”

When you put a CD-RW disc in the disc tray, the CD-R/RW indicator lights up “CD-RW,” and it does not matter if the disc has not been finalized.

### The TOC indicator

When you put an unfinalized CD-R disc or CD-RW disc in the disc tray, the TOC indicator lights up.

For details on finalizing, refer to page 19, and page 20 for unfinalizing.


#### Note

When you put a CD or finalized CD-R disc in a disc tray, the CD indicator lights up as “CD.”

## Locating a Specific Track

You can quickly locate any track while playing a disc by using the AMS **⏮** and **⏭** (Automatic Music Sensor) on the deck, **⏮** and **⏭** buttons on the remote, or number buttons on the remote.

Before using the remote, set SELECT to CD for operations on DECK A, or to CDR for operations on DECK B.

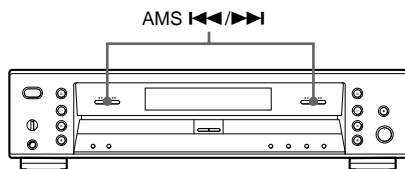

To locate	Do the following:
Stop playback	Press <b>■</b> .
The next or succeeding tracks	During playback, press AMS* <b>⏭</b> until you find the track.
The beginning of the current or preceding tracks	During playback, press AMS <b>⏮</b> until you find the track.
A specific track directly	Press the number button(s) on the remote to enter the track number.

\* AMS: Automatic Music Sensor

### Tips

To pause playing at the beginning of a track, press AMS **⏮** or **⏭** (or press **⏮** or **⏭** on the remote) after pausing playback.

## Playing directly using the number buttons

You can playback a track directly by using the number buttons. Press the track number you want to play. The track will be played shortly after you press the number buttons. If the number is 2 digits, press the second digit immediately after you press the first digit.

Example:


When you press 1 (or 2, etc.), "1--" appears on the front panel display.

If you don't press the second digit immediately, track 1 will be played shortly after "1--" appears on the front panel display.

## Locating a Particular Point in a Track

You can also use the ◀▶ and ▶▶ buttons to locate a particular point in a track during playback or playback pause.

Before using the remote, set SELECT to CD for operations on DECK A, or to CDR for operations on DECK B.

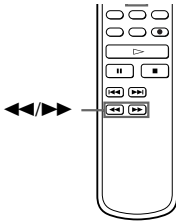

To locate a point	Press and hold
While monitoring the sound	During playback, press ◀▶ or ▶▶ on the remote repeatedly.


### Notes

- If the disc reaches the end while you are pressing ▶▶ on the remote during sound monitoring, the recorder stops.
- Tracks that are only a few seconds long may be too short to scan using the search function. For such tracks, it is better to play the disc at normal speed.

## Playing Tracks Repeatedly (Repeat Play)

You can play tracks repeatedly in any play mode.

Before using the remote, set SELECT to CD for operations on DECK A, or to CDR for operations on DECK B.

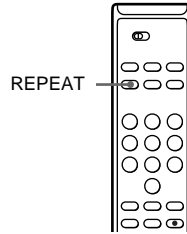

- 1 Each time you press REPEAT on the remote, the REPEAT indicator in the front panel display lights and toggles as “REPEAT,” “REPEAT 1,” and then lights off.

The deck repeats the tracks as follows:

When the disc is played in	The deck repeats
Normal play (page 7)	All the tracks by “REPEAT”. One track repeat by “REPEAT 1”
Shuffle play (page 12)	All the tracks in random order by “REPEAT”
Program Play (page 12)	All the same Program by “REPEAT”

- 2 Press ▷.

### To stop Repeat Play

Press ■.

### To cancel Repeat Play

Press REPEAT until the indicator disappears.


### Note

You cannot use Repeat Play, when Relay Play is ON (page 13).

## Playing in Random Order (Shuffle Play)

You can have the recorder “shuffle” tracks and play them in random order.

Before using the remote, set SELECT to CD for operations on DECK A, or to CDR for operations on DECK B.

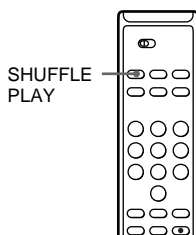

While the recorder is stopped or playing, press SHUFFLE PLAY on the remote until “SHUFFLE” appears in the front panel display.

### To stop Shuffle Play

Press ■.

#### Tip

To play from the beginning of the current track again, press AMS ◀◀. You cannot use AMS ◀◀ to go back to tracks that have already been played.

#### Note

“REPEAT 1” is canceled if you set Shuffle Play.


## Creating Your Own Program (Program Play)

You can specify the playback order of the tracks on a disc to create your own programs containing up to 20 tracks.

Before using the remote, set SELECT to CD for operations on DECK A, or to CDR for operations on DECK B.

#### Note

You cannot create a program containing tracks from both DECK A and DECK B.

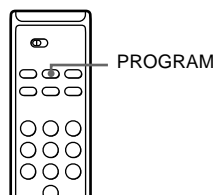

- 1** While the recorder is stopped, press PROGRAM on the remote until “PGM” appears in the front panel display.
- 2** Press ▶▶ on the remote until the desired track appears, then press PROGRAM on the remote.
- 3** To program additional tracks, repeat Step 2.
- 4** Press ▷ to start Program Play.

### To stop Program Play

Press ■.

### To cancel Program Play

While the recorder is stopped, press PROGRAM on the remote until “PGM” disappears.

### To select the desired track using the number buttons

Press the number buttons instead of performing Step 2.

**To erase the last programmed track**

Press CLEAR on the remote. Each time you press the button, the last programmed track is erased.

**Tip**

The program remains even after Program Play ends. When you press  $\triangleright$ , you can play the same program again.



**Notes**

- “Full” appears on the front panel display when you program over 20 tracks. Erase the unnecessary tracks to enter other tracks.
- The program is erased when you press POWER to turn off.

## Alternating Discs from One Tray to the Other (Relay Play)

When there is a disc in each deck, you can alternately play the decks so that when one disc is finished, the other will begin to play automatically for continuous play between the 2 decks.

Before using the remote, set SELECT to CD for operations on DECK A, or to CDR for operations on DECK B.

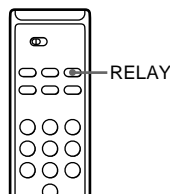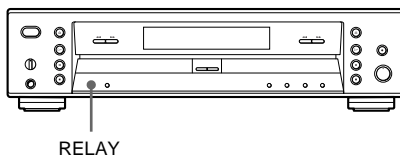

Press RELAY until “RELAY” appears in the display.

When the disc in DECK A has played through to the end, DECK B begins to play. Play alternates between the two decks continuously until you press stop or change operations.

**To stop Relay Play**

Press ■.

**Note**

“REPEAT” or “REPEAT 1” is canceled if you set Relay Play.

## Recording a CD to CD-R or CD-RW disc at Normal Speed

 
### (Normal Speed Synchro-Recording)

You can easily make digital recordings from a CD to a CD-R, or CD-RW, making track numbers in the same sequence as the original CD.


Before recording, see “Notes” on page 16.

After recording, you must finalize the disc.

Until the disc is properly finalized, it cannot be played on any other machine. See “Finalizing a CD-R or CD-RW disc” on page 19.




CD SYNCHRO NORMAL

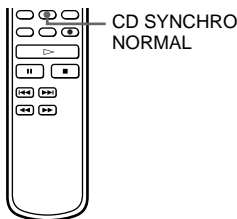

**1** Press POWER.

**2** Press  $\triangle$  of DECK B and place a recordable CD-R or CD-RW on the disc tray. Press  $\triangle$  of DECK B again to close the disc tray.

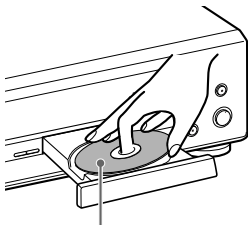

With the label side up

“TOC” starts to flash. The recorder starts to read the TOC (Table of Contents) data and shows the type of the disc in the deck on the front panel display.

**3** Press  $\triangle$  of DECK A and place a CD on the disc tray. Press  $\triangle$  of DECK A again to close the disc tray.

**4** Press CD SYNCHRO NORMAL.

“CD SYNCHRO” appears and “REC” flashes in the front panel display. And the recorder (DECK B) optimizes itself for the best possible recording and “OPC” appears on the display shortly. DECK A will check that digital recording is available. DECK B stands by for recording, and DECK A stands by for playing.



**5** If the front panel display is displayed as above, it will be ready to record.

Press  $\triangleright$  on the front panel or on the remote to start recording.

Recording starts. DECK A and DECK B will automatically stop after recording.

### 1 track CD synchro (Normal speed)

During stop, press AMS ( $\lll$ / $\ggg$ ) until you find the track after you press CD SYNCHRO NORMAL.

### Program synchro (Normal speed)

After creating your own program (page 12), press CD SYNCHRO NORMAL.

### To stop recording

Press  $\blacksquare$ .

### Notes

- When copying a disc digitally recorded under control of the Serial Copy Management System (SCMS), the recorder automatically select the analog recording.
- When copying a commercial music CD contains copy-prohibit signals, the recorder automatically select the analog recording.

 
## Recording a CD to CD-R or CD-RW disc at High Speed

### (High Speed Synchro-Recording)

You can easily make digital recordings from a CD to a CD-R, or CD-RW, faster than normal Synchro-Recording, making track numbers in the same sequence as the original CD.

Before recording, see “Notes” on page 16.

After recording, you must finalize the disc. Until the disc is properly finalized, it cannot be played on any other machine. See “Finalizing a CD-R or CD-RW disc” on page 19.




CD SYNCHRO HIGH



CD SYNCHRO HIGH

**1** Press **POWER**.

**2** Press  $\square$  of **DECK B** and place a recordable CD-R or CD-RW on the disc tray. Press  $\square$  of **DECK B** again to close the disc tray.

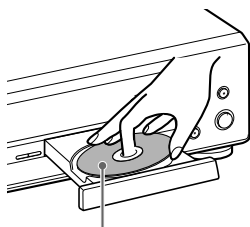


With the label side up

“TOC” starts to flash. The recorder starts to read the TOC (Table of Contents) data and shows the type of the disc in the deck on the front panel display.

**3** Press  $\square$  of **DECK A** and place a CD on the disc tray. Press  $\square$  of **DECK A** again to close the disc tray.

**4** Press **CD SYNCHRO HIGH**.

 “CD SYNCHRO” appears and “REC” flashes in the front panel display. And the recorder (**DECK B**) optimizes itself for the best possible recording and “OPC” appears on the display shortly. **DECK A** will check that digital recording is available. **DECK B** stands by for recording, and **DECK A** stands by for playing.



**5** If the front panel display is displayed as above, it will be ready to record.

Press  $\triangleright$  on the front panel or on the remote to start recording.

High-Speed recording starts. You cannot monitor the recorded signal during recording. **DECK A** and **DECK B** will automatically stop after recording.

### 1 track CD synchro (High speed)

During stop, press **AMS** ( $\lll / \ggg$ ) until you find the track after you press **CD SYNCHRO HIGH**.

### To stop recording

Press  $\blacksquare$ .

### Notes

- When copying a disc digitally recorded under control of the Serial Copy Management System (SCMS), the recorder automatically select the analog recording and the recording speed will become normal.
- When copying a commercial music CD contains copy-prohibit signals, the recorder automatically select the analog recording, and the recording speed will become normal.

continued

## Notes

- You cannot record over existing material. The recorder automatically starts recording from the end of the existing material.
- Make sure that the remaining recordable time on the CD-R or CD-RW is longer than the playing time of the CD, especially if you want to record all the tracks on the CD.
- You cannot pause recording in Synchro-Recording.
- If the play mode is set to Repeat Play, it automatically switches to normal play in step 4.
- If you set "Program Play," you cannot use the High Speed Synchro-Recording mode for recording.
- When you select the High Speed Synchro Recording mode during Program Play, the recorder will automatically make a copy at normal speed.
- You cannot use the recording function when you set "Shuffle Play."
- If an error message appears on the front panel display, refer to "Error Messages" on page 22.
- With the following kinds of CDs, you may experience a reading failure or noise when recorded to a CD-R or CD-RW.
  - CD with adhesive labels attached to them
  - Irregularly shaped CDs (for example, heart or star shaped)
  - CDs with printed text concentrated on one side only
  - Old CDs
  - Scratched CDs
  - Dirty CDs
  - Warped CDs
- When "TOC WRITE" flashes in the display, the recorder is currently updating the table of contents (TOC). Do not move the recorder or pull out the AC power cord.
- If the following occurs during CD playback or recording, a reading error may occur or noise may be produced in the recorded results:
  - The CD tray or other part of the system is bumped.
  - The system is placed on an uneven or soft surface.
  - The system is located near a speaker, door, or other source of vibration.

### Note on a copy protection

Some commercial CD discs may contain a copy protection code that will prevent the disc from being recorded. In this case, the "COPY PROHIBIT" indicator will appear.

### Do not disconnect the recorder from the power source immediately after recording.

If you do, recorded material may not be saved to the CD-R or CD-RW. When "BUSY" or "UPDATE" appears in the display, the deck is currently updating track information. When "UPDATE" stops being displayed, it is safe to disconnect the AC power cord.





## Recording on a CD-R or CD-RW disc Manually

You can start recording from the end of the existing material.

When using the remote, set SELECT to CDR for operations on DECK B.

To perform Synchro-Recording, see “Recording a CD to CD-R or CD-RW disc at Normal Speed” on page 14 or “Recording a CD to CD-R or CD-RW disc at High Speed” on page 15.

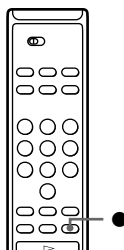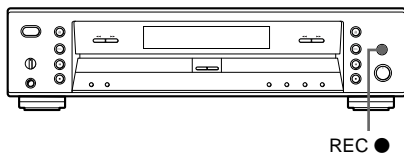

- 1** Turn on the amplifier and set the source selector to the position for the sound source you want to record.
- 2** Place a recordable CD-R or CD-RW on DECK B.
- 3** Press INPUT repeatedly to select the input connector.

To record through	Select
DIGITAL OPTICAL	OPTICAL
ANALOG IN	ANALOG

- 4** Press REC ●.

The recorder stands by for recording.

- 5** Adjust the recording level (ANALOG IN only), if necessary. For details, see “Adjusting the Recording Level” on page 18.

- 6** Press ▷.

- 7** Start playing the sound source you want to record.

### To pause recording

Press ■. To resume recording, press the button again or press ▷.

### Note

Whenever you pause recording, a new track number is added. For example, if you paused recording while recording on track 4, the track number increases by one on track 5 and recording continues on the new track when recording is resumed.

### To stop recording

Press ■.

“BUSY”, and then “UPDATE” appear while updating the information of the disc before stopping the recording.

### Notes

- You cannot operate the CD player section while the deck is recording or standing by for recording with “OPTICAL” or “ANALOG” selected with the INPUT button.
- If you press the REC button during recording, you can add a track (The track must be longer than 4 seconds).
- Press ■ when the recorder is in standby for recording to add a silent (around 2 seconds) before a song you are recording. The recorder automatically enters standby again.
- This recorder uses the Serial Copy Management System (SCMS), which allows only first-generation digital copies to be made of premastered software via the recorder's digital input. Therefore you may not be able to record a CD-R or CD-RW digitally through OPTICAL IN, depending on the content being record.

## Adjusting the Recording Level (ANALOG IN only)


You can adjust the recording level using the REC LEVEL control on the front panel. Adjust the recording level so that the “OVER” indicator on the level is not normally appears.



If rec level is too loud, “OVER” appears in the front panel.

### When the SRC indicator lights up

The SRC (Sample Rate Converter) indicator lights up Sample Rate Converter is in use. When a non-standard incoming signal is received and it will be converted to standard 44.1 kHz for CD playback. This is an automatic function and does not require any user intervention.

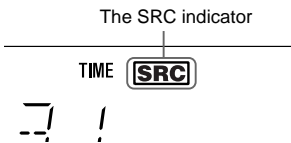


#### Notes

- The frequency of SRC is 32 kHz-48 kHz.
- Audio signals of specially encoded discs may not be properly recorded.

## Auto/Manual Track Increment

 Press LEVEL SYNC to select how tracks will be numbered on the recorded disc.





LEVEL SYNC

- The Auto mode will add track numbers automatically, in one of two ways. When track data is present from a digital recording, it will be carried over to the new copy disc. Thus, when the CD being played moves from one track to the next track, the copy disc will also increase the track number by one.
- In the Auto mode for recordings from an analog source or a digital source with no track data, the track number will be increased when the recorder receives silence for 3 seconds. After 20 seconds of silence, the recording will automatically stop.
- To activate the Auto mode, press the LEVEL SYNC once and note that “L.SYNC OFF” appears in the display. In that mode for either digital or analog recordings, you must add track numbers manually by pressing REC ● when you wish to increase the track number.
- The Digital In source with track data will be recorded not concerned with LEVEL SYNC ON/OFF according to track data.
- When the power is turned on, LEVEL SYNC is activated automatically.

## Finalizing a CD-R or CD-RW disc

Finalizing completes the recording of a disc. It enables you to play the disc on other players. (The player must be CD-RW compatible.) When a recording is finished, a CD-R or CD-RW disc must be finalized. Once that is done, a CD-R disc may not be changed or added to. CD-RW discs are locked once they are finalized, and must be unfinalized to permit additional recording or erasure.

When using the remote, set SELECT to CDR for operations on DECK B.

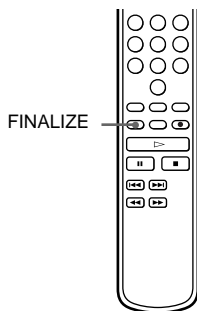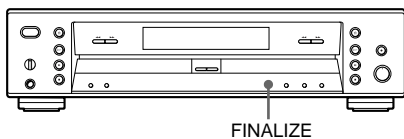

### 1 Press FINALIZE.

The "FINALIZE" indicator will begin to flash, and the PLAY, PAUSE, and REC indicators light up for about 8 seconds. Erasing enters standby mode.

### 2 Press $\triangleright$ while the "FINALIZE" indicator is flashing.

Finalizing starts. During finalizing, "TOC WRITE" appears in the display and the remaining time for finalizing appears in the display. When the finalizing process is finished, the total track number and the total playing time appear in the display and the TOC (red) indicator lights off.

#### Notes

- The TOC (red) indicator appears on the front panel display if the disc you put in DECK B has not been finalized. Check the indicator each time before finalizing.
- Once finalizing process starts, you cannot stop in the middle of the process.
- Do not turn off the recorder or disconnect the recorder from the power source in the middle of the finalizing process.



## Unfinalizing a CD-RW disc

A CD-RW disc is both recordable and rewritable. However, the process of rewriting or erasing is different from that of cassette tapes.

### Unfinalizing a CD-RW disc

A finalized CD-RW is neither recordable nor rewritable. If you want to add new tracks or erase single tracks, you must first unfinalize the disc.

When using the remote, set SELECT to CDR for operations on DECK B.

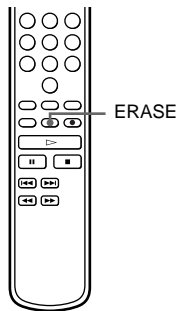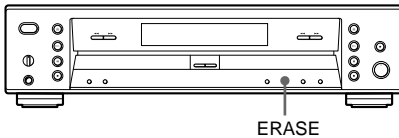

### 1 Press the ERASE button.

The "UNFINALIZE" indicator begins to flash, and the PLAY, PAUSE, and REC indicators light up for about 8 seconds. Unfinalizing enters standby mode.

### 2 Press the PLAY button while the "UNFINALIZE" indicator is flashing.

Unfinalizing starts. During unfinalizing, "TOC ERASE" appears in the display and the remaining time for unfinalizing appears in the display. When the unfinalizing process is finished, the total track number and the total playing time appears in the display and the TOC (red) indicator lights up.


#### Notes

- The TOC (red) indicator appears on the front panel display if the disc you put in DECK B has not been finalized. Check the indicator each time before finalizing.
- Once the unfinalizing process starts, you cannot stop in the middle of the process.
- Do not turn off the recorder or disconnect the recorder from the power source in the middle of the unfinalizing process.
- An unfinalized disc can be played back only in DECK B.

## Erasing a single track of CD-RW disc

You can erase one track on a CD-RW at a time. This process starts with the last track on the disc. Please note that before erasing a track, you must unfinalize the disc. If the disc is not unfinalized, follow the instructions of “Unfinalizing a CD-RW disc” (page 20).

When using the remote, set SELECT to CDR for operations on DECK B.

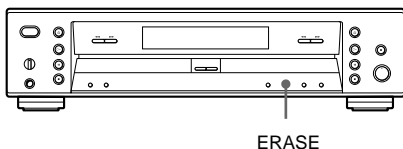

### 1 Press the ERASE button.

The “LAST TR ERASE” indicator will begin to flash, and the PLAY, PAUSE, and REC indicators light up for about 8 seconds. Erasing enters in standby mode.

### 2 Press $\blacktriangle$ while “LAST TR ERASE” is flashing.

The last track erasing starts. During the last track erasing, “LAST ERASE” appears in the display. When this process is finished, the total track number and the total playing time appears in the display.


#### Notes

- The TOC (red) indicator appears on the front panel display if the disc you put in the DECK B has not been finalized. Check the indicator each time before erasing the last track of a disc.
- Once erasing process starts, you cannot stop in the middle of the process.
- Do not turn off the recorder or disconnect the recorder from the power source in the middle of the erasing process.

## Erasing an Entire CD-RW disc

Erasing the entire contents of a CD-RW disc is easy, and it does not matter whether the disc has been unfinalized or not.

When using the remote, set SELECT to CDR for operations on DECK B.

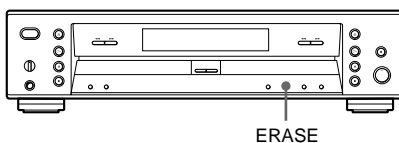

### 1 Press ERASE twice until “DISC ERASE” appears in the front panel display.

The “DISC ERASE” indicator will begin to flash, and the PLAY, PAUSE, and REC indicators light up for about 8 seconds. Entire disc erasing enters in the standby mode.

### 2 Press $\blacktriangle$ while “DISC ERASE” is flashing.

Entire disc erasing starts. During erasing, “DISC ERASE” appears in the front panel display. When this process is finished, “00.00” appears in the display.

#### Notes

- Once entire disc erasing process starts, you cannot stop the erasing in the middle of the process.
- Do not turn off the recorder or disconnect the recorder from the power source in the middle of the erasing process.

**Error Messages**

The following table explains the error messages that appear in the display.

<b>Message</b>	<b>Explanation</b>
CHECK DISC	<ul style="list-style-type: none"> <li>• A record-related button has been pressed when a finalized disc is in the DECK B.</li> <li>• A record-related button has been pressed when a standard CD is in the DECK B.</li> </ul>
DATA DISC	A non-audio CD-ROM or a CD-Video disc has been placed in the machine.
DISC ERROR	<ul style="list-style-type: none"> <li>• An unfinalized disc has been placed in the DECK A.</li> <li>• There is a problem with the disc.</li> <li>• A DVD disc has been placed in the unit.</li> </ul>
DISC FULL	There is not enough time left on the disc to complete a planned recording.
ERROR	There is a problem with the tray.
FAILED	A dubbing has not been completed properly.
FULL	More than 20 tracks have been programmed.
NO AUDIO	A record-related button has been pressed when a non-audio disc is in the DECK B.

**System Limitations****“TOC” appears for a long time**

If the inserted recordable CD-R/RW is brand new, “TOC” appears in the front panel display longer than for CD-R/RWs that have been used.

**Limitations when recording over an existing track**

- The correct remaining recording time may not be displayed.
- You may find it impossible to record over a track if that track has been recorded over several times already.
- The remaining recording time may be shortened out of proportion to the total recorded time.
- Recording over a track to eliminate noise is not recommended since this may shorten the duration of the track.
- You may find it impossible to label a track after recording over a previous one.
- You can record songs for up to 99 tracks.

# Troubleshooting

If you experience any of the following difficulties while using the recorder, use this troubleshooting guide to help you remedy the problem before requesting repairs.

## DECK A (the CD player section)

### The player does not start playing

- Insert a disc.
- Place the disc properly.
- Clean the disc.
- Place the disc with the label side up.
- Moisture condensation has formed inside the recorder. Take the disc out and leave the recorder turned on for about an hour until the moisture evaporates.
- Press POWER to turn the recorder on.

## DECK B (the CD-R and CD-RW recording section)

### The recorder does not operate or operates poorly.

- The CD-R or CD-RW may be damaged. Replace the disc.

### The recorder does not start playing

- Moisture has formed inside the recorder. Take the disc out and leave the recorder in a warm place for several hours until the moisture evaporates.
- Press POWER to turn the recorder on.
- Place the CD-R or CD-RW with the label side up.
- Replace the CD-R or CD-RW with one that has been recorded.

### The recorder does not record

- The CD-R or CD-RW is finalized. Unfinalize (for CD-RW only) the disc and try again.
- Make connections properly to the sound source.
- The sound source is not connected to the selected input connector. Select the correct input connector using INPUT.
- The recording level is not adjusted properly. Adjust the recording level properly.
- There has been a power failure or the AC power cord has been disconnected during recording. Data recorded to that point may be lost.

### The sound has a lot of static.

Strong magnetism from a television or a similar device is interfering with operations. Move the recorder away from the source of strong magnetism.

## Other

### No sound is output.

- Make the connections properly.
- Operate the amplifier properly.
- When using the headphones, turn PHONE LEVEL to turn up the output level.

### The remote does not operate the recorder.

- Make sure that there are no obstacles between the recorder and the remote.
- Point the remote at the remote sensor on the recorder.
- Replace the batteries in the remote.

## After you've attempted the prescribed remedies

If the recorder still does not operate properly, or if other problems not described above occur, turn off the recorder, then reinsert the plug into the power outlet.

Should any problem persist even after reinserting the power plug, consult your nearest Sony dealer.

# Specifications

## DECK A (the CD player section)

System	Compact disc and digital audio system
Laser	Semiconductor laser ( $\lambda = 780 \text{ nm}$ ) Emission duration: continuous
Frequency response	20 Hz – 20,000 Hz ( $\pm 0.5 \text{ dB}$ )
Signal-to-noise ratio	More than 100 dB
Dynamic range	More than 95 dB

## DECK B (the CD-R and CD-RW recording section)

System	Compact disc digital audio system
Laser	Semiconductor laser ( $\lambda = 780 \text{ nm}$ ) Emission duration: continuous
Playable discs	CD, CD-R, CD-RW
Recordable discs	CD-R, CD-RW (for music use)
Frequency response	20 to 20,000 Hz $\pm 0.5 \text{ dB}$
Signal-to-noise ratio	Over 100 dB during playback
Dynamic range	More than 95 dB during playback

## Inputs

ANALOG IN (Phono jacks)	impedance 47 kilohms Rated input 330 mVrms Minimum input 125 mVrms
DIGITAL OPTICAL IN (Square optical connector jack)	Optical wavelength 660 nm

## Outputs

ANALOG OUT (Phono jacks)	Rated output 2 Vrms (at 50 kilohms) Load impedance over 10 kilohms
OPTICAL DIGITAL OUT (Square optical connector jack)	Wavelength 660 nm Output level -18 dBm
PHONES (Phone jacks)	28 mW, 32 ohms

## General

Power requirements	U.S.A. and Canada 120 V AC, 60 Hz Other countries 110 – 240 V AC, 50/60 Hz
Power consumption	20 W
Dimensions (approx.) (w/h/d) incl. projecting parts and control	430 × 108 × 368 mm
Mass (approx.)	4.6 kg
Supplied accessories	See page 5.

Design and specifications are subject to change without notice.