




CD/DVD prehrávač

DVP-SR360


(SK) Prehľad pri prvom spustení

1


A

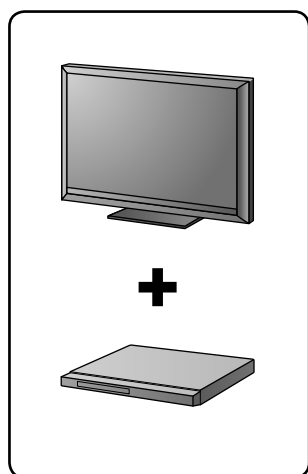


■ SCART

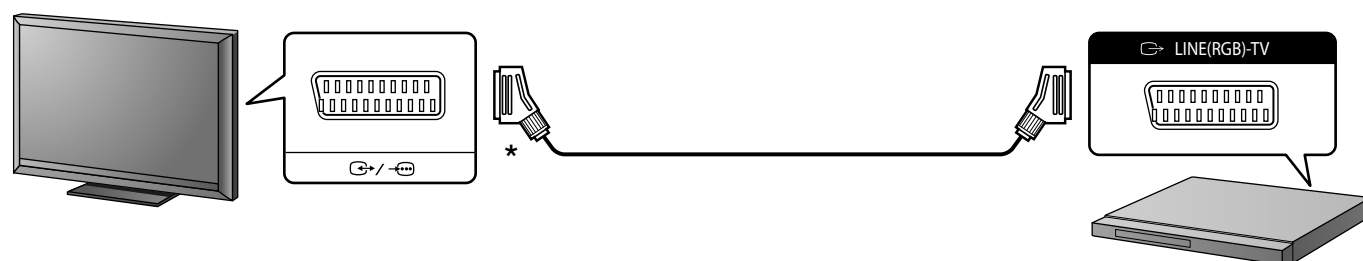

B

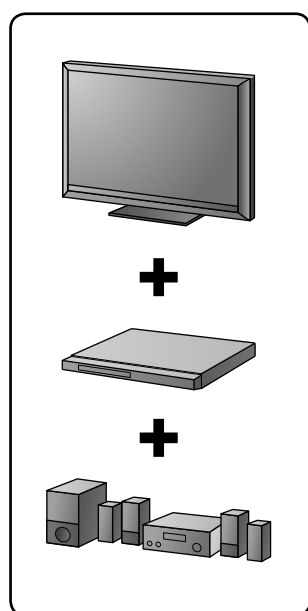


■ COAXIAL

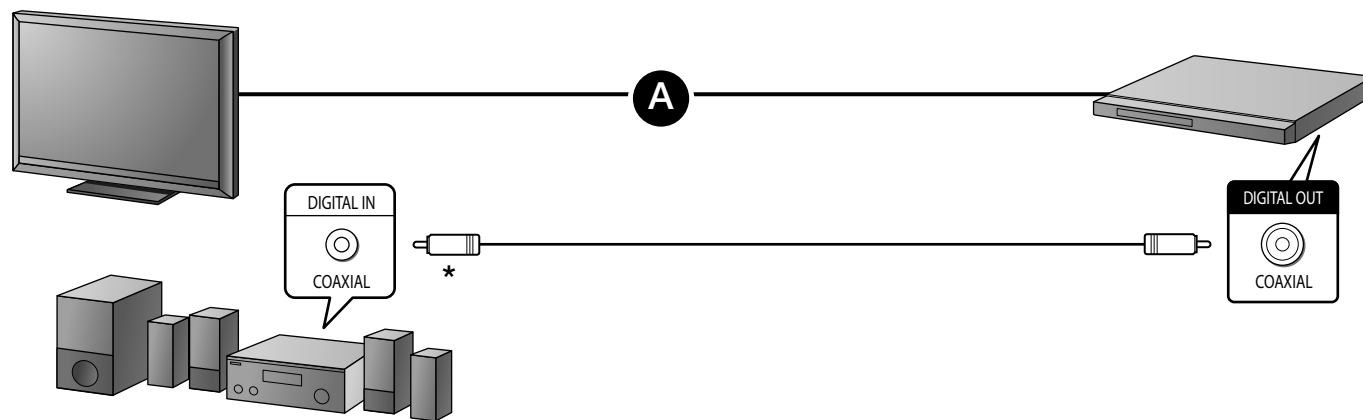


* Nedodávané

2



1

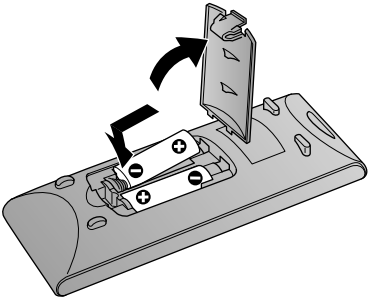

2

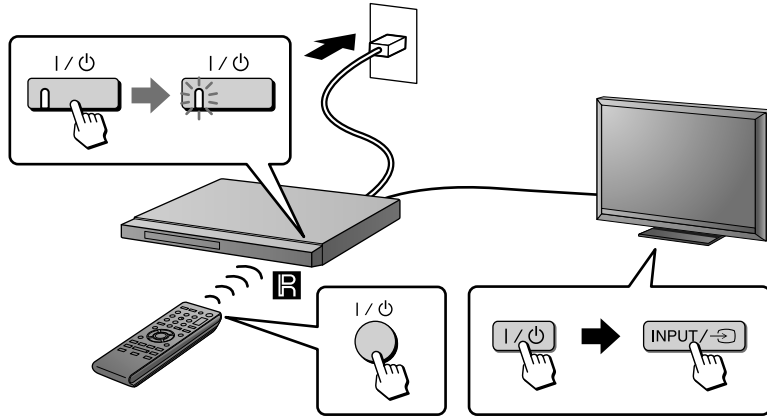


3

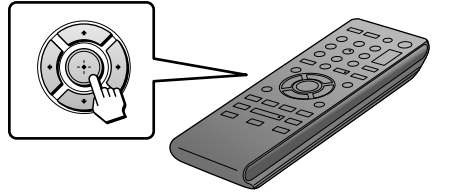
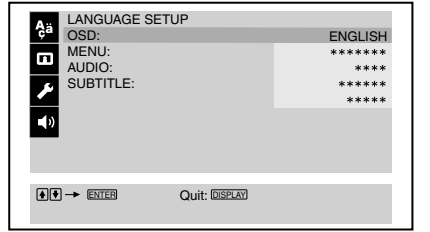


3

1

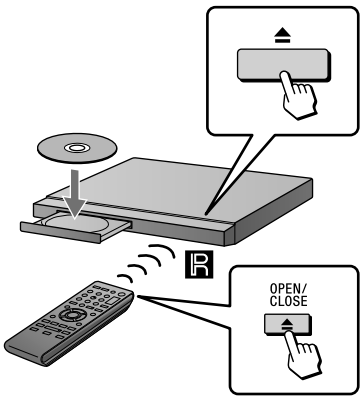

2

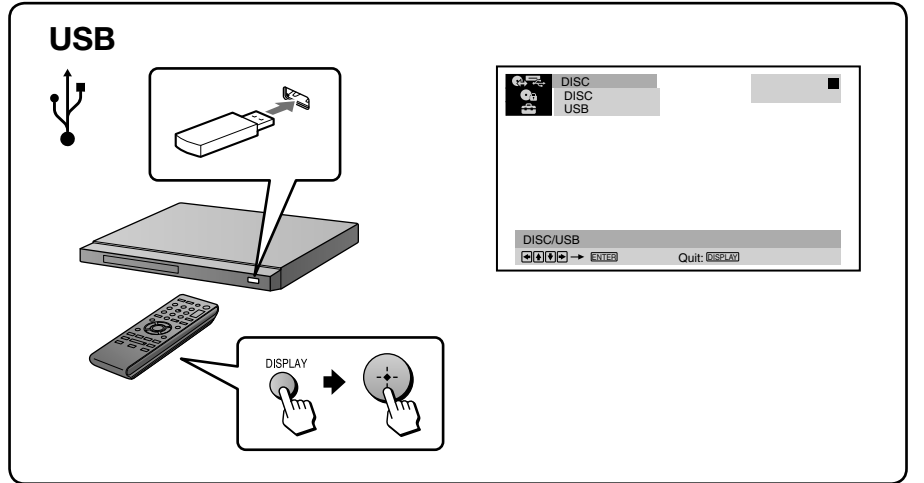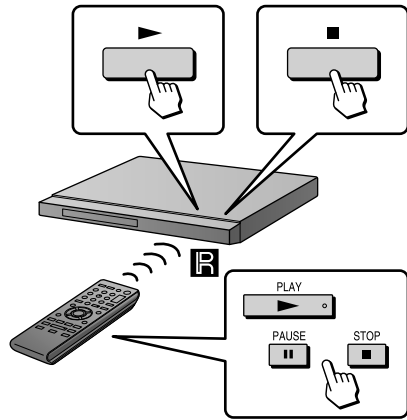

TIME/TEXT

PICTURE NAVI

AUDIO

SUBTITLE

MENU

DISPLAY

FAST/SLOW PLAY

RETURN

DISPLAY

TIME/TEXT

PICTURE NAVI

AUDIO

SUBTITLE

MENU

DISPLAY

FAST/SLOW PLAY

RETURN

DISPLAY