



IC Recorder

Quick Start Guide



ICD-SX733/SX1000



4-447-267-82(1)

© 2013 Sony Corporation

Welcome to your new Sony IC recorder!

This is the Quick Start Guide, which provides you with instructions on the basic operations of the IC recorder. Please read it carefully. We hope you enjoy using your new Sony IC recorder.

Check the supplied items.

- IC Recorder (1)
- Stereo headphones (1)
- USB connection support cable (1)
- Carrying case (1)
- Stand (1)
- Wind Screen (1) (ICD-SX1000 only)
- Application Software, Dragon NaturallySpeaking (DVD-ROM) (1)*
- Quick Start Guide
- Application Software, Sound Organizer (Installer file stored in the built-in memory so that you can install it to your computer.)

- Help Guide (HTML file stored in the built-in memory so it can easily be copied to your computer.)
- * supplied with some regions.

Optional accessories

- Electret condenser microphone
- USB AC adaptor AC-U50AG

Notes

- Depending on the country or region, some of the models or optional accessories are not available.
- The illustrations used in this Quick Start Guide are based on the ICD-SX1000 model. These illustrations may look different from the model you are using, however, the buttons and controls used for operations are the same.

Precautions

On power

Operate the unit only on 3.7V DC with the built-in rechargeable lithium-ion battery.

On safety

Do not operate the unit while driving, cycling or operating any motorized vehicle.

On handling

• Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.

Capacity (User available capacity *1*2)

ICD-SX733 : 4 GB (approx. 3.20 GB = 3,435,973,837 Byte)


ICD-SX1000 : 16 GB (approx. 12.80 GB = 13,743,895,347 Byte)

*1 A small amount of the built-in memory is used for file management and therefore not available for user storage.

*2 When the built-in memory is formatted with the IC recorder.


Let's try out your new IC recorder

1. Charge.

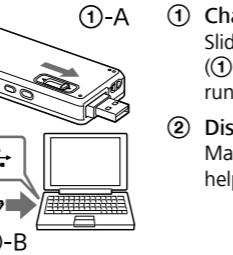

- ① Charge the IC recorder.
Slide the USB DIRECT slide lever in the direction of the arrow (①-A), and insert the USB connector into the USB port of a running computer (①-B).
- ② Disconnect the IC recorder.
Make sure that the access lamp does not light. Then refer to the help guide to remove the IC recorder safely.

2. Power on.

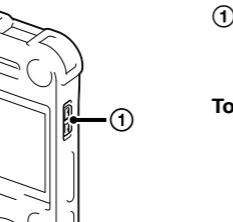


- ① Turn the power on.
Slide and hold the POWER ON/OFF HOLD switch in the direction of "POWER ON/OFF" until the window display appears.

To prevent unintentional operations (HOLD)




3. Set the date and time.

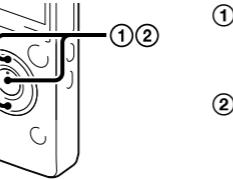


- ① Press ▲ or ▼ to select "Yes" when "Set Date&Time?" appears, and then press ► (play/enter).
The year section begins to flash.
- ② Press ▲ or ▼ to set the year (the last two digits of the year), and then press ► (play/enter). Repeat this procedure to set month, day, hour, and minute in sequence.

4. Select the display language.

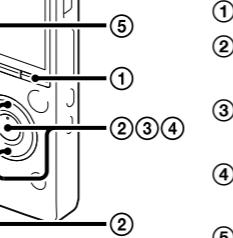


- ① Press MENU.
- ② Press ▲◀, press ▲ or ▼ to select ☰, and then press ► (play/enter).
- ③ Press ▲ or ▼ to select "Language," and then press ► (play/enter).
- ④ Press ▲ or ▼ to select the language that you want to use in the display window, and then press ► (play/enter).
- ⑤ Press ■ STOP.

5. Record.

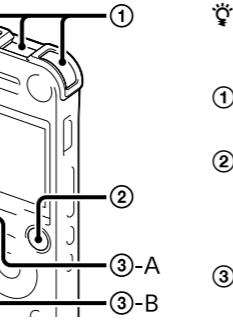


- Before you start using the IC recorder, make sure that you slide the POWER ON/OFF HOLD switch towards the center to release the HOLD status.
- ① Place the IC recorder so that the built-in microphones face the direction of the source to be recorded.
 - ② Press ● REC/PAUSE.
Recording starts and the recording lamp (②) lights in red.
You can pause recording by pressing ● REC/PAUSE. Press ● REC/PAUSE again to restart recording.
 - ③ Press ■ STOP (③-A) to stop recording.
The access lamp (③-B) flashes in orange and the recording stops.

6. Listen.

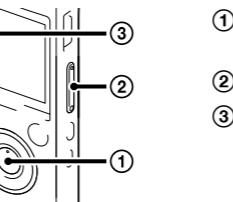

- ① Press ► (play/enter).
Playback starts.
- ② Adjust the volume by pressing VOL -/+.
- ③ Press ■ STOP to stop playback.

7. Erase.

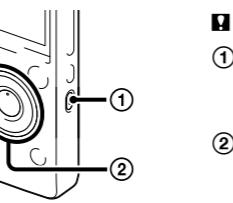

- Once a file is erased, you cannot restore it.
- ① Press ERASE.
"Erase?" is displayed and the file to be erased is played back for confirmation.
 - ② Select "Execute" using ▲ or ▼, and then press ► (play/enter).
The "Erasing..." animation appears while the selected file is being erased.

Utilizing Your Computer

Installing the help guide on your computer

By installing the help guide on your computer from the built-in memory of the IC recorder, you can search for detailed operations and possible solutions when a problem occurs.

- ① Slide the USB DIRECT slide lever on the back of the IC recorder, and insert the USB connector into the USB port of a running computer.
- ② In Windows: Click [Computer] (or [My Computer]), then double-click [IC RECORDER] → [FOR WINDOWS].
In Mac: Double-click [IC RECORDER] on the desktop.
- ③ Install the help guide.
In Windows: Double-click [Help_Guide_Installer] (or [Help_Guide_Installer.exe]).
In Mac: Double-click [Help_Guide_Installer_for_mac.app]. (v10.5.8 or higher)
Follow the instructions that appear on the screen to proceed with installation.
- ④ After the installation completes, double-click the [icdsx3_ce_HelpGuide] icon in the desktop for Windows (or in Finder for Mac).
The help guide is displayed.
You can also view the help guide on the following Sony IC Recorder customer support home page:
<http://rd1.sony.net/help/icd/sx3/ce/>
You can select the following languages:
English, French, German, Spanish, Dutch, Italian, Portuguese, Swedish, Hungarian, Czech, Polish, Greek, Russian, Ukrainian.

Copying files from the IC recorder to your computer

You can copy the files and folders from the IC recorder to your computer to store them.

- ① Connect the IC recorder to your computer.
- ② Copy files or folders you want to transfer to your computer.
Drag and drop the files or folders you want to copy from "IC RECORDER" or "MEMORY CARD" to the local disk on your computer.

To copy a file or folder (Drag and drop)



- ① Click and hold,
- ② drag,
- ③ and then drop.

③ Disconnect the IC recorder from your computer.

Installing Sound Organizer

Install Sound Organizer on your computer.

Note

Sound Organizer is compatible with the Windows PC only. It is not compatible with Mac.

When installing Sound Organizer, log in to an account with administrator privileges.

- ① Slide the USB DIRECT slide lever on the back of the IC recorder, and insert the USB connector into the USB port of a running computer.
If the IC recorder cannot be connected to a computer directly, use the supplied USB connection support cable.
- ② Make sure the IC recorder has been recognized properly.
While the IC recorder is connected to the computer, "Connecting" is displayed in the display window of the IC recorder.
- ③ Go to the [Start] menu, click [Computer] (or [My Computer]), and then double-click [IC RECORDER] → [FOR WINDOWS].
- ④ Double-click [SoundOrganizerInstaller_V140] (or [SoundOrganizerInstaller_V140.exe]).
Follow the instructions that appear on the screen.
- ⑤ Make sure that you accept the terms of the license agreement, select [I accept the in the license agreement], and then click [Next].
- ⑥ When the [Setup Type] window appears, select [Standard] or [Custom], and then click [Next].
Follow the instructions on the screen and set the installation settings when you select [Custom].
- ⑦ When the [Ready to Install the Program] window appears, click [Install].
The installation starts.
- ⑧ When the [Sound Organizer has been installed successfully.] window appears, check [Launch Sound Organizer Now], and then click [Finish].

Note

You may need to restart your computer after installing Sound Organizer.

Note

If you format the built-in memory, all data stored there will be erased. (The Help Guide and the Sound Organizer software will also be erased.)

WARNING

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

To prevent possible hearing damage, do not listen at high volume levels for long periods.



Notice for the customers: the following information is only applicable to equipment sold in the countries applying EU directives

This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.

Dimensions (w/h/d) (not incl. projecting parts and controls) (JEITA)*3

ICD-SX733: approx. 39.6 mm × 108.6 mm × 14.9 mm
ICD-SX1000: approx. 39.6 mm × 110.8 mm × 14.6 mm

Mass (JEITA)*3

ICD-SX733: Approx. 81 g
ICD-SX1000: Approx. 82 g

*3Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries

IC rekorder

Kratke upute za uporabu

HR



ICD-SX733/SX1000

Dobrodošli u vaš novi Sony IC rekorder!

Ovo su kratke upute za uporabu koje pružaju informacije o osnovnim funkcijama IC rekordera. Pročitajte ih pažljivo. Nadamo se da ćete uživati u uporabi svog novog Sonyjevog IC rekordera.

Provjerite sadržaj isporuke.

- IC rekorder (1)
- Stereo slušalice (1)
- USB priključni kabel (1)
- Torbiča za nošenje (1)
- Postolje (1)
- Zaštita od vjetra (1) (samo ICD-SX1000)
- Aplikacijski softver, Dragon NaturallySpeaking (DVD-ROM) (1)*
- Kratke upute za uporabu
- Aplikacijski softver, Sound Organizer (Instalacijska datoteka pohranjena u ugrađenu memoriju kako biste je mogli instalirati na računalu.)

- Help vodič (HTML datoteka pohranjena u ugrađenu memoriju kako biste je mogli lako kopirati na računalu.)
- * Isporučeno u nekim regijama.

Optional accessories

- Electret kondenzatorski mikrofon
- USB AC adapter AC-U50AG

Napomena

- Ovisno o zemlji ili regiji, neki od modela ili dodatnog pribora nisu dostupni.
- Ilustracije korištene u ovim kratkim uputama temelje se na modelu ICD-SX1000.

Te ilustracije mogu se razlikovati od modela koji koristite, no tipke i kontrole koje se koriste za upravljanje su iste.

Mjere opreza

O napajanju

Za ovaj uređaj koristite samo 3,7V DC napajanje s ugrađene punjive litij-ionske baterije.

O sigurnosti

Ne koristite uređaj tijekom upravljanja vozilom, vožnje bicikla ili upravljanja motornim vozilom.

O rukovanju

• Ne ostavljajte uređaj na mjestima blizu izvora topline ili pod izravnim utjecajem sunčeve svjetlosti, pretjerane prašine ili mehaničkih udaraca.


Kapacitet (dostupan korisniku *1*)

ICD-SX733 : 4 GB (približno 3,2 GB = 3 435 973 837 bajtova)
ICD-SX1000 : 16 GB (približno 12,8 GB = 13 743 895 347 bajtova)

*1 Mala količina ugrađene memorije koristi se za upravljanje dokumentima i stoga nije dostupna za pohranu ostalih sadržaja.
*2 Kad se ugrađena memorija formatiša pomoću IC rekordera.


Isprobavanje novog IC rekordera

1. Napunite.

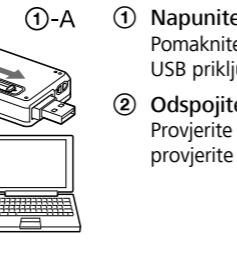

- ① Napunite IC rekorder. Pomažnute preklopku USB DIRECT u smjeru strelice (①-A) i umetnite USB priključak u USB priključnicu na uključenom računalu (①-B).
- ② Odspojite IC rekorder. Provjerite da indikator pristupa ne svijetli. Zatim u Help vodiču provjerite kako sigurno ukloniti IC rekorder.


2. Uključite.

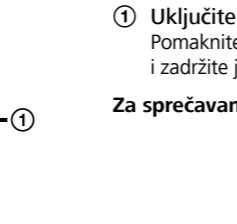

- ① Uključite uređaj. Pomažnute preklopku POWER ON/OFF+HOLD na "POWER ON/OFF" i zadržite je dok se ne uključi pokazivač.
- ② Za sprečavanje slučajnog rukovanja (HOLD)




3. Podesite datum i vrijeme.

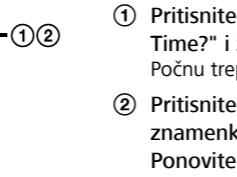


- ① Pritisnite ▲ ili ▼ za odabir "Yes" kad se pojavi "Set Date&Time?" i zatim pritisnite ► (reprodukcijska/potvrda). Počnu treptati znamenke za godine.
- ② Pritisnite ▲ ili ▼ za podešavanje godine (posljednje dvije znamenke godine) i pritisnite ► (reprodukcijska/potvrda). Ponovite ovaj postupak za podešavanje mjeseca, dana, sata i minute navedenim redom.

4. Odaberite jezik izbornika.

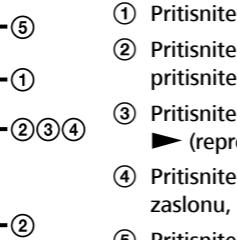

- ① Pritisnite MENU.
- ② Pritisnite ←, pritisnite ▲ ili ▼ za odabir ■, a zatim pritisnite ► (reprodukcijska/potvrda).
- ③ Pritisnite ▲ ili ▼ za odabir "Language", a zatim pritisnite ► (reprodukcijska/potvrda).
- ④ Pritisnite ▲ ili ▼ za odabir jezika koji želite koristiti na zaslonu, zatim pritisnite ► (reprodukcijska/potvrda).
- ⑤ Pritisnite ■ STOP.

5. Snimajte.

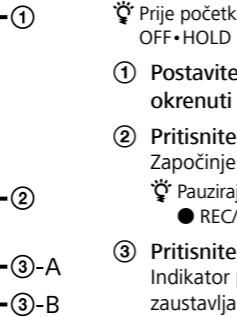


- ✿ Prije početka korištenja IC rekordera pomaknite preklopku POWER ON/OFF+HOLD prema sredini kako biste isključili funkciju HOLD.
- ① Postavite IC rekorder tako da ugrađeni mikrofoni budu okretni izvoru koji snimate.
 - ② Pritisnite ● REC/PAUSE. Započinje snimanje i indikator snimanja (②) će svijetliti crveno.✿ Pauzirajte snimanje pritiskom na ● REC/PAUSE. Opet pritisnite ● REC/PAUSE za ponovno pokretanje snimanja.
 - ③ Pritisnite ■ STOP (③-A) za zaustavljanje snimanja. Indikator pristupa treperi narančasto (③-B) i snimanje se zaustavlja.

6. Poslušajte.



- ① Pritisnite ► (reprodukcijska/potvrda). Započinje reprodukcija.
- ② Podesite glasnoću pomoću tipaka VOL -/+.
- ③ Pritisnite ■ STOP za zaustavljanje reprodukcije.

7. Izbrisite.

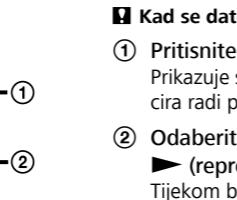

- ✿ Kad se datoteka jednom obriše, ne može se više vratiti.
- ① Pritisnite ERASE. Prikazuje se "Erase?", a datoteka odabrana za brisanje se reproducira radi provjere.
 - ② Odaberite "Execute" tipkom ▲ ili ▼, i zatim pritisnite ► (reprodukcijska/potvrda). Tijekom brisanja odabrane datoteke prikazuje se animacija "Erasing...".

Uporaba računala

Instalacija Help vodiča na računalo

Instalirajte li Help vodič iz ugrađene memorije IC rekordera na računalo, moći će potražiti detaljne postupke i moguća rješenja za eventualne probleme.

- ③ Pomažnute preklopku USB DIRECT na stražnjoj strani IC rekordera i umetnite USB priključak u USB priključnicu na uključenom računalu.
- ④ Za Windows: Kliknite na [Computer] (ili [My Computer]), zatim dvaput kliknite na [IC RECORDER] → [FOR WINDOWS].
- ⑤ Instalirajte Help vodič.

Za Windows: Dvaput kliknite na [Help_Guide_Installer] (ili [Help_Guide_Installer.exe]). Za Mac: Dvaput kliknite na [Help_Guide_Installer_for_mac.app.] (v10.5.8 ili novije).

- Nastavite instalaciju prema uputama koje se pojavljuju na zaslonu.
- ⑥ Po dovršetku instalacije dvaput kliknite na ikonu [icd53_ce_HelpGuide] na radnoj površini za Windows (ili u Finderu za Mac).
 - Prikazuje se Help vodič.
 - Help vodič može pogledati i na sljedećoj stranici s podrškom za Sony IC Recorder: <http://rd1.sony.net/help/icc/sx3/ce/>
 - Možete odabrat sljedeće jezike:
Engleski, francuski, njemački, španjolski, nizozemski, talijanski, portugalski, švedski, mađarski, češki, poljski, grčki, ruski, ukrajinski.

Kopiranje datoteka iz IC rekordera na računalo

Datotake i mape s IC rekordera možete kopirati na svoje računalo i pohraniti ih.

- ① Spojite IC rekorder na računalo.
- ② Kopirajte datoteke ili mape koje želite prebaciti na računalo. Povucite i pustite datoteke ili mape koje želite kopirati iz "IC RECORDER" ili "MEMORY CARD" na lokalni disk računala.

Kopiranje datoteke ili mape (drag and drop)



- ① Kliknite i zadržite,
- ② povucite,
- ③ i zatim pustite.

- ③ Odspojite IC rekorder s računala.

Instaliranje softvera Sound Organizer

Instalirajte Sound Organizer na svoje računalo.

Napomena

Sound Organizer će raditi samo na računalu s instaliranim sustavom Windows. Nije kompatibilan s operativnim sustavom za Mac.

Prilikom instaliranja Sound Organizera logirajte se na korisnički račun s administratorskim ovlastima.

- ① Pomaknite preklopku USB DIRECT na stražnjoj strani IC rekordera i umetnite USB priključak u USB priključnicu na uključenom računalu.
- ② Pritisnite ● REC/PAUSE. Započinje snimanje i indikator snimanja (②) će svijetliti crveno. Ako se IC rekorder ne može izravno spojiti na računalo, upotrijebite isporučeni USB spojni kabel.
- ③ Provjerite je li IC rekorder pravilno prepoznat. Kad je IC rekorder spojen na računalo, na pokazivaču IC rekordera prikazano je "Connecting".
- ④ Otvorite izbornik [Start], kliknite na [Computer] (ili [My Computer]), zatim dvaput kliknite na [IC RECORDER] → [FOR WINDOWS].
- ⑤ Dvaput kliknite na [SoundOrganizerInstaller_V140] (ili [SoundOrganizerInstaller_V140.exe]). Slijedite upute koje se prikazuju na zaslonu.
- ⑥ Prihvatićte uvjete ugovora o licenci i odaberite [I accept the in the license agreement], zatim kliknite na [Next].
- ⑦ Kad se prikaže okvir [Setup Type] odaberite [Standard] ili [Custom], a zatim kliknite na [Next]. Ukoliko ste odabrali [Custom], slijedite upute na zaslonu te podesite instalacijske postavke.
- ⑧ Kad se prikaže okvir [Sound Organizer has been installed successfully.], označite [Launch Sound Organizer Now], a zatim kliknite na [Finish].

Napomena

Nakon instaliranja Sound Organizera možda ćete morati restartati računalo.

Napomena

Formatirajte li ugrađenu memoriju, izbrisat će se svi podaci pohranjeni u nju. (Izbrišat će se i Help vodič i softver Sound Organizer.)

UPOZORENJE

Ne izlažite baterije (vanjske ili ugrađene) pretjeranoj toplini, primjerice, na izravno sunčevu svjetlo, blizu vatre i slično na dulji vremenski period.

Radi sprečavanja mogućeg oštećenja sluha, nemojte slušati sadržaje na visokoj glasnosti na dulji vremenski period.



Napomena za korisnika: sljedeće napomene odnose se samo na uređaje prodane u zemljama koje primjenjuju smjernice Europske unije

Proizvođač ili naručitelj ovog uređaja je Sony Corporation 1-7-1 Konan, Minato-ku, Tokyo, 108-0075 Japan. Upiti u vezi sukladnosti proizvoda na temelju zakonodavstva Europske unije mogu se uputiti ovlaštenom zastupniku, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Njemačka. Za sva pitanja vezana uz usluge i jamstvo, molimo обратите se na adresu navedene u protečem servisnom ili jamstvenom listu.

Napomena za korisnike u Republici Hrvatskoj

IZJAVA O SUKLADNOSTI

Proizvođač ovog proizvoda je Sony Corporation, 1-7-1 Konan Minato-ku, Tokyo 108-0075, Japan.

Sony, odnosno njegov ovlašteni zastupnik u Republici Hrvatskoj izjavljuje da je ovaj proizvod uskladen s bitnim zahtjevima tehničkih propisa koji su za ovaj proizvod utvrđeni.

Izjava o sukladnosti dostupne su na internet stranici www.sukladnost-sony.com.hr

Zbrinjavanje starih električnih i elektroničkih uređaja (primjenjuje se u Europskoj uniji i ostalim europskim zemljama s posebnim sistemima zbrinjavanja)

Ova oznaka na proizvodu ili na ambalaži označava da se ovaj proizvod ne smije zbrinjavati kao kućni otpad. On treba biti zbrinut na za tu namjenu predviđenom mjestu za reciklažu električne ili elektroničke opreme. Pravilnim zbrinjavanjem starog proizvoda čuvate okoliš i briňete za zdravlje svojih bližnjih. Nepravilnim odlaganjem proizvoda ugrožava se okoliš i zdravlje ljudi.

Reciklažom materijala pomaze u očuvanju prirodnih izvora. Za detaljne informacije o reciklaži ovog proizvoda, molimo kontaktirajte vašu lokalnu upravu, odgajalište otpada ili trgovinu gdje ste kupili proizvod.

Zbrinjavanje starih baterija (primjenjuje se u Europskoj uniji i ostalim europskim zemljama s posebnim sustavom za prikupljanje otpada)

Ova oznaka na bateriji ili njenom pakiranju označava da se isporučene baterije ne smije zbrinjavati kao ostali kućni otpad.

Na nekim baterijama može se nalaziti ovaj simbol s kemijskim simbolom. Kemijski simboli za živu (Hg) ili olovu (Pb) stavljaju se na baterije koje sadrže više od 0,0005% žive ili 0,004% olova.

Pravilnim zbrinjavanjem baterija pomaze u sprečavanju negativnih posljedica po okoliš i ljudsko zdravlje, do kojih bi njihovo nepravilno odlaganje moglo dovesti. Reciklažom materijala pomaze u očuvanju prirodnih izvora. U slučaju da vaš uređaj, iz sigurnosnih razloga, zbog efikasnosti ili cjelovitosti podataka, zahtjeva ugradenu bateriju za svoj rad, takvu bateriju smije izključivo stručna osoba. Kako biste na siguran način zbrinuli baterije, odnesite ih u za to namijenjeni centar za prikupljanje i recikliranje električne i elektronske opreme.

Za sve ostale baterije, molimo pogledajte u uputama o sigurnom načinu njihove zamjene. Baterije odnesite u centar za prikupljanje i recikliranje isluženih baterija. Za detaljne informacije o reciklaži

Dimenzije (š/v/d) (bez dijelova koji strže i kontrola) (JEITA)*3