

? Table of Contents

Remote and TV Controls/Indicators

Remote and TV controls.....	(4)
Indicators.....	(16)
About the operation guide on the TV screen.....	(18)

Watching TV

Watching TV.....	(19)
Using the Digital Electronic Programme Guide (EPG).....	(28)
Using the Favourite List.....	(31)

Using Optional Equipment

Connecting Optional Equipment.....	(35)
Viewing Pictures from Connected Equipment.....	(42)
Playing back Photo/Music/Video via USB.....	(45)
Using BRAVIA Sync with Control for HDMI.....	(52)

? Table of Contents

Using Home Network Features

Connecting to the Network	(54)
Enjoying AppliCast.....	(56)
Enjoying Photo/Music/Video Files via the Network.....	(58)
Checking the Network Connection.....	(61)
Adjusting the Server Display Settings.....	(63)

Using Menu Functions

Navigating through TV Home Menu on XMB™.....	(65)
TV Settings Menu	
System Update.....	(68)
Bravia Tips.....	(69)
Clock/Timers.....	(70)
Eco.....	(71)


? Table of Contents

Picture.....	(72)
Sound.....	(78)
Screen (for inputs other than a PC).....	(82)
Screen (for PC input).....	(84)
Video Settings.....	(86)
Audio Settings.....	(87)
Set-up.....	(89)
Analogue Set-up.....	(95)
Digital Set-up.....	(100)
Network Settings.....	(106)

Additional Information

Troubleshooting.....	(108)
----------------------	-------

? Remote and TV Controls

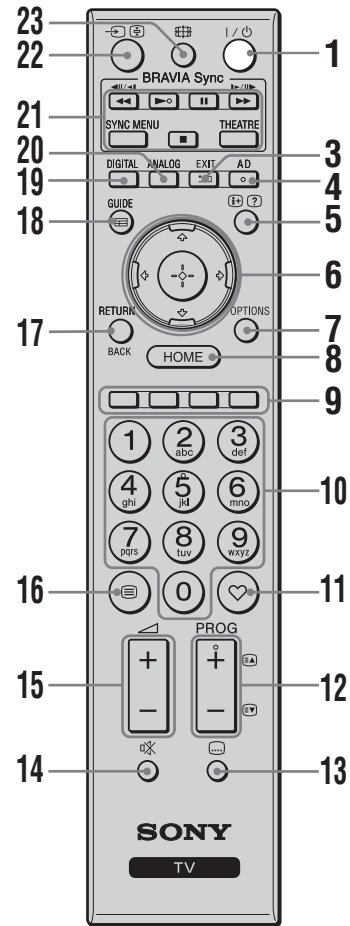


In case of KDL-46/40/37/32W5820/5830/5840, please refer to the separate leaflet.


1 (TV standby)

Press to turn the TV on and off from standby mode.



- The number 5,  , PROG + and AUDIO buttons on the remote have a tactile dot. Use the tactile dots as a reference when operating the TV.


? Remote and TV Controls

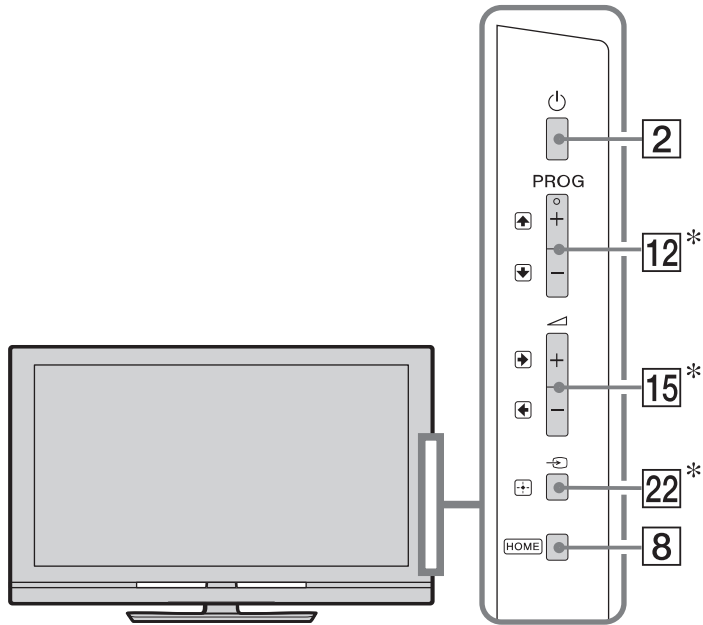

Buttons on the TV will work the same as those on the remote.

*In the TV menu, these buttons will work as
↑/↓/←/→/⊕.

? Remote and TV Controls

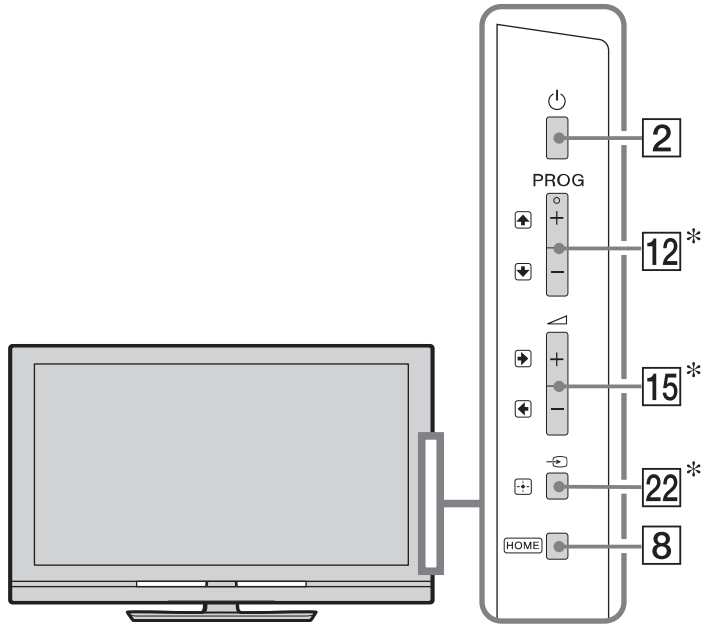


2 (Power)

Press to turn the TV on or off.



- To turn the TV completely off (0 W, no power consumption), turn off the TV, then unplug the mains lead/AC power cord from the mains/AC power.

? Remote and TV Controls

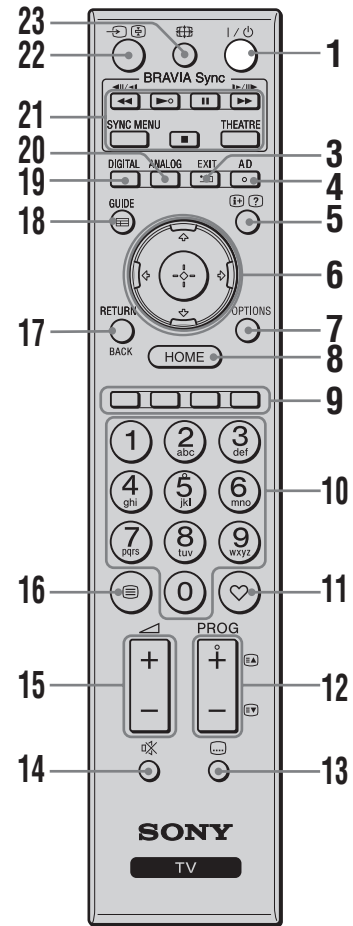

3 EXIT

Exit from the current application and go back to normal TV mode.

4 AD


Press to set Audio Description to "On" or "Off".

5 (Info/Text reveal)



Each time you press the button, the display changes as follows:

- In digital mode: Details of the current programme → Details of the next programme (only for Sony Guide)
- In analogue mode: Current channel number and screen mode → Clock information
- In Text mode: Reveals hidden information (e.g. answers to a quiz) (22).

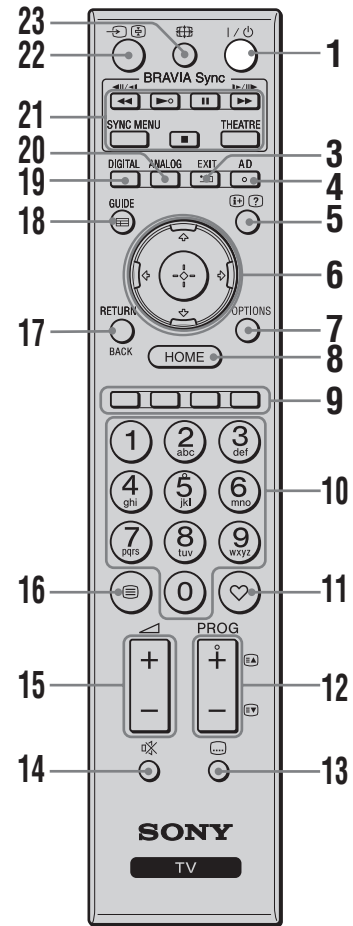
 

? Remote and TV Controls




 
6

Press  to move the on-screen cursor.
Press  to select/confirm the highlighted item.


- When playing a photo file:


- Press  to pause/start a slideshow.
- Press  to select the previous file.
- Press  to select the next file.

- When playing a music/video file:

- Press  to pause/start the playback.
- Press and hold  to fast forward/fast reverse, then release the button at the point where you want to resume playback.

? Remote and TV Controls

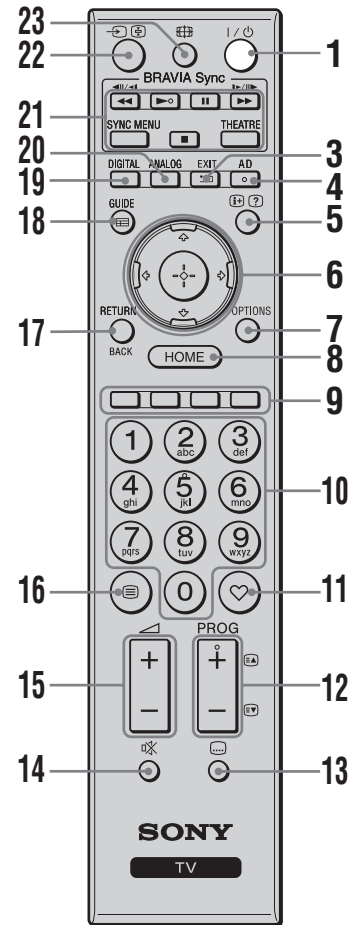

- Press  to start playback from the beginning of the current file.

- Press  to go to the next file.

7 OPTIONS

Press to display a list that contains “Device Control” or shortcuts to some setting menus. Use the “Device Control” menu to operate equipment that is compatible with Control for HDMI.

The listed options vary depending on the input source.


8 HOME

Press to display the TV Home Menu (65).

9 Coloured buttons

When the coloured buttons are available, an operation guide appears on the screen.

? Remote and TV Controls

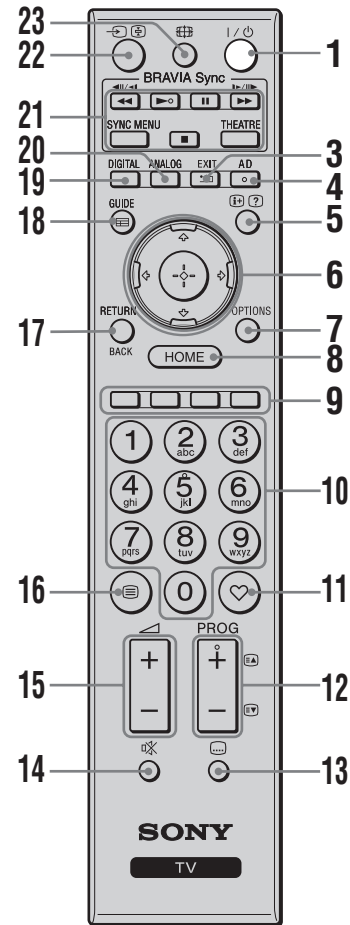

10 Number buttons

- In TV mode: Press to select channels. For channel numbers 10 and above, press the next digit quickly.

- In Text mode: Press to enter a page number.



- Use alphanumeric buttons when needed.


11 ♡ (Favourite)






Press to display the Favourite List that you have specified (31).

12 PROG +/-/▲/▼

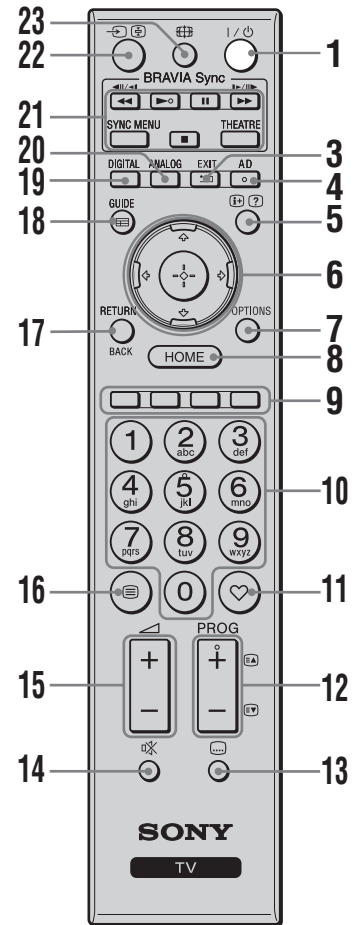
- In TV mode: Press to select the next (+) or previous (-) channel.

? Remote and TV Controls



- In Text mode: Press to select the next (⏮) or previous (⏭) page.
- 13  (Subtitle setting)
Press to change the subtitle language (100) (in digital mode only).
- 14  (Mute)
Press to mute the sound. Press again to restore the sound.
- 
- In standby mode, if you want to turn on the TV without sound, press this button.
- 15  +/- (Volume)
Press to adjust the volume.
- 16  (Text)
Press to display text information (22).

? Remote and TV Controls

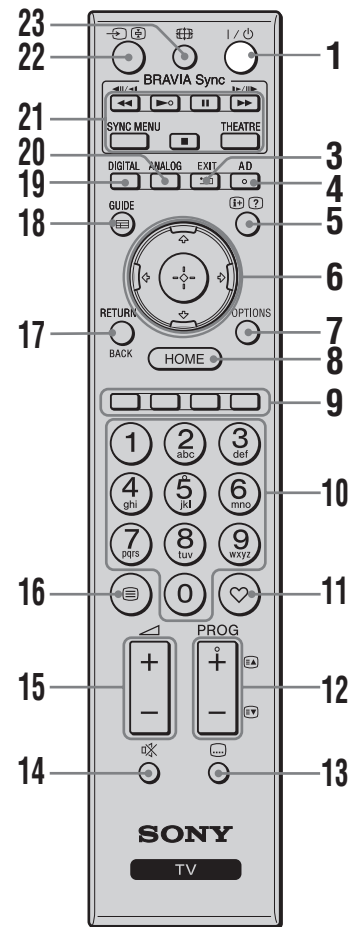

17 ↶ RETURN/BACK

Press to return to the previous screen of the displayed menu.

When playing a photo/music/video file: Press to stop the playback. (The display returns to the file or folder list.)


18 ≡ GUIDE (EPG)

Press to display the Digital Electronic Programme Guide (EPG) (28).

19 DIGITAL

Switches from analogue mode to the last selected digital mode (DVB-S or Antenna/Cable). Toggles between two digital modes (DVB-S and Digital (Antenna/Cable)) when the TV set operates in Digital mode.

? Remote and TV Controls

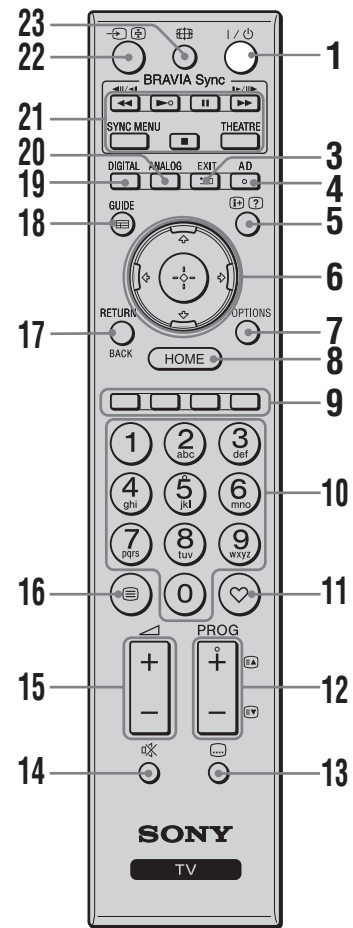

When viewing pictures from connected equipment: Press to return to normal TV mode.

20 ANALOG


Press to display the analogue channel that was last viewed.

When viewing pictures from connected equipment: Press to return to normal TV mode.

21 BRAVIA Sync

- ◀◀/▶▶/||/▶▶/■: You can operate the BRAVIA Sync-compatible equipment that is connected to the TV.
- SYNC MENU: Displays the menu of connected HDMI equipment. While viewing other input screens or TV programmes, "HDMI Device Selection" is displayed when the button is pressed.

? Remote and TV Controls

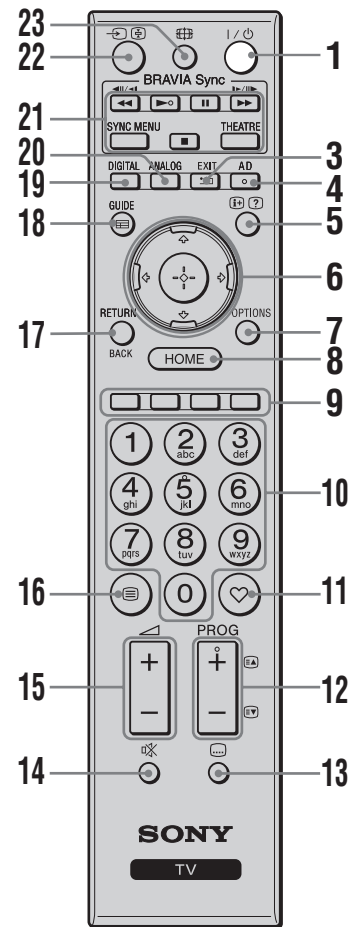


- **THEATRE:** You can set Theatre Mode to on or off. When Theatre Mode is set to on, the optimum sound quality (if the TV is connected with an audio system using an HDMI cable) and picture quality for film-based contents are automatically set.



- If you turn the TV off, Theatre Mode is also turned off.
- When you change the “Scene Select” setting, Theatre Mode turns off automatically.

? Remote and TV Controls

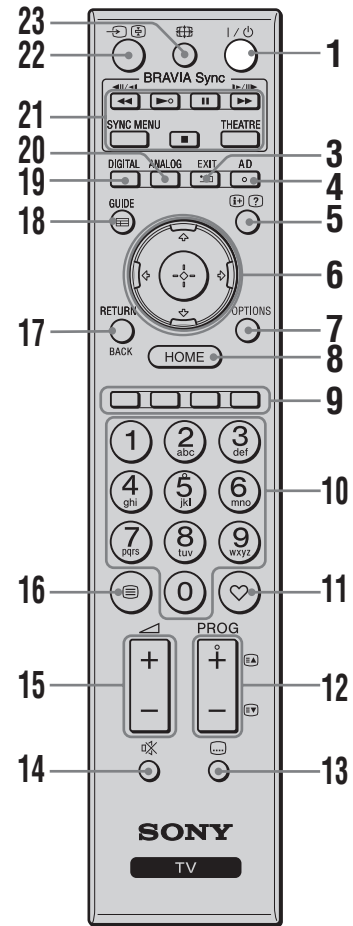

- “Control for HDMI” (BRAVIA Sync) is only available with the connected Sony equipment that has the BRAVIA Sync or BRAVIA Theatre Sync logo or is compatible with Control for HDMI.


22 →/⏏ (Input select / Text hold)

- In TV mode: Press to display a list of inputs.
- In Text mode: Press to hold the current page.

23 ⏏ (Screen mode)

Press to change the screen format (24).

? Indicators

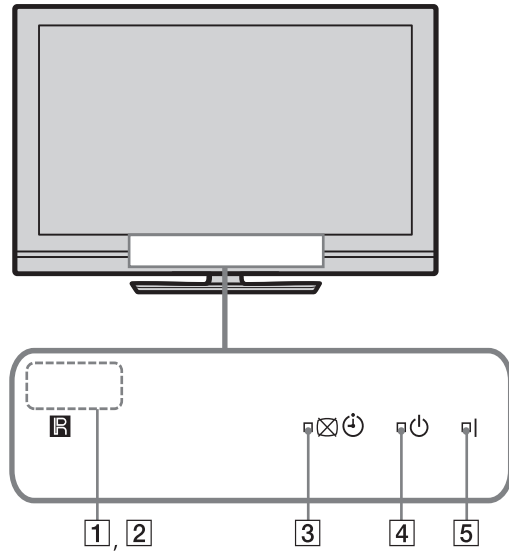

1 Light sensor

Do not put anything over the sensor, doing so may affect its function (71).

2 Remote control sensor


Receives signals from the remote.

Do not put anything over the sensor. The sensor may not work properly.

3 (Picture Off / Timer)

- Lights up in green when you select "Picture Off" (71).
- Lights up in orange when you set the timer (29), (70).

? Indicators

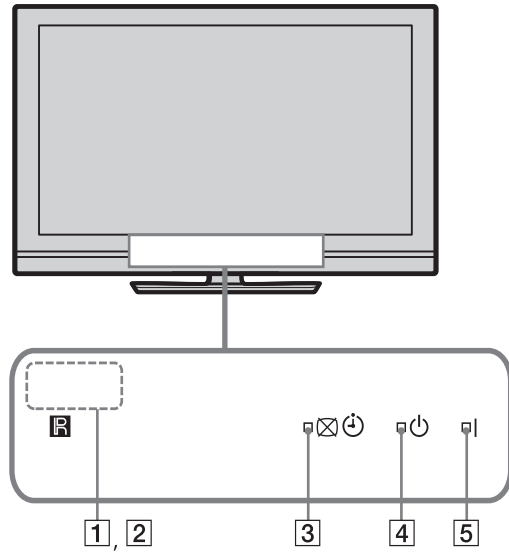

4  (Standby)

Lights up in red when the TV is in standby mode.

5 | (Power)

Lights up in green when the TV is on.

? About the operation guide on the TV screen




The operation guide provides help on how to operate the TV using the remote, and is displayed at the bottom of the screen. Use the remote buttons shown on the operation guide.



Operation Guide

Example: Press **+** or RETURN/BACK (see **6** (8) or **17** (12)).

? Watching TV

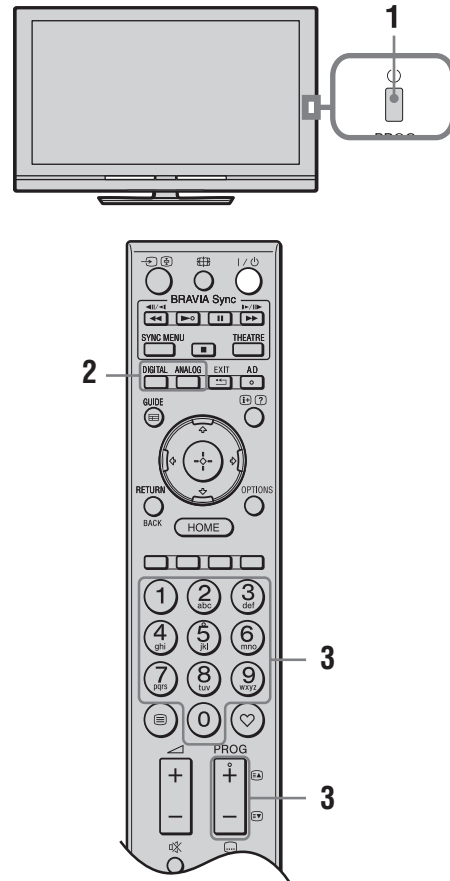

1 Press  on the TV to turn on the TV.

 When the TV is in standby mode (the  (standby) indicator on the TV front panel is red), press  on the remote to turn on the TV.

2 Press DIGITAL to switch to digital or satellite mode, or press ANALOG to switch to analogue mode.

The available channels vary depending on the mode.

? Watching TV



3 Press the number buttons or PROG +/- to select a TV channel.


To select a digital programme using the Digital Electronic Programme Guide (EPG) (28).


? Watching TV

In digital mode

An information banner appears briefly.

The following icons may be indicated on the banner.

: Interactive service is available (MHEG Digital Text)

: Interactive service (MHEG Digital Text) is currently disabled

: Radio Service

: Scrambled / Subscription service

: Multiple audio languages available

: Subtitles available

: Subtitles available for the hearing impaired


: Recommended minimum age for current programme (ages from 4 to 18)

: Parental lock

? Watching TV

To access Digital Text





Many broadcasters provide a Digital Text service. Digital Text offers graphically rich contents, compared to Analogue Text.

Select a digital channel which provides Digital Text, then press .

When a broadcaster provides a dedicated Digital Text channel, select this channel to access Digital Text.

To navigate through Digital Text, follow the instructions on the screen.



To exit Digital Text, press RETURN/BACK.

To move around, press ///.


To select items, press  and the number buttons.

To access shortcuts, press the coloured buttons.

To access Analogue Text

In analogue mode, press . Each time you press , the display changes cyclically as follows:

Text and TV picture → Text → No Text (exit the Text service)

To select a page, press the number buttons or /.

To hold a page, press .

To reveal hidden information, press .

? Watching TV




- You can also jump directly to a page by selecting the page number displayed on the screen. Press ⊕ and ⬆/⬇/⬅/➡ to select the page number, then press ⊕.
- When four coloured items appear at the bottom of the Text page, you can access pages quickly and easily (FastText). Press the corresponding coloured button to access the page.

? Watching TV

To change the Screen Format manually


Press  repeatedly to select the desired Screen Format.

Smart*

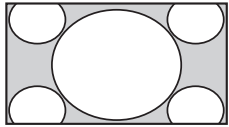


Enlarges the centre portion of the picture. The left and right edges of the picture are stretched to fill the 16:9 screen.

4:3

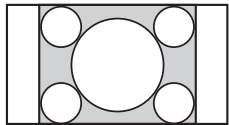


Displays the 4:3 picture in its original size. Side bars are shown to fill the 16:9 screen.

Wide

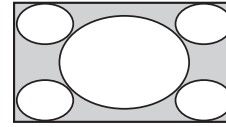

Stretches the 4:3 picture horizontally, to fill the 16:9 screen.


Zoom*

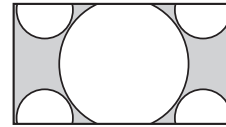

Displays the cinemascope (letter box format) picture in the correct proportion.



? Watching TV

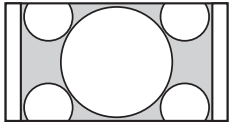14:9*



Displays the 14:9 picture in the correct proportion.
As a result, side bars are shown on the screen.

? Watching TV

* Parts of the top and bottom of the picture may be cut off. You can adjust the vertical position of the picture. Press / to move the picture up or down (e.g. to read subtitles).



- When you select "Smart", some characters and/or letters at the top and the bottom of the picture may not be visible. In such a case, adjust "Vertical Size" in the "Screen" menu (83).



- When "Auto Format" (82) is set to "On", the TV automatically selects the best mode to suit the broadcast.

- If 720p, 1080i or 1080p source pictures are displayed with black borders on the screen edges, select "Smart" or "Zoom" to adjust the pictures.

SCENE

When you select the desired scene option, the optimum sound quality and picture quality for the selected scene are automatically set.

Press /// to select the scene option, then press .

- Cinema: Delivers picture scenes just like those in a theatre-like atmosphere with dynamic sound.

? Watching TV


- Photo: Delivers picture scenes that authentically reproduces the texture and colour of a printed photo.
 - Sports: Delivers picture scenes that let you experience realistic picture and sound like those in a stadium.
 - Music: Delivers sound effects that let you experience dynamic and clear sound like that at a concert.
 - Game: Delivers picture scenes that let you enjoy your game-playing experience to the fullest with superb picture and sound quality.
 - Graphics: Delivers picture scenes that ease your prolonged monitor viewing experience and reduce fatigue by displaying clearer detailed pictures.
- General: Current user settings.
 - Auto: The optimum sound quality and picture quality are automatically set according to the input source, though there may not be any effect depending on the connected devices.



- In Digital mode, "Scene" options are applied independently for HD (High-definition) and SD (Standard-definition) pictures.
- When you set Theatre Mode (14) to on, the "Scene Select" setting switches to "Cinema" automatically.

? Using the Digital Electronic Programme Guide (EPG)



- 1 In digital/satellite mode, press  GUIDE.
- 2 Perform the desired operation as shown in the following table or displayed on the screen.

This function may not be available in some countries/regions.

? Using the Digital Electronic Programme Guide (EPG)

View a programme

Press / to select a programme, then press .

Turn off the EPG

Press GUIDE.

Filter programme information by event

1 Press OPTIONS.

2 Select "Event Filter" and press .

3 Press / to select event filter, then press .

Event Filter name (e.g. "News") contains all channels corresponding to the selected filter.

Set a programme to be displayed automatically on the screen when it starts – Reminder

1 Press /// to select a future programme you want to display, then press .

2 Press / to select "Reminder", then press .

A symbol appears next to the programme's information. The indicator on the TV front panel lights up in orange.



- If you switch the TV to standby mode, the TV will automatically turn on when the programme starts.

? Using the Digital Electronic Programme Guide (EPG)


Cancel a reminder – Cancel Reminder

- 1 Press **i+**.
- 2 Press **↑/↓** to select "Reminder list", then press **+**.
- 3 Press **↑/↓** to select the programme you want to cancel, then press **i+**.
- 4 Press **↑/↓** to select "Cancel Reminder", then press **+**.
A display appears to confirm that you want to cancel the programme.
- 5 Press **←/→** to select "Yes", then press **+**.

Change "Video Window" properties

- 1 Press **OPTIONS**.
- 2 Select "Video Window", then press **+**.
- 3 Select "Follow Cursor" and press **+**. Contents of the window will follow your selection.

? Using the Favourite List

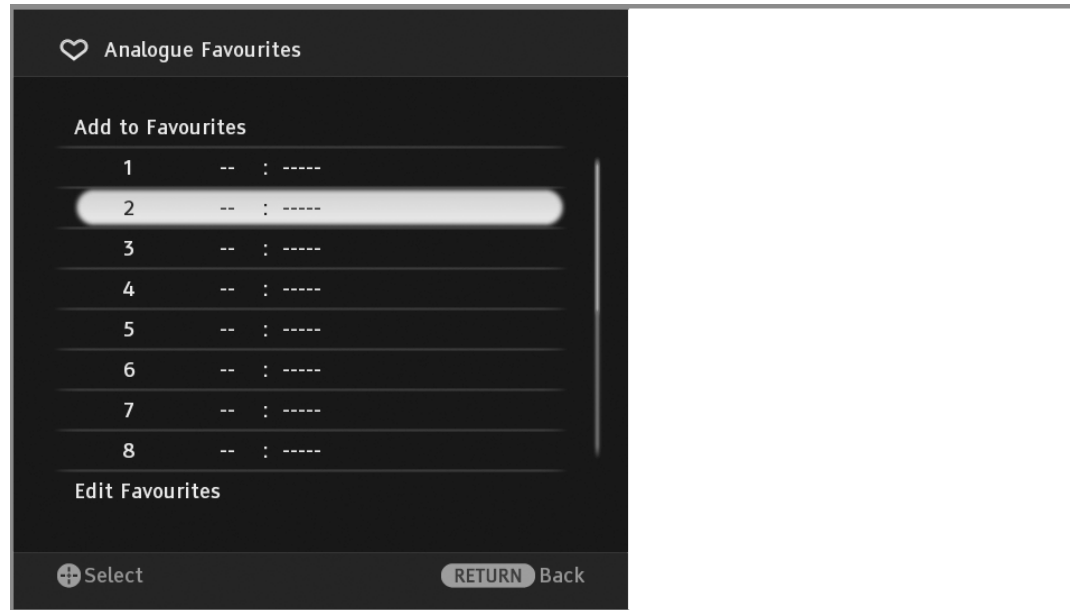

Analogue Favourite List

The Favourite feature lets you select programmes from a list of up to 16 favourite channels that you specify.

- 1 In analogue mode, press ♥.
- 2 Perform the desired operation as shown in the following table or displayed on the screen.

? Using the Favourite List

Watch a channel

Press ⊕.

Turn off the Favourite list

Press ♥.

Add a current channel to the Favourite list

Press ⬆/⬇ to select "Add to Favourites", then press ⊕.

Remove a channel from the Favourite list

1 Press ⬆/⬇ to select "Edit Favourites", then press ⊕.

The "Favourite Set-up" screen appears.

2 Press ⬆/⬇ to select the channel number, then press ⊕.

3 Press ⬆/⬇ to select "--", then press ⊕.

? Using the Favourite List



Digital Favourite List

You can specify up to four of your favourite channel lists.

- 1 In digital mode, press ♥.
- 2 Perform the desired operation as shown in the following table or displayed on the screen.

? Using the Favourite List

Turn off the Favourite list

Press RETURN/BACK.

Add or remove channels in a Favourite list

1 Press the blue button.

Go to step 2 when you add channels for the first time or the Favourite list is empty.

2 Press the yellow button to select the Favourite list to edit.

3 Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to select the channel to add or remove, then press \oplus .

Watch a channel

1 Press the yellow button to select a Favourite list.

2 Press \uparrow/\downarrow to select a channel, then press \oplus .

Remove all channels from a Favourite list

1 Press the blue button.


2 Press the yellow button to select the Favourite list to edit.

3 Press the blue button.


4 Press \leftarrow/\rightarrow to select "Yes", then press \oplus .

? Connecting Optional Equipment

You can connect a wide range of optional equipment to your TV.

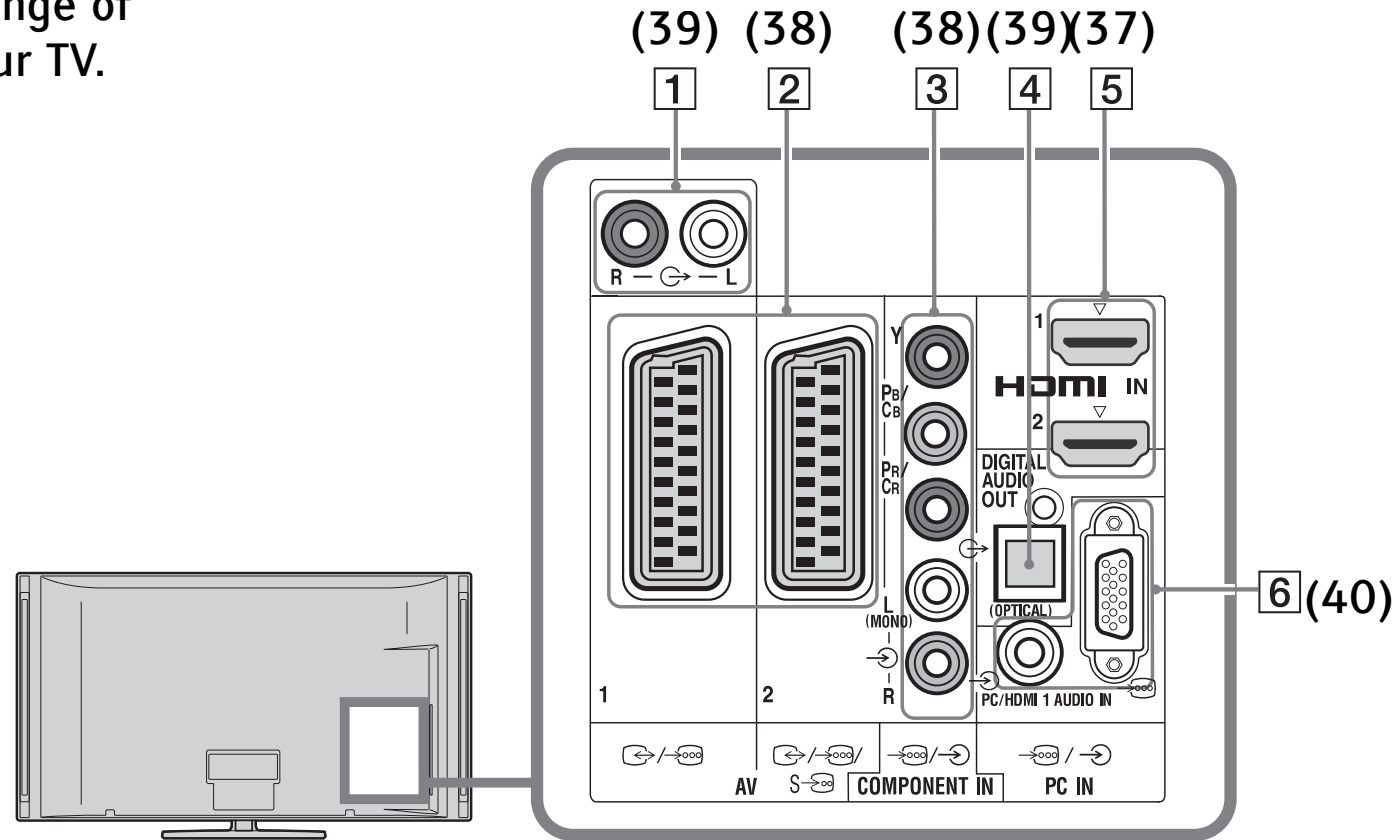

? Connecting Optional Equipment

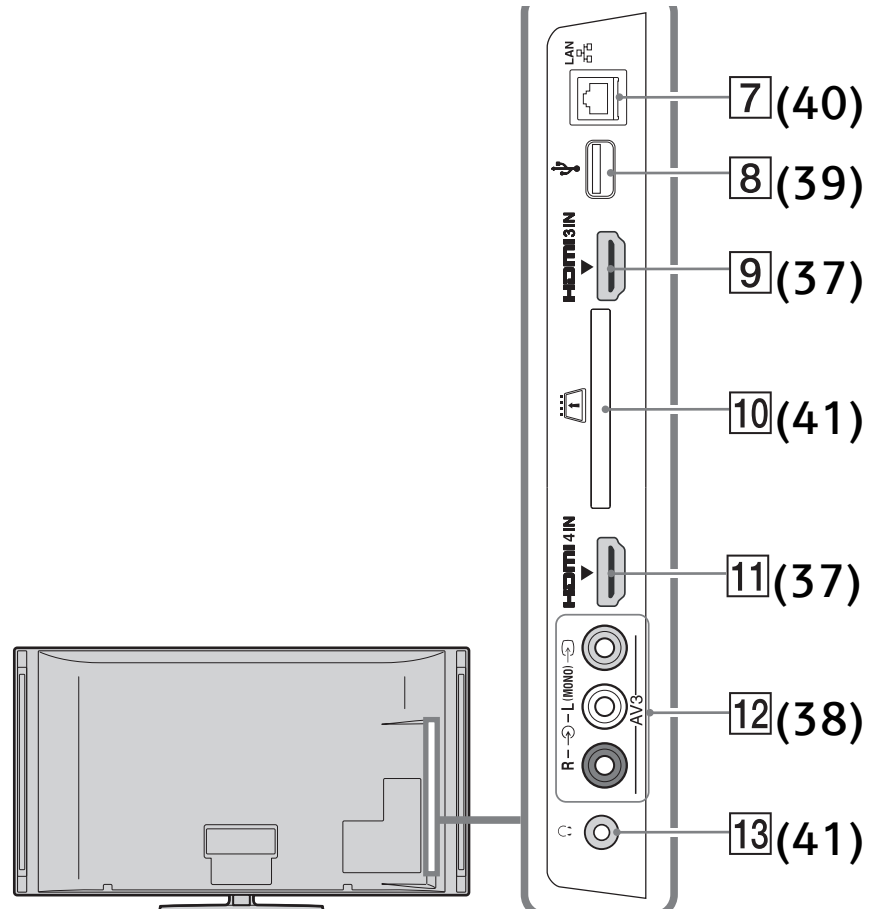

? Connecting Optional Equipment

Connecting audio-video equipment (quality order, high to low)

Connect to:

5 (35), 9 (36), 11 (36) HDMI IN 1, 2, 3, or 4

Connect with:

HDMI cable

Digital video and audio signals are input from the connected equipment.

In addition, when you connect the equipment that is compatible with Control for HDMI, communication with the connected equipment is supported (92).

If the equipment has a DVI socket/jack, connect the DVI socket/jack to the HDMI IN 1 socket/jack through a DVI - HDMI adaptor interface (not supplied), and connect the equipment's audio out sockets/jacks to the audio in sockets/jacks in the HDMI IN 1 sockets/jacks.



- Be sure to use only an authorized HDMI cable bearing the HDMI logo. We recommend that you use a Sony HDMI cable (high speed type).
- When connecting an audio system that is compatible with Control for HDMI, be sure to also connect it to the DIGITAL AUDIO OUT (OPTICAL) socket/jack.

? Connecting Optional Equipment

Connect to:

3 (35)  COMPONENT IN

Connect with:

Component video cable, audio cable

Connect to:

2 (35)  AV1,  AV2

Connect with:

SCART cable


When you connect an analogue decoder, the TV tuner outputs scrambled signals to the decoder, and the decoder unscrambles the signals before outputting them.

Connect to:

12 (36)  AV3, and  AV3

Connect with:


Composite video cable

When connecting a mono equipment, connect to the  AV3 L socket.

? Connecting Optional Equipment

Connecting audio/portable equipment

Connect to:

1 (35) 

Connect with:

Audio cable

You can listen to TV sound on the connected Hi-Fi audio equipment.

Connect to:


4 (35) DIGITAL AUDIO OUT (OPTICAL)

Connect with:

Optical audio cable

You can listen to TV sound on the connected Home theatre system with digital input.

Connect to:

8 (36)  USB

Connect with:

USB cable

You can enjoy photo/music/video files stored in a Sony digital still camera or camcorder (45).

? Connecting Optional Equipment

Connecting other equipment

Connect to:


6 (35)  PC IN

Connect with:

PC cable with ferrites, audio cable

It is recommended to use a PC cable with ferrites, such as the "Connector, D-sub 15" (ref. 1-793-504-11, available in Sony Service Centre), or an equivalent.

Connect to:

7 (36)  LAN

Connect with:

LAN cable

You can enjoy contents stored in DLNA-compatible devices via a network (55).

? Connecting Optional Equipment

Connect to:

10 (36) CAM (Conditional Access Module)

Provides access to pay TV services. For details, refer to the instruction manual supplied with your CAM.

To use the CAM, remove the “dummy” card from the CAM slot, then turn off the TV and insert your CAM card into the slot. When you are not using the CAM, we recommend that you keep the “dummy” card in the CAM slot.



- Do not insert the smart card directly into the TV CAM (Conditional Access Module) slot. It must be fitted into the Conditional Access Module provided by your authorised dealer.




- CAM is not supported in some countries/areas. Check with your authorised dealer.

Connect to:




13 (36) Headphones

You can listen to TV sound through headphones.

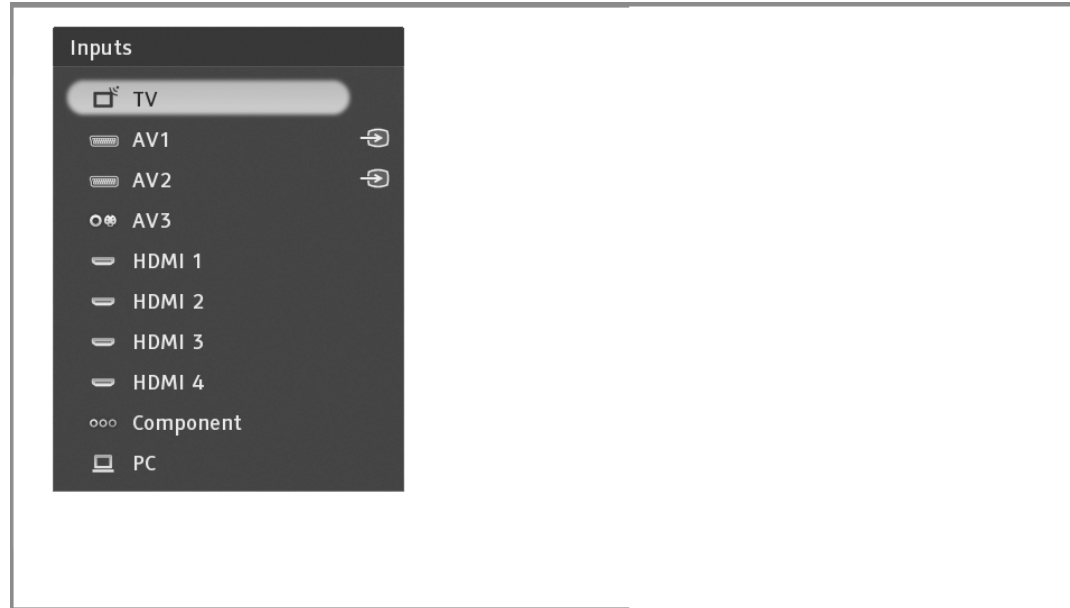? Viewing Pictures from Connected Equipment



Turn on the connected equipment, then perform the following operation.

- 1 Press .
- 2 Press  to select the desired input source, then press .

For equipment connected to the scart sockets using a fully-wired 21-pin scart lead

Start playback on the connected equipment.

The picture from the connected equipment appears on the screen.

? Viewing Pictures from Connected Equipment

For an auto-tuned VCR

In analogue mode, press PROG +/- or the number buttons, to select the video channel.

To view two pictures simultaneously


– PAP (Picture and Picture)

You can view two pictures (external input and TV programme) on the screen simultaneously.



- This function is not available for a PC input.

1 Press OPTIONS.

2 Press  to select "PIP/PAP", then press .

3 Press  to select "PAP", then press .

The picture from the connected equipment is displayed on the left, and the TV programme is displayed on the right.

4 Press the number buttons or PROG +/- to select the TV channel.

To return to single picture mode



Press RETURN/BACK.

To view two pictures simultaneously

– PIP (Picture in Picture)

You can view two pictures (external input and TV programme) on the screen simultaneously.


1 Press OPTIONS.

2 Press  to select "PIP/PAP", then press .

? Viewing Pictures from Connected Equipment

3 Press  to select "PIP", then press .

The picture from the connected PC is displayed in full size, and the TV programme is displayed in the small screen.


You can use  to change the position of the TV programme screen.

4 Press the number buttons or PROG +/- to select a TV channel.

To return to single picture mode

Press RETURN/BACK.



- You can switch the audible picture by pressing .

? Playing back Photo/Music/Video via USB

You can enjoy photo/music/video files stored in a Sony digital still camera or camcorder through a USB cable or USB storage device on your TV.

- 1 Connect a supported USB device to the TV.
- 2 Press HOME.
- 3 Press \leftarrow/\rightarrow to select "Photo", "Music", or "Video".
- 4 Press \uparrow/\downarrow to select a USB device, then press \oplus .

The file or folder list appears.

To display a thumbnail list, press the yellow button while the list is displayed.

- 5 Press \uparrow/\downarrow to select a file or folder, then press \oplus .

When you select a folder, select a file, then press \oplus .

Playback starts.

? Playing back Photo/Music/Video via USB


Photo Playback Auto Start

The TV automatically starts photo playback when the TV is turned on and a digital still camera or other device storing photo files is connected to the USB port then turned on (89).



- While the TV is accessing the data on the USB device, observe the following:
 - Do not turn off the TV or connected USB device.
 - Do not disconnect the USB cable.
 - Do not remove the USB device.

The data on the USB device may be damaged.

- Sony will not be held liable for any damage to, or loss of, data on the recording media due to a malfunction of any connected devices or the TV.
- Playback does not start automatically if the TV is turned on after connecting the digital still camera or other device to the USB port.
- You can register the background music to be played during a slideshow using  Photo by pressing OPTIONS, then select "Add to Slideshow" while playing back music.
- USB playback is supported for the following photo file formats:
 - JPEG (JPEG format files with the extension ".jpg" and conforming to DCF 2.0 or Exif 2.21)

? Playing back Photo/Music/Video via USB

- RAW (ARW/ARW 2.0 format files with the extension ".arw". For preview only.)
- USB playback is supported for the following music file format:
 - MP3 (files with the extension ".mp3" that have not been copyrighted)
- USB playback is supported for the following video file format:
 - MPEG1 (files with the extension ".mpg")
- Photo Playback Auto Start works only for photo files in the newest digital still camera folder (DCF-compliant, highest-numbered "DCIM" folder).
- Playback may not start automatically when some digital still cameras (such as cameras with internal memory) are connected.
- The file name and folder name support only English.
- When you connect a Sony digital still camera, set the camera's USB connection mode to Auto or "Mass Storage". For more information about USB connection mode, refer to the instructions supplied with your digital camera.
- Check the website below for updated information about compatible USB devices.
<http://support.sony-europe.com/TV/compatibility/>
- Use a USB storage device that is compliant with USB Mass Storage Class standards.

? Playing back Photo/Music/Video via USB

To display a photograph

— Picture Frame

You can display a photograph on the screen for a selected period of time. After that period, the TV automatically switches itself into standby mode.

1 Select a photograph.

You can select a photograph from the connected USB device or preset picture folder. For details on selecting a photograph (45).

2 Press **OPTIONS** while the selected photograph is displayed, then press \uparrow/\downarrow to select "Picture Frame Image" and press \oplus .

3 Press **RETURN/BACK** repeatedly to return to the Home Menu.

4 Press \leftarrow/\rightarrow to select "Photo", then select "Picture Frame" and press \oplus .

The TV is switched to Picture Frame mode, and the selected photograph is displayed on the screen.

? Playing back Photo/Music/Video via USB

To set the duration of displaying a photograph
Press **OPTIONS**, then select "Duration" and press **⊕**. Then, select the duration, and press **⊕**.
The counter appears on the screen.

To return to the XMB™
Press **RETURN/BACK**.



- If the photograph is selected from a USB device, it must remain connected to the TV.
- If "Sleep Timer" is activated, the TV automatically will switch into standby mode.

? Playing back Photo/Music/Video via USB

To display a photograph with the location on the map

When using a digital still camera with GPS function, it is possible to display a photograph with a map of the location where the photograph was taken using a function of GPS for recording longitude and latitude. Because map information is downloaded from the Internet online map service, the network connection must be required and the TV has to be connected to the network (55).

1 Select a photograph (45).

2 Press the green/red buttons to zoom in/out on the map.

To change the display position of the map on the TV screen, press the blue button repeatedly.



- Because the Internet online map service is provided by a third party, service may be changed or terminated without prior notification to the user.
- The position indicated on the map may differ depending on the digital still camera.
- Only a large-scale map that cannot be zoomed in or out is displayed if the TV is not connected to the Internet or the Internet online map service is terminated.

? Playing back Photo/Music/Video via USB



- A map can be displayed in the case of photograph's Exif data includes a date information, and the associated longitude and latitude information ("Log files") has been recorded using a Sony GPS unit. Follow the procedure described below.
 - 1 Connect the GPS unit to the USB port.
 - 2 Press HOME.
 - 3 Press \leftarrow/\rightarrow to select "Photo".
 - 4 Press \uparrow/\downarrow to select the GPS unit, then press \oplus .

- 5 Select the following items using \uparrow/\downarrow , then set them using \leftarrow/\rightarrow .
 - Time Zone
 - DST
- 6 Select "OK", then press \oplus .
The GPS log files are loaded.
- 7 Disconnect the GPS unit and connect the device on which the photograph is stored.
- 8 Select a photograph (45).
- 9 Press the green/red buttons to zoom in/out on the map.

? Using BRAVIA Sync with Control for HDMI








The Control for HDMI function enables the TV to communicate with the connected equipment that is compatible with the function, using HDMI CEC (Consumer Electronics Control).

For example, by connecting Sony equipment that is compatible with Control for HDMI (with HDMI cables), you can control them together.






Be sure to connect the equipment correctly, and make the necessary settings.

Control for HDMI

- Automatically turns the connected equipment off when you switch the TV to standby mode using the remote.

- Automatically turns the TV on and switches the input to the connected equipment when the equipment starts to play.
- If you turn on a connected audio system while the TV is on, the sound output switches from the TV speaker to the audio system.
- Adjusts the volume ( +/-) and mutes the sound () of a connected audio system.
- You can operate the connected Sony equipment that has the BRAVIA Sync logo by the TV remote by pressing:
 -  /  /  /  /  to operate the connected equipment directly.
 - SYNC MENU to display the menu of the connected HDMI equipment on the screen.

? Using BRAVIA Sync with Control for HDMI

After displaying the menu, you can operate the menu screen by using ///, , colour buttons, and RETURN/BACK.

- OPTIONS to display "Device Control", then select options from "Options" and "Content List" to operate the equipment.
- Refer to the instruction manual of the equipment for available control.
- If "Control for HDMI" of the TV is set to "On", "Control for HDMI" of the connected equipment is also automatically switched to "On".


To connect the equipment that is compatible with Control for HDMI

Connect the compatible equipment and the TV with an HDMI cable. When connecting an audio system, be sure to also connect the DIGITAL AUDIO OUT (OPTICAL) jack of the TV and the audio system using an optical audio cable (35).

To make the Control for HDMI settings

The Control for HDMI settings must be set on both the TV side and connected equipment side. See "HDMI Set-up" (92) for the TV side settings. For settings on the connected equipment, refer to the operating instructions for that equipment.

? Connecting to the Network

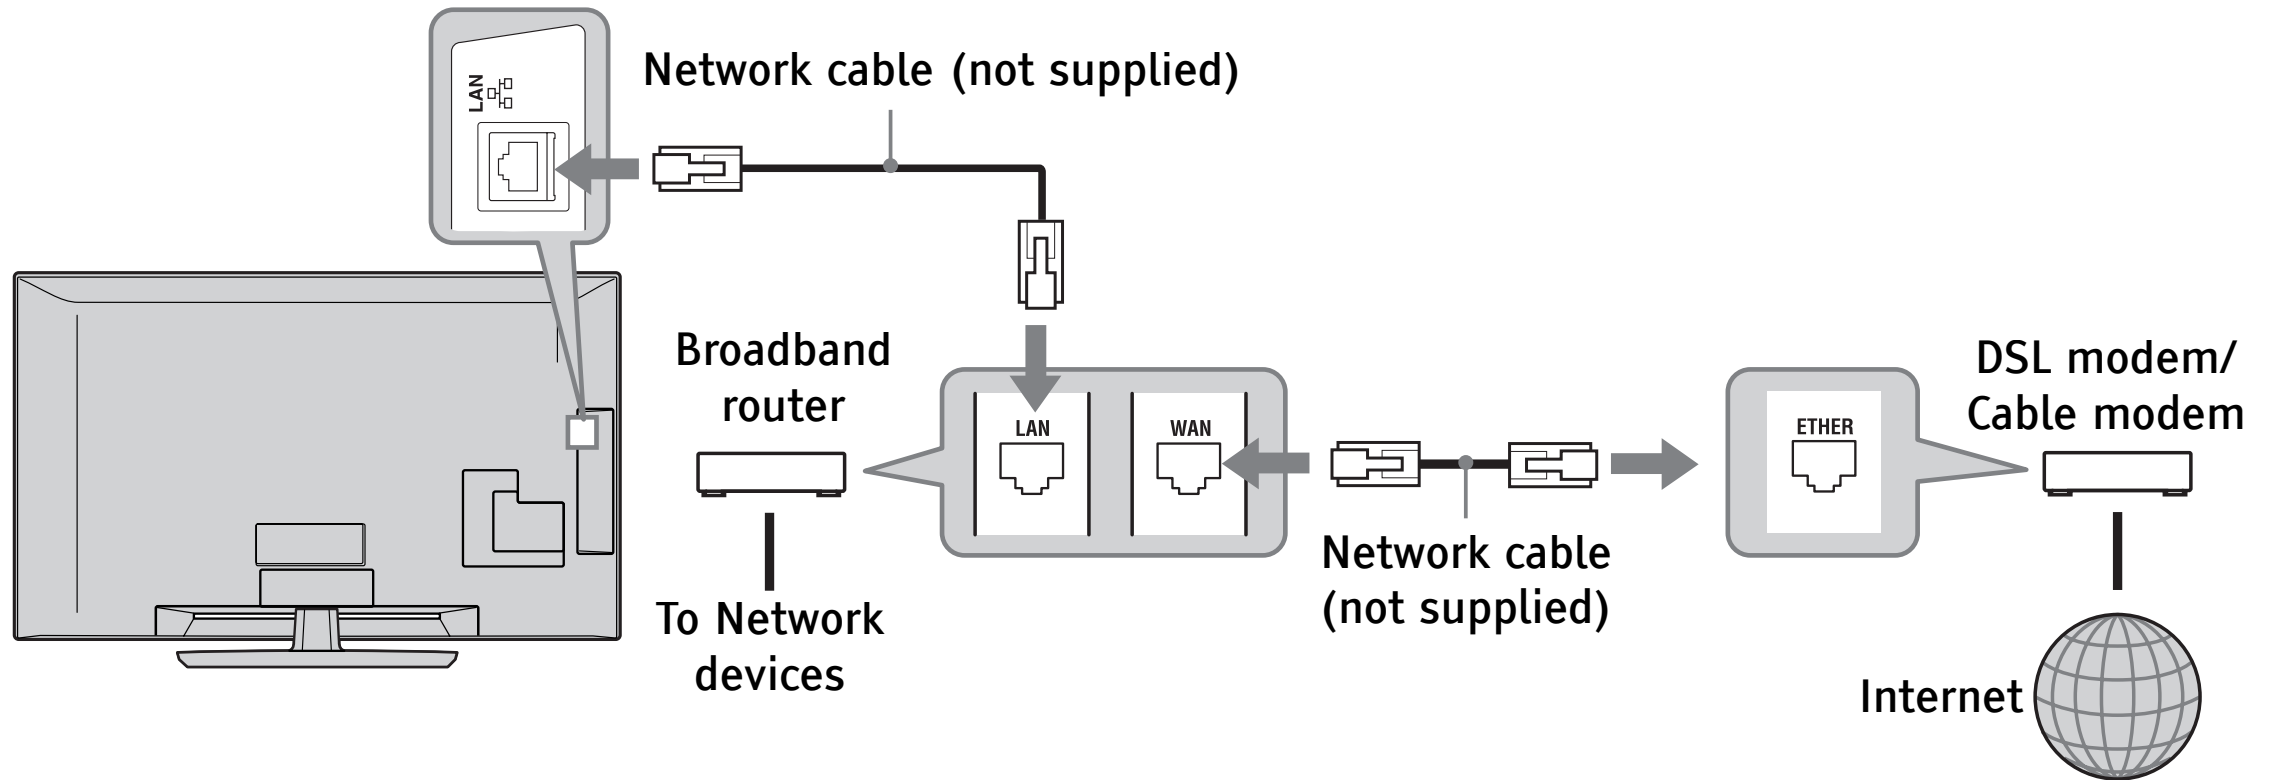

? Connecting to the Network

With this TV, you can enjoy contents stored in DLNA-compatible devices on the home network.

Devices that store and provide contents, such as photo/music/video files, are called "Server". The TV receives the photo/music/video files from the server via the network, and you can enjoy them on the TV even in other rooms.

To enjoy the home network, a DLNA-compatible device (VAIO, Cyber-shot, etc.) is necessary as a server.

In addition, when you connect your TV to the Internet, you can enjoy displaying a photograph that shows its location on the map (50), or enjoy "AppliCast" while watching a TV programme (56).



- You will need to contract with an Internet service provider to connect to the Internet.

? Enjoying AppliCast

While watching TV, you can display variety of information on the edge of TV screen by using Widgets (i.e. mini-applications).

Many Widgets retrieve information from the Internet.

To Use Widgets

Widgets can be displayed by selecting from the Home Menu. While the Widget is displayed, you can add to your Widget list so that it would be registered to be automatically displayed next time when you launch "AppliCast". Some Widgets allow you to save settings to provide you with the preferred information.

1 Press HOME.

2 Press \leftarrow/\rightarrow to select "Network".

3 Press \uparrow/\downarrow to select the desired Widget to be displayed or simply select "AppliCast" icon to display your preferred list of Widgets.

4 Follow the instruction on the Widget.

To return to single picture mode

Press RETURN/BACK.

To Add or remove widgets in AppliCast

You can add to or remove from the Widget list.

From Widget:

5 While you are displaying the Widget, press OPTIONS.


? Enjoying AppliCast

6 Select "Add to AppliCast" or "Remove from AppliCast".

Up to 30 Widgets can be registered in "AppliCast".

From "Network" in the Home Menu:

7 Follow STEP1-2 above.

8 Press  to select the desired Widget, then press OPTIONS.

9 Follow STEP6.



- There are three Widgets already in the set that don't require internet connection. They are "How to use AppliCast", "Analogue Clock", and "Calendar".

- AppliCast Widgets stored in the USB Mass Storage Device connected to BRAVIA. The Widget icons should appear under USB icon under "Network" in the Home Menu.






- MAC address and IP address are transmitted automatically from the TV to servers while internet connection is available. The servers are under the control of Sony and MAC address will never be transmitted to the servers controlled by the other parties.
- Widgets may be changed or terminated without prior notification to the user.

? Enjoying Photo/Music/Video Files via the Network

You can enjoy photo/music/video files on the server easily by selecting an icon on the Home Menu of the TV.

1 Press HOME.

2 Press / to select "Photo", "Music", or "Video".





3 Press / to select a server, then press .

The file or folder list appears.

To display the thumbnail list, press the yellow button while the list is displayed.

When the server cannot be found

See "Checking the Network Connection" (61) and "Adjusting the Server Display Settings" (63).

4 Press / to select a file or folder, then press .
When you select a folder, select a file, then press . Playback starts.





- A map can be displayed with a photograph in the case of longitude and latitude information has been recorded to photograph's Exif data (50).



- Depending on the network device, it may be necessary to register the TV with the network device.

? Enjoying Photo/Music/Video Files via the Network

- Picture quality may appear coarse when using  Photo because images may be enlarged depending on the file. Also, images may not fill the entire screen depending on the image size and aspect ratio.
- Some photo files may take some time to be displayed when using  Photo.
- To play files that are received from a network device, they need to conform to one of the following file formats.
 - Still images: JPEG format
 - Music: MP3 format or linear PCM format
 - Video: The following file formats stored on the sever: AVCHD, HDV, MPEG2-PS (which in some cases may not be able to be played)

Depending on the network device, the file format may be converted before transfer. In such cases, the file format resulting after conversion is used for playback. For details, refer to the instruction manual for the network device being used.

Even files conforming to one of the file formats given above cannot be played in some cases.

- The file name and folder name support only English.

? Enjoying Photo/Music/Video Files via the Network

To enjoy photographs, music and videos on the TV screen by operating devices

– Renderer


Renderer is a feature for playing photo, music and video files stored in network devices (digital still cameras, mobile phones, etc.) on the TV by operating the controller device in question. To use this feature, a renderer-compatible device such as a digital still camera or mobile phone is required as the controller. Refer as well to the instruction manual supplied with the controller.

- 1 Set "Renderer Function", "Renderer Access Control" and "Renderer Set-up" in "Network Settings" if necessary (107).
- 2 Play the file selected using the controller on the TV.

The file is played on the TV over the connected network.

Use the controller or the TV's remote to perform operations during playback.



- You can register the background music to be played during a slideshow using  Photo. While playing back music, press **OPTIONS**, then select "Add to Slideshow".

? Checking the Network Connection

Enter the respective (alphanumeric) values for your router. The items that need to be set may differ, depending on the Internet service provider or the router. For details, refer to the instruction manuals that have been provided by your Internet service provider or supplied with the router.

- 1 Press HOME.
- 2 Press ↩ to select "Settings".
- 3 Press ⬆/⬇ to select "Network Settings", then press ⊕.
- 4 Select "Network", then press ⊕.
- 5 Select "IP Address Settings", then press ⊕.
- 6 Select an item, and press ⊕.

When you select "DHCP (DNS automatic)"
Go to step 7.

When you select "DHCP (DNS manual)"
Set "Primary DNS"/"Secondary DNS" using ⬆/⬇/
⇒ and the number buttons.

When you select "Manual"
Set the following items using ⬆/⬇/⇒ and the
number buttons.

- IP Address
- Subnet Mask
- Default Gateway
- Primary DNS/Secondary DNS

? Checking the Network Connection

If your ISP has a specific proxy server setting

Press **OPTIONS**, then press \uparrow/\downarrow to select "Proxy Set-up" and press \oplus . Then enter the settings.

7 Press \oplus .

8 Press \Rightarrow to select "Test", then press \oplus .

9 Press \leftarrow/\rightarrow to select "Yes", then press \oplus .

The network diagnostic starts.

When the message "Connection successful." appears, press **RETURN/BACK** repeatedly to exit.



- If "Connection successful." does not appear, see "Troubleshooting" (113).

? Adjusting the Server Display Settings

You can select home network servers to be displayed on the Home Menu.

Up to 10 servers can be displayed on the Home Menu automatically.

- 1 Set the server to allow connections from the TV.
For details on settings on the server, refer to the Operating Instructions supplied with the server.
- 2 Press HOME.
- 3 Press \leftarrow/\rightarrow to select "Settings".
- 4 Press \uparrow/\downarrow to select "Network Settings", then press \oplus .
- 5 Select "Server Display Settings", then press \oplus .

6 Select the server you want to display on the Home Menu, then press \oplus .

7 Select "Yes", then press \oplus .

If you cannot connect to your home network
The TV can check if the server is being correctly recognised.

- 1 Press HOME.
- 2 Press \leftarrow/\rightarrow to select "Settings".
- 3 Press \uparrow/\downarrow to select "Network Settings", then press \oplus .
- 4 Select "Server Diagnostics", then press \oplus .
- 5 Select "Yes", then press \oplus .
The server diagnostic starts.

? Adjusting the Server Display Settings

When the server diagnostic is complete, the diagnostic result list appears.

6 Select the server you want to confirm, then press



The diagnostic results of the selected server appear.


If the diagnostic results indicate a failure, look up the possible causes and what to do, and check connections and settings.

For details, see “Troubleshooting” (113).

? Navigating through TV Home Menu on XMB™

The XMB™ (XrossMediaBar) is a menu of BRAVIA features and input sources displayed on the TV screen. The XMB™ is an easy way to select programming and adjust settings on your BRAVIA TV.

1 Press HOME to display the XMB™.

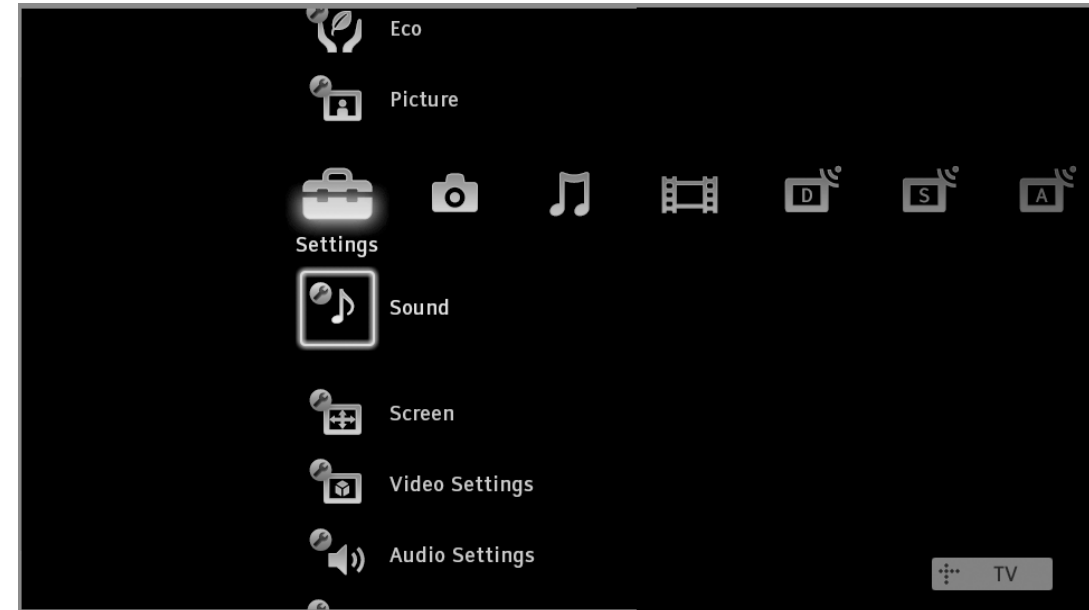

? Navigating through TV Home Menu on XMB™

2 Press / to select the category.



Settings

You can make advanced settings and adjustments (68).



Photo

You can enjoy photo files via USB devices or the network (45) (58).



Music

You can enjoy music files via USB devices or the network (45) (58).



Video

You can enjoy video files via USB devices or the network (45) (58).



Digital

You can select a digital channel, Digital Favourite list (33), or the Digital Electronic Programme Guide (EPG) (28).



Satellite

You can select a satellite channel.



Analogue

You can select an analogue channel or Analogue Favourite list (31).

To hide the list of analogue channels, set "Programme List Display" to "Off" (95).

? Navigating through TV Home Menu on XMB™



External Inputs

You can select equipment connected to the TV.

To assign a label to an external input, see "AV Preset" (90).



Network

You can enjoy "AppliCast" (56).



- The options you can adjust vary depending on the situation.
- Unavailable options are greyed out or not displayed.

3 Press  to select the item, then press .

4 Follow the instructions on the screen.

5 Press HOME to exit.

? System Update

You can update the TV system using USB memory.
Obtain information from the website below.

<http://support.sony-europe.com/TV/>

? BRAVIA Tips

Introduces how to enjoy the TV (except for KDL-52V58xx, 46V58xx, 40V58xx, 37V58xx, 32V58xx).

? Clock/Timers

Sleep Timer

Sets the TV to automatically switch to standby mode after a certain amount of time.

When "Sleep Timer" is activated, the ⌚ (Timer) indicator on the TV front panel lights up in orange.



- When you turn off the TV and turn it on again, "Sleep Timer" is reset to "Off".

On Timer

Sets the TV to automatically turn on from standby mode.

Auto Clock Update

Switches to digital mode and obtains the time.

? Eco

Reset

Resets all the “Eco” settings to the factory settings.

Power Saving

Reduces power consumption of the TV by adjusting the backlight.

When you select “Picture Off”, the picture is switched off, and the  Picture Off indicator on the TV front panel lights up in green. The sound remains unchanged.

Idle TV Standby

Turns the TV off after it has been kept idle for the preset length of time.

PC Power Management

Switches the TV to standby mode when the TV receives no signal from the PC input source for 30 seconds.

Light Sensor

Automatically optimises the picture settings according to the ambient light in the room.



- Do not put anything over the sensor, doing so may affect its function. Check the position of the sensor (16).

? Picture

Target Inputs

Allows you to select whether to use the common settings or to make custom settings for the input you are currently viewing.

- Common: Applies common settings to all inputs in which "Target Inputs" is set to "Common".
- Name of current input (e.g. AV1): Allows you to make custom settings for the input.

Picture Mode

Sets a picture mode. The options that can be selected differ depending on the scene select settings.

- Vivid: Enhances picture contrast and sharpness.
- Standard: For standard pictures. Recommended for home entertainment.
- Custom: Allows you to store your preferred settings.

? Picture

- Cinema: For viewing film-based content. Most suitable when viewing the TV in a theatre-like environment.
- Photo-Vivid: For viewing photographs. Enhances picture contrast and sharpness.
- Photo-Standard: For viewing photographs. Provides the optimum picture quality for viewing in the home.
- Photo-Original: For viewing photographs. Represents the picture quality used when imaging developed photographs.
- Photo-Custom: For viewing photographs. Allows you to store your preferred settings.
- Sports: Provides the optimum picture quality for viewing sports.

- Game: Most suitable for when playing games on your TV.
- Graphics: Provides the optimum picture quality for viewing graphics.

Reset

Resets all the "Picture" settings to the factory settings excluding "Target Inputs", "Picture Mode" and "Advanced Settings".

Backlight

Adjusts the brightness of the backlight.

? Picture

Contrast

Increases or decreases picture contrast.

Brightness

Brightens or darkens the picture.

Colour

Increases or decreases colour intensity.

Hue

Increases or decreases the green tones and red tones.



- "Hue" can be adjusted only for the NTSC colour signal (e.g. U.S.A. video tapes).

Colour Temperature

Adjusts the whiteness of the picture.

- Cool: Gives white colours a blue tint.
- Neutral: Gives white colours a neutral tint.
- Warm 1/Warm 2: Gives white colours a red tint. "Warm 2" gives a redder tint than "Warm 1".



- "Warm 1" and "Warm 2" are not available when "Picture Mode" is set to "Vivid" (or "Photo-Vivid").

Sharpness

Sharpens or softens the picture.

? Picture

Noise Reduction

Reduces the noise level of pictures (snowy pictures).

MPEG Noise Reduction

Reduces picture noise in MPEG-compressed videos. This is effective when viewing a DVD or digital broadcast.

Motionflow (except for KDL-52V58xx, 46V58xx, 40V58xx, 37V58xx, 32V58xx)

Provides smoother picture movement and reduces picture blur.

- High: Provides smoother picture movement such as for film-based contents.
- Standard: Provides smooth picture movement. Use this setting for standard use.

- Off: Use this setting when the “High” or “Standard” settings result in noise.




- Depending on the video, you may not see the effect visually, even if you have changed the setting.

Film Mode

Provides improved picture movement when playing DVD or VCR images taken on film, reducing picture blur and graininess.

- Auto 1: Provides smoother picture movement than the original film-based content. Use this setting for standard use.

? Picture

- Auto 2: Provides the original film-based content as is.
 - Off
- 
- If the image contains irregular signals or too much noise, "Film Mode" is automatically turned off even if "Auto 1" or "Auto 2" is selected.

Advanced Settings

Allows you to set "Picture" settings in more detail. These settings are not available when "Picture Mode" is set to "Vivid" (or "Photo-Vivid").

- Reset: Resets all the advanced settings to the factory settings.
- Black Corrector: Enhances black areas of the picture for stronger contrast.
- Adv. Contrast Enhancer: Automatically adjusts "Backlight" and "Contrast" to the most suitable settings judging from the brightness of the screen. This setting is especially effective for dark images scenes, and will increase the contrast distinction of the darker picture scenes.

? Picture

- Gamma: Adjusts the balance between bright and dark areas of the picture.
- Auto Light Limiter: Reduces glare such as in scenes where the entire screen is white.
- Clear White: Emphasises white colours.
- Live Colour: Makes colours more vivid.
- White Balance: Adjusts the temperature of each colour.



- In Digital mode, in order to optimize each signal quality the picture settings are applied independently for HD (High-definition) and SD (Standard-definition) pictures.

? Sound

Target Inputs

Allows you to select whether to use the common settings or to make custom settings for the input you are currently viewing.

- Common: Applies common settings to all inputs in which "Target Inputs" is set to "Common".
- Name of current input (e.g. AV1): Allows you to make custom settings for the input.

Sound Mode

Sets a sound mode. "Sound Mode" includes options best suited for video and photographs, respectively. The options that can be selected differ depending on the scene select settings.

- Dynamic: Enhances the treble and bass sounds.
- Standard: For standard sounds. Recommended for home entertainment.
- Clear Voice: Makes voice sound clearer.

? Sound

Reset

Resets all the "Sound" settings to the factory settings excluding "Target Inputs", "Sound Mode" and "Dual Sound".

Treble

Adjusts higher-pitched sounds.

Bass

Adjusts lower-pitched sounds.

Balance

Emphasises the left or right speaker.

Auto Volume

Keeps volume level constant across all programmes and adverts (e.g. adverts tend to be louder than programmes).

Volume Offset

Adjusts the volume level of the current input relative to other inputs, when "Target Inputs" is set to the current input name (e.g. AV1).

Surround

Allows you to select the suitable surround effects depending on the genre of TV programme (movie, sport, music, etc.) or video game.

The options that can be selected differ depending on the "Scene Select" settings.

? Sound

- S-FORCE Front Surround: Delivers surround effects that help you enjoy the virtual multi-ch surround audio with just the two internal TV speakers.
- Cinema: Delivers surround effects just like the high-grade audio systems found in movie theatres.
- Music: Delivers surround effects that make you feel like you are surrounded by sound as in a music hall.
- Sports: Delivers surround effects that make you feel like you are watching a live sports contest.
- Game: Delivers surround effects that enhance game sound.

- Off: Converts and reproduces multi-ch audio to 2ch audio. In the case of other audio formats, the original audio is reproduced.

Voice Zoom

Adjusts the sound level of human voices. For example, if the voice of a news announcer is indistinct, you can turn up this setting to make the voice louder. Conversely, if you are watching a sports programme, you can turn down this setting to soften the voice of the commentator.

Sound Enhancer

Enhances high-frequency sounds.

? Sound

Sound Booster

Produces a fuller sound for more impact, by emphasizing the treble and bass sounds.

Dual Sound

Sets the sound from the speaker for a stereo or bilingual broadcast.

- Stereo/Mono: For stereo broadcasts.
- A/B/Mono: For bilingual broadcasts, select "A" for sound channel 1, "B" for sound channel 2, or "Mono" for mono channel, if available.



- For other equipment connected to the TV, set "Dual Sound" to "Stereo", "A", or "B".

? Screen (for inputs other than a PC)

Target Inputs

Allows you to select whether to use the common settings or to make custom settings for the input you are currently viewing.

- Common: Applies common settings to all inputs in which "Target Inputs" is set to "Common".
- Name of current input (e.g. AV1): Allows you to make custom settings for the input.

Screen Format

See "To change the Screen Format manually" (24).

Auto Format

Automatically changes "Screen Format" to match the broadcast signal. If you want to use the setting that you specified in "Screen Format", select "Off".

4:3 Default

Sets the default screen format for 4:3 broadcasts.

- Smart: Displays conventional 4:3 broadcasts with an imitation wide screen effect.
- 4:3: Displays conventional 4:3 broadcasts in the correct proportion.
- Off: Uses the setting that you specified in "Screen Format".

? Screen (for inputs other than a PC)

Display Area

Adjusts the picture display area.

- Auto: Automatically switches to the most appropriate display area.
- Full Pixel: Displays pictures in their original size when parts of the picture are cut off.
- +1: Displays pictures in their original size.
- Normal: Displays pictures in their recommended size.
- -1/-2: Enlarges the picture so that the edges are outside the visible display area.



- These options may change depending on the input displayed.

Horizontal Shift

Adjusts the horizontal position of the picture.

Vertical Shift

Adjusts the vertical position of the picture when "Screen Format" is set to "Smart", "Zoom" or "14:9".

Vertical Size

Adjusts the vertical size of the picture when "Screen Format" is set to "Smart".

? Screen (for PC input)

Auto Adjustment

Automatically adjusts the display position, phase, and pitch of the picture when the TV receives an input signal from the connected PC.



- “Auto Adjustment” may not work well with certain input signals. In such cases, manually adjust “Phase”, “Pitch”, “Horizontal Shift”, and “Vertical Shift”.

Reset

Resets all PC screen settings to factory settings.

Phase

Adjusts the phase when the screen flickers.

Pitch

Adjusts the pitch when the picture has unwanted vertical stripes.

Horizontal Shift

Adjusts the horizontal position of the picture.

Vertical Shift

Adjusts the vertical position of the picture.

Screen Format

Sets “Screen Format” for displaying pictures from your PC.

- Normal: Displays the picture in its original size.
- Full 1: Enlarges the picture to fill the vertical display area, while maintaining its original proportion.

? Screen (for PC input)

- Full 2: Enlarges the picture to fill the display area.

? Video Settings

Colour System

Sets the colour system ("Auto", "PAL", "SECAM", "NTSC3.58", or "NTSC4.43") according to the input signal from the input source.

? Audio Settings





Speaker

- **TV Speaker:** Turns on and outputs the TV's sound from the TV speakers.
- **Audio System:** Turns off the TV speakers and outputs the TV's sound from external audio equipment connected to the audio output sockets/jacks on the TV.

Audio Out

- **Variable:** When using an external audio system, volume output from audio out can be controlled using the TV's remote.
- **Fixed:** The audio output of the TV is fixed. Use your audio receiver's volume control to adjust the volume (and other audio settings) through your audio system.

Headphone Settings

-  **Speaker Link:** Switches the TV's internal speakers on/off when you connect headphones to the TV.
-  **Volume:** Adjusts the volume of the headphones when " Speaker Link" is set to "Off".
-  **Dual Sound:** Sets the sound from the headphones for a bilingual broadcast.

? Audio Settings

Optical Out

Sets the audio signal that is output from the DIGITAL AUDIO OUT (OPTICAL) jack of the TV. Set to "Auto", when connecting equipment compatible with Dolby Digital. Set to "PCM", when connecting equipment not compatible with Dolby Digital.

? Set-up

USB Auto Start

Automatically starts photo playback when the TV is turned on and a digital still camera or other device storing photo files is connected to the USB port then turned on.



- Playback does not start automatically if the TV is turned on after connecting the digital still camera or other device to the USB port.



Quick Start


The TV turns on faster than usual by turning on the power using the remote. However, power consumption in standby mode is approximately 20 watts higher than usual. Up to 3 out of 5 time zones can be set.

? Set-up

AV Preset

Assigns an icon or name to equipment connected to the side and rear sockets/jacks. The icon and name appear briefly on the screen when you select the equipment.

1 Press  to select the desired input source, then press .

- Skip AV Inputs: For each input, sets whether or not to display on the Home Menu or in a list of inputs that will appear when you press .

- Auto: Displays the icon and name only when the equipment is connected (except for AV1 or AV2 inputs).

- Always Display: Always displays the icon and name regardless of whether or not the equipment is connected.

- Skip: Does not display the icon and name even if the equipment is connected.

2 Press  to assign an icon and name.

- Label AV Inputs: Uses preset labels to assign a name to connected equipment. Allows you to create your own label when you select "Edit".
- Edit: Allows you to edit the name in the edit screen and choose the appropriate icon.



? Set-up

AV2 Input



Sets a signal to be input through the socket labelled  AV2 on the rear of the TV.

- Auto: Switches automatically among the signals of RGB input, S video input, Composite video input depending on the input signal.
- RGB: Inputs the RGB signal.
- S Video: Inputs the S Video signal.
- Composite: Inputs the Composite video signal.



AV2 Output

Sets a signal to be output to the  AV2 socket. If you connect a VCR or other recording equipment to the  AV2 socket, you can record the output signal from other equipment connected to the TV.



- This function may have some restrictions depending on the input displayed.
 - TV: Outputs TV broadcasts.
 - AV1: Outputs signals from equipment connected to the  AV1 socket.
 - AV3: Outputs signals from equipment connected to the  AV3 socket.

? Set-up

- Auto: Outputs whatever is being viewed on the screen (except signals from the  COMPONENT IN, HDMI IN1, 2, 3, or 4, and PC IN  sockets).

HDMI Set-up

Allows the TV to communicate with equipment that is compatible with the Control for HDMI function, and connected to the HDMI sockets/jacks of the TV. Note that communication settings must also be made on the connected equipment.

- Control for HDMI: Sets whether or not to link the operations of the TV and the connected equipment that is compatible with Control for HDMI. When set to "On", the following functions are available.

If the specific Sony equipment that is compatible with Control for HDMI is connected, this setting is applied to the connected equipment automatically when the "Control for HDMI" is set to "On" using the TV.

- Auto Devices Off: When this is set to "On", the connected equipment that is compatible with Control for HDMI turns off when you turn off the TV.
- Auto TV On: When this is set to "On", the TV turns on when you turn on the connected equipment that is compatible with Control for HDMI.
- Tuner Box Control: If set to "Advanced", you can select a channel tuned by connected equipment using the TV's remote.

? Set-up

- **HDMI Device List:** Displays a list of connected equipment that is compatible with Control for HDMI.



- You cannot use "Control for HDMI" if the TV operations are linked to the operations of an audio system that is compatible with Control for HDMI.

Auto Start-up

You can run the initial Set-up that appeared when you first connected the TV, and select the language and country/area, or tune in all available channels again.

Even if you have made the settings when you first connected the TV, you may need to change the settings after moving house, or to search for newly launched channels.

Language

Sets the language displayed on the menu screens.

Product Information

Displays product information of the TV.

Factory Settings

Resets all settings to factory settings except for the "Favourite" settings and programme preset data. After completing this process, the initial set-up screen is displayed. Completing auto tuning in initial set-up will reset the settings

? Set-up

that are not reset by "Factory Settings". To retain the settings, skip the "Auto Tuning".

? Analogue Set-up

Programme List Display

Select "Off" to hide the list of analogue channels from the XMB™ (XrossMediaBar).

1 Digit Direct

When "1 Digit Direct" is set to "On", you can select an analogue channel using one preset number button (0 – 9) on the remote.



- When "1 Digit Direct" is set to "On", you cannot select channel numbers 10 and above by entering two digits on the remote.

Favourite Set-up

Adds channels in a Favourite list.

To reset the favourite channels, select "– – –".

Auto Tuning

Tunes in all the available analogue channels.

You can retune the TV after moving house, or to search for newly launched channels.

? Analogue Set-up

Programme Sorting

Changes the order of analogue channels stored in the TV.

- 1 Press \uparrow/\downarrow to select the channel you want to move to a new position, then press \oplus .
- 2 Press \uparrow/\downarrow to select the new position for the channel, then press \oplus .

Programme Labels

Assigns a channel name of your choice, up to five letters or numbers. The name appears briefly on the screen when you select the channel. (Names for channels are usually taken automatically from Text (if available).)

- 1 Press \uparrow/\downarrow to select the channel you want to name, then press \oplus .
- 2 Press \uparrow/\downarrow to select the desired letter or number ("_" for a blank space), then press \Rightarrow .
If you enter a wrong character:
Press \Leftarrow/\Rightarrow to select the wrong character. Then, press \uparrow/\downarrow to select the correct character.
- 3 Repeat step 2 until you finish entering the name.

? Analogue Set-up

4 Press \oplus to exit the labeling procedure.

Intelligent Picture

- On with Indicator: Automatically reduces the picture noise. The signal level bar is displayed when the channel is changed or the display is changed from an input screen to a TV programme.
- On: Automatically reduces the picture noise.
- Off: Turns off the "Intelligent Picture" feature.

Manual Programme Preset

To preset a channel, press PROG +/- to select the programme number, before selecting "Label", "AFT", "Audio Filter", "Skip", "Decoder", or "LNA". You cannot select a programme number that is set to "Skip" (99).

- Programme/System/Channel: Allows you to preset programme channels manually.

1 Press \uparrow/\downarrow to select "Programme", then press \oplus .

2 Press \uparrow/\downarrow to select the programme number you want to manually tune (if tuning a VCR, select channel 00), then press \oplus .

3 Press \uparrow/\downarrow to select "System", then press \oplus .

4 Press \uparrow/\downarrow to select one of the following TV broadcast systems, then press \oplus .

B/G: For western European countries/areas

I: For the United Kingdom

D/K: For eastern European countries/areas

L: For France

? Analogue Set-up

5 Press \uparrow/\downarrow to select "Channel", then press \oplus .

6 Press \uparrow/\downarrow to select "S" (for cable channels) or "C" (for terrestrial channels), then press \Rightarrow .

7 Tune the channels as follows:

If you do not know the channel number (Frequency):

Press \uparrow/\downarrow to search for the next available channel. The search stops when a channel is found. To continue searching, press \uparrow/\downarrow .

If you know the channel number (Frequency):

Press the number buttons to enter the channel number of the broadcast you want to tune, or the channel number of your VCR.

8 Press \oplus to jump to "Confirm", then press \oplus .

Repeat the above procedure to preset other channels manually.

- **Label:** Assigns a name of your choice to the selected channel. This name appears briefly on the screen when you select the channel. To input characters, follow steps 2 to 4 in "Programme Labels" (96).
- **AFT:** Allows you to fine-tune the selected channel manually if you feel that a slight tuning adjustment may improve picture quality. When "On" is selected, fine tuning adjustments are made automatically.

? Analogue Set-up

- **Audio Filter:** Improves the sound of individual channels when distortion occurs in mono broadcasts (normally set to "Off").



- You cannot receive stereo or dual sound when "Low" or "High" is selected.
- **Skip:** Skips unused analogue channels when you press PROG +/- to select channels. To select channels you have programmed to skip, use the corresponding number buttons.
- **LNA:** Improves the picture quality of the channel (noisy picture) when the broadcast signal is very weak.
- **Confirm:** Saves changes you have made to the "Manual Programme Preset" settings.

? Digital Set-up

Subtitle Set-up

- **Subtitle Setting:** When set to “For Hard Of Hearing”, visual aids for the hearing impaired are displayed with the subtitles (when such visual aids are available).
- **Preferred Language:** Allows you to select the language of the subtitles.

Audio Set-up

- **Audio Type:** Switches to broadcast for the hearing impaired when you select “For Hard Of Hearing”.
- **Preferred Language:** Sets the language to be used for a programme. Some digital channels may broadcast several audio languages for a programme.

- **Audio Description:** Provides audio description (narration) of visual information, when such information is available.
- **Mixing Level:** Adjusts the TV main audio and “Audio Description” output levels.
- **Dynamic Range:** Compensates for differences in the audio level between different channels (only for Dolby Digital audio).

? Digital Set-up



- The effect may not function or may vary depending on the programme regardless of the “Dynamic Range” setting.
- MPEG Audio Level: Adjusts the MPEG audio sound level.

Digital Tuning

- Digital Auto Tuning: Tunes in the available digital channels.
You can retune the TV after moving house, or to search for newly launched channels.
- Programme Sorting: Allows you to remove or change the order of digital channels stored in the TV.
 - 1 Press / to select the channel you want to remove or move to a new position.
 - 2 Remove or change the order of the digital channels as follows:

? Digital Set-up

To remove a digital channel:

Press ⊕. After a confirmation message appears, press ↵ to select "Yes", then press ⊕.

To change the order of the digital channels:

Press ⇨, then press ⬆/⬇ to select the new position for the channel and press ↵.

3 Press RETURN/BACK.

- Digital Manual Tuning: Tunes the digital channels manually. This feature is available when "Digital Auto Tuning" is set to "Antenna".

1 Press the number buttons to enter the channel number you want to tune, or press ⬆/⬇.

2 When the available channels are found, press ⬆/⬇ to select the channel you want to store, then press ⊕.

3 Press ⬆/⬇ to select the channel number where you want to store the new channel, then press ⊕.

Repeat the above procedure to tune other channels.

- LNA: Improves the picture quality of the channel (noisy picture) when the broadcast signal is very weak.

? Digital Set-up

Satellite Tuning

- **Satellite Auto Tuning:** Tunes in the available satellite channels. You can choose up to 4 different satellite connections thanks to the DiSEqC 1.0 management. Next settings are independent for each connection. To set-up a DiSEqC input, use the "LNB Configuration".
 - **LNB Configuration:** In case of non-standard LNB, you can set it up manually.
 - **Scan Type:** If no channel is found using "Network Scan", try "Full Scan".
 - **Transponder:** In "Network Scan" or "Scan for new services" mode, you can enter the transponder settings manually.

- **Advanced settings:** Allows you to set tuning settings in more detail to better find the type of services you want to tune.

- **Programme List:** Displays the channel list.
- **Freesat Settings:** You can make advanced settings and adjustments for Freesat.

Radio Display

Displays the screen wallpaper when you listen to a radio broadcast. You can select the screen wallpaper colour, display a random colour or view a slideshow (45) (58). To cancel the screen wallpaper display temporarily, press any button.

? Digital Set-up

Parental Lock

Sets an age restriction to viewing. To view any programme rated for ages above the age you specify, enter the correct PIN code.

PIN Code

Enter your PIN code to activate "Parental Lock". You can also change the PIN code.



- PIN code 9999 is always accepted.

Technical Set-up

- Auto Service Update: Enables the TV to detect and store new digital services as they become available.
- System Update: Enables the TV to automatically receive free software updates

through your existing aerial/antenna/cable (when issued). We recommend that you leave the setting to "On" at all times.

- System Information: Displays the current software version and the signal level.
- Time Zone: Allows you to manually select the time zone you are in, if it is not the same as the default time zone setting for your country/area.
- Auto DST: Select "On" to automatically switch between summer time and winter time according to the calendar.

? Digital Set-up

- Service Replacement: Select "On" to automatically change the channel when broadcaster changes transmission of the viewing programme to a different channel.

CA Module Set-up

Provides access to a pay TV service after you obtain a Conditional Access Module (CAM) and a view card. See the location of the (PCMCIA) socket (36).

? Network Settings

Network

- IP Address Settings:
 - Manual: Allows you to set the network settings according to your network environment.
 - DHCP (DNS manual): Automatically acquires the network settings except for DNS server settings. You can manually set the DNS settings.
 - DHCP (DNS automatic): Automatically acquires the network settings through the Dynamic Host Configuration Protocol server function of the router or Internet service provider.
- Test: Diagnoses whether the network is correctly connected.

- IP Address/Subnet Mask/Default Gateway/Primary DNS/Secondary DNS: You need to configure each item when "Manual" is selected in "IP Address Settings".
When "DHCP (DNS manual)" is selected, be sure to enter "Primary DNS" and "Secondary DNS" server addresses manually.
- MAC Address: Displays the "MAC address", which is a fixed, globally unique identifier of the network device.

Server Display Settings

Displays the connected server list and allows you to select the server you want to display on the Home Menu.

? Network Settings

Server Diagnostics

Diagnoses whether the TV can connect to each server on the home network.

Renderer Function

Enables playback of photo/music/video files on the TV through other control devices on the network, such as a digital still camera or mobile phone.

Renderer Access Control

Allows you to specify the accessible controller to the TV. When this setting is set to "On", you can playback Photo/Music/Video files on the TV using the controller.

Renderer Set-up

- **Automatic Access Permission:** Allows you to select whether to permit access to the TV automatically when a network device accesses the TV for the first time.
- **Renderer Name:** Allows you to set the name of the TV to be shown on the controller.

? Troubleshooting

Check whether the ⏻ (standby) indicator is flashing in red.

When the ⏻ (standby) indicator is flashing
The self-diagnosis function is activated.

1 Count how many times the ⏻ (standby) indicator flashes between each two second break.

For example, the indicator may flash three times, go off for two seconds, then flash again three times.

2 Press ⏻ on the TV to turn it off, disconnect the mains lead, and inform your dealer or Sony service centre of how the indicator flashes (number of flashes).

When the ⏻ (standby) indicator is not flashing

 


1 Check the items in the tables below.

2 If the problem persists, have your TV serviced by qualified service personnel.


? Troubleshooting

Picture

There is no picture (screen is dark) and no sound.

- Check the aerial/antenna/cable connection.
- Connect the TV to the mains/AC power, and press  on the TV.
- If the  (standby) indicator lights up in red, press .

No picture or menu information from equipment connected to the scart connector appears on the screen.

- Press  to display the list of inputs, then select the desired input.
- Check the connection between the optional equipment and the TV.

Ghosting occurs, or double images appear.

- Check the aerial/antenna/cable connection.
- Check the aerial/antenna location and direction.

Only snow and noise appear on the screen.

- Check if the aerial/antenna is broken or bent.
- Check if the aerial/antenna has reached the end of its serviceable life (three to five years for normal use, one to two years when used at the seaside).

There is picture or sound noise when viewing a TV channel.

- "AFT" (Automatic Fine Tuning) to obtain better picture reception (98).

? Troubleshooting

Tiny black points and/or bright points appear on the screen.

- The screen is composed of pixels. Tiny black points and/or bright points (pixels) on the screen do not indicate a malfunction.


The picture contours are distorted.

- Select "Standard" or "Off" in "Motionflow" (75) (except for KDL-52V58xx, 46V58xx, 40V58xx, 37V58xx, 32V58xx).
- Change the current setting of "Film Mode" to other settings (75).


The picture is not displayed in colour.

- Select "Reset" (73).

The picture from equipment connected to the  COMPONENT IN sockets is not displayed in colour, or is displayed in irregular colours.

- Check the connection of the  COMPONENT IN sockets and check if the sockets are firmly seated in their respective sockets.

No picture from the connected equipment appears on the screen.

- Turn the connected equipment on.
- Check the cable connection.
- Press  to display the list of inputs, then select the desired input.
- Correctly insert the memory card or other storage device in the digital still camera.

? Troubleshooting



- Use a digital still camera memory card or other storage device that has been formatted according to the instruction manual supplied with the digital still camera.
- Operations are not guaranteed for all USB devices. Also, operations differ depending on the features of the USB device and the video being played.

You cannot select the connected equipment on the Home Menu or you cannot switch the input.

- Check the cable connection.
- Set the server to be displayed on the Home Menu (63).

Sound

The picture is good, but there is no sound.

- Press  +/- or  (Mute).
- Check if the "Speaker" is set to "TV Speaker" (87).
- When using HDMI input with Super Audio CD or DVD-Audio, DIGITAL AUDIO OUT (OPTICAL) may not output audio signals.

? Troubleshooting

Channels

You cannot select your desired channel.

- Switch between digital and analogue mode, and select the desired digital/analogue channel.

Some channels are blank.

- The channel is for scrambled/subscription service only. Subscribe to a pay TV service.
- The channel is used only for data (no picture or sound).
- Contact the broadcaster for transmission details.

You cannot view digital channels.

- Contact a local installer to find out if digital transmissions are provided in your area.
- Upgrade to a higher gain aerial/antenna.

? Troubleshooting

Home Network

Connection diagnostic results indicate a failure.

Check Connections


- Use a straight cable for the LAN cable.
- Check if the cable is connected firmly.
- Check the connection between the TV and the router.

Check Settings

- Change the IP address for the DNS server (“Checking the Network Connection” (61)) while referring to the following.
 - Contact your Internet service provider.

- Specify the IP address of the router if you do not know the DNS of your Internet service provider.

The server cannot be found, a list cannot be retrieved, and playback fails

- Once server settings are changed, turn the TV off and on by pressing  on the TV.
- Execute “Server Diagnostics” (63).

When using a PC as the server

- Check if the PC is turned on. Do not turn off the PC while accessing.

? Troubleshooting

- If security software is installed on the PC, be sure to allow connections from external devices. For details, refer to the manual supplied with your security software.
- The load on the PC may be too high or the server application may become unstable. Try the following:
 - Stop the server application and restart it.
 - Restart the PC.
 - Reduce the number of applications running on the PC.
 - Reduce the amount of content.

Changes on the server are not being applied or displayed content differs from content on the server.

- Sometimes changes are not applied to displays on the TV even though content has been added and/or deleted on the server. If this happens, go back up one level and try opening the folder or server again.

Photo, music and/or video files do not appear or icons are not displayed.

Preliminary Check

- Check that the connected device supports DLNA.

? Troubleshooting

- Operations are not guaranteed for all servers. Also, operations differ depending on the features of the server and the content in question.
- Turn the connected device on.

Check Connections

- Check that the LAN cable and/or mains lead/AC power cord of the server has not become disconnected.

Check Settings

- Check that the connected device is registered under "Server Display Settings" (63).
- Check that the server is correctly configured.
- Check that the selected device is connected to the network and can be accessed.

- If the "IP Address Settings" in "Network" under "Network Settings" is set to "DHCP (DNS automatic)" or "DHCP (DNS manual)", it may take some time to recognise devices if there is no DHCP server. Execute "Server Diagnostics" (63).

The TV cannot be found from renderer-compatible device (the controller).

Check Connections

- Check that the LAN cable and/or mains lead of the server has not become disconnected.

Check Settings

- Check if the "Renderer Function" is activated (107).

? Troubleshooting

- Check that the connected device is registered under "Renderer Access Control" (107).

Only a few icons appear under the "Network" in the Home Menu.

- This is normal when internet connection is not available.

You can use three pre-installed Widgets properly. To enjoy more Widgets, please check that the LAN cable and/or mains lead/AC power cord of the router/modem has not become disconnected. (*)

You have been using registered Widgets, but now some contents won't appear on the Widgets.

- Check that the LAN cable and/or mains lead/AC power cord of the router/modem has not become disconnected. (*)
- There's a possibility that the Widget Provider's server is out of service. Please try using the Widget later.

(*)

Your router/modem must be properly set to connect to the internet in advance. Please contact your Internet Service Provider for the router/modem settings.

? Troubleshooting

General

Auto Setup (freesat) is stopped before it is completed.

- Check connections and dish alignment. The dish needs to be pointing at Astra 2 at 28.2° East, and Eurobird 1 at 28.5° East.
- If the problem persists, consult your freesat registered retailer or call Freesat (UK) Ltd on 0844 881 6700 or visit www.freesat.co.uk.

Some programmes cannot be tuned.

- Check the aerial or dish.
- The satellite cable might be short-circuited or there might be connection problems of the cable. Please check the cable and connection

and then turn the TV Off with the Mains power On/Off switch, and turn it On again.

- The frequency you entered is out of range. Please consult the received satellite broadcasting company.

Distorted picture and/or sound.

- Keep the TV away from electrical noise sources such as cars, motorcycles, hair-dryers or optical equipment.
- When installing optional equipment, leave some space between the optional equipment and the TV.
- Check the aerial/cable connection.
- Keep the aerial/cable TV cable away from other connecting cables.

? Troubleshooting

The TV turns off automatically (the TV enters standby mode).

- Check if the “Sleep Timer” is activated, or confirm the “Duration” setting of “On Timer” (70).
- Check if the “Idle TV Standby” is activated (71).
- If no signal is received and no operation is performed in the TV mode for 30 minutes, the TV automatically switches to standby mode.

The TV turns on automatically.

- Check if the “On Timer” is activated (70).

Some input sources cannot be selected.

- Select “AV Preset” and cancel the “Skip” setting for the input source (90).

The remote does not function.

- Replace the batteries.

HDMI equipment does not appear on “HDMI Device List”.

- Check that your equipment is compatible with Control for HDMI.

You cannot select “Off” in “Control for HDMI”.

- If you have connected any audio system that is compatible with Control for HDMI, you cannot select “Off” in this menu. If you want to change the audio output to the TV speaker, select “TV Speaker” in the “Speaker” menu (87).

? Troubleshooting

Not all channels are tuned for cable.

- Check the support website for cable provide information.

<http://support.sony-europe.com/TV/DVBC/>.