

SONY


FM/AM PLL Synthesized Clock Radio ICF-C773 FM/MW/LW PLL Synthesized Clock Radio ICF-C773L

Operating Instructions
Mode d'emploi
Istruzioni per l'uso

DREAM MACHINE
Dream Machine is a trademark of Sony Corporation.
Dream Machine est une marque commerciale de Sony Corporation.
Dream Machine è un marchio della famiglia della compagnia.
Dream Machine es una marca comercial de Sony Corporation.
Dream Machine es marca comercial de Sony Corporation.
Dream Machine et varemarken ejet de Sony Corporation.

Sony online <http://www.sony-europe.com>

Sony Corporation Printed in Denmark

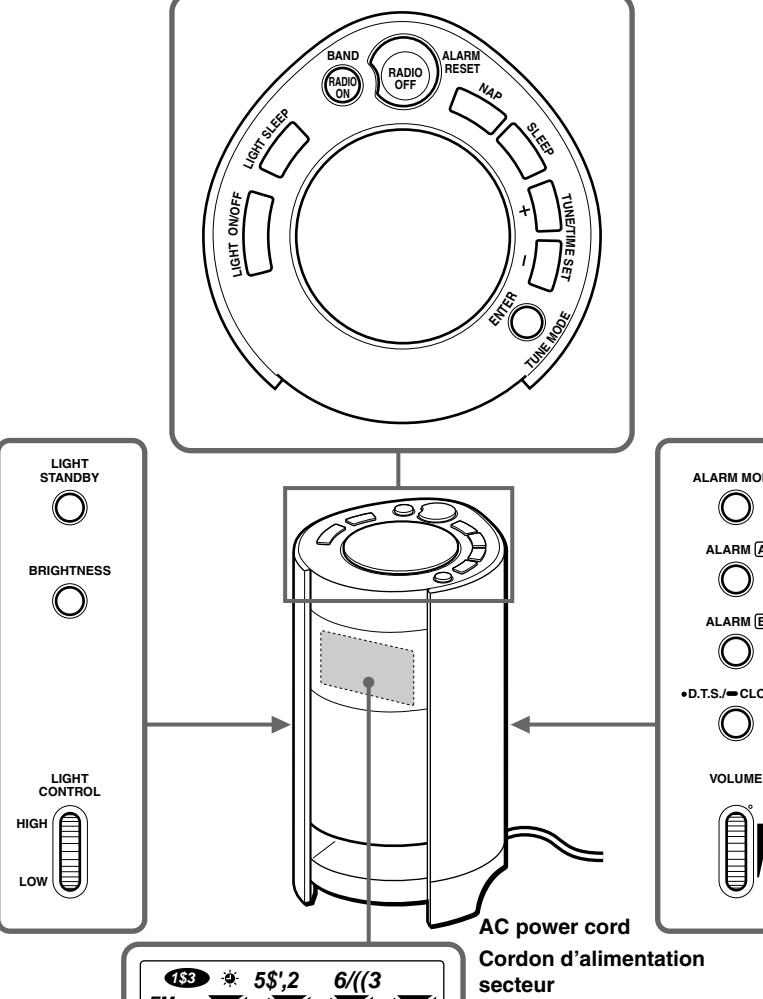

* There is a tactile dot beside VOLUME to show the direction to turn up the volume.
* Un point tactile, situé à côté de la bague de VOLUME, indique le sens dans lequel il faut tourner pour augmenter le volume.
* Accanto al comando VOLUME è presente un punto tattile che indica la direzione da seguire per aumentare il livello del volume.

English

WARNING

To prevent fire or shock hazard, do not

expose to rain or water.

It is dangerous to open the cabinet.

Do not servicing to qualified personnel only.

Do not install the appliance in a confined space, such as bookcase or in cabinet.

To prevent fire or shock hazard, do not place objects

filled with liquids, such as vases, on the apparatus.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or its

packaging indicates that this product

shall not be treated as household waste.

Please dispose of this product according to the applicable collection point for the

recycling of electrical and electronic

equipment.

The correct disposal of this equipment will help

prevent potential negative effects on the

environment and human health, which could

otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help

to conserve natural resources.

Please contact your local city office, your household waste

disposal service or the shop where you purchased the product.

Features

Dual tuner FM/AM (ICF-C773) or FM/MW/

LW (ICF-C773L). Phase Locked Loop synthesized clock radio.

Elegant indirect lighting, that is most suitable as

bedside lamp.

Easy digital tuning with 15 memory presets

for ICF-C773, 20 memory presets for ICF-C773L.

Various types of alarms-radio, buzzer and 4

melodies.

Large digital display showing the time to the

nearest second.

Nap timer sounds the buzzer after desired time

durations between 10 to 120 minutes that can be

set from different time settings, convenient

for taking a nap.

Extensible snooze - snooze time can be extended

from 10 to 60 minutes in maximum every time

you use it.

Setting the Clock

1 Press **RADIO ON/BAND** to turn on the radio.

2 Hold down **D.T./CLOCK** for a few

seconds until a beep sound.

3 Press **TUNE/TIME SET** + or - until the

correct hour appears.

To set the time rapidly, hold down **TUNE/TIME**.

4 Press **ENTER/TUNE MODE**.

5 Repeat steps 3 and 4 to set the minute.

Two short beeps sound when the clock setting, after about 60

seconds starts.

The clock system varies depending on the model you

have.

12-hour system: "AM 12:00" = midnight

24-hour system: "00:00" = midnight

If you quit during the clock setting, after about 60

seconds, the radio turns off.

Setting the Clock

1 Press **RADIO ON/BAND** to turn on the radio.

2 Hold down **D.T./CLOCK** for a few

seconds until a beep sound.

3 Press **TUNE/TIME SET** + or - until the

correct hour appears.

To set the time rapidly, hold down **TUNE/TIME**.

4 Press **ENTER/TUNE MODE**.

5 Repeat steps 3 and 4 to set the minute.

Two short beeps sound when the clock setting, after about 60

seconds starts.

The clock system varies depending on the model you

have.

12-hour system: "AM 12:00" = midnight

24-hour system: "00:00" = midnight

If you quit during the clock setting, after about 60

seconds, the radio turns off.

Setting the Clock

1 Press **RADIO ON/BAND** to turn on the radio.

2 Hold down **D.T./CLOCK** for a few

seconds until a beep sound.

3 Press **TUNE/TIME SET** + or - until the

correct hour appears.

To set the time rapidly, hold down **TUNE/TIME**.

4 Press **ENTER/TUNE MODE**.

5 Repeat steps 3 and 4 to set the minute.

Two short beeps sound when the clock setting, after about 60

seconds starts.

The clock system varies depending on the model you

have.

12-hour system: "AM 12:00" = midnight

24-hour system: "00:00" = midnight

If you quit during the clock setting, after about 60

seconds, the radio turns off.

Setting the Clock

1 Press **RADIO ON/BAND** to turn on the radio.

2 Hold down **D.T./CLOCK** for a few

seconds until a beep sound.

3 Press **TUNE/TIME SET** + or - until the

correct hour appears.

To set the time rapidly, hold down **TUNE/TIME**.

4 Press **ENTER/TUNE MODE**.

5 Repeat steps 3 and 4 to set the minute.

Two short beeps sound when the clock setting, after about 60

seconds starts.

The clock system varies depending on the model you

have.

12-hour system: "AM 12:00" = midnight

24-hour system: "00:00" = midnight

If you quit during the clock setting, after about 60

seconds, the radio turns off.

Setting the Clock

1 Press **RADIO ON/BAND** to turn on the radio.

2 Hold down **D.T./CLOCK** for a few

seconds until a beep sound.

3 Press **TUNE/TIME SET** + or - until the

correct hour appears.

To set the time rapidly, hold down **TUNE/TIME**.

4 Press **ENTER/TUNE MODE**.

5 Repeat steps 3 and 4 to set the minute.

Two short beeps sound when the clock setting, after about 60

seconds starts.

The clock system varies depending on the model you

have.

12-hour system: "AM 12:00" = midnight

24-hour system: "00:00" = midnight

If you quit during the clock setting, after about 60

seconds, the radio turns off.

Setting the Clock

1 Press **RADIO ON/BAND** to turn on the radio.

2 Hold down **D.T./CLOCK** for a few

seconds until a beep sound.

3 Press **TUNE/TIME SET** + or - until the

correct hour appears.

To set the time rapidly, hold down **TUNE/TIME**.

4 Press **ENTER/TUNE MODE**.

5 Repeat steps 3 and 4 to set the minute.

Two short beeps sound when the clock setting, after about 60

seconds starts.

The clock system varies depending on the model you

have.

12-hour system: "AM 12:00" = midnight

24-hour system: "00:00" = midnight

If you quit during the clock setting, after about 60

seconds, the radio turns off.

Setting the Clock

1 Press **RADIO ON/BAND** to turn on the radio.

2 Hold down **D.T./CLOCK** for a few

seconds until a beep sound.

3 Press **TUNE/TIME SET** + or - until the

correct hour appears.

To set the time rapidly, hold down **TUNE/TIME**.

4 Press **ENTER/TUNE MODE**.

5 Repeat steps 3 and 4 to set the minute.

Two short beeps sound when the clock setting, after about 60

seconds starts.

The clock system varies depending on the model you

have.

12-hour system: "AM 12:00" = midnight

24-hour system: "00:00" = midnight

If you quit during the clock setting, after about 60

seconds, the radio turns off.

Setting the Clock

1 Press **RADIO ON/BAND** to turn on the radio.

2 Hold down **D.T./CLOCK** for a few

seconds until a beep sound.

3 Press **TUNE/TIME SET** + or - until the

correct hour appears.

To set the time rapidly, hold down **TUNE/TIME**.

