# Component System

Operating Instructions

FH-SR1D

File format

Xvid video

File format

Layer 3)2)

WMA<sup>3)</sup>

File format

supported.)

not supported.

Notes

AAC4)

JPEG

MPEG4 video

**Playable File Types** 

MP3 (MPEG1 Audio ".mp3"

Extensions

Extensions

".wma"

".m4a"

) Supported video and audio codecs are as

- Video codec: MPEG4 Simple Profile

2) MP3 PRO format is not supported.

PRO formats are not supported.

3) WMA DRM, WMA Lossless and WMA

4) AAC DRM and AAC Lossless formats are

• Some files may not play depending on the

format, the encoding method or recording

• Some USB devices may not work with this

• The system supports UDF (Universal Disk

• The system supports FAT12, FAT16 and

• The system supports ISO 9660 Level 1/

Level 2 and Joliet for DATA CD.

Format) for DATA DVD.

FAT32 for USB device

(AVC is not supported.)

— Audio codec: AAC-LC (HE-AAC is not

Extensions

".jpg" or ".jpeg

".mp4" or ".m4v"

".avi"

# **HI-FI** Carrying

CAUTION

WARNING

To reduce the risk of fire or electric shock, do

not expose this apparatus to dripping or splashing, and do not place objects filled with

liquids, such as vases, on the apparatus.

To reduce the risk of fire, do not cover the

ventilation opening of the apparatus with

Do not place the naked flame sources such as

As the main plug is used to disconnect the

unit from the mains, connect the unit to an

an abnormality in the unit, disconnect the

main plug from the AC outlet immediately.

Do not install the appliance in a confined

Do not expose batteries or apparatus with

battery-installed to excessive heat such as

space, such as a bookcase or built-in cabinet.

The unit is not disconnected from the mains

as long as it is connected to the AC outlet.

even if the unit itself has been turned off.

easily accessible AC outlet. Should you notice

newspapers, tablecloths, curtains, etc.

lighted candles on the apparatus.

The use of optical instruments with this product will increase eye hazard.



sunshine, fire or the like

This appliance CLASS 1 product. This narking is

located on the

rear exterior.

**Licences and Trademarks** 

• This system incorporates with Dolby Digital. Manufactured under license from Dolby "Dolby" and the double-D symbol are

trademarks of Dolby Laboratories. MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS • Windows Media is either a registered

trademark or trademark of Microsoft Corporation in the United States and/or other countries.

• This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft

• ABOUT MPEG-4 VISUAL: THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER FOR DECODING VIDEO

IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 NO LICENSE IS GRANTED OR SHALL

BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND MAY BE OBTAINED FROM MPEG LA, LLC. SEE http://www.mpegla.com/

COMMERCIAL USES AND LICENSING All other trademarks and registered trademarks are of their respective holders. In this manual, TM and ® marks are not

## **About this manual**

• "DVD" may be used as a general term for a DVD VIDEO, DVD-R, DVD-RW, DVD+R or DVD+RW.

• In this manual, CD-R or CD-RW is sometimes referred to as "DATA CD."

• In this manual, DVD-R, DVD-RW, DVD+R or DVD+RW is sometimes referred to as "DATA DVD." · This manual mainly explains operations

using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

# **Playable Discs**

DVD VIDEO DVD-ROM DVD-R\*/DVD-RW\*  $DVD + R^*/DVD + RW^*$ CD-DA (Music CD) CD-ROM CD-R\*/CD-RW\* VIDEO CD

\* If discs have not been correctly finalized, they will not be played back. For more information, refer to the operating instructions supplied with the recording

# Discs that cannot be played

• HD DVDs DVD-RAMs

• DVD Audio discs • PHOTO CDs Super Audio CDs

· Blu-ray Discs

 Data track of CD-Extras • Audio material side on DualDiscs • DVD-R/DVD-RW/DVD+R/DVD+RW in

VR (Video Recording) mode • CPRM (Content Protection for Recordable Media)-compatible DVD-R/RW containing content flagged as "Copy once."

### Music discs encoded with copyright protection technologies This product is designed to play back discs

that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

**Note on DualDiscs** 

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not

guaranteed. Note on playback operations of a DVD Some playback operations for a DVD may be

intentionally restricted by software producers. Since this system plays a DVD according to the disc contents, some playback features may not be available.

Note about double-layer DVDs The playback picture and sound may be momentarily interrupted when the layers

# Color System Setup

Region code (DVD VIDEO only)

Note about Multi Session CD

You can play only 1st session of a

multisession disc.

Your system has a region code printed on the rear of the unit and will only play a DVD

Change the color system if necessary from [PAL], [Multi] or [NTSC] after connecting your TV. The factory default of the color system is [PAL]. 1 Connect the power cord to a wall

outlet.

Press POWER on the unit to turn or 3 Press FUNCTION +/- repeatedly (or

press DVD/CD on the unit) to switch the function to DVD/CD. Playback starts automatically if a disc with an auto playback function is loaded. Press ■ twice to stop playback. Press SETUP in stop mode.

The setup menu appears. 5 Press ◆/→ repeatedly to select


Preference Page], then press 🕀. 6 Press ◆/◆ repeatedly to select [TV

Type], then press 🕀

7 Press ◆/◆ repeatedly to select [PAL], [Multi] or [NTSC], then press 🕀.

8 Press SETUP to turn off the Setup

color system as described above

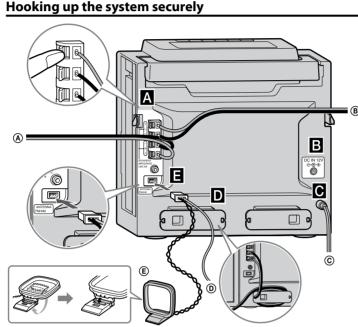

(A) To right speaker

**B** To left speaker

© To wall outlet D FM lead antenna

(Extended horizontally.) **E** AM loop antenna

**A** Speakers Insert only the stripped portion of the cords. B DC IN 12V jack

You can connect a DC power source to the DC IN 12V jack. If the AC power supply is cut off (because of a power failure, for example), the power source automatically switches to DC power. When the AC power supply resumes, the system returns to AC power operation.

• The outer electrode of the Attaching the speakers DC IN 12V jack is Align the grooves and slide the speaker unit - (minus) and the inner

one is + (plus). Be sure not to connect the DC IN 12V jack to a car cigarette lighter socket.

**C** Power Connect the power cord to a wall outlet.


Cable winders You can adjust the speaker cable length by wrapping the cables around the cable

**I**Antennas Find a location and orientation that provide

good reception when you set up the Keep the antennas away from the speaker

cords and the power cord to avoid picking up

down until it snaps into the locked position To detach the speaker, unlock the speaker unit using the unlock lever, and slide the speaker all the way up and away from the

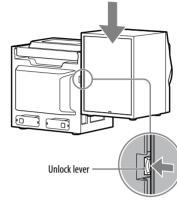

When connecting a video deck


Connecting your TV

supplied video cord.

Connect the video input jack of your TV to

the VIDEO OUT jack on the unit, using the

Connect the TV and the video deck using video and audio cords (not supplied) as shown below.

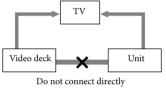

If you connect a video deck between this system and the TV, you may experience video leakage when watching the video signal from this system. Do not connect a video deck between this system and TV.

OPEN/ CLOSE TIME INPUT

REPEAT FUNCTION +

PROGRAM


4

EQ

# The display on the TV screen may be

interrupted momentarily after changing the

# **Parts and Controls**

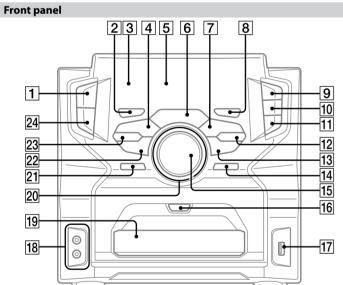

1 POWER button Press to turn on or off the system

2 EQ button Press to select a preset sound effect.

3 Remote sensor 4 ◀◀ (rewind) button Press to find a point in a track, file or

5 Display

chapter. - TUNING button Press to tune to a desired station

**AUDIO** Press to select an audio signal format when

Press to select a subtitle language when multilingual subtitles are available. **ANGLE** 

angles when multi-angles are recorded on a DVD VIDEO. **Number buttons** 

Press to enter numbers for selecting a title/ chapter, preset radio station, etc.

**DVD TOP MENU** 

Press to open the DVD top menu. **♂ DVD MENU** Press to open or close the DVD menu.

MUTING Press to mute or unmute the sound.

Press to enter/confirm the settings.

VOLUME +/-Press to adjust the volume.

Press to open or close the setup menu.

6 (play) button Press to start or re-start playback (resume

Press to find a point in a track, file or TUNING + button Press to tune to a desired station.

7 ►► (fast forward) button

8 DSGX button Press to turn on or off the DSGX effect.

9 USB button Press to select the USB function.

**Playback operation buttons** 

**◄I/I▶** (slow reverse/slow forward)

Press and hold to use the pink number

Press to watch in slow-motion when pressed

I◀◀ /▶▶I (previous/next)

Radio operation buttons

in pause mode.

(play)

II (pause)

PRESET +/-

TUNING +/-

(stop)

10 TUNER/BAND button

TAPE button
Press to select the tape function. 12 ►►I (next) button Press to select a track, file or chapter.

13 ■ (stop) button Press to stop and remember the stop

To re-start playback from the resume point (resume play), press ►.

15 **↑/**+/**→** button Press to move the cursor for item


16 OPEN/CLOSE button

component.

Press to open or close the disc tray. 17 ← (USB) port Jsed for connecting a USB device. 18 AUDIO IN (audio in L/R) jacks

20 VOLUME control Turn to adjust the volume. 21 AUDIO IN button

22 II (pause) button Press to pause playback. To resume Top panel

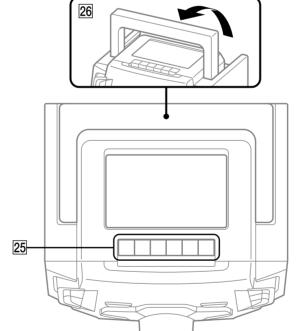

25 ● (record) button, ► (play) button, ◄ (rewind) button, ►► (fast forward) button, ■ (stop/eject) button, II (pause) button Press to operate the tape functions.

the TV signal and other input source.

5 6
DSGX FUNCTION 7 8 9
ZOOM ISS FM MODE/ IF BAND O SUBTITLE ANGLE PRESET+

II PRESET+

III ►►I TUNINGTUNING+
TUNING+ SONY SYSTEM AUDIO

**△** OPEN/CLOSE Press to open or close the disc tray.

SHIFT

Press to display or switch the time information during playback

TV INPUT Press to switch the TV's input source between Note that only Sony TVs can be operated using this remote

to an AM radio program. These may help reduce interference on some frequencies

12

(monaural or stereo).

multiple audio signals are available SUBTITLE

Press to switch to other viewing camera

When pressed during playback of JPEG image files, a thumbnail view (digest view) is displayed.

**↑/**₹/**+/**> Press to move the cursor for item selection. (enter)

SETUP Press to open or close the Display Menu.

# ◄◄/▶► (fast reverse/fast forward)

Playing a Disc 1 Press FUNCTION +/- repeatedly (or press DVD/CD on the unit) to select the DVD/CD function.

3 Place a disc in the disc tray, then press OPEN/CLOSE to close the disc



4 Press ► to start playback.

5 Press VOLUME +/- or turn VOLUME control on the unit to adjust the

### Playing Files on a Disc/USB Device

1 Press FUNCTION +/— repeatedly (or press DVD/CD or USB on the unit) to select the DVD/CD or USB function. • DVD/CD: For a disc. • USB: For a USB device.

10

For a disc Place a disc in the tray by pressing OPEN/CLOSE to open or close the disc

Connect a USB device to the ◆ (USB) USB device -

# displayed file list. Cursor position number

2 Load the source.

For a USB device

• To move the cursor: Press **♦** or **♦**. • To enter a folder:

# 3 Select a desired file from the

Cursor



Press ⊕ or • after moving the cursor to a desired folder. • To return to the parent folder: Press ⊕ or ◆ after moving the cursor

You can also check the current cursor position and its number from the following information that will appear on the display. [FLD] XXX:

Indicates that a folder is selected, representing its cursor position number (ex. "[FLD] 005"). [BACK]:

Indicates that •• is selected File format and XXX Indicates the file format of a currently selected file, representing its cursor

position number (ex. "WMA 002").

4 Press ► to start playback. 5 Press VOLUME +/- or turn VOLUME

> Playing a Tape Use buttons on the unit for tape operations. 1 Press FUNCTION +/- repeatedly (or press TAPE on the unit) to select the

11

2 Insert a tape. Open the cassette deck holder by pressing = and insert a tape into the cassette holder. 3 Press ► to start playback.

4 Press VOLUME +/- or turn VOLUME

control on the unit to adjust the

control on the unit to adjust the

Notes

• Make sure there is no slack in the tape to avoid damaging the tape or the tape deck.

• Make sure to press ■ after the tape has been wound or rewound to the end using the ◀◀/▶▶ button.

• Do not turn off the system during playback.

Recording onto a Tape

You can record just the portion you like from a sound source, including a connected audio component. Use a TYPE I (normal) tape for recording. Use buttons on the unit for tape operations.

1 Insert a recordable tape into the cassette holder with the side you want to record on facing up. 2 Prepare the recording source.

■ For a disc Place a disc in the disc tray. To record only your favourite tracks in desired order, press PROGRAM and program the tracks before recording (See

■ For a USB device Connect a USB device to the ← (USB)

"To play in programmed order" (page

For a radio station Tune to a desired station. ■ For an optional component 3 Start recording.
■ For a disc, a USB device and an

> ■ For a radio station To stop recording, press ■▲.

audio component

Sony recommend that you press II first, and then press ■ to avoid noise being recorded when you stop recording. • If a whistling noise occurs while recording

AM radio programs, press ISS repeatedly to select "ISS-1" or "ISS-2." This may reduce such noise and improve recording quality.

Start playback, and then press 

.

### CD function, or press to preset radio stations in the tuner function. REPEAT Press to activate repeat/shuffle playback mode.

TV I/() (on/standby)

using this remote.

Press to turn on or off the TV

Note that only Sony TVs can be operated

Press to activate program play in the DVD/

**FUNCTION** + Press to select a function in sequence. Press to select a sound effect.

DSGX Press to turn on or off the bass boost effect. **FUNCTION** -

Press to select a function in sequence. ZOOM Press to zoom in or zoom out of a displayed picture when viewing a DVD VIDEO, a VIDEO CD, an Xvid video, an MPEG4 video


or a JPEG image. You can move the magnified portion of the picture by pressing **↑/†**/**+**/**→**. ISS (Interference Suppress Switch)

Press to select "ISS-1" or "ISS-2" to suppress whistling noises when recording AM radio programs onto a tape.

FM MODE/IF BAND Press to select the FM reception mode Press to select a preset bandwidth from among "IFBAND-1," "IFBAND-2," "IFBAND-3" or "IFBAND-4" while listening

### Listening to Sound from an **Optional Component** You can listen to sound from a component

connected to the AUDIO IN jacks on the unit using an audio cord (not supplied). 1 Connect the audio output jacks of your component and the AUDIO IN jacks of this system using the audio

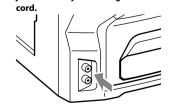

2 Press VOLUME — or turn VOLUME control on the unit counterclockwise to turn down the volume 3 Press FUNCTION +/- repeatedly (or

press AUDIO IN on the unit) to select

the AUDIO IN function. 4 Press VOLUME +/- or turn VOLUME control on the unit to adjust the

16 Continued —

13

fragmented. **Compatible USB devices** with this system Check the website below for the information about compatible USB devices.

<a href="http://www.sony-asia.com/support">http://www.sony-asia.com/support>

**Preparing the remote** 

©2011 Sony Corporation Printed in China

• The system can recognize the files or folders on a DATA DVD, DATA CD or

• It may take time to read files in the

- there are too many folders or files.

- the memory of the USB device is

- the memory capacity of the USB device

USB device as follows:

- up to 300 folders


up to 648 files

following cases:

is very large.

GB

Insert the two supplied R6 (size AA) batteries, matching the polarities as shown

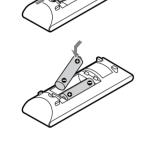


Press to select tuner function Press to select FM or AM reception mode.

PRESET + button Press to select a preset station.

14 ENTER button Press to enter/confirm the settings.

Used for connecting an optional audio

### playback, press the button again. 23 I◀◀ (previous) button Press to select a track, file or chapter. - PRESET button Press to select a preset radio station 24 DVD/CD button Press to select the DVD/CD function.

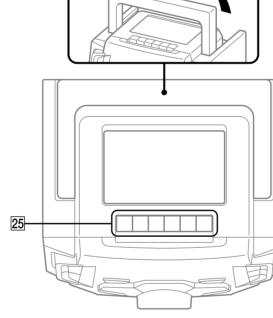

# To change angles (only for DVD

VIDEOs)

### Press ANGLE during playback to select the desired angle.

To display subtitles (only for

DVD VIDEOs) Press SUBTITLE during playback to select the desired subtitle language.

# To change the sound

Press AUDIO repeatedly during playback to select a desired audio format

■ When playing a DVD When playing a DVD VIDEO with multiple audio formats, you can change the audio format from PCM, Dolby Digital or MPEG audio. If the DVD VIDEO is recorded with multilingual tracks, you can also change the

### ■ When playing a CD/VCD

audio language.

You can select stereo sound or monaural sound settings for sound output from the speakers. In monaural sound settings, vou can select the right or left channel and lister to the selected channel sound through both the right and left speakers.

# To play a VIDEO CD with PBC

When you start playing a VIDEO CD with PBC (Playback control) functions, the PBC menu appears for your operation. To play without using PBC

### In stop mode, press SHIFT + number buttons to select the desired item number.

an MPEG4 video or a JPEG image.

magnification changes cyclically.

moved by pressing 4/4/4.

To magnify the displayed picture You can zoom in or zoom out of a displayed picture by pressing ZOOM when viewing a DVD VIDEO a VIDEO CD an Xvid video By repeatedly pressing the button, the The magnified portion of the picture can be

desired option ■ When playing a CD 1 Press TDISPLAY during playback. The selection display appears on the TV

Press and hold SHIFT, then press the

number buttons to jump to the

To search for a title/chapter/

1 Press "DISPLAY during playback.

2 Press **♦**/**♦** to select an option, then

The Display Menu appears on the TV

track/scene, etc.

press 🕀.

■ When playing a DVD/VCD

- 2 Press and hold SHIFT, then press the number buttons to select the desired
- track. ■ When playing an audio file/JPEG image file/video file
- 1 Press TDISPLAY during playback. The selection display appears on the TV
- 2 Press and hold SHIFT, then press the number buttons to select the desired

### To play in programmed order Selects the tracks to play in the order you

want (only for CD-DA discs). A maximum of 20 tracks can be programmed.

- 1 Press PROGRAM The Program Menu display appears on the TV screen
- 2 Press and hold SHIFT, then press the number buttons to enter a 2-digit track number for the track selection ("02" for track 2, for example).
- 3 Press ◆/+/+/→ to select [Start] to play

# To play repeatedly/shuffle, etc.

Press REPEAT repeatedly to select the desired playback mode. The selected mode appears on the display. "REP CHP": Repeats the current chapter.

- "REP TIT": Repeats the current title. "REP ALL": Repeats all titles. • "REP TRK": Repeats the current track.
- "REP OFF": The system returns to normal
- "SHUFFLE": Plays all tracks/chapters/files only once in random order.
- "SHUF REP": Repeats shuffle play · "FOLDER": Plays the current folder.
- "RANDOM": Repeatedly plays a randomly selected file from the current folder. In this mode, the same file may be played more

depending on the disc or file.

• "REP FLD": Repeats the current folder.

than twice.
• "SINGLE": Plays the current file. • "REP ONE": Repeats the current file.

Note The selectable modes and their order differ

### To view information about the disc/file You can check the playing time and

remaining time of the current title, chapter, track. You can also check the time nformation during playback of video files. Press TIME repeatedly during playback. Each time you press the button, the displayed item changes. Displayable items vary

depending on the playback source.

# **Adjusting the Sound**

• "DSGX ON": Generates more dynamic

To select an equalizer setting

Press EQ repeatedly during playback until

the desired mode appears on the display.

. "ROCK": Enhanced low and high range for

atmosphere. Great for action movies and

Recreates the atmosphere of a live club with

the artist just in front of you. Good for jazz

• "POP": Ideal for listening to pop music

• "FLAT": Flat and pure sound mode.

great sounding movie effects and

• "JAZZ": Clear mid and high range.

music and watching dramas.

rock music.

• "DSGX OFF": Turns off the DSGX

### To generate more dynamic sound

You can preset up to 20 FM stations and 10 AM stations. You can then tune to any of Press DSGX repeatedly during playback to those stations simply by selecting the turn on or off the DSGX (Dynamic Sound Generator X-tra) function.

corresponding preset number. 1 Select a radio band. Press FUNCTION +/- or TUNER/

To preset radio stations

Using a Tuner

BAND repeatedly to select "FM" or "AM."

2 Press and hold TUNING +/-2 seconds to start tuning until you find the desired radio station. "SEARCH +" or "SEARCH -" appears on the display until a radio station with

sufficient signal strength is found. 3 Press PROGRAM. "P 01" appears on the display.

4 Press PRESET +/- or SHIFT + number buttons to select a preset number.

"MONO." You will loose stereo effect, but 5 Press 🕀 to store the station reception will improve.

20

Tips

To listen to a preset radio station

1 Press FUNCTION +/— or TUNER/BAND

repeatedly to select "FM" or "AM."

2 Press PRESET +/- or SHIFT + number

3 Press VOLUME +/- or turn VOLUME

control on the unit to adjust the

• If interference occurs while tuning to an

AM station, press IF BAND repeatedly to

change the bandwidth. "IFBAND-1" is the

widest and "IFBAND-4" is the narrowest

usually results in better audio fidelity. while

narrower bandwidths result in dull sound

noise, press FM MODE repeatedly to select

bandwidth. Using wider bandwidths

• When an FM stereo program has static

due limited audio fidelity.

buttons to select a preset number.

# Using the Setup Display

You can make various adjustments to menu

- The default setting is underlined. 1 Press FUNCTION +/— repeatedly (or press DVD/CD or USB on the unit) to
- select the DVD/CD or USB function. 2 Press SETUP in stop mode.
- 3 Press ◆/→ to select one of the setup menu categories, then press (+).
- 4 Press ◆/◆ to select a setup item, then press → or ⊕. 5 Select the option you want to change
- and press 🕀 to confirm and go back to the previously selected item
- 6 Press SETUP to turn off the menu. Selected



Selected setting Options


# **General Setup Page**

17

screen TV or a TV with a wide mode function



black bands on the top and botto

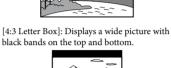




■ [OSD Lang] (On-Screen Display)

### ■ [Screen Saver] [On]: Turns on the screen saver when in stop,

### ■ [TV Display]

[16:9]: Select this when you connect a wide-

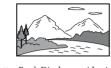



You can select the display language on the TV screen.

pause, no disc, or eject mode for more than [Off]: Turns off the screen saver.

# **Preference Page**

■ [TV Type] [PAL]: For a PAL-system TV. [Multi]: For a TV that is compatible with both PAL and NTSC.

[NTSC]: For an NTSC-system TV.

### You can select the preferred audio language for DVDs with multiple sound tracks.

■ [Subtitle] You can select the language of the subtitles recorded on a DVD VIDEO.

### ■ [Disc Menu] You can select the language for a disc's menu.

You can restrict playback of DVDs that have ratings. Scenes may be blocked or replaced with different scenes

- 1 Press ◆/◆ to select a rating level from [1] to [8] or [Off], then press 🕀.
- 2 Press the number buttons to enter your 6-digit password.

### ■ [Default] You can reset all the setup menu options and

your personal settings to the factory defaults, except for your password for the [Password] and [Parental] items. Press 
to confirm the default reset.

# **Password Setup Page**

the password:

18

■ [Password] The default password is "000000". To change

- 1 Press and hold SHIFT, and then enter "000000" or your last set 6-digit password in the [Old Password]
- 2 Press and hold SHIFT, and then enter a new 6-digit password in the [New Password1 section.
- 3 Press and hold SHIFT, and then enter a new 6-digit password again in the [Confirm PWD] section to confirm your entry.
- 4 Select [OK] to exit the menu.

# Precautions

# On placement

• At high volume, over long periods of time, the cabinet becomes hot to the touch. This is not a malfunction. However, touching the cabinet should be avoided. Do not place the system in a confined space where

- ventilation is poor as this may cause overheating. · Do not install the system near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust,
- mechanical vibration, or shock. • Do not install the system in an inclined position. It is designed to be operated in a horizontal position only.
- Do not place heavy objects on the system. On operation

- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the unit. Should this occur, the system may not operate properly. In this case, remove the disc and leave the system turned on for about half an hour until the moisture evaporates.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.

# On cleaning

19

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent such as alcohol or benzine. If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

On cleaning discs, disc/lens cleaners

Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfu On your TV's color

### IMPORTANT NOTICE Caution: If you leave the same image (a

still video image, an on-screen display image, etc.) displayed on your TV for an extended period of time, you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

### Before moving the system, make sure that there is no disc inserted, and remove the AC

On moving the system

power cord from the wall outlet. On handling discs • To keep the disc clean, handle the disc by

### its edge. Do not touch the surface. • Do not attach paper or tape to the disc

• Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.

On cleaning discs Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center outward to

• Do not use solvents such as benzine,

thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs. This system can only play back a standard circular disc. Using neither standard nor circular discs (e.g., card, heart, or star shape) may cause a malfunction. Do not use a disc that has a commercially

# On heat buildup

the edge.

• Although the system heats up during operation, this is not a malfunction.

available accessory attached, such as a label

 Place the system in a location with adequate ventilation to prevent heat buildup in the system.

• If you continuously use this system at a

high volume, the cabinet temperature rises considerably. To avoid burning yourself, do not touch the cabinet. • To prevent a malfunction, do not cover the

To prevent a tape from being

Break off the cassette's overwrite protection

tab from side A or B as illustrated below.

accidentally recorded over

Break off the cassette tab

About a tape longer than 90 minutes The use of the tape with longer than 90 minutes of play time is not recommended except for long, continuous recording or

Use a dry- or wet-type cleaning cassette (available separately) after every 10 hours of use, before you start an important recording, or after playing an old tape. Failure to clean the tape heads can cause degraded sound quality or an inability of the unit to record or

### play tapes.

Troubleshooting If you experience any of the following difficulties while using the system, check this troubleshooting guide to help remedy the

problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer. Note that if service personnel changes some

parts during repair, these parts may be If "PROTECT" appears on the display Immediately unplug the power cord, and check if the + and — speaker cords are

disappears. If you have checked this point and found it to be all right, reconnect the power cord. If the issue persists, contact your nearest Sonv dealer.

short-circuited after "PROTECT"

The power is not turned on. Check that the AC power cord is connected

"LOW PWR" appears on the display. The AC or DC power supply is insufficient.

# Picture

input jack.

There is no picture. • The video connecting cords are not

connected securely. • The unit is not connected to the correct TV

• The system is not selected via the video

input of the TV. • Check the output method on your system. Even though you set the aspect ratio in [TV Display] of [General Setup Page], the

picture does not fill the TV screen. The aspect ratio is fixed on the disc

21

Color irregularity occurs on the TV The system's speakers contain magnet parts, so magnetic distortion may occur. When color irregularity occurs on the TV screen,

- check the followi - Install the speakers at least 0.3 meters from
- your TV set. - If the color irregularity persists, turn off the TV set once, then turn it on after 15 to 30 minutes

— Reposition the speakers farther away from

[TV Type] can be reset according to the

- your TV set The [TV Type] setting does not match
- following procedure: 1. Press  $\triangleq$  to remove the disc 2. Press "DISPLAY.

# Sound

AUDIO.

• Clean the disc.

# 3. Press 🕀.

 $\bullet$  The speaker cords are not connected securely.

# [TV Type] will be reset.

# There is no sound. Severe hum or noise is

The sound loses stereo effect when you play a VIDEO CD or CD.

Set the audio setting to [Stereo] by pressing

Operation Radio stations cannot be tuned in.

Check that the antenna is connected securely Adjust the antenna or connect an external

- A disc does not play. • The region code on the DVD does not match the system. • Moisture has condensed inside the unit and
- about half an hour. A DATA CD/DATA DVD cannot be played. • The DATA CD is not recorded in ISO 9660

may cause damage to the lenses. Remove

the disc and leave the unit turned on for

• The DATA DVD is not recorded in UDF (Universal Disk Format). A JPEG image file cannot be played. It is larger than 2,048 (width)  $\times$  1,536

(height) pixels in normal mode, or more than

### 2,000,000 pixels in progressive format which is mainly used on the Internet websites. A video file cannot be played. The video file is larger than 720 (width) $\times$

Level 1/Level 2 or Joliet.

576 (height) pixels. A video file does not play smoothly. If the video file has been encoded with a bit rate of over 4 Mbps, playback may not be smooth. Use lower bit rates (max. 4 Mbps)

### when creating video files. The name of a folder or file is not

displayed correctly. The system can only display numbers and letters of the alphabet. Other characters are displayed as "\_".

# A disc does not start playing from the

• Resume play has been selected. During stop, press ■ and then start

22

stop, press and then start playback. • Shuffle play has been selected. During stop, press ■ and then start playback.

A disc cannot be ejected and "LOCKED" appears on the display. Contact your Sony dealer or local authorized Sony service facility.

The system does not work normally.

### Disconnect the AC power cord from the wall outlet, then reconnect after several minutes.

"OVERLOAD" appears on the display.

The USB device (audio file/JPEG image file/video file) cannot be played.

The sound exhibits excessive wow, flutter or dropout. Clean the tape heads. See "Cleaning the tape heads" (page 24) under "Precautions" for

**Specifications** 

Main unit Amplifier section

240 V, 50/60 Hz Power output (rated): 7.5 W + 7.5 W (at 6  $\Omega$ , 1 kHz, 1% THD)

RMS output power (reference): 15 W + 15 W (per channel at 6  $\Omega$ , 1 kHz)

VIDEO OUT: Max. output level 1 Vp-p, unbalanced,

(SS-CSR1D)

Outputs

Disc player section Compact disc and digital audio and

Laser Output\*: Less than 1000 μW \* This output is the value measurement at a distance of 200 mm from the objective lens surface on the Optical

Frequency respons DVD (PCM 48 kHz): 20 Hz — 20 kHz CD: 20 Hz - 20 kHz (±1 dB) Video color system format:

PAL

23

**USB** section

(USB) port: Maximum current: 500 mA

Recording system: 4-track 2-channel, stereo FM tuner section Tuning range:

87.5 MHz - 108.0 MHz (50 kHz step)

### Antenna: FM lead antenna AM tuner section Tuning range:

531 kHz - 1,602 kHz (9 kHz step) Antenna: AM loop antenna Speaker (SS-CSR1D)

Woofer: 100 mm, cone type Tweeter: 40 mm, cone type Rated impedance: 6 O Dimensions (W/H/D):

Mass: Approx. 2.3 kg

Quantity: 2 pieces

ventilation openings.

Cleaning the tape heads

About the setup menus The system will retain the current settings of the setup menus as a backup. However, the settings may return to their default settings during operations. If this happens, perform

Power requirements: AC 220 V - 240 V, 50/60 Hz or DC 12 V Power consumption: 35 W (AC power supply)/

Mass (excl. speakers): Approx. 4.2 kg Quantity of the main unit:

Remote Commander (1)

R6 (Size AA) batteries (2)

FM/AM antenna (1)

change without notice.

Tape deck section playback. The following measured at AC 220 V -Program play has been selected. During

**USB** device

Remove the USB device from the ← (USB) port. Make sure there is no problem with the USB device.

### • Files that are encrypted or protected by passwords, etc., cannot be played. • There is no playable file on the USB device.

### AUDIO IN: Voltage 700 mV, impedance 47 $k\Omega$

sync negative, load impedance 75  $\Omega$ SPEAKERS: Use only the supplied speakers

video system Laser Diode Properties **Emission Duration: Continuous** 

Pick-up Block with 7 mm aperture.

Speaker system 2-way, Bass reflex, Magnetically shielded

Approx. 200 mm  $\times$  230 mm  $\times$  230 mm

1 piece

Supplied accessories:

General

4.5 A (DC 12 V power supply) Dimensions (W/H/D) (excl. speakers): Approx. 260 mm  $\times$  250 mm  $\times$  288 mm

Design and specifications are subject to

25

29

26

30

27

31

To later reuse the tape for recording, cover the broken tab with adhesive tape.

24

setting again for each menu item.

28

http://www.sony.net/

32