

## DVD Recorder

Operating Instructions

RDR-GX220



## WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The power cord (mains lead) must be changed only at a qualified service shop.


CLASS 1 LASER PRODUCT  
LASER KLASSE 1  
クラス1レーザ製品

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the laser protective housing inside the enclosure.

## CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this DVD recorder is harmful to eyes, do not attempt to disassemble the cabinet.

Refer servicing to qualified personnel only.

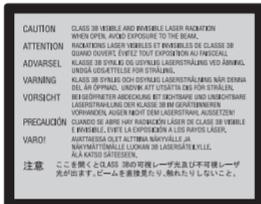

This label is located on the laser protective housing inside the enclosure.

## Precautions

- This unit operates on 220 – 240 V AC, 50/60 Hz. Check that the unit's operating voltage is identical with your local power supply.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Install this system so that the power cord (mains lead) can be unplugged from the wall socket immediately in the event of trouble.

G-CODE is a registered trademark of Gemstar Development Corporation. The G-CODE system is manufactured under license from Gemstar Development Corporation.



## Disposal of Old Electrical & Electronic Equipment

This symbol is applicable only in the European Union and other European countries with separate collection systems.

## Precautions

This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection cable shorter than 3 metres.

### On safety

Should any solid object or liquid fall into the cabinet, unplug the recorder and have it checked by qualified personnel before operating it any further.

### On power sources

- The recorder is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the recorder itself has been turned off.
- If you are not going to use the recorder for a long time, be sure to disconnect the recorder from the wall outlet. To disconnect the AC power cord (mains lead), grasp the plug itself; never pull the cord.

### On placement

- Place the recorder in a location with adequate ventilation to prevent heat build-up in the recorder.
- Do not place the recorder on a soft surface such as a rug that might block the ventilation holes.
- Do not place the recorder in a confined space such as a bookshelf or similar unit.
- Do not place the recorder in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Do not place the recorder in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the recorder and discs away from equipment with strong magnets, such as microwave ovens, or large loudspeakers.
- Do not place heavy objects on the recorder.

## On recording

Make trial recordings before making the actual recording.

## On compensation for lost recordings

Sony is not liable and will not compensate for any lost recordings or relevant losses, including when recordings are not made due to reasons including recorder failure, or when the contents of a recording are lost or damaged as a result of recorder failure or repair undertaken to the recorder. Sony will not restore, recover, or replicate the recorded contents under any circumstances.

## Copyrights

- Television programmes, films, video tapes, discs, and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmitter and/or programme owner.
- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

## Copy guard function

Since the recorder has a copy guard function, programmes received through an external tuner (not supplied) may contain copy protection signals (copy guard function) and as such may not be recordable, depending on the type of signal.

## IMPORTANT NOTICE

Caution: This recorder is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Plasma display panels and projection televisions are especially susceptible to this.

If you have any questions or problems concerning your recorder, please consult your nearest Sony dealer.

## About this manual

- In this manual, “disc” is used as a general reference for the DVDs or CDs unless otherwise specified by the text or illustrations.
- Icons, such as **DVD**, listed at the top of each explanation indicate what kind of media can be used with the function being explained.
- Instructions in this manual describe the controls on the remote. You can also use the controls on the recorder if they have the same or similar names as those on the remote.
- The on-screen display illustrations used in this manual may not match the graphics displayed on your TV screen.
- The explanations regarding DVDs in this manual refer to DVDs created on this recorder. The explanations do not apply to DVDs that are created on other recorders and played back on this recorder.

# Table of Contents

WARNING .....	2
Precautions .....	2
Quick Guide to Disc Types .....	7
Recordable and playable discs .....	7
Playable discs .....	9

## Hookups and Settings ..... 11

Hooking Up the Recorder .....	11
Step 1: Connecting the Aerial Cable .....	11
Step 2: Connecting the Video Cords .....	12
Step 3: Connecting the Audio Cords .....	14
Step 4: Connecting the AC Power Cord (Mains Lead) .....	15
Step 5: Preparing the Remote .....	16
Controlling TVs with the remote .....	16
If you have a Sony DVD player or more than one Sony DVD recorder .....	17
Changing programme positions of the recorder using the remote .....	18
Step 6: Easy Setup .....	19
Connecting a VCR or Similar Device .....	20
Connecting to the LINE 1 IN jacks .....	20
Connecting to the LINE 2 IN jacks on the front panel .....	21
Connecting to a Satellite or Digital Tuner .....	22

## Eight Basic Operations — Getting to Know Your DVD Recorder

1. Inserting a Disc .....	23
2. Recording a Programme .....	23
Checking the disc status while recording .....	24
3. Playing the Recorded Programme (Title List) .....	25
4. Displaying the Playing/Remaining Time and Play Information .....	27
Checking the playing/remaining time .....	28
Checking the remaining disc space .....	29
5. Changing the Name of a Recorded Programme .....	29
6. Labelling and Protecting a Disc .....	31
Labelling a disc .....	31
Protecting a disc .....	31
7. Playing the Disc on Other DVD Equipment (Finalise) .....	32
Finalising the disc using ▲ (open/close) button .....	32
Finalising the disc using “Disc Information” display .....	33
Unfinalising a disc .....	33
8. Reformatting a disc .....	34

<b>Timer Recording</b> .....	<b>35</b>
Before Recording .....	35
Recording mode .....	35
Recording stereo and bilingual programmes .....	36
Unrecordable pictures .....	36
Timer Recording (Standard/G-Code) .....	37
Setting the timer manually (Standard) .....	37
Recording TV programmes using the G-Code system .....	39
Using the Quick Timer function .....	40
Adjusting the recording picture quality and size .....	40
Creating chapters in a title .....	41
Checking/Changing/Canceling Timer Settings (Timer List) .....	41
Recording From Connected Equipment .....	43
Recording from connected equipment with a timer (Synchro Rec) .....	43
Recording from connected equipment without a timer .....	44
<hr/>	
<b>Playback</b> .....	<b>46</b>
Playing .....	46
Playback options .....	48
Adjusting the picture quality .....	49
Adjusting the delay between the picture and sound (AV SYNC) .....	50
Playing from the beginning of the programme you are recording (Chasing Playback) .....	50
Playing a previous recording while making another (Simultaneous Rec and Play) .....	50
Searching for a Title/Chapter/Track, etc. ....	51
Playing MP3 Audio Tracks, JPEG Image Files, or DivX <sup>®</sup> Video Files .....	52
About MP3 audio tracks, JPEG image files, and DivX video files .....	53
MP3 audio tracks, JPEG image files, or DivX video files that the recorder can play .....	54
About playback order of albums, tracks, and files .....	54
<hr/>	
<b>Erasing and Editing</b> .....	<b>56</b>
Before Editing .....	56
Erasing and Editing a Title .....	57
Erasing multiple titles (Erase Titles) .....	57
Erasing a section of a title (A-B Erase) .....	58
Creating chapters manually .....	58
Creating and Editing a Playlist .....	59
Moving a Playlist title (Change Order) .....	61
Combining multiple Playlist titles (Combine) .....	61
Dividing a Playlist title (Divide) .....	62
<hr/>	
<b>DV Dubbing</b> .....	<b>63</b>
Before DV Dubbing .....	63
Preparing for DV dubbing .....	63
Recording an Entire DV Format Tape (One Touch Dubbing) .....	65
Program Edit .....	65

<b>Settings and Adjustments</b> .....	<b>68</b>
Aerial Reception and Language Settings (Basic) .....	68
Channel Setting .....	68
Channel Sort .....	71
Auto Programme Title Labelling (TV Guide Page) .....	71
Clock .....	72
OSD (On-Screen Display) .....	72
Video Settings (Video) .....	73
Audio Settings (Audio) .....	75
Recording Settings (Recording) .....	77
Disc Settings (DVD) .....	78
Remote Control Settings/Factory Settings (Others) .....	80
Easy Setup (Resetting the Recorder) .....	81
<hr/>	
<b>Additional Information</b> .....	<b>82</b>
Troubleshooting .....	82
Self-diagnosis Function (When letters/numbers appear in the display) .....	87
Notes About This Recorder .....	88
Specifications .....	89
About i.LINK .....	90
Guide to Parts and Controls .....	91
Language Code List .....	94
Area Code .....	94
Index .....	95

# Quick Guide to Disc Types

## Recordable and playable discs

Type		Disc Logo	Icon used in this manual	Formatting (new discs)	Compatibility with other DVD players (finalising)
DVD+RW		 DVD+ReWritable  DVD+ReWritable		Automatically formatted in +VR mode (DVD+RW VIDEO)	Playable on DVD+RW compatible players (automatically finalised)
DVD-RW	VR mode	 DVD-RW		Format in VR mode (page 23)	Playable only on VR mode compatible players (finalisation unnecessary)
	Video mode	 DVD-RW 		Format in Video mode (page 23)	Playable on most DVD players (finalisation necessary) (page 32)
DVD+R		 DVD+R		Automatically formatted in +VR mode (DVD+R VIDEO)	Playable on most DVD players (finalisation necessary) (page 32)
DVD+R DL		 DVD+R DL		Automatically formatted in +VR mode (DVD+R VIDEO)	Playable on most DVD players (finalisation necessary) (page 32)
DVD-R	VR mode	 DVD-R R4.7		Format in VR mode (page 23) <sup>*1</sup> Formatting is performed using the "Disc Information" display.	Playable only on DVD-R in VR mode compatible players (finalisation necessary) (page 32)
	Video mode			Automatically formatted in Video mode	Playable on most DVD players (finalisation necessary) (page 32)

### **Usable disc versions (as of March 2006)**

- 8x-speed or slower DVD+RWs
- 6x-speed or slower DVD-RWs (Ver.1.1, Ver.1.2 with CPRM<sup>\*2</sup>)
- 16x-speed or slower DVD+Rs
- 16x-speed or slower DVD-Rs (Ver.2.0, Ver.2.1 with CPRM<sup>\*2</sup>)
- 8x-speed or slower DVD+R DL (Double Layer) discs

“DVD+RW,” “DVD-RW,” “DVD+R,” “DVD+R DL,” and “DVD-R” are trademarks.

<sup>\*1</sup> When an unformatted DVD-R is inserted into this recorder, it is automatically formatted in Video mode. To format a new DVD-R in VR mode, format using the “Disc Information” display (page 23).

<sup>\*2</sup> CPRM (Content Protection for Recordable Media) is a coding technology that protects copyrights for images.

### **Discs that cannot be recorded on**

- 8 cm discs
- DVD-R DL (Dual Layer) discs
- DVD-RAMs

## Playable discs

Type	Disc Logo	Icon used in this manual	Characteristics
DVD VIDEO			Discs such as movies that can be purchased or rented This recorder also recognizes DVD-RAMs and DVD-R Dual Layer (Video mode) discs as DVD Video compatible discs. If the DVD-RAM has a removable cartridge, remove the cartridge before playback.
VIDEO CD			VIDEO CDs or CD-Rs/CD-RWs in VIDEO CD/Super VIDEO CD format
CD			Music CDs or CD-Rs/CD-RWs in music CD format
DATA DVD	—		DVD+RWs/DVD+Rs/DVD-RWs/ DVD-Rs/DVD-ROMs containing either JPEG image files or DivX video files
DATA CD	—		CD-ROMs/CD-Rs/CD-RWs containing either MP3 audio tracks or JPEG image files or DivX video files
8 cm DVD+RW/ DVD-RW/DVD-R	—	—	8 cm DVD+RW, DVD-RW, and DVD-R recorded with a DVD video camera (Still images recorded with a DVD video camera cannot be played.)

“DVD VIDEO” and “CD” are trademarks.

DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

DivX<sup>®</sup> is a video file compression technology, developed by DivX, Inc.

### Discs that cannot be played

- PHOTO CDs
- CD-ROMs/CD-Rs/CD-RWs that are recorded in a format different from the formats mentioned in the table above.
- Data part of CD-Extras

- DVD-ROMs/DVD+RWs/DVD-RWs/  
DVD+Rs/DVD-Rs that do not contain DVD Video, DivX video or JPEG image files.
- DVD Audio discs
- Cartridge-only type DVD-RAMs and/or DVD-RAMs that do not contain DVD Video.
- HD layer on Super Audio CDs
- DVD VIDEOS with a different region code (page 10).
- DVDs that were recorded on a different recorder and not correctly finalised.

## Maximum recordable number of titles

Disc	Number of titles*
DVD-RW/DVD-R	99
DVD+RW/DVD+R	49
DVD+R DL	49

\* The maximum length for one title is eight hours.

## Note on playback operations of DVD VIDEOS/VIDEO CDs

Some playback operations of DVD VIDEOS/VIDEO CDs may be intentionally set by software producers. Since this recorder plays DVD VIDEOS/VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. See the instructions supplied with the DVD VIDEOS/VIDEO CDs.

## Region code (DVD VIDEO only)

Your recorder has a region code printed on the rear of the unit and will only play DVD VIDEOS (playback only) labelled with identical region codes. This system is used to protect copyrights.

DVD VIDEOS labelled  will also play on this recorder.

If you try to play any other DVD VIDEO, the message "Playback prohibited by region code." will appear on the TV screen.

Depending on the DVD VIDEO, no region code indication may be labelled even though playing the DVD VIDEO is prohibited by area restrictions.



Region code

## Music discs encoded with copyright protection technologies

This product is designed to play back discs that conform to the Compact Disc (CD) standard.

Recently, various music discs encoded with copyright protection technologies are being marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

## Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

## Notes

- Some DVD+RWs/DVD+Rs, DVD-RWs/DVD-Rs, DVD-RAMs, or CD-RWs/CD-Rs cannot be played on this recorder due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalised. For more information, see the operating instructions for the recording device.
- You cannot mix VR mode and Video mode on the same DVD-RW. To change the disc's format, reformat the disc (page 34). Note that the disc's contents will be erased after reformatting.
- You cannot shorten the time required for recording even with high-speed discs.
- It is recommended that you use discs with "For Video" printed on their packaging.
- You cannot add new recordings to DVD+Rs, DVD-Rs, or DVD-RWs (Video mode) that contain recordings made on other DVD equipment.
- In some cases, you may not be able to add new recordings to DVD+RWs that contain recordings made on other DVD equipment. If you do add a new recording, note that this recorder will rewrite the DVD menu.
- You cannot edit recordings on DVD+RWs, DVD-RWs (Video mode), DVD+Rs, or DVD-Rs that are made on other DVD equipment.
- If the disc contains PC data unrecognizable by this recorder, the data may be erased.
- You may not be able to record on some recordable discs, depending on the disc.

## Hooking Up the Recorder


Follow steps 1 through 6 to hook up and adjust the settings of the recorder. Do not connect the AC power cord (mains lead) until you reach “Step 4: Connecting the AC Power Cord (Mains Lead)” on page 15.

### Notes

- See “Specifications” (page 89) for a list of supplied accessories.
- Plug in cords securely to prevent unwanted noise.
- Refer to the instructions supplied with the components to be connected.
- You cannot connect this recorder to a TV that does not have a video input jack.
- Be sure to disconnect the AC power cord (mains lead) of each component before connecting.

## Step 1: Connecting the Aerial Cable


Connect the aerial cable by following the steps below.

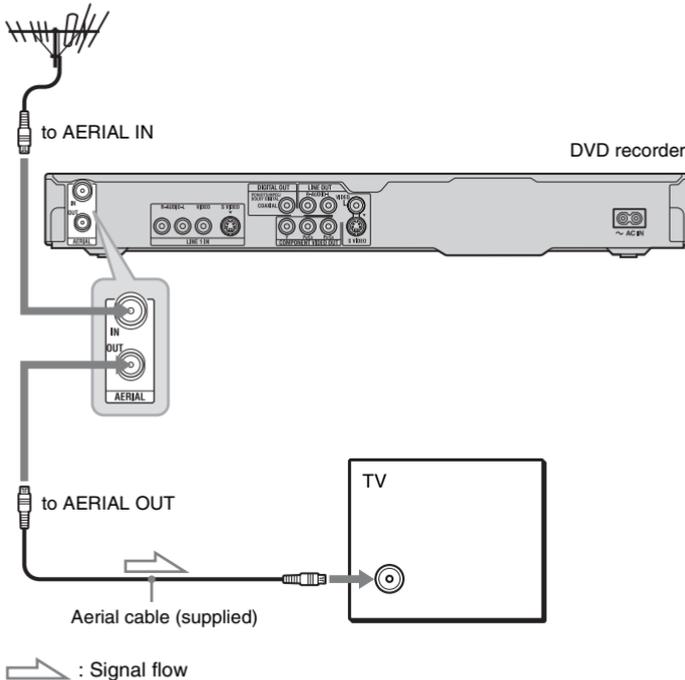

- 1** Disconnect the aerial cable from your TV, and connect it to AERIAL IN on the rear panel of the recorder.
- 2** Connect AERIAL OUT of the recorder to the aerial input of your TV using the supplied aerial cable.

## Step 2: Connecting the Video Cords

Select one of the following patterns, **A** through **C**, according to the input jack on your TV monitor, projector, or AV amplifier (receiver). This will enable you to view pictures.

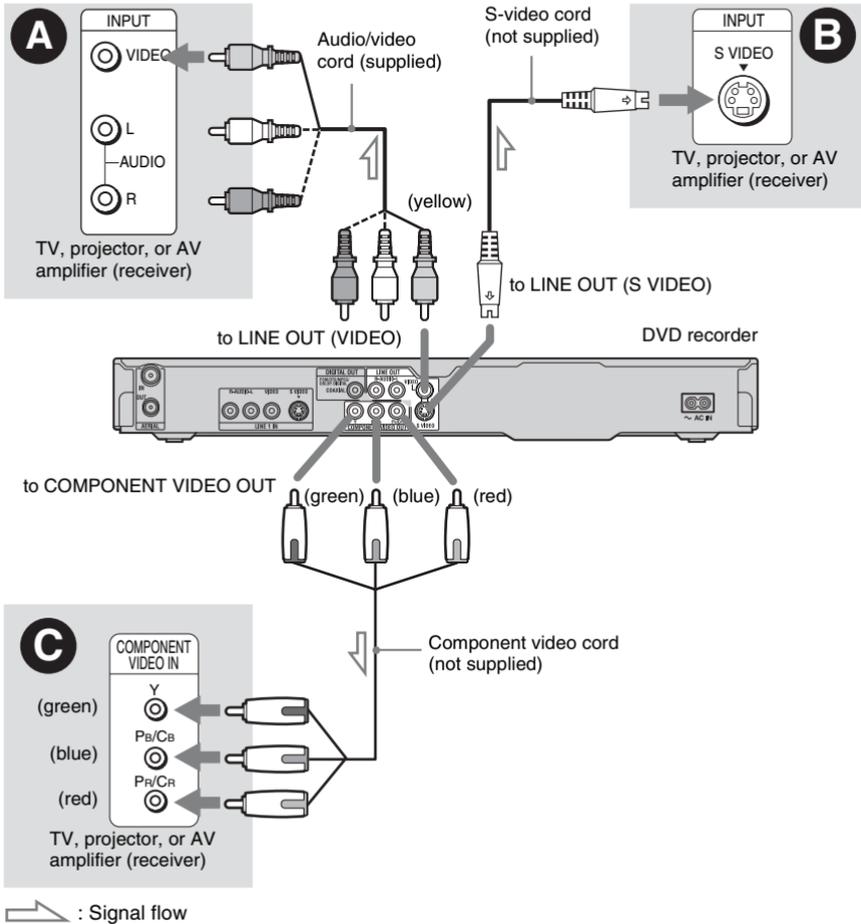

### **A** Video input jack

You will enjoy standard quality images.

### **B** S VIDEO input jack

You will enjoy high quality images.

### **C** Component video input jacks (Y, Pb/Cb, Pr/Cr)

You will enjoy accurate colour reproduction and high quality images.

If your TV accepts progressive 525p/625p format signals, use this connection. Then set "Progressive Output" of "Video Output" to "On" in the "Video" setup to send progressive video signals. For details, see "Progressive Output" on page 73.

**When playing “wide screen” images**

Some recorded images may not fit your TV screen. To change the picture size, see page 73.

**If you are connecting to a VCR**


Connect your VCR to the LINE IN jack on the recorder (page 20).

** Note**

Do not connect more than one type of video cord between the recorder and your TV at the same time.

## Step 3: Connecting the Audio Cords

Select one of the following patterns, **A** or **B**, according to the input jack on your TV monitor, projector, or AV amplifier (receiver). This will enable you to listen to sound.

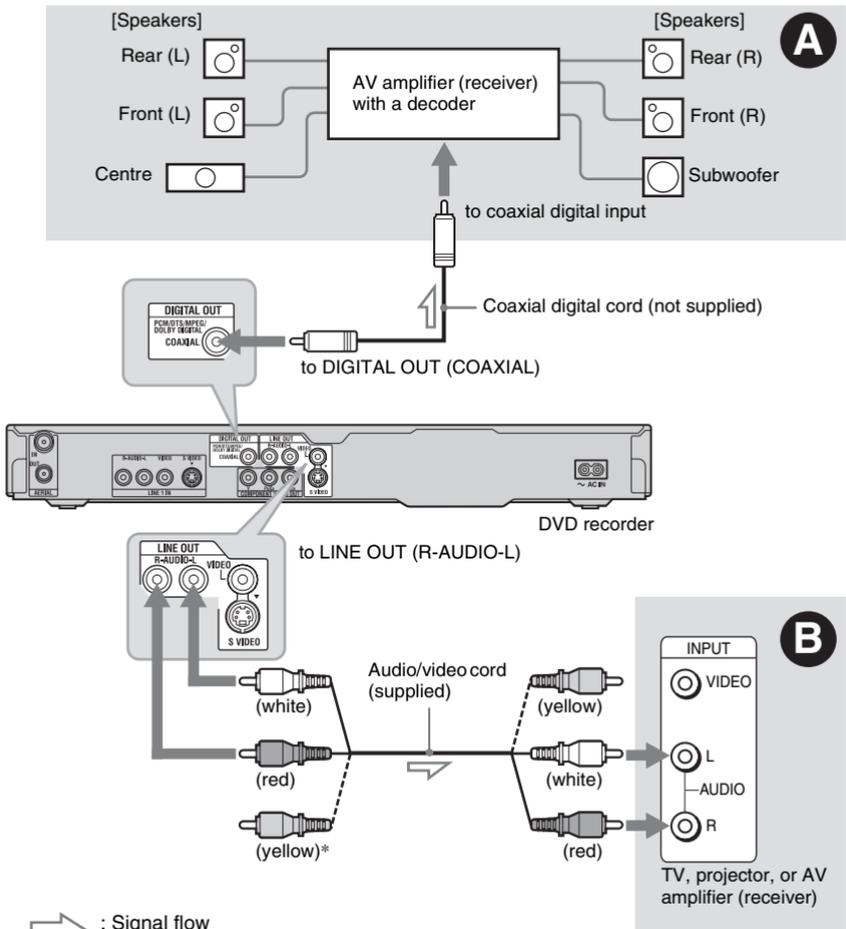

\* The yellow plug is used for video signals (page 12).

### **A** Digital audio input jack

If your AV amplifier (receiver) has a Dolby<sup>®</sup>1 Digital, DTS<sup>®</sup>2, or MPEG audio decoder and a digital input jack, use this connection. You can enjoy Dolby Digital (5.1ch), DTS (5.1ch), and MPEG audio (5.1ch) surround effects.

### **B** Audio L/R (left/right) input jacks

This connection will use your TV's or stereo amplifier's (receiver's) two speakers for sound.

#### **Hint**

For correct speaker location, see the operating instructions supplied with the connected components.

## Notes

- Do not connect your TV's audio output jacks to the LINE IN (R-AUDIO-L) jacks at the same time. This will cause unwanted noise to come from your TV's speakers.
- With connection **B**, do not connect the LINE IN (R-AUDIO-L) and LINE OUT (R-AUDIO-L) jacks to your TV's audio output jacks at the same time. This will cause unwanted noise to come from your TV's speakers.
- With connection **A**, after you have completed the connection, make the appropriate settings under "Easy Setup - Audio Connection" (page 19). Otherwise, no sound or a loud noise will come from your speakers.

\*1 Manufactured under license from Dolby Laboratories.


"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

\*2 "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

## Step 4: Connecting the AC Power Cord (Mains Lead)


Connect the supplied AC power cord (mains lead) to the AC IN terminal of the recorder. Then plug the recorder and TV power cords (mains leads) into the mains. After you connect the AC power cord (mains lead), **you must wait for a short while before operating the recorder.** You can operate the recorder once the front panel display lights up and the recorder enters standby mode.

If you connect additional equipment to this recorder (page 20), be sure to connect the AC power cord (mains lead) after all connections are complete.

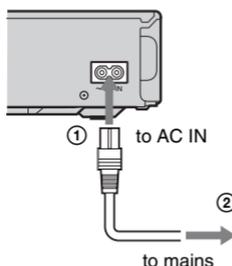

## Step 5: Preparing the Remote

You can control the recorder using the supplied remote. Insert two R6 (size AA) batteries by matching the ⊕ and ⊖ ends on the batteries to the markings inside the battery compartment. When using the remote, point it at the remote sensor  on the recorder.

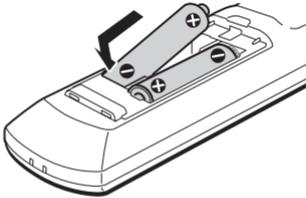

### Notes


- If the supplied remote interferes your other Sony DVD recorder or player, change the command mode number for this recorder (page 17).
- Use the batteries correctly to avoid possible leakage and corrosion. Should leakage occur, do not touch the liquid with bare hands. Observe the following:
  - Do not use a new battery with an old battery, or batteries of different manufacturers.
  - Do not attempt to recharge the batteries.
  - If you do not intend to use the remote for an extended period of time, remove the batteries.
  - If battery leakage occurs, wipe out any liquid inside the battery compartment, and insert new batteries.
- Do not expose the remote sensor (marked  on the front panel) to strong light, such as direct sunlight or a lighting apparatus. The recorder may not respond to the remote.

## Controlling TVs with the remote

You can adjust the remote's signal to control your TV.

### Notes

- Depending on the connected unit, you may not be able to control your TV with some or all of the buttons below.
- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote, the code number may be reset to the default setting. Set the appropriate code number again.

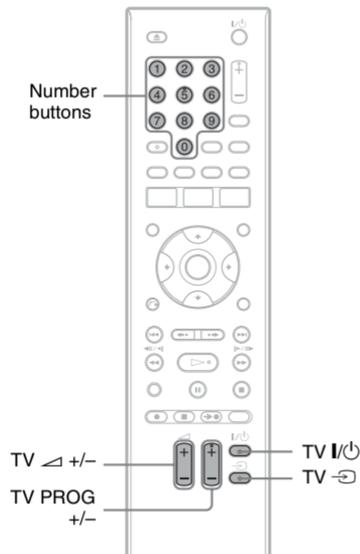

### 1 Hold down the TV I/⏻ button located at the bottom of the remote.

Do not press the I/⏻ button at the top of the remote.

### 2 With the TV I/⏻ button pressed down, enter the TV's manufacturer code using the number buttons.

For instance, to enter "09," press "0" then "9." After you enter the last number, release the TV I/⏻ button.

## Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.


Manufacturer	Code number
Sony	01 (default)
Hitachi	24
JVC	33
Panasonic	17, 49
Philips	06, 08
Samsung	71
Sanyo	25
Thomson	43
Toshiba	38

The remote performs the following:


Buttons	Operations
TV 	Turns your TV on or off
TV  (volume) +/-	Adjusts the volume of your TV
TV PROG +/-	Selects the programme position on your TV
TV 	Switches your TV's input source

## If you have a Sony DVD player or more than one Sony DVD recorder


If the supplied remote interferes with your other Sony DVD recorder or player, set the command mode number for this recorder and the supplied remote to one that differs from the other Sony DVD recorder or player after you have completed "Step 6: Easy Setup." The default command mode setting for this recorder and the supplied remote is DVD3.

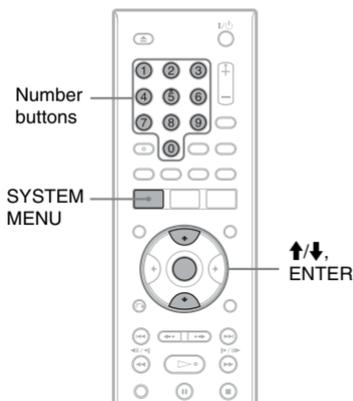


- 1 Check that "Easy Setup" (page 19) has been finished. If "Easy Setup" has not been finished, first perform "Easy Setup."**
- 2 Press SYSTEM MENU.**  
The System Menu appears.
- 3 Select "SETUP," and press ENTER.**

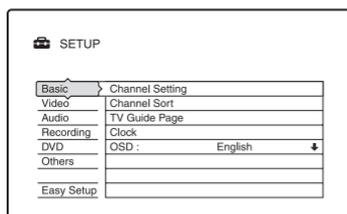

#### 4 Select “Others,” and press ENTER.

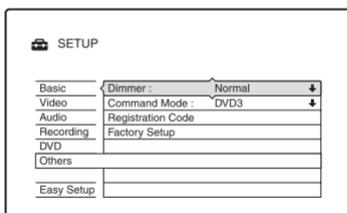

#### 5 Select “Command Mode,” and press ENTER.

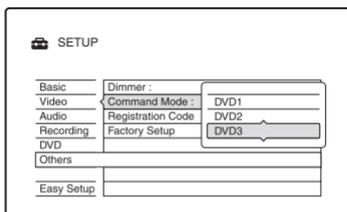

#### 6 Select a Command Mode (DVD1, DVD2, or DVD3), and press ENTER.

#### 7 Set the Command Mode for the remote so it matches the Command Mode for the recorder you set above.

Follow the steps below to set the Command Mode on the remote.

- 1 Hold down ENTER.
- 2 While holding down ENTER, enter the Command Mode code number using the number buttons.


Command Mode	Code number
DVD1	number button 1
DVD2	number button 2
DVD3	number button 3

- 3 Hold down both the number and ENTER buttons at the same time for more than three seconds.

If the Command Mode for the recorder has not been changed, set the Command Mode for the remote to the default setting of DVD3. If the Command Mode for the remote is changed to DVD1 or DVD2, you will be unable to operate this recorder.

### Changing programme positions of the recorder using the remote

You can change programme positions of the recorder using the number buttons.

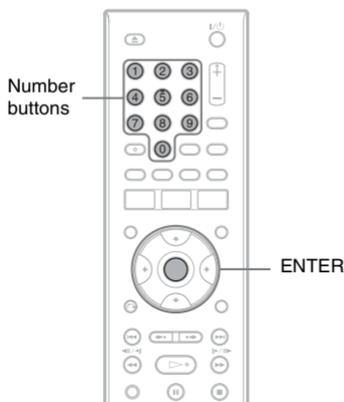


Example: for channel 50  
Press “5,” “0,” then press ENTER.

#### To check the Command Mode for the recorder

Press **■** on the recorder when the recorder is turned off. The Command Mode for the recorder appears in the front panel display.

## Step 6: Easy Setup

Make the basic adjustments by following the on-screen instructions in “Easy Setup.”

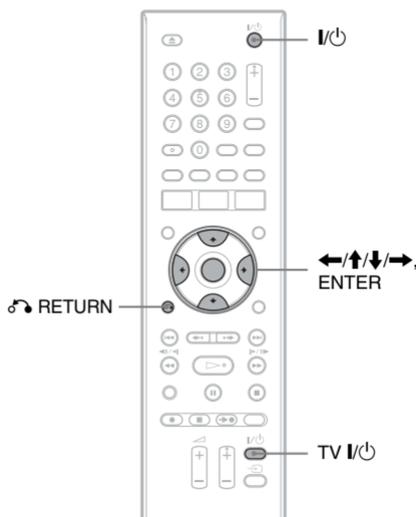

- 1 **Turn on the recorder and your TV. Then switch the input selector on your TV so that the signal from the recorder appears on your TV screen.**

The initial settings message appears.

- If this message does not appear, select “Easy Setup” from “SETUP” in the System Menu (“Settings and Adjustments” on page 68).

- 2 **Press ENTER.**

Follow the on-screen instructions to make the following settings.

### ◆ Easy Setup - OSD

Select a language for the on-screen displays.

### ◆ Easy Setup - Tuner System

Select “ELSE - English,” regardless of your area or language.

The programme position order will be set.

To set the programme positions manually, see page 68.

### ◆ Easy Setup - Clock

Set the clock manually using ←/↑/↓/→, and press ENTER.

### ◆ Easy Setup - TV Type (page 73)

If you have a wide-screen TV, select “16:9.” If you have a standard TV, select either “4:3 Letter Box” (shrink to fit) or “4:3 Pan Scan” (stretch to fit). This will determine how “wide-screen” images are displayed on your TV.

### ◆ Easy Setup - Audio Connection

If you connected an AV amplifier (receiver) using a coaxial cord, select “Yes : DIGITAL OUT” and set the digital output signal (page 75).

- 3 **Press ENTER when “Finish” appears.** “Easy Setup” is finished.

### To return to the previous step

Press ⏪ RETURN.

### 💡 Hints

- If your AV amplifier (receiver) has an MPEG audio decoder, set “MPEG” to “MPEG” (page 75).
- If you want to run “Easy Setup” again, select “Easy Setup” from “SETUP” in the System Menu (page 81).

# Connecting a VCR or Similar Device

After disconnecting the recorder's AC power cord (mains lead) from the mains, connect a VCR or similar recording device to the LINE IN jacks of this recorder.


Use the DV IN jack on the front panel if the equipment has a DV output jack (i.LINK jack) (page 63).

For details, refer to the instruction manual supplied with the connected equipment.

To record on this recorder, see "Recording from connected equipment without a timer" on page 44.

## Connecting to the LINE 1 IN jacks

Connect a VCR or similar recording device to the LINE 1 IN of this recorder. If the equipment has an S-video jack, you can use an S-video cord instead of an audio/video cord.

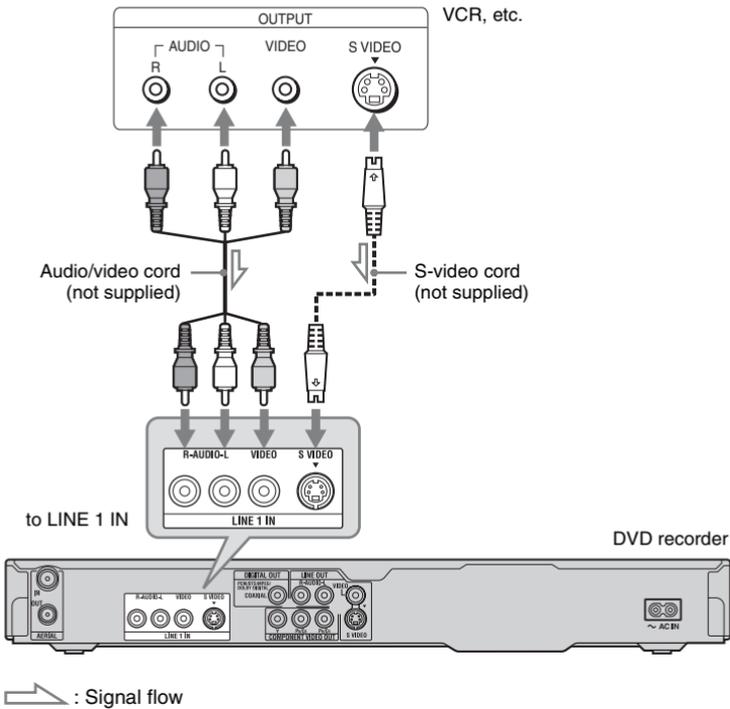


**Notes**

- Pictures containing copy protection signals that prohibit any copying cannot be recorded.
- If you pass the recorder signals through a VCR, you may not receive a clear image on your TV screen.




Be sure to connect your VCR to the DVD recorder and to your TV in the order shown below. To watch video tapes, watch the tapes through a second line input on your TV.

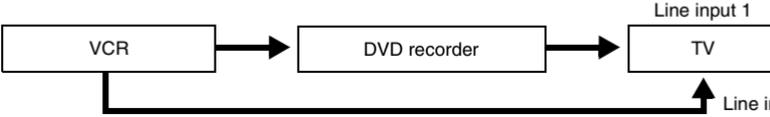

- If you disconnect the recorder's AC power cord (mains lead), you will not be able to view the signals from the connected VCR.

## Connecting to the LINE 2 IN jacks on the front panel

Connect a VCR or similar recording device to the LINE 2 IN jacks of this recorder. If the equipment has an S-video jack, you can use an S-video cord instead of an audio/video cord.

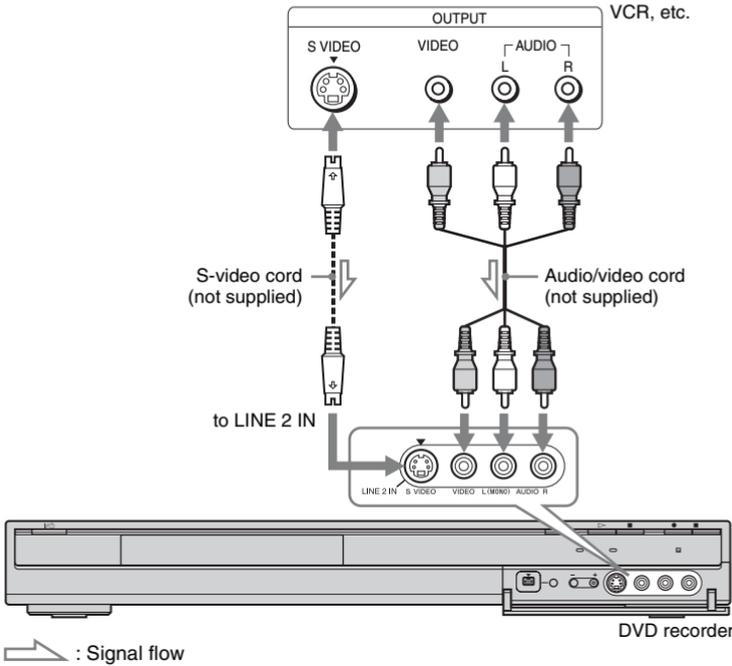

**Hint**


When the connected equipment outputs only monaural sound, connect to just the L(MONO) and VIDEO input jacks on the front of the recorder. Do not connect the R input jack.

**Notes**

- Do not connect the yellow LINE IN (VIDEO) jack when using an S-video cord.
- Do not connect the output jack of this recorder to another equipment's input jack with the other equipment's output jack connected to the input jack of this recorder. This may cause noise (feedback).
- Do not connect more than one type of video cord between the recorder and your TV at the same time.

# Connecting to a Satellite or Digital Tuner

Connect a satellite or digital tuner to this recorder using the LINE 1 IN jacks. Disconnect the recorder's AC power cord (mains lead) from the mains when connecting the tuner. To use the Synchro-Rec function, see below.

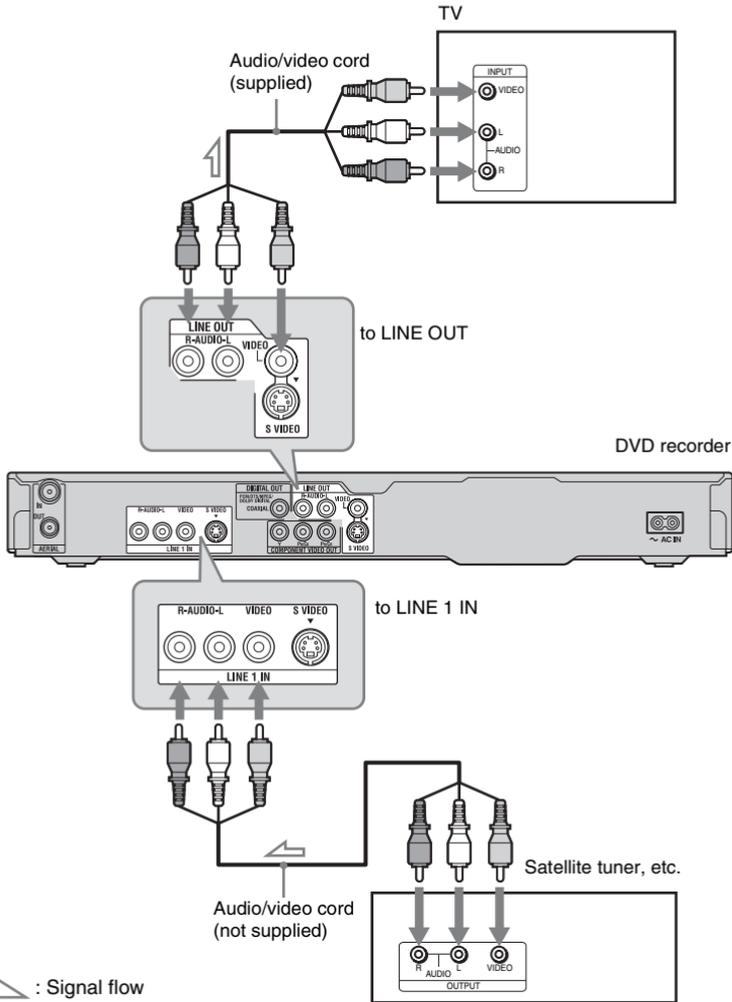

## If you want to use the Synchro Rec function


This connection is necessary to use the Synchro-Recording function. See "Recording from connected equipment with a timer (Synchro Rec)" on page 43.

## Notes

- Synchro-Recording does not work with some tuners. For details, see the tuner's operating instructions.
- If you disconnect the recorder's AC power cord (mains lead), you will not be able to view the signals from the connected tuner.

## 1. Inserting a Disc

+RW -RWVR -RWVideo +R -RVR  
-RVideo DVD VCD CD DATA DVD  
DATA CD

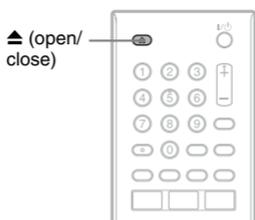

- 1 Press **▲** (open/close), and place a disc on the disc tray.



Recording/playing side facing down

- 2 Press **▲** (open/close) to close the disc tray.

Wait until “LOAD” disappears from the front panel display.

Unused DVDs are formatted automatically.


- For DVD-RW discs  
DVD-RWs are formatted in the recording format (VR mode or Video mode) set by “Format DVD-RW” in the “DVD” setup.
- For DVD-R discs  
DVD-Rs are automatically formatted in Video mode. To format an unused DVD-R in VR mode, format the disc using the “Disc Information” display (page 34) **before** you make a recording.

If the disc is recordable on this recorder, you can manually re-format the disc to make a blank disc (page 34).

## 2. Recording a Programme

+RW -RWVR -RWVideo +R -RVR  
-RVideo

This section introduces the basic operation to record a current TV programme to a disc (DVD). For an explanation of how to make timer recordings, see page 35.

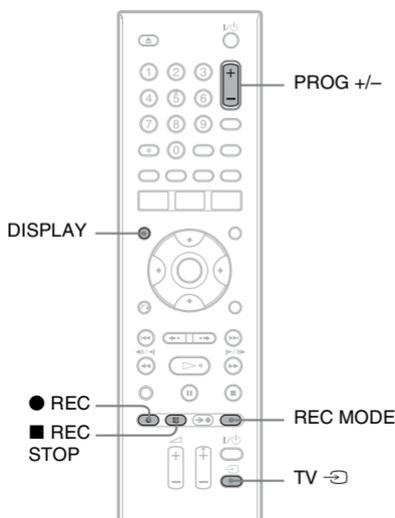

- 1 Insert a recordable DVD.
- 2 Press **PROG +/-** to select the programme position or input source you want to record.
- 3 Press **REC MODE** repeatedly to select the recording mode.

Each time you press the button, the display on the TV screen changes as follows:



For more details about the recording mode, see page 35.

## 4 Press ● REC.

Recording starts.

Recording stops automatically after 8 hours of continuous recording or when the DVD is full.

### To stop recording

Press ■ REC STOP.

Note that it may take a few seconds for recorder to stop recording.

### To watch another TV programme while recording

Set your TV to the TV input using the TV ↵ button (page 16).

### About the Teletext function

Some broadcast systems ensure a Teletext service\* in which the complete programmes and their data (title, date, programme position, recording start time etc.) are stored day by day. When recording a programme, the recorder automatically takes the programme name from the Teletext pages and stores it as the title name. For details, see “Auto Programme Title Labelling (TV Guide Page)” on page 71.

Note that the Teletext information will not appear on your TV screen. To view the Teletext information on your TV screen, press TV ↵ on the remote to switch the input source to your TV (page 16).

\* not available in some areas

### 🔦 Hint

If you do not want to watch TV while recording, you can turn off the TV. When using a decoder, make sure to leave it on.

### 🌀 Notes

- After pressing ● REC, it may take a short while to start recording.
- You cannot change the recording mode while recording.
- If there is a power failure, the programme you are recording may be erased.

## Checking the disc status while recording

You can check the recording information such as recording time or disc type.

### Press DISPLAY during recording.

The recording information appears.




- 1 Disc type/format
- 2 Recording status
- 3 Recording mode
- 4 Recording time

Press DISPLAY to turn off the display.

### 3. Playing the Recorded Programme (Title List)

+RW   -RWVR   -RWVideo   +R   -RVR  
-RVideo

To play a recorded title, select the title from the Title List.

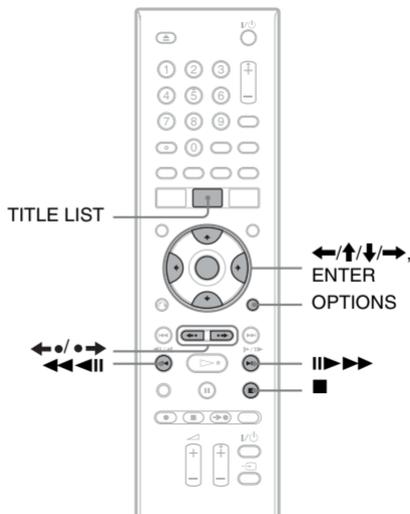


#### 1 Insert a DVD.

See “1. Inserting a Disc” on page 23. Playback starts automatically depending on the disc.

#### 2 Press TITLE LIST.

To show the extended Title List, press OPTIONS to select “Display List,” and press ENTER.

Title List with Thumbnail Images  
(Example: DVD+RW)

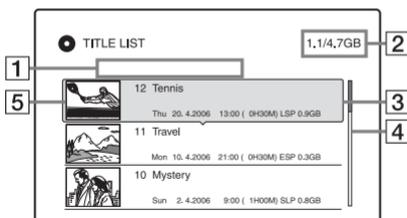

Extended Title List




- 1 Title type:  
Displays the title type (Original or Playlist) for DVD-RWs/DVD-Rs (VR mode).
- 2 Disc space (remainder/total)
- 3 Title information:  
Displays the title number, title name, and recording date. Title size is shown in the Thumbnail title list.  
● (red): Indicates that the title is currently being recorded.  
Ⓜ: Indicates the protected title.
- 4 Scroll bar:  
Appears when all of the titles do not fit on the list. To view the hidden titles, press ↑/↓.
- 5 Title's thumbnail picture:  
The still images for each title are displayed.

### 3 Select a title, and press ENTER.

The sub-menu appears.

The sub-menu displays options applicable only to the selected item. The displayed options differ depending upon the model, situation, and disc type.

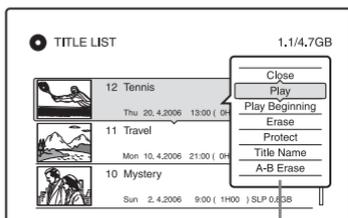

Sub-menu

### 4 Select "Play," and press ENTER.

Playback starts from the selected title.

#### To stop playback

Press ■ (stop).

#### To scroll the list display by page (Page mode)

Press ◀•/•▶ while the list display is turned on. Each time you press ◀•/•▶, the entire Title List changes to the next/previous page of titles.

#### About the Title List for DVD-RWs/DVD-Rs (VR mode)

You can switch the Title List to show Original or Playlist titles.

While the Title List menu is turned on, press ◀•/•▶.

#### To change the title order (Sort)

While the Title List menu is turned on, press OPTIONS to select "Sort Titles." Press ↑/↓ to select the item, and press ENTER.

Order	Sorted
By Date	In order of when the titles were recorded. The title that is recorded most recently is listed at the top.
By Title	In alphabetical order.
By Number	In order of recorded title number.

#### To change a title thumbnail picture (Thumbnail) (DVD-RW/DVD-R in VR mode only)

You can select a favourite scene for the thumbnail picture shown in the Title List menu.

#### 1 Press TITLE LIST.

Press ◀•/•▶ to switch the Title Lists, if necessary.

#### 2 Select a title, and press ENTER.

The sub-menu appears.

#### 3 Select "Set Thumbnail," and press ENTER.

The display for setting the thumbnail point appears and the title starts to play.

#### 4 While watching the playback picture, press ◀◀/▶▶ to select the scene you want to set for a thumbnail picture, and press ENTER.

Playback pauses.

#### 5 Press ENTER if the scene is correct.

If the scene is incorrect, press ◀◀/▶▶ to select the scene you want to set for a thumbnail picture, and press ENTER. The display asks for confirmation.

- To change the thumbnail, press ↑.

#### 6 Select "OK," and press ENTER.

The scene is set for the title's thumbnail picture.

#### To turn off the Title List

Press TITLE LIST.

#### 💡 Hints

- After recording, the first scene of the recording (the title) is automatically set as the thumbnail picture.
- You can select "TITLE LIST" from the System Menu.


#### ⚡ Notes

- The title names may not appear for DVDs created on other DVD recorders.
- It may take a few seconds for the thumbnail pictures to be displayed.
- After editing, the title thumbnail picture may change to the first scene of the recording (title).

## 4. Displaying the Playing/Remaining Time and Play Information




You can check the playing time and remaining time of the current title, chapter, track, or disc. Also, you can check the disc name recorded on the DVD/CD.

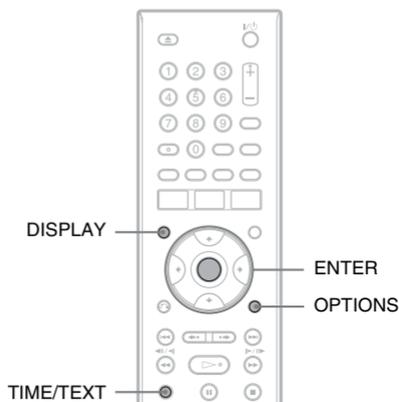


### Press DISPLAY.

The displays differ depending on the disc type or playing status.

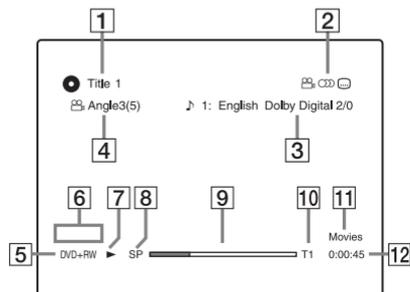

- 1** Title number/name  
(Shows either track number, track name, scene number, or file name for CDs, VIDEO CDs, DATA DVDs, or DATA CDs.)

- 2** Available functions for DVD VIDEOS (Angle/ audio/ subtitle, etc.), or playback data for DATA DVDs and DATA CDs
- 3** The current selected function or audio setting (appears only temporarily)  
Example: Dolby Digital 5.1 ch

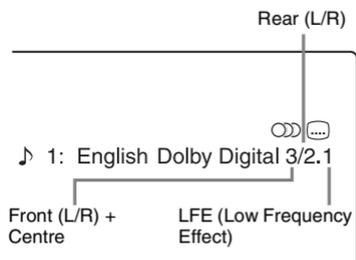

- 4** The current selected angle
- 5** Disc type<sup>\*1</sup>/format (page 7)
- 6** Title type (only appears for Playlists)
- 7** Play mode
- 8** Recording mode (page 35)
- 9** Playing status bar<sup>\*2</sup>
- 10** Title number (chapter number<sup>\*3</sup>)  
(page 51)  
(Shows either track number, scene number, album number<sup>\*3</sup>, or file number for CDs, VIDEO CDs, DATA DVDs, or DATA CDs.)
- 11** Album name appears for DATA DVDs or DATA CDs.  
For CDs with CD text, press TIME/TEXT.

- 12** Playing time (remaining time<sup>\*3</sup>)

<sup>\*1</sup> Displays Super VIDEO CDs as "SVCD." DATA CDs as "CD" and DATA DVDs as "DVD."

<sup>\*2</sup> Does not appear with VIDEO CDs, DATA DVDs, and DATA CDs.

<sup>\*3</sup> Displayed when you press TIME/TEXT repeatedly.

## 💡 Hints

- If “DTS” of “Audio Connection” is set to “Off” in the “Audio” setup, the DTS track selection option will not appear on the screen even if the disc contains DTS tracks (page 75).
- When “Auto Display” is set to “On” (default) in the “Video” setup (page 74), information automatically appears on the screen when the recorder is operated.

## 🔊 Note

Playing time of MP3 audio tracks may not be displayed correctly.

## Checking the playing/ remaining time

You can view the playing or time information displayed on the front panel display.

### Press TIME/TEXT repeatedly.

The displays differ depending on the disc type or playing status.

Example: When playing a DVD

Playing time and number of the current title

T1 1:03:24



Remaining time of the current title

T - 1:15:36



Playing time and number of the current chapter

C2 0:22:30



Remaining time of the current chapter

C - 0:13:20

Example: When playing a VIDEO CD

Playing time and number of the current scene or track

3 2:15

Example: When playing a CD  
Track playing time and the current track/index number



Remaining time of the current track



Playing time of the disc



Remaining time of the disc



CD text (when available)

Example: When playing an MP3 audio track  
Playing time and number of the current track



Current album number

Example: When viewing a JPEG image  
Current file number and total number of files in the current album



Current album number and total number of albums

Example: When playing a DivX video file  
Current file number and playing time of the current file



Current album number

## 🔊 Notes

- The recorder can only display the first level of a CD's text, such as the disc name.
- Playing time of MP3 audio tracks may not be displayed correctly.

## Checking the remaining disc space

You can check the remaining disc space using the “Disc Information” display.


### 1 Insert a disc.

See “1. Inserting a Disc” on page 23.

### 2 Press **OPTIONS** to select “Disc Information,” and press **ENTER**.

The “Disc Information” display appears. Available settings differ depending on the disc type.

Example: When a DVD+RW is inserted.

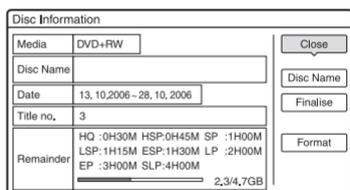

“Remainder” (approximate)

- The remaining recording time in each of the recording modes
- Disc space bar
- Remaining disc space/total disc space


### Hint

To increase disc space, see “To open up disc space” (page 56).

## 5. Changing the Name of a Recorded Programme



You can label a DVD, title, or programme by entering characters. You can enter up to 64 characters for a title or disc name, but the actual number of characters displayed in the menus such as the Title List will vary. The steps below explain how to change the name of the recorded programme.

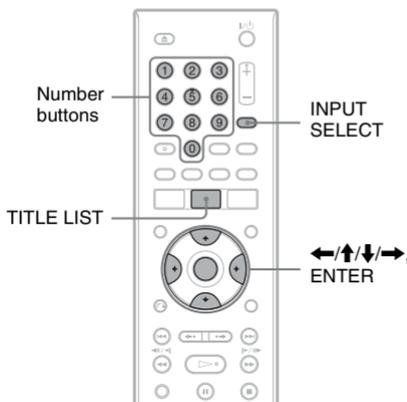

### 1 Press **TITLE LIST**.

### 2 Select a title, and press **ENTER**.

The sub-menu appears.

### 3 Select “Title Name,” and press **ENTER**.

The display for entering characters appears.


### 4 Press **←/↑/↓/→** to move the cursor to the right of the display and select “A” (upper-case), “a” (lower-case), or “Symbol,” and press **ENTER**.

The characters for the selected type are displayed.

## 5 Press ←/↑/↓/→ to select the character you want to enter, and press ENTER.

The selected character appears at the top of the display.

Example: Input Title Name

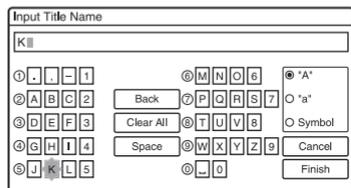

The type of characters will change according to the language you select in “Easy Setup.” Some languages allow you to enter an accent mark.


To enter a letter with an accent mark, select an accent followed by the letter.

Example: Select “ ` ” and then “a” to enter “à.”

To insert a space, select “Space.”

## 6 Repeat steps 4 and 5 to enter the remaining characters.

Input row

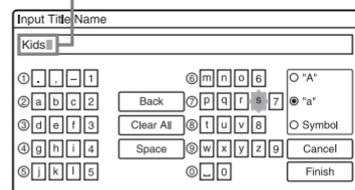

To erase a character, move the cursor to the right of the character at the input row. Select “Back” and press ENTER.

To insert a character, move the cursor to the right of the point where you want to insert the character. Select the character and press ENTER.

To erase all of the characters, select “Clear All” and press ENTER.

## 7 Select “Finish,” and press ENTER.

To cancel the setting, select “Cancel.”

## To use the number buttons

You can also use the number buttons to enter characters. Refer to the number next to each row of letters on your TV screen.

1 In step 5 above, press a number button repeatedly to select a character.

Example:

Press the number 3 button once to enter

“D.”

Press the number 3 button three times to enter “F.”

2 Press ENTER and select the next character.


3 Select “Finish” and press ENTER.

## Hint

You can switch between “A” (upper-case), “a” (lower-case), or “Symbol” by pressing INPUT SELECT.

## 6. Labelling and Protecting a Disc

You can execute options effective for the entire disc using the “Disc Information” display.

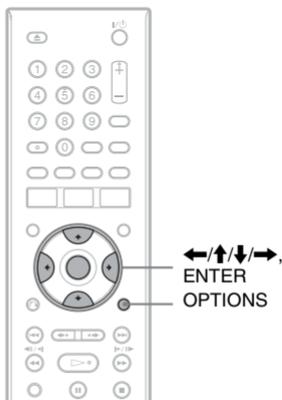

### Labelling a disc

+RW -RWVR -RWVideo +R -RVR  
-RVideo

- 1 Insert a disc.**  
See “1. Inserting a Disc” on page 23.
- 2 Press OPTIONS to select “Disc Information,” and press ENTER.**  
The “Disc Information” display appears. Available settings differ depending on the disc type.  
Example: When the inserted disc is a DVD+RW.

Disc Information		Close
Media	DVD+RW	Disc Name
Disc Name		Finalise
Date	13.10.2006 - 28.10.2006	Format
Title no.	3	
Remainder	HQ :0H30M HSP:0H45M SP :1H00M LSP:1H15M ESP:1H30M LP :2H00M EP :3H00M SLP:4H00M 2,3/4,7GB	

- 3 Select “Disc Name,” and press ENTER.**  
Enter the disc name in the “Input Disc Name” display (page 29).

### Note

You can enter up to 64 characters for a DVD’s disc name. The disc name may not appear when the disc is played on other DVD equipment.

### Protecting a disc

-RWVR -RVR

- 1 Insert a disc.**  
See “1. Inserting a Disc” on page 23.
- 2 Press OPTIONS to select “Disc Information,” and press ENTER.**  
The “Disc Information” display appears. Available settings differ depending on the disc type.  
Example: When the inserted disc is a DVD-RW (VR mode).

Disc Information				Close
Media	DVD-RW	Format	VR	Disc Name
Disc Name		Date	13.10.2006 - 28.10.2006	Protect Disc
Date		Title no.	Original 3 / Playlist 5	Finalise
Title no.		Remainder	HQ :0H30M HSP:0H45M SP :1H00M LSP:1H15M ESP:1H30M LP :2H00M EP :3H00M SLP:4H00M 2,3/4,7GB	Format

- 1** “On”/“Off”: Indicates whether protection is set (DVD-RW/DVD-R in VR mode only)
- 2** “Protect Disc”
- 3 Select “Protect Disc,” and press ENTER.**
- 4 Select “Protect,” and press ENTER.**

### To cancel the protection

Select “Unprotected” in step 4.

### Hint

You can set protection for individual titles (page 57).

## 7. Playing the Disc on Other DVD Equipment (Finalise)

**+RW** **-RWVR** **-RWVideo** **+R** **-RVR**  
**-RVideo**

Finalising is necessary when you play discs recorded with this recorder on other DVD equipment.

When you finalise a DVD+RW, DVD-RW (Video mode), DVD+R, or DVD-R (Video mode), a DVD menu will be automatically created, which can be displayed on other DVD equipment.

Before finalising, check the differences between the disc types in the table below.

### Differences between the disc types

**+RW**

Discs are automatically finalised when removed from the recorder. However, you may need to finalise the disc for certain DVD equipment, or if the recording time is short. You can edit or record on the disc even after finalising.

**-RWVR**

Finalising is unnecessary when playing a disc on VR format compatible equipment. Even if your other DVD equipment is VR format compatible, you may need to finalise the disc, especially if the recording time is short. You can edit or record on the disc even after finalising.

**-RWVideo**

Finalising is necessary when playing on any equipment other than this recorder. After finalising, you cannot edit or record on the disc. If you want to record on it again, unfinalise (page 33) or reformat the disc (page 34). However, if you reformat the disc, all recorded contents will be erased.

**-RVR**


Finalising is necessary. The disc can be played only on equipment that supports DVD-R in VR mode. After finalising you cannot edit or record on the disc using this recorder.

**+R**

**-RVideo**

Finalising is necessary when playing on any equipment other than this recorder.

After finalising, you cannot edit or record on the disc.

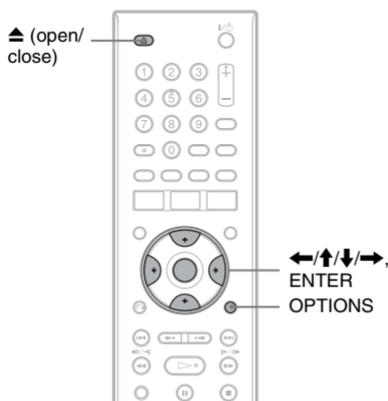


### Finalising the disc using ▲ (open/close) button

- 1 Make a recording.**  
See "2. Recording a Programme" on page 23.
- 2 Press ▲ (open/close).**  
The display shows the approximate time required for finalising and asks for confirmation. For DVD+RWs, the recorder automatically starts finalising the disc. After finalising, the disc will be ejected automatically.
- 3 Select "OK," and press ENTER.**  
The recorder starts finalising the disc. After finalising, the disc will be ejected automatically.

## Finalising the disc using “Disc Information” display

- 1 Insert a disc.**  
See “1. Inserting a Disc” on page 23.
- 2 Press **OPTIONS** to select “Disc Information,” and press **ENTER**.**  
The “Disc Information” display appears.
- 3 Select “Finalise,” and press **ENTER**.**  
The display shows the approximate time required for finalising and asks for confirmation.

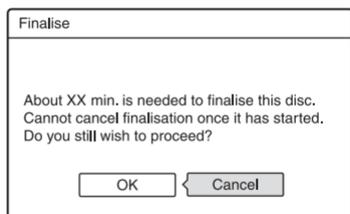

- 4 Select “OK,” and press **ENTER**.**  
The recorder starts finalising the disc.

### Hint

You can check whether the disc has been finalised or not. If you cannot select “Finalise” in step 3 above, the disc has already been finalised.

### Notes

- Depending on the condition of the disc, recording, or the DVD equipment, discs may not play even if the discs are finalised.
- The recorder may not be able to finalise the disc if it was recorded on another recorder.

## Unfinalising a disc

**-RWVR** **-RWvideo**

### For DVD-RWs (Video mode)

DVD-RWs (Video mode) that have been finalised to prohibit additional recording or editing can be unfinalised to allow further recording or editing.

### For DVD-RWs (VR mode)

If you cannot record or edit on a DVD-RW (VR mode) that has been finalised with other DVD equipment, unfinalise the disc.

### Note


The recorder is not able to unfinalise DVD-RWs (Video mode) that have been finalised on another recorder.

- 1 Insert a disc.**  
See “1. Inserting a Disc” on page 23.
- 2 Press **OPTIONS** to select “Disc Information,” and press **ENTER**.**  
The “Disc Information” display appears.
- 3 Select “Unfinalise,” and press **ENTER**.**  
The recorder starts unfinalising the disc. Unfinalising may take several minutes.

## 8. Reformatting a disc

+RW -RWVR -RWVideo

New discs are automatically formatted when inserted. If necessary, you can manually reformat a DVD+RW or DVD-RW disc to make a blank disc. For DVD-RWs, you can select a recording format (VR mode or Video mode) according to your needs (page 56).

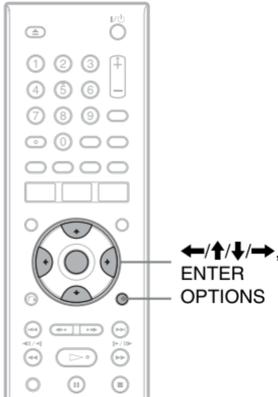

### Note

On this model, 1 GB (read “gigabyte”) is equivalent to 1 billion bytes. The larger the number, the larger the disc space.

### 1 Insert a disc.

See “1. Inserting a Disc” on page 23.

### 2 Press **OPTIONS** to select “Disc Information,” and press **ENTER**.

Example: When a DVD+RW is inserted.

Disc Information	
Media	DVD+RW
Disc Name	
Date	13.10.2006 - 28.10.2006
Title no.	3
Remainder	HQ :0H30M HSP:0H45M SP :1H00M LSP:1H15M ESP:1H30M LP :2H00M EP :3H00M SLP:4H00M 2,3/4,7GB

Buttons: Close, Disc Name, Finalise, Format

### 3 Select “Format,” and press **ENTER**.

### 4 Select “OK,” and press **ENTER**.

For DVD-RWs and unrecorded DVD-Rs (Video mode), select “VR” or “Video,” and press **ENTER**.

All contents on the disc are erased.

### Hint

By reformatting, you can change the recording format on DVD-RWs, or record again on DVD-RWs that have been finalised.

# Before Recording

## Before you start recording...

- Check that the disc has enough available space for the recording (page 29). For DVD+RWs and DVD-RWs, you can free up disc space by erasing titles (page 56).
- Adjust the recording picture quality and picture size if necessary (page 40).

### Hint

Timer recordings will be made regardless whether or not the recorder is turned on. You can turn off the recorder without affecting the recording even after recording starts.

### Note

To play a recorded disc on other DVD equipment, finalise the disc (page 32).

## Recording mode

Like the standard ×3 recording modes of video tapes, you can select the desired recording mode using the REC MODE button.

Recording modes with higher quality provide a more beautiful recording, but the large data volume also results in a shorter recording time.

Conversely, a longer duration provides a longer recording time, but the lower data volume results in a coarser picture quality.

Press REC MODE repeatedly to switch the recording modes.

Recording mode	Approx. recording time (hours)	
	DVD	DVD+R DL
HQ (High quality)	1	1 hr. 48 min.
HSP ↑	1 hr. 30 min.	2 hr. 42 min.
SP (Standard mode)	2	3 hr. 37 min.
LSP ↓	2 hr. 30 min.	4 hr. 31 min.
ESP ↓	3	5 hr. 25 min.
LP ↓	4	7 hr. 14 min.
EP ↓	6	10 hr. 51 min.
SLP (Long duration)	8	14 hr. 28 min.

### Notes

- The maximum continuous recording time for a single title is eight hours.
- Situations below may cause slight inaccuracies with the recording time.
  - Recording a programme with poor reception, or a programme or video source of low picture quality
  - Recording on a disc that has already been edited
  - Recording only a still picture or just sound

## Recording stereo and bilingual programmes

The recorder automatically receives and records stereo and bilingual programmes based on the ZWEITON system or the NICAM system.

A DVD-RW (VR mode) or DVD-R (VR mode) can record both main and sub sounds. You can switch between main and sub when playing the disc.

A DVD+RW, DVD-RW (Video mode), DVD+R, or DVD-R (Video mode) can record only one sound track (main or sub) at a time. Select the sound track using the Setup Display before recording starts. Set “Bilingual Recording” of the “DVD Rec. Settings” to “Main” (default) or “Sub” in the “Recording” setup (page 77).

### ZWEITON (German stereo) system

When a stereo based programme is received, “Stereo” appears.

When a bilingual ZWEITON based programme is received, “Main,” “Sub,” or “Main/Sub” appears.

### NICAM system

When a stereo or bilingual NICAM based programme is received, “NICAM” appears in the front panel display.

To record a NICAM programme, be sure to set “Audio” of “Channel Setting” in the “Basic” setup to “NICAM” (default). If the sound is not clear when listening to NICAM broadcasts, set “Audio” to “Standard” (see “Channel Setting” on page 68).

#### Hint

You can select the audio (main or sub) while recording bilingual programmes using the AUDIO button. This does not affect the recorded sound.

## Unrecordable pictures

Pictures with copy protection cannot be recorded on this recorder.

When the recorder receives a copy guard signal, the recorder continues to record but only a blank, grey coloured screen will be recorded.

### Copy control Recordable discs signals

Copy-Free



Copy-Once



Copy-Never

None (a blank screen is recorded)

\* The recorded disc can be played only on CPRM compatible equipment (page 7).


# Timer Recording (Standard/G-Code)

- +RW -RWVR -RWVideo +R -RVR
- RVideo


You can set the timer for a total of 40 programmes, up to 30 days in advance. There are two methods to set the timer: the standard method and G-Code method.

- Standard: Set the date, time, and programme position of the programme manually.
- G-Code: Enter the G-Code programming number designated for each TV programme (page 39).

## Setting the timer manually (Standard)

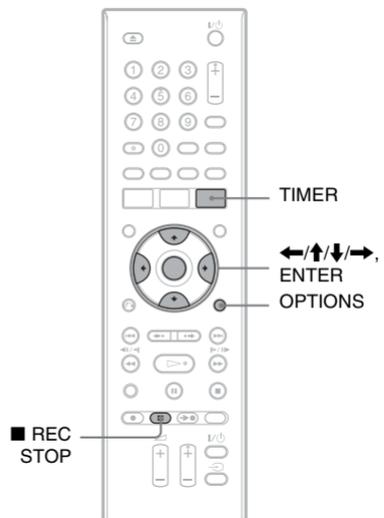

### 1 Press **TIMER**.

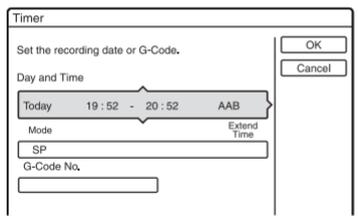

### 2 Press **↑/↓** to select the "Day and Time" or "Mode" row. Then press **ENTER**.

### 3 Select an item using **←/→** and adjust using **↑/↓**. Then press **ENTER**.

To make additional changes to items in different rows, return to step 2. The adjustable items are listed below.

"Day and Time":

Sets the date, start time, and stop time, and selects the programme position or input source.

The date item changes as follows:

- Today ↔ ..... ↔ Sat 28.10 (30 days later) ↔ Sun (every Sunday) ↔ .....
- ↔ Sat (every Saturday) ↔ Mon - Fri (Monday to Friday) ↔ Mon - Sat (Monday to Saturday) ↔ Daily ↔ Today

"Mode":

Selects the recording mode (page 35).

"Extend Time":

Sets the duration in increments of 10 minutes, for a maximum of 60 minutes when a timer recording is in progress. If the programme set to be recorded daily or weekly is extended, the manually extended time set here will be added to the subsequent timer recording times.

- If you make a mistake, select the item and change the setting.

### 4 Select "OK," and press **ENTER**.

The "TIMER LIST" display (page 41) appears. The **TIMER REC** indicator lights up on the front panel and the recorder is ready to start recording. Unlike a VCR, there is no need to turn off the recorder before the timer recording starts.

## To stop recording during timer recording

Press **■ REC STOP**.


Note that it may take a few seconds for the recorder to stop recording.

## Rec Mode Adjust

If there is not enough available disc space for the recording, the recorder automatically adjusts the recording mode to enable the entire programme to be recorded. Set "Rec Mode Adjust" of the "Timer Settings" to "On" in the "Recording" setup (page 77).

## If the timer settings overlap

Overlapped timer settings are shown as follows.

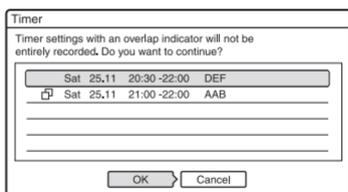

To store the setting as shown, select "OK." The programme that has a  mark next to it has lower priority and will not be entirely recorded.


To cancel the overlapped setting, select "Cancel."

## To confirm, change, or cancel a timer recording

See "Checking/Changing/Cancelling Timer Settings (Timer List)" on page 41.

## To extend the recording duration time while recording

- 1 Press **OPTIONS** during recording to select "Extend Rec.," and press **ENTER**.

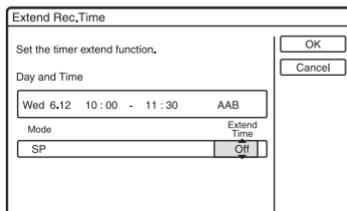

- 2 Press **↑/↓** to select the duration time. You can set the duration in increments of 10 minutes, for a maximum of 60 minutes.

- 3 Select "OK" and press **ENTER**.

### Hint

If you are recording to a DVD-RW (VR mode) at a recording mode that is SP or lower and is a 2x speed or higher disc, you can play the title as it is being recorded by selecting the programme title on the Title List (page 50).


### Notes

- If a message indicating that the disc is full appears on the screen, change the disc, or make available space for the recording (DVD+RW/DVD-RW only) (page 57).
- Check that the clock is correctly set before setting the timer recording. If not, the timer recording cannot be made.
- To record a satellite programme, turn on the satellite tuner and select the satellite programme you want to record. Leave the satellite tuner turned on until the recorder finishes recording. If you connect equipment with a timer function, you can use the Synchro Rec function (page 43).
- Even if the timer is set for the same daily or weekly programme, the timer recording cannot be made if it overlaps with a programme that has priority. "" will appear next to the overlapped setting in the Timer List. Check the priority order of the settings.
- Even if the timer is set, timer recordings cannot be made while recording a programme that has priority.
- The Rec Mode Adjust function only works with a timer recording. It does not function with Quick Timer or Synchro Rec.


## Recording TV programmes using the G-Code system

The G-Code system is a feature that simplifies setting the timer. Just enter the G-Code programming number listed in the TV programme guide. The date, time, and programme position of that programme are set automatically.

Check that the programme positions are correctly set in “Channel Setting” in the “Basic” setup (page 68).

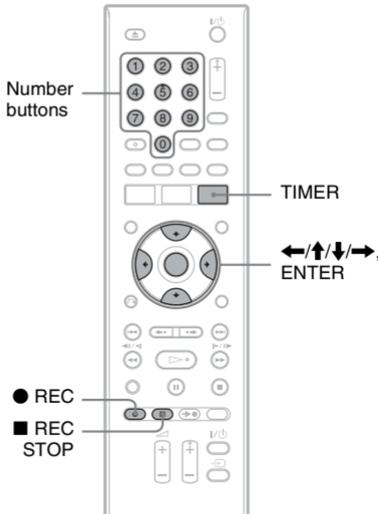

### 1 Press TIMER.

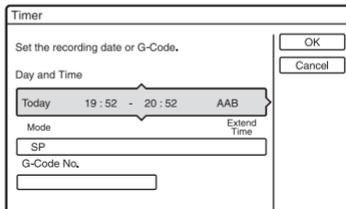


### 2 Select “G-Code No.” using $\uparrow/\downarrow$ , and press ENTER.

### 3 Press the number buttons to enter the G-Code programming number, and press ENTER.

The date, start and stop times, programme position, recording mode, etc. setting (page 37) appear.

- If you make a mistake before pressing ENTER, press  $\leftarrow/\rightarrow$  and re-enter the correct number.

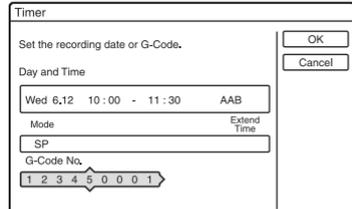

- If you want to change the setting, press  $\leftarrow/\rightarrow$  to select the item and press  $\uparrow/\downarrow$  to change the setting.
- If you want to re-enter the G-Code programming number, select “G-Code No.,” and press ENTER. Then re-enter the G-Code programming number.

### 4 Select “OK,” and press ENTER.

The TIMER REC indicator lights up on the front panel, and the recorder is ready to start recording.

#### To stop recording during timer recording

Press  $\blacksquare$  REC STOP.

Note that it may take a few seconds for the recorder to stop recording.

#### If the timer settings overlap

See page 38.

#### To extend the recording duration time while recording

See page 38.

#### To confirm, change, or cancel a timer recording

See “Checking/Changing/Cancelling Timer Settings (Timer List)” on page 41.

#### Hint


The Rec Mode Adjust function also works with this timer method (page 38).

## Using the Quick Timer function

You can set the recorder to record in 30 minute increments.

### Press ● REC repeatedly to set the duration.

Each press advances the time in 30 minute increments. The maximum duration is six hours.

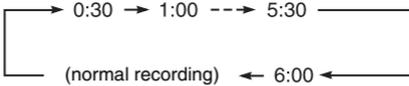


The time counter decreases minute by minute to 0:00, then the recorder stops recording (the power does not turn off). Even if you turn off the recorder during recording, the recorder continues to record until the time counter runs out.

### To cancel the Quick Timer


Press ● REC repeatedly until the counter appears in the front panel display. The recorder returns to normal recording mode.

## Adjusting the recording picture quality and size

You can adjust the recording picture quality and picture size.

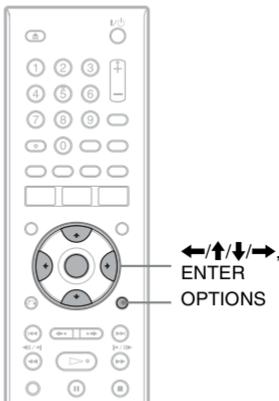


## 1 Before recording starts, press OPTIONS to select “Rec Settings,” and press ENTER.

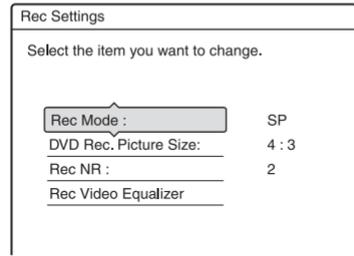

## 2 Select the item you want to adjust, and press ENTER.

The adjustment display appears.

Example: Rec NR

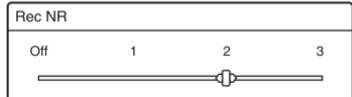

“Rec Mode”:

Selects the recording mode for the desired recording time and picture quality. For more information, see “Recording mode” on page 35.

“DVD Rec. Picture Size”:

Sets the picture size of the programme to be recorded.

- 4:3 (default): Sets the picture size to 4:3.
- 16:9: Sets the picture size to 16:9 (wide mode).

“DVD Rec. Picture Size” works with DVD-RWs/DVD-Rs (Video mode) when the recording mode is set to HQ, HSP, SP, LSP, or ESP. For all other recording modes, the screen size is fixed at “4:3.”

For DVD-Rs/DVD-RWs (VR mode), the actual picture size is recorded regardless of the setting. For example, if a 16:9 size picture is received, the disc records the picture as 16:9 even if “DVD Rec. Picture Size” is set to “4:3.”

For DVD+RWs/DVD+Rs, the screen size is fixed at “4:3.”

“Rec NR” (noise reduction): Reduces noise contained in the video signal.

“Rec Video Equalizer”: Adjusts the picture in greater detail.  
Press **↑/↓** to select the item you want to adjust, then press **ENTER**.

- Contrast: Changes the contrast.
- Brightness: Changes the overall brightness.
- Colour: Makes the colours deeper or lighter.

### 3 Adjust the setting using **←/↑/↓/→**, and press **ENTER**.

The default setting is underlined.

“Rec NR”: (weak) Off 1 ~ 2 ~ 3 (strong)

“Rec Video Equalizer”:

- Contrast: (weak) -3 ~ 0 ~ 3 (strong)
- Brightness: (dark) -3 ~ 0 ~ 3 (bright)
- Colour: (light) -3 ~ 0 ~ 3 (deep)

Repeat steps 2 and 3 to adjust any other items.

#### Notes

- If one programme contains two picture sizes, the selected size is recorded. However, if the 16:9 signal cannot be recorded as 16:9, it is recorded as 4:3.
- When playing a 16:9 size picture recorded as 4:3, the image is fixed to 4:3 Letter Box regardless of the setting in “TV Type” of “Video” setup (page 73).
- Remnants of images may appear on your screen when using “Rec NR.”
- “Rec Video Equalizer” does not affect the input of the DV IN jack.

## Creating chapters in a title


The recorder can automatically divide a recording (a title) into chapters by inserting chapter marks at approximately 6 minute intervals during recording. To disable this function, set “Auto Chapter” in the “Recording” setup to “Off” (page 77).

When recording to a DVD-R (VR mode) or DVD-RW (VR mode), you can insert and erase chapter marks manually (page 58).

## Checking/Changing/ Cancelling Timer Settings (Timer List)



You can check, change, or cancel timer settings using the Timer List.

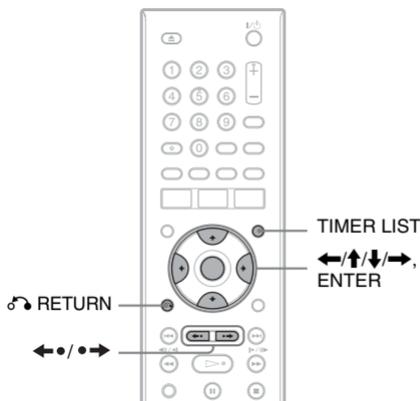

### 1 Press **TIMER LIST**.

The Timer List appears.

TIMER LIST		10:30
●	Mon - Sat 22:00 - 22:15 AAB SP	
	Sat 25.11 20:30 - 21:30 DEF SP	
☐	Sat 25.11 21:00 - 22:00 GHI SLP	
●	Sun 26.11 16:00 - 17:00 DEF SLP	

Timer information displays the recording date, time, recording mode, etc.



Indicates that the setting is overlapped by another setting.

● (red):

Indicates the setting is currently being recorded.



Indicates that the timer recording cannot be recorded as set, such as for a timer recording that cannot be recorded in the selected Rec mode.

When all of the timer settings do not fit on the list, the scroll bar appears.

To view the hidden timer settings, press **↑/↓**.

## 2 Select the timer setting you want to check/change/cancel, and press **ENTER**.

The sub-menu appears.

## 3 Select one of the options, and press **ENTER**.

“Modify”:

Changes the timer setting.

Select an item using **←/→** and adjust using **↑/↓**. Select “OK,” and press **ENTER**.

The screenshot shows a menu titled "Modify" with the instruction "Modify the timer setting." Below this, there are two buttons: "OK" and "Cancel". Underneath, the "Day and Time" section displays "Wed 6,12 10:00 - 11:30 AAB". Below that, the "Mode" is set to "SP" and the "Extend Time" field is empty.

“Erase”:

Erases the timer setting. Select “OK,” and press **ENTER**.

The screenshot shows a menu titled "Erase" with the question "Are you sure you want to erase this timer setting?". Below the question, the timer setting "Mon - Sat 22:00 - 22:15 AAB" is displayed. At the bottom, there are two buttons: "OK" and "Cancel".

“Check Overlap”:

Checks for overlapped settings.

The timer setting without the  mark has priority over the other settings.


The screenshot shows a menu titled "Check Overlap" with the text "The following timer settings overlap. Timer settings with an overlap indicator next to them will not be entirely recorded." Below this, there is a list of timer settings: "Sat 25,11 20:30-21:30 DEF" (with a priority icon) and "Sat 25,11 21:00-22:00 GHI". At the bottom, there is a "Close" button.

Select “Close” to return to the Timer List.

To change or cancel the setting, repeat steps 2 and 3 above.


## When the timer settings overlap

The programme that starts first has priority and the second programme starts recording only after the first programme has finished.

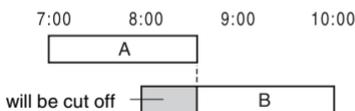


## ◆ When the recordings start at the same time

The programme that is set last has priority. In this example, timer setting B is set after A, so the first part of timer setting A will not be recorded.

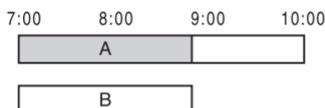

## ◆ When the end time of one recording and the start time of another are the same

After finishing the previous recording, the other recording may be delayed.

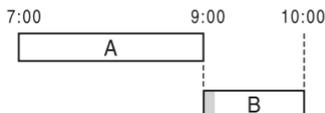

## To scroll the list display by page (Page mode)

Press **←•/•→** while the list display is turned on. Each time you press **←•/•→**, the entire Timer List changes to the next/previous page of timer settings.

## To turn off the Timer List

Press **TIMER LIST** or **RETURN**.


## 💡 Hint

While recording, you cannot modify the timer setting for the current recording, but you can extend the duration of the recording time (page 38).

## ⚡ Notes

- Even if the timer is set, timer recordings cannot be made while recording a programme that has priority.
- Even if the timer is set for the same daily or weekly programme, the timer recording cannot be made if it overlaps with a programme that has priority. “” will appear next to the overlapped setting in the Timer List. Check the priority order of the settings.

# Recording From Connected Equipment

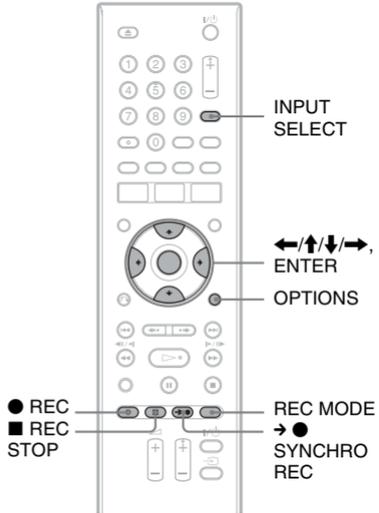

## Recording from connected equipment with a timer (Synchro Rec)

You can set the recorder to automatically record programmes from connected equipment that has a timer function (such as a satellite tuner). Connect the equipment to the LINE 1 IN jacks of the recorder (page 22).  
 When the connected equipment turns on, the recorder starts recording a programme from the LINE 1 IN jacks.

- 1 Insert a recordable DVD.**  
See “1. Inserting a Disc” on page 23.
- 2 Press INPUT SELECT repeatedly to select “L1.”**

- 3 Select the desired audio signal when recording a bilingual programme to the DVD-RWs/DVD-Rs (VR mode).**  
Press **OPTIONS** to select “Line Audio Input,” and press **ENTER**. Then select “Bilingual,” and press **ENTER**.  
For details about bilingual recording, see page 36.
- 4 Press REC MODE repeatedly to select the recording mode.**  
For details about the recording mode, see page 35.
- 5 Set the timer on the connected equipment to the time of the programme you want to record, and turn it off.**
- 6 Press → ● SYNCHRO REC.**  
The **SYNCHRO REC** indicator lights up on the front panel. The recorder is ready to start Synchro-Recording.  
The recorder automatically starts recording when it receives an input signal from the connected equipment.  
The recorder stops recording when the connected equipment turns off.

**To stop recording**  
 Press **■ REC STOP** or **→ ● SYNCHRO REC**.


**To cancel Synchro Rec**  
 Press **→ ● SYNCHRO REC**.  
 The **SYNCHRO REC** indicator on the recorder turns off.

## 🔊 Notes

- The recorder starts recording only after detecting a video signal from the connected equipment. The beginning of the programme may not be recorded regardless of whether or not the recorder's power is on or off.
- During Synchro-Recording, other operations, such as normal recording, cannot be performed.
- To use the connected equipment while the recorder is standing by for Synchro-Recording, cancel Synchro-Recording by pressing → ● SYNCHRO REC. Be sure to turn off the connected equipment and press → ● SYNCHRO REC to reset Synchro-Recording before the timer recording starts.
- The Synchro Rec function does not work with some tuners. For details, see the tuner's operating instructions.
- While the recorder is standing by for Synchro-Recording, the Auto Clock Set function (page 72) does not work.

### If the timer settings of a Synchro-Recording and another timer recording overlap

Regardless of whether or not the programme is a Synchro Rec programme, the programme that starts first has priority and the second programme starts recording only after the first programme has finished.

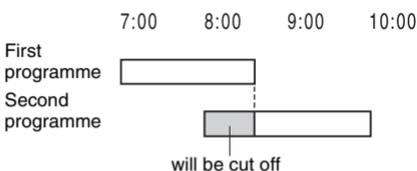


## Recording from connected equipment without a timer

You can record from a connected VCR or similar device. To connect a VCR or similar device, see “Connecting a VCR or Similar Device” on page 20. Use the DV IN jack on the front panel if the equipment has a DV output jack (i.LINK jack).

- 1 Insert a recordable DVD.**  
See “1. Inserting a Disc” on page 23.
- 2 Press INPUT SELECT to select an input source according to the connection you made.**

The front panel display changes as follows:

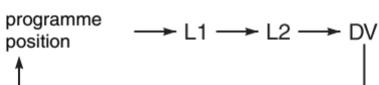

- 3 Select the desired audio signal when recording a bilingual programme to the DVD-RWs/DVD-Rs (VR mode).**  
Press OPTIONS to select “Line Audio Input,” and press ENTER. Then select “Bilingual,” and press ENTER.  
For details about bilingual recording, see page 36.
- 4 Press REC MODE repeatedly to select the recording mode.**  
For details about the recording mode, see page 35.
- 5 Insert the source tape into the connected equipment and set to playback pause.**
- 6 Press ● REC.**  
This recorder starts recording.
- 7 Press the pause (or play) button on the connected equipment to cancel the playback pause status.**  
The connected equipment starts playback and the playback image is recorded by this recorder.  
To stop recording, press ■ REC STOP on this recorder.

## If you connect a digital video camera with a DV IN jack

See “DV Dubbing” on page 63 for an explanation of how to record from the DV IN jack.


### Hint

You can adjust the settings for the recording picture before recording. See “Adjusting the recording picture quality and size” on page 40.

### Notes

- When recording a video game image, the screen may not be clear.
- Any programme that contains a Copy-Never copy guard signal cannot be recorded. The recorder continues to record, but a blank screen will be recorded.

# Playing

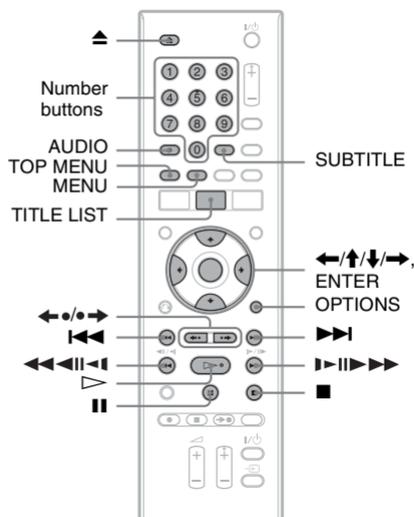


## 1 Insert a disc.

- See “1. Inserting a Disc” on page 23.
- If you insert a DVD VIDEO, VIDEO CD, CD, DATA DVD, or DATA CD, press . Playback starts.

## 2 Press TITLE LIST.

For details about the Title List, see “3. Playing the Recorded Programme (Title List)” on page 25.

Example: DVD+RW

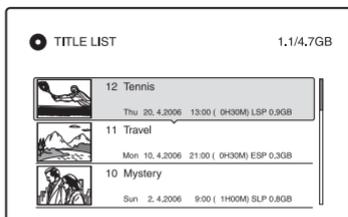

## 3 Select the title, and press ENTER.

The sub-menu appears.

## 4 Select “Play,” and press ENTER.

Playback starts from the selected title.

### To use the DVD's Menu

When you play a DVD VIDEO, or a finalised DVD+RW, DVD-RW (Video mode), DVD+R, or DVD-R (Video mode), you can display the disc's menu by pressing TOP MENU or MENU.

### To play VIDEO CDs with PBC functions

PBC (Playback Control) allows you to play VIDEO CDs interactively using the menu on your TV screen.

When you start playing a VIDEO CD with PBC functions, the menu appears.

Select an item using the number buttons and press ENTER. Then, follow the instructions in the menu (press when “Press SELECT” appears).

The PBC function of Super VIDEO CDs does not work with this recorder. Super VIDEO CDs are played in continuous play mode only.

### To change the angles

If various angles (multi-angles) for a scene are recorded on the disc, appears in the front panel display. Press OPTIONS during playback to select “Change Angle,” and press ENTER.

### To stop playback

Press .

### To resume playback from the point where you stopped (Resume Play)

When you press  $\triangleright$  again after you stop playback, the recorder resumes playback from the point where you pressed  $\blacksquare$ .

To start from the beginning, press **OPTIONS** to select "Play Beginning," and press **ENTER**. Playback starts from the beginning of the title/track/scene.

The point where you stopped playing is cleared when:

- you open the disc tray.
- you play another title.
- you switch the Title List menu to Original or Playlist (DVD-RWs/DVD-Rs in VR mode only).
- you edit the title after stopping playback.
- you change the settings on the recorder.
- you turn off the recorder (VIDEO CD/CD/DATA DVD/DATA CD only).
- you make a recording (except for DVD-RWs/DVD-Rs in VR mode).
- you disconnect the AC power cord (mains lead).

### To play restricted DVDs (Parental Control)

If you play a restricted DVD, the message "Do you want to temporarily change the Parental Control level to \*?" appears on your TV screen.

- 1** Select "OK" and press **ENTER**.  
The display for entering your password appears.
- 2** Enter your four-digit password using the number buttons.
- 3** Press **ENTER** to select "OK."  
The recorder starts playback.

To register or change the password, see "Parental Control (DVD VIDEO only)" on page 78.

### To lock the disc tray (Child Lock)

You can lock the disc tray to prevent children from ejecting the disc.

When the recorder is turned on, hold down  $\blacksquare$  until "LOCKED" appears in the front panel display. The  $\blacktriangle$  (open/close) button does not work while the Child Lock is set.

To unlock the disc tray, hold down  $\blacksquare$  until "UNLOCKED" appears in the front panel display when the recorder is turned on.

#### Hints

- You can also use the  $\triangleright$  button in step 3 (page 46) to start playback.
- Even if you select "Factory Setup" in the "Others" setup (page 80), the Child Lock remains set.

## Playback options

To check the position of the buttons below, see the illustration on page 46.

For MP3, JPEG, or DivX operations, see “Playing MP3 Audio Tracks, JPEG Image Files, or DivX® Video Files” on page 52.

Buttons	Operations
<b>AUDIO</b> 	Selects one of the audio tracks recorded on the disc when pressed repeatedly in normal playback mode. <b>DVD</b> : Selects the language. <b>-RWVR</b> <b>-RVR</b> : Selects the main or sub sound. <b>VCD</b> <b>CD</b> : Selects stereo or monaural audio tracks.
<b>SUBTITLE</b> 	Selects a subtitle language when pressed repeatedly.
(instant replay/ instant advance) 	Replays the scene/briefly fast forwards the scene.
(previous/ (next)	Goes to the beginning of the previous/next title/chapter/scene/ track.
(fast reverse/fast forward)	Fast reverses/fast forwards the disc when pressed during playback. Search speed changes as follows: fast reverse      fast forward <<<1 ←      → 1 >>> <<<2 ← ←      → → 2 >>> <<<3* ← ← ←      → → → 3 >>>*
(slow, freeze frame) *	Plays in slow motion when pressed for more than one second in pause mode. Plays one frame at a time when pressed briefly in pause mode.
<b>II</b> (pause)	Pauses playback.

\* <<<3 and 3 >>> are only available for DVDs.

To resume normal playback, press .

### Notes

- Angles and subtitles cannot be changed with titles recorded on this recorder.
- Slideshows made with a DVD camcorder can only be played. Other play functions, such as fast forward, cannot be used.

## Notes on playing DTS sound tracks on a CD

- When playing DTS-encoded CDs, excessive noise will be heard from the LINE OUT (R-AUDIO-L) jacks. To avoid possible damage to the audio system, the consumer should take proper precautions when the LINE OUT (R-AUDIO-L) jacks of the recorder are connected to an amplification system. To enjoy DTS Digital Surround™ playback, an external DTS decoder must be connected to the DIGITAL OUT jack of the recorder.
- Set the sound to “Stereo” using the AUDIO button when you play DTS sound tracks on a CD (page 48).

## Notes on playing DVDs with a DTS sound track

DTS audio signals are output only through the DIGITAL OUT (COAXIAL) jack.


When you play a DVD with DTS sound tracks, set “DTS” to “On” in the “Audio” setup (page 75).

## Adjusting the picture quality

+RW -RWVR -RWVideo +R -RVR  
-RVideo DVD VCD DATA DVD \* DATA CD \*

\* DivX video file only

### 1 Press **OPTIONS** during playback to select “Video Settings,” and press **ENTER**.

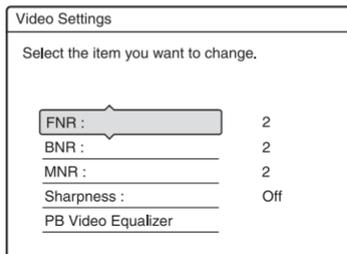

### 2 Select an item, and press **ENTER**.

The adjustment display appears.

“FNR” (frame noise reduction):  
Reduces noise contained in the luminance element of the video signal.  
“BNR” (block noise reduction):  
Reduces “block noise” or mosaic like patterns in the picture.

“MNR” (mosquito noise reduction):  
Reduces the faint noise appearing around the outlines of the images. The noise reduction effects are automatically adjusted within each setting range according to the video bit rate and other factors.

“Sharpness”:

Sharpens the outlines of the images.

“PB Video Equalizer” (Playback video equalizer):

Adjusts the picture in greater detail.

Select an item and press **ENTER**.

- Contrast: changes the contrast.
- Brightness: changes the overall brightness.
- Colour: makes the colours deeper or lighter.
- Hue: changes the colour balance.

### 3 Press **←/→** to adjust the setting, and press **ENTER**.

The default settings are underlined.

“FNR”: (weak) Off 1 2 3 (strong)

“BNR”: (weak) Off 1 2 3 (strong)

“MNR”: (weak) Off 1 2 3 (strong)

“Sharpness”\*: (weak) Off 1 2 3 (strong)

“PB Video Equalizer”:

- Contrast: (weak) -3 ~ 0 ~ 3 (strong)
- Brightness: (dark) -3 ~ 0 ~ 3 (bright)
- Colour: (light) -3 ~ 0 ~ 3 (deep)
- Hue: (red) -3 ~ 0 ~ 3 (green)

Repeat steps 2 and 3 to adjust any other items.

\* “1” softens the outlines of the images. “2” enhances the outlines and “3” enhances them more than “2.”

### ⚡ Notes

- If the outlines of the images on your screen become blurred, set “BNR” and/or “MNR” to “Off.”
- Depending on the disc or the scene being played, the above BNR, MNR, or FNR effects may be hard to discern. And, these functions may not work with some screen sizes.
- When using the “Sharpness” function, noise found in the title may become more apparent. In this case, it is recommended that you use the BNR function with the “Sharpness” function. If the condition still does not improve, set the “Sharpness” level to “Off.”

## Adjusting the delay between the picture and sound (AV SYNC)

+RW -RWVR -RWVideo +R -RVR  
-RVideo DVD VCD DATA DVD DATA CD

- 1 Press **OPTIONS** during playback to select “Audio Settings,” and press **ENTER**.
- 2 Select “AV SYNC,” and press **ENTER**. “AV SYNC”:  
When the video is delayed, this function delays the audio for synchronization with the video (0 to 120 milliseconds). Larger numbers indicate a longer audio delay for synchronization with the video. When dubbing to a VCR or other video recording equipment, be sure to return this setting to 0 ms (default).
- 3 Press **←/→** to adjust the setting, and press **ENTER**.

## Playing from the beginning of the programme you are recording (Chasing Playback)

-RWVR

“Chasing Playback” allows you to view the recorded part of a programme while the recording is being made. You do not need to wait until the recording finishes.

Press **OPTIONS** while recording to select “Chasing Playback,” and press **ENTER**.

Playback starts from the beginning of the programme you are recording. When you fast forward to the point that you are recording, Chasing Playback returns to normal playback.

## Notes

- For DVD-RWs (VR mode), this function does not work when recording:
  - on a 1x-speed DVD-RW.
  - in the HQ or HSP recording mode.
- The DVD’s picture on your TV screen freezes for a few seconds when you fast forward/fast reverse or instant replay/advance the recording.
- Chasing Playback is possible from one minute or more after recording starts.
- Even if you fast forward the recorded programme, there will always be a time difference of about one minute or more between the recorded programme and the current TV broadcast.

## Playing a previous recording while making another (Simultaneous Rec and Play)

-RWVR

You can play a previously recorded programme while recording another on the same disc. Playback continues even if the recording is a timer recording.

- 1 While recording, press **TITLE LIST**.  
The Title List appears.
- 2 Select the title you want to play, and press **ENTER**.  
The sub-menu appears.
- 3 Select “Play”, and press **ENTER**.  
Playback starts from the selected title.


## Notes

- This function does not work when recording:
  - on a 1x-speed DVD-RW.
  - in the HQ or HSP recording mode.
- When playing a title recorded in the HQ or HSP recording mode, picture noise may appear depending upon the condition of the recording.
- Picture noise may appear depending upon the condition of the recording, or when playing a title recorded in the HQ or HSP recording mode. The picture freezes for a few seconds when you use fast forward/fast reverse or instant replay/advance.

## Searching for a Title/ Chapter/Track, etc.



You can search a disc by title, chapter, scene or track. As titles and tracks are assigned individual numbers, select the title or track by entering its number. You can also search for a scene using the time code.

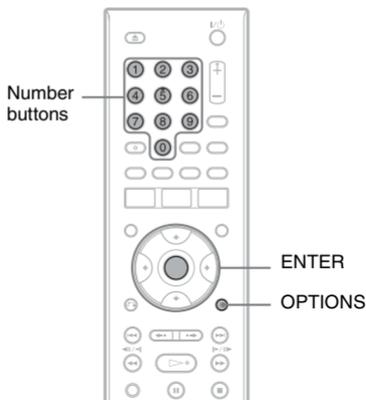

### 1 Press **OPTIONS** during playback to select a search method, and press **ENTER**.

“Title Search” (for DVDs)

“Chapter Search” (for DVDs)

“Track Search” (for CDs/DATA CDs)

“Search” (for VIDEO CDs)

“Album Search” (for DATA DVDs/  
DATA CDs)

“Time Search” (for DVDs/DATA  
DVDs\*/DATA CDs\*): Searches for a  
starting point by entering the time code.

\* DivX video file only

“File Search” (for DATA DVDs/DATA  
CDs)

The display for entering the number appears.

Example: Title Search



The number in parentheses indicates the total number of titles, tracks, etc.

### 2 Press the number buttons to select the number of the title, chapter, track, time code, etc., you want.

For example: Time Search

To find a scene at 2 hours, 10 minutes, and 20 seconds, enter “21020.”

If you make a mistake, select another number.


### 3 Press **ENTER**.

The recorder starts playback from the selected number.

# Playing MP3 Audio Tracks, JPEG Image Files, or DivX® Video Files

DATA DVD DATA CD

You can play MP3 audio tracks, JPEG image files, and DivX video files on DATA CDs (CD-ROMs/CD-Rs/CD-RWs) or JPEG image files and DivX video files on DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs).

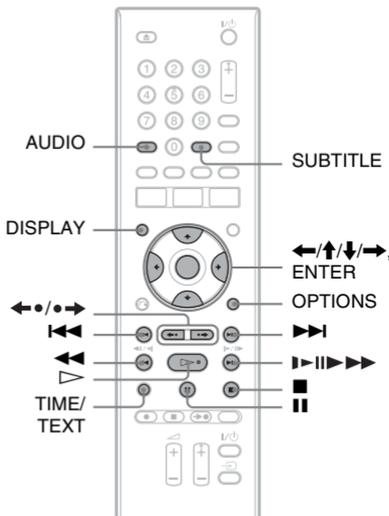

## 1 Insert a disc.

See “1. Inserting a Disc” on page 23.

## 2 Press $\triangleright$ .

For MP3 discs, playback starts from the first MP3 audio track on the disc.

For JPEG files, a slideshow of the pictures on the disc begins.

For DivX video files, playback starts from the first DivX video file on the disc.

If the disc contains MP3 audio tracks, JPEG image files, and DivX video files, only the DivX video files are played back when  $\triangleright$  is pressed.

If the disc contains MP3 audio tracks and JPEG image files, only the JPEG image files are played back when  $\triangleright$  is pressed.

### To stop playback or slideshow

Press  $\blacksquare$ .

### To pause playback or slideshow

Press  $\text{II}$ .

### To play the beginning of the MP3 audio track or DivX video file

Press **OPTIONS** to select “Play Beginning,” and press **ENTER**.

### To fast forward or fast reverse an MP3 audio track or DivX video file

Press  $\lll$ / $\ggg$  during playback.

### To go to the next or previous MP3 audio track, JPEG image file or DivX video file

Press  $\lll$  or  $\ggg$  during playback. If you repeatedly press  $\lll$  or  $\ggg$ , you will go to the next or previous album. (Except JPEG image file)

### To play DivX video file in slow motion/one frame at a time (Playback direction only)

Press  $\triangleright$ / $\text{II}$  in pause mode.

### To go to the next or previous album (Except for DivX video files)

Press  $\leftarrow$ / $\bullet$ / $\rightarrow$  during playback or slideshow.

### To display the registration code for this recorder

Select “Registration Code” in the “Others” setup (page 80).

## To rotate a picture

Press **OPTIONS** while the JPEG image is displayed to select “Rotate Right” or “Rotate Left,” and press **ENTER**.

### Hints

- Press **AUDIO** to switch between stereo or monaural audio tracks when playing MP3 audio tracks.
- You can change the audio track when playing MP3 or MPEG audio of DivX video files using the **AUDIO** button.
- You can display subtitles when playing DivX video files using the **SUBTITLE** button.
- You can rotate a JPEG image using the  buttons when the image is displayed.
- Press **DISPLAY** repeatedly to show information about the JPEG album or image on your TV screen. Then press **TIME/TEXT** to toggle between the current selected image number and album number.

### Notes

- Some JPEG files, especially files of three million pixels or more, may lengthen the slideshow interval.
- Rotated JPEG images will not be saved when you switch to another folder.
- Images larger than 720 × 480 will be reduced to 720 × 480 when displayed.
- The following images are not displayed:
  - progressive JPEG image files
  - greyscale JPEG image files
  - 4:1:1 JPEG image files
- When you attempt to play a broken file or a file that does not satisfy the play conditions,  appears but the recorder cannot play the file.
- The recorder cannot play a DivX video file of size more than 720 (width) × 576 (height)/4 GB.

## About MP3 audio tracks, JPEG image files, and DivX video files

MP3 is an audio compression technology that satisfies certain ISO/MPEG regulations.

JPEG is an image compression technology. You can play MP3 (MPEG1 Audio Layer 3) format audio tracks and JPEG image files on DATA CDs (CD-ROMs/CD-Rs/CD-RWs) or JPEG image files on DATA DVDs (DVD-ROMs/DVD+RWs/DVD+Rs/DVD-RWs/DVD-Rs).

DATA CDs must be recorded according to ISO9660 Level 1, Level 2 or Joliet format for the recorder to recognize the MP3 tracks. DivX<sup>®</sup> is a video file compression technology, developed by DivX, Inc. This product is an official DivX<sup>®</sup> Certified product. You can play DATA CDs and DATA DVDs that contain DivX video files. You can also play discs recorded in MultiSession/Border.

See the instructions supplied with the disc drives and the recording software (not supplied) for details on the recording format.

### Note on MultiSession/Border discs

If audio tracks and images in Music CD format or Video CD format are recorded in the first session/border, only the first session/border will be played back.

### Note

The recorder may not be able to play some DATA CDs/DATA DVDs created in the Packet Write format.

## MP3 audio tracks, JPEG image files, or DivX video files that the recorder can play

The recorder can play the following tracks and files:

- MP3 audio tracks with the extension “.mp3.”
- JPEG image files with the extension “.jpeg” or “.jpg.”
- JPEG image files that conform to the DCF\* image file format.
- DivX video file with the extension “.avi” or “.divx.”

\* “Design rule for Camera File system”: Image standards for digital cameras regulated by JEITA (Japan Electronics and Information Technology Industries Association).

### Notes



- The recorder will play any data with the extension “.mp3,” “.jpeg,” “.jpg,” “.avi,” or “.divx” even if they are not in MP3, JPEG, or DivX format. Playing these data may generate a loud noise which could damage your speaker system.
- The recorder does not conform to audio tracks in mp3PRO format.
- The recorder may not play a DivX video file when the file has been combined from two or more DivX video files.
- Depending on the disc, normal playback may not be possible. For example, the picture may be unclear, playback may not appear smooth, the sound may skip, and so on.
- Depending on the disc, playback may take some time to start.
- Some files cannot be played.

## About playback order of albums, tracks, and files

Albums play in the following order:

### Structure of disc contents

Tree 1 Tree 2 Tree 3 Tree 4 Tree 5

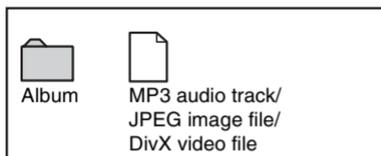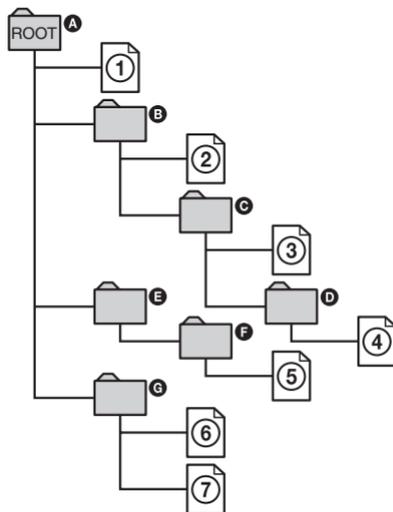

When you insert a DATA CD/DATA DVD and press  $\triangleright$ , the numbered tracks (or files) are played sequentially, from ① through ⑦. For JPEG image files, press  $\bullet \rightarrow$  to go to the next album. (For instance, when you want to go from ① to ②.) Any sub-albums/tracks (or files) contained within a currently selected album take priority over the next album in the same tree. (Example: ⑥ contains ④ so ④ is played before ⑤.)

### Hints

- If you add numbers (01, 02, 03, etc.) to the front of the track/file names when you store the tracks (or files) in a disc, the tracks and files will be played in that order.
- Since a disc with many trees takes longer to start playback, it is recommended that you create albums with no more than two trees.

**Notes**

- Depending on the software you use to create the DATA DVD/DATA CD, the playback order may differ from the above illustration.
- No more than a total of 999 individual folders can be played. (Folders that do not contain JPEG/MP3/DivX files are counted as well.)
- No more than a total of 999 folders and 9999 files can be played. (Files other than JPEG/MP3/DivX files, and folders that do not contain JPEG/MP3/DivX files are counted as well.)
- No more than 999 folders and files can be recognized in a single folder. (Folders that do not contain JPEG/MP3/DivX files are counted as well.)
- Proceeding to the next or another album may take some time.
- This recorder supports MP3 audio bit rates up to 320 kbps.

## Before Editing

This recorder offers various edit options for various disc types.

### Notes


- You may lose the edited contents if you remove the disc or a timer recording starts while editing.
- DVD discs created by DVD video cameras cannot be edited on this recorder.
- If a message appears and indicates that the disc's control information is full, erase or edit unnecessary titles.
- When editing a DVD+R or DVD-R, finish all editing before finalising the disc. You cannot edit a finalised disc.

Edit features	-RWVR		+RW
	-RVR		-RWVideo
	Original title	Playlist title	+R -RVideo
Erase (page 57)	Yes	Yes	Yes
Protect (page 57)	Yes	No	Yes
Title Name (page 57)	Yes	Yes	Yes
A-B Erase (page 58)	Yes	Yes	Yes*
Erase Titles (page 57)	Yes	Yes	Yes
Divide (page 62)	No	Yes	No
Set Thumbnail (page 57)	Yes	Yes	No
Chapter mark (page 58)	Yes	Yes	No
Creating and Editing a Playlist (page 59)	Yes	Yes	No
Change Order (page 61)	No	Yes	No
Combine (page 61)	No	Yes	No

\* DVD+RW only

## To open up disc space

To open up disc space on a DVD+RW or DVD-RW (Video mode), erase the title with the largest number in the title list.

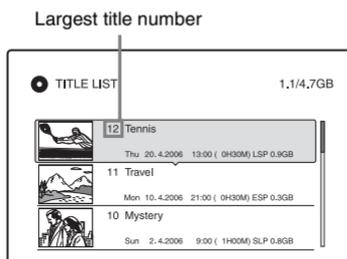

For the DVD-RWs (VR mode), you can erase any title.

For DVD-Rs and DVD+Rs, the available disc space does not increase even if you erase titles.

See "Erasing and Editing a Title" on page 57 or "Erasing multiple titles (Erase Titles)" on page 57.


## To switch between the Playlist and Original Title List

You can display the Playlist titles in the Title List (Playlist), or the Original titles in the Title List (Original). To switch the two Title Lists, press **←/→** while a Title List is displayed. To create and edit a Playlist, see page 59.

# Erasing and Editing a Title



This section explains the basic edit functions. Note that editing is irreversible. To edit DVD-RWs/DVD-Rs (VR mode) without changing the original recordings, create a Playlist title (page 59).

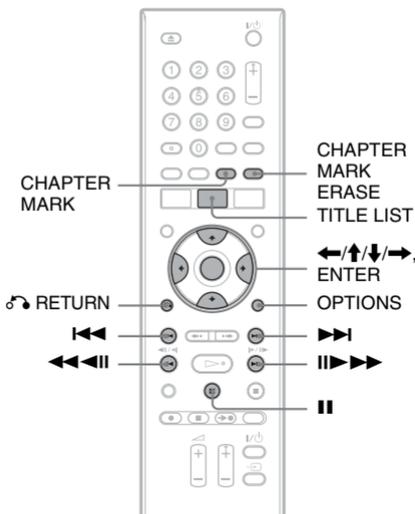

## 1 Press TITLE LIST.

For DVD-RWs/DVD-Rs in VR mode, press **←/→** to switch the Title Lists, if necessary.

## 2 Select a title, and press ENTER.

The sub-menu appears.

## 3 Select an option, and press ENTER.

You can make the following edits to the title.

“Erase”: Erases the selected title. Select “OK” when asked for confirmation.

“Protect”: Protects the title. “**A**” appears next to the protected title.

“Title Name”: Allows you to enter or re-enter a title name (page 29).

“A-B Erase”: Erases a section of the title (page 58).

“Set Thumbnail”: Changes the title’s thumbnail picture that appears in the Title List (page 26).

“Make a Playlist”: Adds the entire title to the Playlist title as one scene (page 61).

### Hints

- You can erase multiple titles at one time (page 57).
- You can label or re-label DVDs (page 31).

### Note

DVD-RW/DVD-R (VR mode) playlist titles cannot be protected.

## Erasing multiple titles (Erase Titles)




You can select and erase more than one title at one time using the OPTIONS menu.

## 1 Press TITLE LIST.

For DVD-RWs/DVD-Rs in VR mode, press **←/→** to switch the Title Lists, if necessary.

## 2 Press OPTIONS to select “Erase Titles,” and press ENTER.

The display for selecting titles to be erased appears.

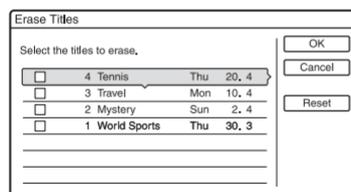

## 3 Select a title, and press ENTER.

A check mark appears in the check box next to the selected title.

- To clear the check mark, press ENTER again.
- To clear all of check marks, select “Reset.”

## 4 Repeat step 3 to select all of the titles you want to erase.

**5** When you finish selecting titles, select “OK,” and press ENTER. The list of the titles to be erased appears for confirmation.

- To change the selection, select “Change,” and repeat from step 3.

**6** Select “OK” and press ENTER. The titles are erased.

### To erase all titles on the disc

You can reformat a DVD+RW or DVD-RW to make the disc blank.

See “8. Reformatting a disc” on page 34.

## Erasing a section of a title (A-B Erase)


+RW -RWvR -RvR

You can select a section (scene) in a title and erase it. Note that erasing scenes in a title cannot be undone.

**1** After step 2 of “Erasing and Editing a Title,” select “A-B Erase” and press ENTER.

The display for setting point A appears. The title starts to play.

- To return to the beginning of the title, press **II** and then press **◀◀**.

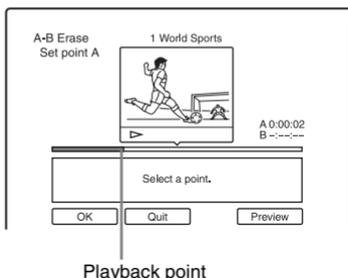

**2** Select point A using **◀◀/▶▶**, and press ENTER.

Playback pauses.

**3** Press ENTER if point A is correct.

If point A is incorrect, select point A using **◀◀/▶▶**, and press ENTER. The display for setting point B appears.

**4** Select point B using **◀◀/▶▶**, and press ENTER.

Playback pauses.

**5** Press ENTER if point B is correct.

If point B is incorrect, select point B using **◀◀/▶▶**, and press ENTER. The display asks for confirmation.

- To reset point A, press **↑** and **↶** RETURN, and go to step 2.
- To reset point B, press **↑** and repeat step 4.
- To preview the title without scenes to be erased, select “Preview” (except for DVD+RWs).

**6** Select “OK,” and press ENTER.

The scene is erased. The display for setting point A appears.

- To continue, go to step 2.
- To finish, select “Quit.”

### Hint

A chapter mark is inserted after the scene was erased. The chapter mark divides the title into separate chapters on either side of the mark.

### Notes

- Images or sound may be momentarily interrupted at the point where you erase a section of a title.
- Sections shorter than five seconds may not be erased.
- For DVD+RWs, the erased section may be slightly different from the points you selected.

## Creating chapters manually

-RWvR -RvR

You can manually insert a chapter mark at any point you like during playback or recording.

**Press CHAPTER MARK at the point where you want to divide the title into chapters.**

Each time you press the button, “Marking ...” appears on the screen and the scenes to the left and right of the mark become separate chapters.

## To erase chapter marks

You can combine two chapters by erasing the chapter mark during playback.

Press **◀◀/▶▶** to search for a chapter number, and while displaying the chapter containing the chapter mark you want to erase, press **CHAPTER MARK ERASE**. The current chapter combines with the previous chapter.

### Note

To insert a chapter mark manually during recording, set “Auto Chapter” to “Off” in the “Recording” setup.


## Creating and Editing a Playlist

**-RWvR** **-RvR**

Playlist edit allows you to edit or re-edit without changing the actual recordings. You can create up to 97 Playlist titles.

Example: You have recorded the final few matches of a football tournament on a DVD-RW/DVD-R (VR mode). You want to create a digest with the goal scenes and other highlights, but you also want to keep the original recording.

Original

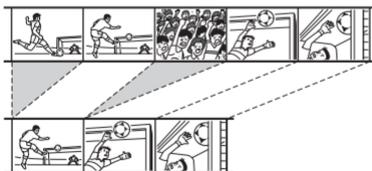

Playlist


In this case, you can compile highlight scenes as a Playlist title. You can even rearrange the scene order within the Playlist title.

The Playlist title calls up data from the original titles for playback. When an original title is used for a Playlist title, the original title cannot be edited and erased.


### 1 Press TITLE LIST.

If the Title List (Original) appears, press **←**.

### 2 Press OPTIONS to select “Create a Playlist,” and press ENTER.

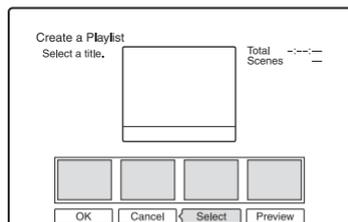


### 3 Select “Select,” and press ENTER.

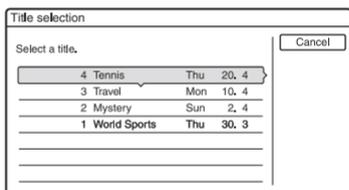

### 4 Select the title you want to include in the Playlist title, and press ENTER.

The display for setting the start point (IN) appears. The title starts to play.

- To return to the beginning of the title, press **II** and then press **◀◀**.

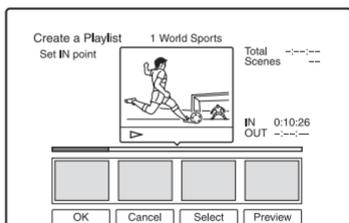

### 5 Select the IN point using **◀◀/▶▶**, and press ENTER.

Playback pauses.

### 6 Press ENTER if the IN point is correct.

If the IN point is incorrect, select the IN point using **◀II/II▶**, and press ENTER. The display for setting the end point (OUT) appears.

### 7 Select the OUT point using **◀◀/▶▶**, and press ENTER.

Playback pauses.


### 8 Press ENTER if the OUT point is correct.

If the OUT point is incorrect, select the OUT point using **◀II/II▶**, and press ENTER.

The selected scene is added to the scene list.

- To add more scenes, go to step 5.

### 9 When you finish adding scenes, press **↓**.

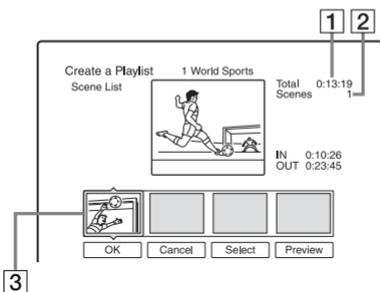

**1** Total duration of the selected scene

**2** Total number of scenes

**3** Selected scene

### 10 Select the scene you want to re-edit, and press ENTER.

The sub-menu appears.

“Move”: Changes the scene order using **←/→** and press ENTER.

“Erase”: Erases the scene. When asked for confirmation, select “OK.”

- To add more scenes, press **↑** and go to step 5.
- To add more scenes from another title, select “Select” and go to step 4.
- To preview all of the captured scenes in the listed order, select “Preview.”

### 11 When you finish editing the scene list, select “OK,” and press ENTER.

The title of the created Playlist is added to the Title List (Playlist). The title name is the title name of the first scene.

#### **💡 Hint**

When a Playlist title is created, the IN and OUT points will become chapter marks, and each scene will become a chapter.

#### **🚫 Note**

The picture may pause when the edited scene is played.

## To add the entire title to the Playlist title as one scene (Make a Playlist)

- 1 Press TITLE LIST. If the Title List (Playlist) appears, press **→**.
- 2 Select the title and press ENTER. The sub-menu appears.
- 3 Select “Make a Playlist,” and press ENTER. The selected title is added to the Title List (Playlist). The title name is the same as the Original title name.

## To play the Playlist title


- 1 Press TITLE LIST. If the Title List (Original) appears, press **←**.
- 2 Select a title, and press ENTER. The sub-menu appears.
- 3 Select “Play,” and press ENTER.

## Moving a Playlist title (Change Order)

**-RWVr** **-RVR**

You can change the Playlist title order within the Title List (Playlist).

- 1 Press TITLE LIST. If the Title List (Original) appears, press **←**.
- 2 Press OPTIONS to select “Change Order,” and press ENTER.

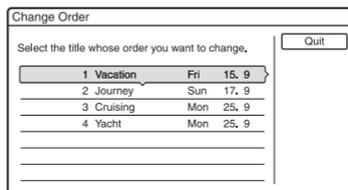

- 3 Select the title you want to move, and press ENTER.

- 4 Select a new location for the title using **↑/↓**, and press ENTER.


The title moves to the new location.

- To move more titles, go to step 3.
- To finish, select “Quit,” and press ENTER.

## Combining multiple Playlist titles (Combine)

**-RWVr** **-RVR**

- 1 Press TITLE LIST. If the Title List (Original) menu appears, press **←**.
- 2 Press OPTIONS to select “Combine,” and press ENTER. The display for selecting titles appears.
- 3 Select a title, and press ENTER. A number indicating the order in which you selected the title appears. To cancel the selection, press ENTER again.

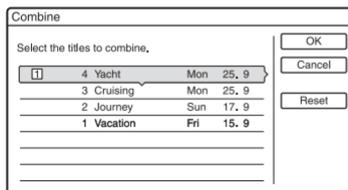


- 4 Repeat step 3 to select all of the titles you want to combine.

To cancel all of the selections, select “Reset.”

- 5 Select “OK,” and press ENTER.

The list of titles to be combined appears. To change the selection, select “Change” and go to step 3.

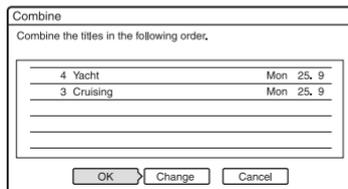

- 6 Select “OK,” and press ENTER.

The titles are combined.

### Hint

After titles are combined, the title name is the title name of the first title prior to combination.

## Note

When the number of chapters in the title to be combined exceeds the limit, the chapters at the end are combined into a single chapter.

## Dividing a Playlist title (Divide)

**-RWVR** **-RVR**

You can divide a Playlist title.

### 1 Press TITLE LIST.

If the Title List (Original) appears, press **←**.


### 2 Select a title, and press ENTER.

The sub-menu appears.

### 3 Select “Divide,” and press ENTER.

The display for setting the dividing point appears, and the title starts to play.

- To return to the beginning of the title, press **||** and then press **◀◀**.

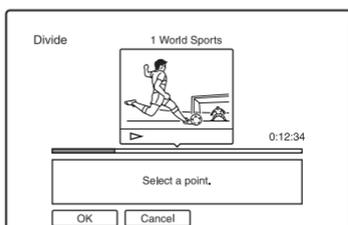

### 4 Select the dividing point by pressing **◀◀/▶▶**, and press ENTER.

Playback pauses.

### 5 Press ENTER if the dividing point is correct.

If the dividing point is incorrect, select the dividing point using **◀||/||▶**, and press ENTER.

The display asks for confirmation.

- To change the dividing point, press **↑**.

### 6 Select “OK,” and press ENTER.

The title is divided in two.

## Hint

After a title is divided, the title name prior to division is assigned to both the first and second parts.

## Before DV Dubbing

This section explains dubbing with a digital video camera via the DV IN jack on the front panel. If you want to dub by way of the LINE IN jacks, see “Recording from connected equipment without a timer” on page 44.

The DV IN jack on this recorder conforms to the i.LINK standard.

Follow the instructions in “Preparing for DV dubbing,” and then move on to the section on dubbing. For more information about i.LINK, see “About i.LINK” on page 90.

### Preparing for DV dubbing

You can connect a digital video camera to the DV IN jack on the recorder to record or edit from a DV/Digital8 format tape. Operation is straightforward because the recorder will fast forward and rewind the tape for you – you do not need to operate your digital video camera. Do the following to start using the “DV Edit” functions of this recorder.

See the instruction manual supplied with the digital video camera as well before connecting.


#### Hint

If you plan to do additional editing on a disc after the initial dub, use the DV IN jack and record on a DVD-RW/DVD-R (VR mode).

#### Notes

- You cannot make a recording while DV dubbing.
- The DV IN jack is for input only. It will not output signals.
- You cannot use the DV IN jack when:
  - signal input to the DV IN jack on the front panel or recorder operation cannot be performed correctly when using a digital video camera (see “About i.LINK” on page 90). Connect the camera to the LINE IN jack and follow the instructions of “Recording from connected equipment without a timer” on page 44.
  - the input signal is not in DVC-SD format. Do not connect a MICRO MV format digital video camera even if it has an i.LINK jack.
  - the images on the tape contain copy protection signals, which limit recording.
- If you want to play the disc on other DVD equipment, finalise the disc (page 32).

#### Hookups

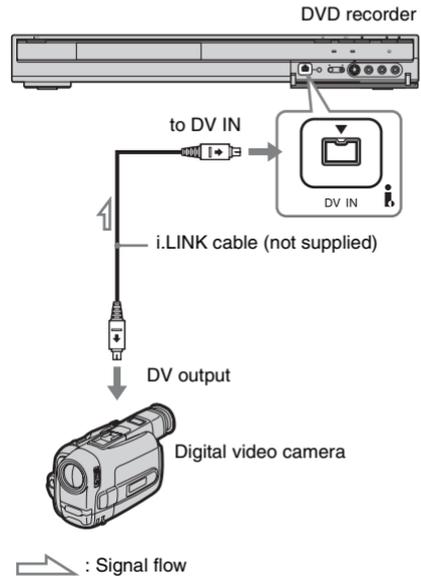

#### 1 Insert a disc.


See “1. Inserting a Disc” on page 23.

#### 2 Insert the source DV/Digital8 format tape into your digital video camera.

For the recorder to record or edit, your digital video camera must be set to video playback mode.


### 3 Press INPUT SELECT on the remote repeatedly to select “DV.”

The front panel display changes as follows:

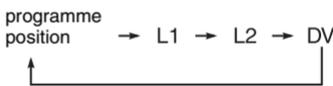

### 4 Press REC MODE on the remote repeatedly to select the recording mode.

The recording mode changes as follows:

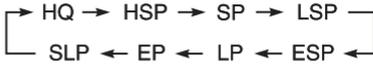

For details about the recording mode, see page 35.

### 5 Press OPTIONS on the remote to select “DV Audio Input,” and press ENTER. Then, select the setting for the audio input.

“Stereo1” (default): Records original sound only. Normally select this when dubbing a DV format tape.

“Mix”: Records both stereo 1 and 2.

“Stereo2”: Records additional audio only.

Select “Mix” or “Stereo2” only if you have added a second audio channel when recording with your digital video camera. You are ready to start dubbing. Select one of the dubbing methods on the following pages.

### 6 Adjust the dubbing picture quality and size.

Before dubbing starts, press OPTIONS to select “Rec Settings,” and adjust the recording settings (page 40).

### ⚡ Notes

- You cannot connect more than one piece of digital video equipment to the recorder.
- You cannot control the recorder using another device or another recorder of the same model.
- You cannot record date, time, or the contents of the cassette memory onto the disc.
- If you record from a DV/Digital8 format tape that is recorded in multiple sound tracks, such as a tape with multiple sampling frequencies (48 kHz, 44.1 kHz, or 32 kHz), no sound or an unnatural sound will be output when playing back the sampling frequency switch point on the disc.
- In order to use this recorder’s “Auto Chapter” setting (page 65), be sure to correctly set the clock on your digital video camera before shooting.
- The recorded picture may be momentarily affected or the start and end points of a title may be different from what you have set if the source DV/Digital8 format tape is in any of the following conditions. In this case, see “Recording from connected equipment without a timer” (page 44).
  - There is a blank space in the recorded portion of the tape.
  - The tape’s time code is not sequential.
  - If the picture size or the recording mode on the tape being dubbed changes.

### 💡 Hint

You can turn off the recorder during dubbing. The recorder completes dubbing even after being turned off.

## Recording an Entire DV Format Tape (One Touch Dubbing)

**+RW** **-RWVR** **-RWVideo** **+R** **-RVR**  
**-RVideo**

You can record the entire contents of a DV/Digital8 format tape onto a disc with a single press of the ONE-TOUCH DUB button on the recorder. The recorder controls the digital video camera for the whole process, and completes the recording.

### ◆ How chapters are created

The contents dubbed to DVD become a single title. When “Auto Chapter” is set to “On” in the “Recording” setup, this title is divided into chapters. When dubbing a DVD-RW/DVD-R (VR mode), each shooting session on the tape becomes a chapter on the disc. For other discs, the recorder divides the title into chapters at approximately 6 minute intervals.

**Follow steps 1 to 6 of “Preparing for DV dubbing” on page 63, and press ONE-TOUCH DUB on the recorder.**

The recorder rewinds the tape and then starts recording the tape contents.

When the recording is finished, the recorder rewinds the tape in the digital video camera.

### To stop during recording

Press **■ REC STOP**.

Note that it may take a few seconds for the recorder to stop recording.

### 💡 Hint

If you set “Finalise Disc” of “One Touch Dubbing” to “Auto” in the “DVD” setup (page 79), the recorded disc (except DVD-RW (VR mode)) will automatically be finalised after recording is finished.

### 📌 Notes

- When a blank space between the recordings on the tape continues for more than five minutes, One Touch Dubbing ends automatically.
- The recorder records a blank for five minutes before it stops dubbing. To stop the blank recording, press **■ REC STOP**.

## Program Edit

**+RW** **-RWVR** **-RWVideo** **+R** **-RVR**  
**-RVideo**

You can select scenes from a DV/Digital8 format tape, and then automatically record selected scenes to a DVD.

To use this function, do the following:

**Connect your digital video camera and prepare for recording**



**Select and edit the scenes you want to dub**

Using the recorder’s remote control, fast forward or rewind the tape to select the scenes. At this point, the selected scenes are not copied to the disc. The recorder only remembers the IN and OUT points of the scenes that you selected for dubbing. You can also erase or change the order of the scenes.



**Dub the selected scenes**

After you have selected the scenes, the recorder will fast forward and rewind the tape automatically and record the scenes to a DVD.


### ◆ How chapters are created

The contents dubbed to DVD become a single title. When “Auto Chapter” is set to “On” in the “Recording” setup, this title is divided into chapters. When dubbing to a DVD-RW/DVD-R (VR mode), each shooting session on the tape and each selected scene becomes a chapter on the disc. For other discs, the recorder divides the title into chapters at approximately 6 minute intervals.

**1 Follow steps 1 to 6 of “Preparing for DV dubbing” on page 63, and press SYSTEM MENU.**

## 2 Select “DV EDIT,” and press ENTER.


The display asks if you want to start selecting scenes.

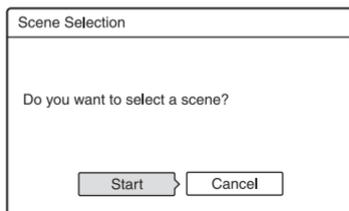

- If you have previously saved a program, the display asks if you want to edit an existing program or to create a new program. To resume editing the existing program, select “Saved Data,” and go to step 9.

## 3 Select “Start,” and press ENTER.

The display for setting the IN point (start of the scene) appears.  
The scene starts to play.

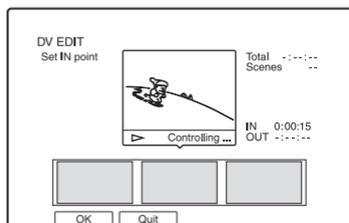

## 4 Select the IN point using ◀◀/▶▶, and press ENTER.

Playback pauses.

## 5 Press ENTER if the IN point is correct.

If the IN point is incorrect, select the IN point using ◀◀/▶▶, and press ENTER. The display for setting the OUT point (end of the scene) appears.

## 6 Select the OUT point using ◀◀/▶▶, and press ENTER.

Playback pauses.

## 7 Press ENTER if the OUT point is correct.


If the OUT point is incorrect, select the OUT point using ◀◀/▶▶, and press ENTER.

The selected scene is added to the scene information block.

- To add more scenes, go to step 4.

## 8 When you finish adding scenes, press ↓.

The scene list is displayed.

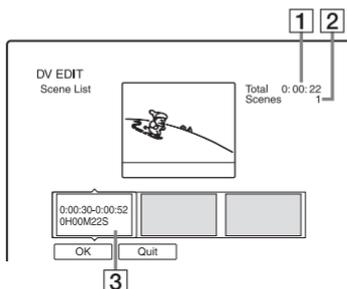

1 Total duration of the scene

2 Total number of scenes

3 Scene information block

## 9 Select the scene information block you want to edit using ◀/▶, and press ENTER.

The sub-menu appears.

“Move”: Changes the scene order using ◀/▶ and ENTER.


“Erase”: Erases the scene. When asked for confirmation, select “OK.”

“Preview”: Plays the selected scene.

- To add more scenes, press ↑ and go to step 4.

## 10 When you finish editing the scene list, select “OK,” and press ENTER.

The display for entering the title name appears. To enter a new name, select “Enter,” and follow the explanations on page 29.

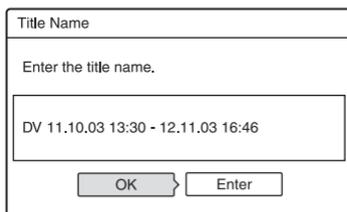


## 11 Select “OK,” and press ENTER.

The title name is fixed, and the display asks if you want to start recording.

To change the dubbing mode, select “Dub Mode” and press **↑/↓**.

Data capacity required for the dubbing. This is displayed in red when the size exceeds the available space on the dubbing target media.

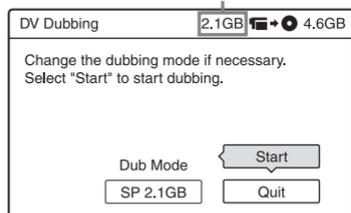

## 12 Select “Start,” and press ENTER.

The recorder starts recording the tape contents as programmed.


### To stop during recording

Press **■ REC STOP**.

Note that it may take a few seconds for the recorder to stop recording.

### To automatically adjust the dubbing mode

If there is not enough available space on the target disc, the recorder automatically selects a dubbing mode with lower picture quality according to the available space. The same dubbing mode is set for all of the titles. If disc space is insufficient for the selected dubbing mode, the following display appears after step 12.

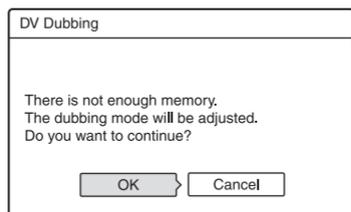

Select “OK” and go to step 12.

If you do not want to change the dubbing mode, select “Cancel.” However, note that dubbing will end before the title is finished.

### Notes

- If you set the beginning of the tape as the IN point and the end point as the OUT point, the IN and OUT points may move slightly during dubbing.
- You cannot set a scene to be shorter than one second.

## Settings and Adjustments


# Aerial Reception and Language Settings (Basic)

The “Basic” setup helps you to make tuner, clock, and programme position settings for the recorder.

- 1 Press **SYSTEM MENU** while the recorder is in stop mode.
- 2 Select **“SETUP,”** and press **ENTER**.
- 3 Select **“Basic,”** and press **ENTER**.

The options for “Basic” appear. The default settings are underlined.

To turn off the display, press **SYSTEM MENU** repeatedly.

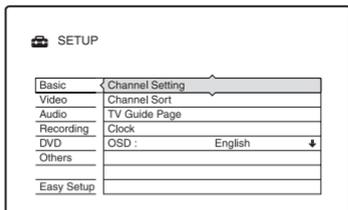


## Channel Setting


Preset programme positions manually. If some programme positions could not be set using the “Easy Setup” function, you can set them manually.

If there is no sound or if the picture is distorted, the wrong tuner system may have been preset during “Easy Setup.” Set the correct tuner system manually in the steps below.


- 1 Select “Channel Setting” in “Basic,” and press **ENTER**.

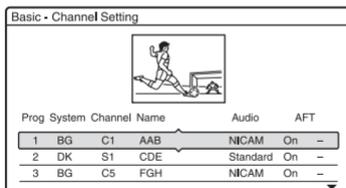

- 2 Press **↑/↓** to select the programme position, and press **ENTER**.

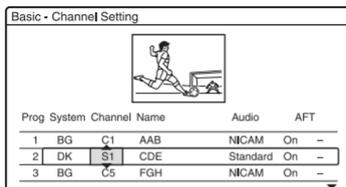

- 3 Select the item you want to change using **←/→**, and change the settings using **↑/↓** and press **ENTER**.

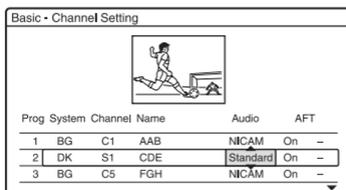

- 4 To preset another programme position, repeat from step 2.

## System

Select an available TV system (page 69).

BG	<ul style="list-style-type: none"> <li>• Malaysia, Singapore, Thailand</li> <li>• Middle East</li> <li>• Australia, New Zealand</li> </ul>
DK	Do not select this.
I	<ul style="list-style-type: none"> <li>• Hong Kong</li> <li>• South Africa</li> </ul>

## Channel


Press  $\uparrow/\downarrow$  repeatedly until the programme position you want is displayed.

The programme positions are scanned in the order shown in the table below.

- If you know the number of the programme position you want, press the number buttons. For example, for programme position 5, first press "0" and then press "5."
- To disable a programme position, enter "00." The disabled programme positions will be skipped when you press PROG +/-.
- To select a cable or satellite programme position, press  $\uparrow/\downarrow$  until the programme position you want is displayed.

## Name

Changes or enters a new station name (up to 5 characters). The recorder must receive programme position information (for instance, SMARTLINK information) for station names to appear automatically.

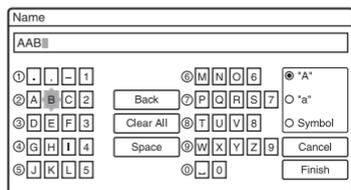

To enter characters, see page 29.

## Audio

Select "NICAM" or "Standard."

<b>NICAM</b>	Normally, select this.
<b>Standard</b>	Select this if the sound from NICAM broadcasts is not clear.

## AFT

Select "On" to turn on AFT.

<b>On</b>	Turns on the Auto Fine Tuning function. Normally, select this.
<b>Off</b>	Allows you to adjust the pictures manually.

- If the Auto Fine Tuning function does not work effectively, select "Off" and press  $\rightarrow$ . Press  $\uparrow/\downarrow$  to obtain a clearer picture, and press  $\leftarrow$ .

## ◆ Receivable channels

TV system	Channel coverage
BG	E2 – E12 VHF
• Malaysia, Singapore, Thailand	A – H VHF
• Middle East	AS0 – AS12 VHF
• Australia, New Zealand	NZ1 – NZ11 VHF
	E21 – E69 UHF
	AS28 – AS69 UHF
	S1 – S20 CATV
	S1 – S46 CATV
	S21 – S41 HYPER
	S01 – S05 CATV
I	A – J VHF
• Hong Kong	4 – 13 VHF
• South Africa	B21 – B69 UHF
	S1 – S20 CATV
	S21 – S41 HYPER
	S01 – S05 CATV

## ◆ For customers in Australia and New Zealand

- Australia

Channel Set number	Channel
C2	AS0
C3	AS1
C4	AS2
S44	AS3
S46	AS4
S1	AS5

<b>Channel Set number</b>	<b>Channel</b>
S6	AS5A
C5	AS6
C6	AS7
C7	AS8
C8	AS9
C9	AS9A
C10	AS10
C11	AS11
C12	AS12
C28	AS28
C29	AS29
C30	AS30
C31	AS31
C31, C32	AS32
C32	AS33
C33	AS34
C34	AS35
C35	AS36
C36	AS37
C37	AS38
C38	AS39
C38, C39	AS40
C39	AS41
C40	AS42
C41	AS43
C42	AS44
C43	AS45
C44	AS46
C45	AS47
C45, C46	AS48
C46	AS49
C47	AS50
C48	AS51
C49	AS52
C50	AS53
C51	AS54
C52	AS55

<b>Channel Set number</b>	<b>Channel</b>
C52, C53	AS56
C53	AS57
C54	AS58
C55	AS59
C56	AS60
C57	AS61
C58	AS62
C59	AS63
C59, C60	AS64
C60	AS65
C61	AS66
C62	AS67
C63	AS68
C64	AS69
S1 – S20	S1 – S20

• New Zealand

<b>Channel Set number</b>	<b>Channel</b>
C2	NZ1
C3	NZ2
C4	NZ3
C5	NZ4
C6	NZ5
C7	NZ6
C8	NZ7
C9	NZ8
C10	NZ9
C11	NZ10
C12	NZ11
C21 – C69	E21 – E69
S1 – S46	S1 – S46

## Channel Sort

After the programme positions have been set, you can change the order of each programme position in the display list.

- 1 Select "Channel Sort" in "Basic," and press ENTER.

Prog	Channel	Name
1	C1	AAB
2	S1	CDE
3	C5	FGH

- 2 Press  $\uparrow/\downarrow$  to select the row containing the programme position you want to move, and press ENTER.
  - To display other pages for programme positions 4 to 99, press  $\uparrow/\downarrow$  repeatedly.
- 3 Press  $\uparrow/\downarrow$  until the selected programme position row moves to the desired programme position. The selected programme position is inserted at the new programme position.

Prog	Channel	Name
5	C3	--
6	S1	CDE
7	C12	--

- 4 Press ENTER to confirm the setting.
- 5 To change the programme position of another station, repeat from step 2.

## Auto Programme Title Labelling (TV Guide Page)

Some broadcast systems provide a Teletext service\* in which complete programmes and their data (title, date, programme position, recording start time, etc.) are stored day by day. A TV guide page corresponds to each day of the week. When recording a programme, the recorder automatically takes the programme name from the Teletext pages and stores it as the title name. The TV guide page numbers depend entirely on the broadcast itself and may be subject to change. If so, you may have to set those TV guide page numbers manually in the TV Guide Page menu.

\* This feature most likely cannot be used because it requires a service that is provided in limited areas only.


- 1 Select "TV Guide Page" in "Basic," and press ENTER. The TV Guide Page menu appears.
- 2 Select the programme position for which you want to set or change the TV guide page using PROG +/- or number buttons.
  - The TV guide page numbers (Example: P301) appear automatically when the recorder detects them.

Day	Page Number
Sun:	P 3 0 1
Mon:	P 3 0 2
Tue:	P 3 0 3
Wed:	P 3 0 4
Thu:	P 3 0 5
Fri:	P 3 0 6
Sat:	P 3 0 7

- If no page numbers are detected (P000), you have to set the appropriate TV guide page number manually.

Day	Page Number
Sun:	P 0 0 0
Mon:	P 0 0 0
Tue:	P 0 0 0
Wed:	P 0 0 0
Thu:	P 0 0 0
Fri:	P 0 0 0
Sat:	P 0 0 0

- 3 Select the TV guide page number you want to modify, and press ENTER.

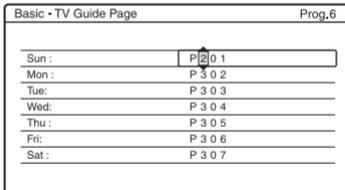

- 4 Press the number buttons or  $\leftarrow/\uparrow/\downarrow/\rightarrow$  to enter the TV guide page number, and press ENTER to confirm the setting.
- If you make a mistake, re-enter the correct number.
  - To return to the original settings, press  $\curvearrowright$  RETURN.
- 5 To set or change another TV guide page number, repeat steps 3 and 4 above.

#### Hint

To view Teletext information on your TV screen during a broadcast, switch to your TV's tuner by pressing TV/DVD.

#### Notes

- In step 4 above, enter "000" if you do not want to use the TV guide page number for automatic labelling. The recorder will instead store a default title name (programme position, start time - stop time).
- Refer to the Teletext information on your TV screen to obtain the TV guide page number with programme titles and their start times.
- If the Teletext TV guide has a page which always shows the programmes for the current day, this page should be input for all days.
- If you start recording more than three minutes before the programme is scheduled to start, the correct label information may not be transferred.
- Note that this function may not work correctly with programmes broadcast from some stations.
- If the broadcast system updates the Teletext information at the moment recording starts, the title label may not correspond to the recorded programme. In this case, you may have to manually enter the correct title (page 29).

## Clock


### Auto Adjust (Auto Clock Set)

This function cannot be used in your area.

### Present Time (Manual Clock Set)

Set the clock manually.

- 1 Select "Clock" in "Basic," and press ENTER.
- 2 Select "Present Time," and press ENTER.

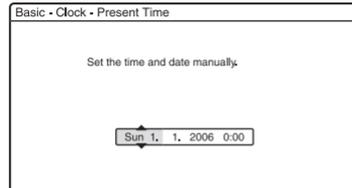

- 3 Press  $\uparrow/\downarrow$  to set the day, and press  $\rightarrow$ . Set the month, year, hour, and minutes in sequence. Press  $\leftarrow/\rightarrow$  to select the item to be set, then press  $\uparrow/\downarrow$  to set the numbers. The day of the week is set automatically.

To change the numbers, press  $\leftarrow$  to return to the item to be changed, and press  $\uparrow/\downarrow$ .

- 4 Press ENTER to start the clock.

## OSD (On-Screen Display)


Switches the display language on the screen.

# Video Settings (Video)

Video settings will adjust items related to the image, such as size and colour.

Choose the settings according to the type of TV, tuner, or decoder connected to the DVD recorder.

- 1** Press **SYSTEM MENU** while the recorder is in stop mode.
- 2** Select **"SETUP,"** and press **ENTER.**
- 3** Select **"Video,"** and press **ENTER.**  
The "Video" setup appears with the following options. The default settings are underlined.

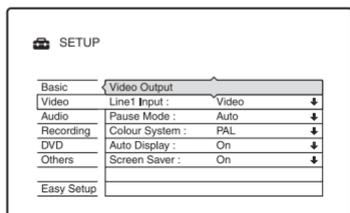

## Video Output

### ◆ TV Type

Sets the picture size when playing back a title recorded from 16:9 size video (page 40) or a 16:9 size commercial DVD video.

Select the playback picture size according to the type of connected TV (wide-screen/wide mode TV or conventional 4:3 screen TV).

16 : 9	Select this when connecting to a wide-screen TV or TV with a wide mode function.
4:3 Letter Box	Select this when connecting to a 4:3 screen TV. Displays a wide picture with bands on the upper and lower portions of the screen.
4:3 Pan Scan	Select this when connecting to a 4:3 screen TV. Automatically displays a wide picture on the entire screen and cuts off the portions that do not fit.

16 : 9



4:3 Letter Box



4:3 Pan Scan



### ⚙ Note

Depending on the disc, "4:3 Letter Box" may be selected automatically instead of "4:3 Pan Scan" or vice versa.

### ◆ Progressive Output

If your TV accepts progressive (525p/625p) format signals, set "Progressive Output" to "On." You will enjoy accurate colour reproduction and high quality images.

- 1** Select "Progressive Output," and press **ENTER.**
- 2** Select "On," and press **ENTER.**  
The display asks for confirmation.
- 3** Select "Start," and press **ENTER.**  
The video switches to a progressive signal for 5 seconds.
- 4** If video signal appears OK, select "Yes," and press **ENTER.**  
If picture is distorted, select "No," and press **ENTER.**

### ◆ Progressive Mode

DVD software can be divided into two types: film based software and video based software. Video based software is derived from TV and displays images at 25 frames/50 fields (30 frames/60 fields) per second. Film based software is derived from film and displays images at 24 frames per second. Some DVD software contains both Video and Film.

In order for these images to appear natural on your screen when output in progressive mode (50 or 60 frames per second), the progressive video signal needs to be converted to match the type of DVD software that you are watching.

You can fine-tune the progressive 525p/625p video signal that is output when you set "Progressive Output" to "On."

Note that you must connect to a progressive format TV using the COMPONENT VIDEO OUT jacks (page 12).

<u>Auto</u>	Automatically detects the software type (Film-based or Video-based) and selects the appropriate conversion mode. Normally select this position.
Video	Fixes the conversion mode to the mode for Video-based software.

### 🔊 Note

When picture noise appears after you set the recorder to progressive format, hold down **■**, and press PROGRAM – (minus) on the unit.

### Line1 Input

Sets the method of inputting video signals from the LINE 1 IN jacks on the rear panel of the recorder. Select an option for each of the items below according to the combination of jacks and methods that you are going to use.

<u>Video</u>	Inputs video signals.
S Video	Inputs S video signals.

### Pause Mode (DVDs only)

Selects the picture quality in pause mode.

<u>Auto</u>	The picture, including subjects that move dynamically, is output with no jitter. Normally select this position.
Frame	The picture, including subjects that do not move dynamically, is output in high resolution.

### Colour System

Selects the colour system when playing VIDEO CDs (including Super VIDEO CDs)/DivX video files.

<u>PAL</u>	Plays a disc in PAL colour system.
NTSC	Plays a disc in NTSC colour system.

### Auto Display

<u>On</u>	Automatically displays information on the screen when the recorder is turned on, etc.
Off	Displays information only when DISPLAY is pressed.

### Screen Saver

The screen saver image appears when you do not use the recorder for more than 10 minutes while an on-screen display, such as the System Menu, is displayed on your TV screen. The screen saver image helps prevent your display device from becoming damaged (ghosting).


<u>On</u>	Turns on the screen saver function.
Off	Turns off the function.

## Audio Settings (Audio)

The “Audio” setup allows you to adjust the sound according to the playback and connection conditions.

- 1 Press **SYSTEM MENU** while the recorder is in stop mode.
- 2 Select **“SETUP,”** and press **ENTER.**
- 3 Select **“Audio,”** and press **ENTER.**

The “Audio” setup appears with the following options. The default settings are underlined.

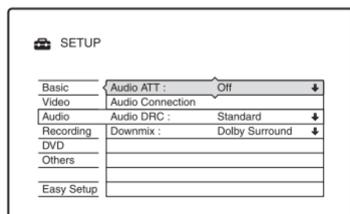

### Audio ATT (attenuation)

If the playback sound is distorted, set this item to “On.” The recorder reduces the audio output level.

This function affects the output of the following jacks:

–LINE OUT R-AUDIO-L jacks

<u>On</u>	Select this when the playback sound from the speakers is distorted.
<u>Off</u>	Normally select this position.


### Audio Connection

The following setup items switch the method of outputting audio signals when you connect a component such as an amplifier (receiver) with a digital input jack.

For connection details, see “Step 3: Connecting the Audio Cords” on page 14. Select “Dolby Digital,” “MPEG,” “DTS,” and “48kHz/96kHz PCM” after setting “Digital Out” to “On.”

If you connect a component that does not accept the selected audio signal, a loud noise (or no sound) will come out from the speakers, and may affect your ears or cause speaker damage.

- 1 Select **“Audio Connection”** in **“Audio,”** and press **ENTER.**

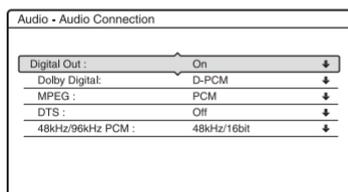

- 2 Select **“Digital Out,”** and press **ENTER.**

<u>On</u>	Normally select this position.
Off	The influence of the digital circuit upon the analogue circuit is minimal.

- 3 Select **“On,”** and press **ENTER.**
- 4 Set the digital output signal.

• **Dolby Digital (DVDs only)**  
Selects the type of Dolby Digital signal.

<u>D-PCM</u>	Select this when the recorder is connected to an audio component lacking a built-in Dolby Digital decoder. The surround effects of output signals are determined by the “Downmix” setting item in the “Audio” setup.
Dolby Digital	Select this when the recorder is connected to an audio component with a built-in Dolby Digital decoder.

- MPEG (DVD VIDEOS only)

Selects the type of MPEG audio signal.

<u>PCM</u>	Select this when the recorder is connected to an audio component without a built-in MPEG decoder. If you play MPEG audio sound tracks, the recorder outputs stereo signals via the DIGITAL OUT (COAXIAL) jack.
MPEG	Select this when the recorder is connected to an audio component with a built-in MPEG decoder.

- DTS (DVD VIDEOS only)

Selects whether or not to output DTS signals.

On	Select this when the recorder is connected to an audio component with a built-in DTS decoder.
<u>Off</u>	Select this when the recorder is connected to an audio component without a built-in DTS decoder.

- 48kHz/96kHz PCM (DVD VIDEOS only)

Selects the sampling frequency of the audio signal.

<u>48kHz/ 16bit</u>	The audio signals of DVD VIDEOS are converted to 48 kHz/16 bit and output.
96kHz/ 24bit	All signals containing 96 kHz/24 bit are output without conversion. However, the signals are output at 48 kHz/16 bit if copyright-protected signals are contained.

#### Note

“48kHz/96kHz PCM” setting has no effect when audio signals are output from the LINE OUT (R-AUDIO-L) jacks. If the sampling frequency is 96kHz, signals are simply converted to analog signals and output.

## Audio DRC (Dynamic Range Control) (DVDs only)

Selects the dynamic range (difference between soft and loud sounds) setting when playing a DVD that conforms to Audio DRC. This affects the output from the following jacks:

- LINE OUT R-AUDIO-L jacks
- DIGITAL OUT (COAXIAL) jack only when “Dolby Digital” is set to “D-PCM” (page 75).

<u>Standard</u>	Normally select this position.
TV Mode	Makes low sounds clear even if you turn the volume down.
Wide Range	Gives you the feeling of being at a live performance.

## Downmix (DVDs only)

Switches the method for mixing down to two channels when you play a DVD which has rear sound elements (channels) or is recorded in Dolby Digital format. For details on the rear signal components, see “4. Displaying the Playing/Remaining Time and Play Information” on page 27. This function affects the output of the following jacks:

- LINE OUT R-AUDIO-L jacks
- DIGITAL OUT (COAXIAL) jack when “Dolby Digital” is set to “D-PCM” (page 75).


<u>Dolby Surround</u>	Normally select this position. Multi-channel audio signals are output to two channels for enjoying surround sounds.
Normal	Multi-channel audio signals are downmixed to two channels for use with your stereo.

## Recording Settings (Recording)

The “Recording” setup allows you to adjust recording settings.

- 1 Press **SYSTEM MENU** while the recorder is in stop mode.
- 2 Select “**SETUP**,” and press **ENTER**.
- 3 Select “**Recording**,” and press **ENTER**.

The “Recording” setup appears with the following options. The default settings are underlined.

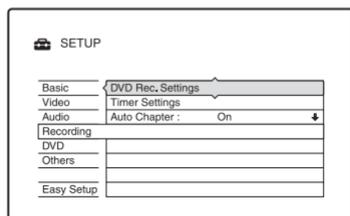

### DVD Rec. Settings

#### ◆ Bilingual Recording (for all recordable discs except DVD-RWs/DVD-Rs in VR mode)

Selects the sound to be recorded on the recordable disc. This setting is not necessary when recording on DVD-RWs/DVD-Rs (VR mode) that record both the main and sub sounds.

<u>Main</u>	Records the main sound for the bilingual programme.
Sub	Records the sub sound for the bilingual programme.

### Timer Settings

#### ◆ Rec Mode Adjust

<u>On</u>	Automatically adjusts the recording mode to enable the entire programme to be recorded (page 38).
Off	Turns off the function.

### Auto Chapter

Selects whether to automatically divide a recording (a title) into chapters during recording or dubbing.

<u>On</u>	Inserts chapter marks at approximately 6 minute intervals.
Off	No chapter mark is inserted.

#### ⚡ Notes


- The actual chapter mark interval may vary depending on the amount of information contained in the video to be recorded.
- Chapter marks are automatically inserted where the recordings start on the tape when “Auto Chapter” is set to “On” during DV dubbing to a DVD-RW/DVD-R (VR mode).

## Disc Settings (DVD)

The “DVD” setup allows you to adjust parental control, language and other DVD related settings.

- 1 Press **SYSTEM MENU** while the recorder is in stop mode.
- 2 Select **“SETUP,”** and press **ENTER**.
- 3 Select **“DVD,”** and press **ENTER**.


The “DVD” setup appears with the following options. The default settings are underlined.

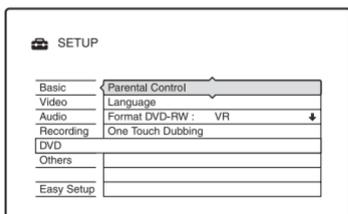


### Parental Control (DVD VIDEO only)

Playback of some DVD VIDEOS can be limited according to a predetermined level, such as the age of the users. Scenes may be blocked or replaced with different scenes.


- 1 Select **“Parental Control”** in **“DVD,”** and press **ENTER**.
  - If you have not entered a password, the display for registering a new password appears.

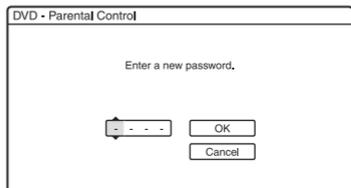


- When you have already registered a password, the display for entering the password appears.

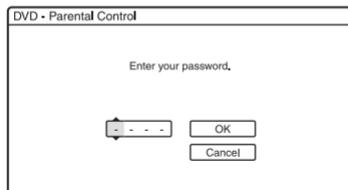

- 2 Enter your four-digit password using the number buttons, then select **“OK”** and press **ENTER**.

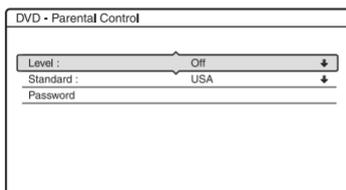


- 3 Select **“Standard,”** and press **ENTER**. The selection items for **“Standard”** are displayed.

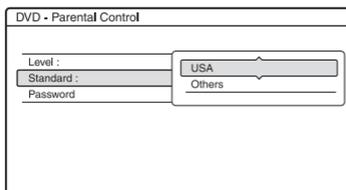

- 4 Select a geographic area as the playback limitation level, and press **ENTER**. The area is selected.
  - When you select **“Others,”** press the number buttons to select and enter an area code in the table (page 94). Then select **“OK”** and press **ENTER**.

- 5 Select “Level,” and press ENTER.  
The selection items for “Level” are displayed.

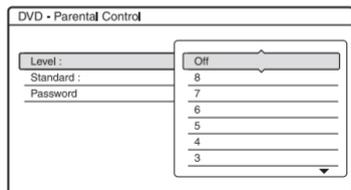

The lower the value, the stricter the limitation.

Discs rated higher than the selected level will be restricted.

- 6 Select the level, and press ENTER.  
The Parental Control setting is complete.

To cancel the Parental Control setting for the disc, set “Level” to “Off” in step 6.

To change the password, select “Password” in step 3, and press ENTER. When the display for registering a password appears, enter a new four-digit password using the number buttons, then select “OK” and press ENTER.

### Notes

- If you forget your password, you will have to reset it by selecting “Parental Control” of “Factory Setup” in the “Others” setup (page 80).
- When you play discs which do not have the Parental Control function, playback cannot be limited on this recorder.
- Depending on the disc, you may be asked to change the Parental Control level while playing the disc. In this case, enter your password, then change the level.

## Language (DVD VIDEO only)

### ◆ DVD Menu

Switches the language for the DVD menu.

### ◆ Audio

Switches the language of the sound track. When you select “Original,” the language given priority in the disc is selected.

### ◆ Subtitle

Switches the language of the subtitles recorded on the disc.

When you select “Audio Follow,” the subtitle language changes according to the language you selected for the sound track.

### Hint

If you select “Others” in “DVD Menu,” “Subtitle,” or “Audio,” select and enter a language code from “Language Code List” on page 94 using the number buttons.

### Note

If you select a language in “DVD Menu,” “Subtitle,” or “Audio” that is not recorded on the DVD VIDEO, one of the recorded languages will be automatically selected.

## Format DVD-RW (DVD-RW only)

The recorder automatically starts formatting in VR mode or Video mode, whichever is selected below, when a new, unformatted DVD-RW is inserted.

<u>VR</u>	Automatically formats the disc in VR mode.
Video	Automatically formats the disc in Video mode.

## One Touch Dubbing

Displays the following options for the One Touch Dub function.

### ◆ Finalise Disc (for all recordable discs except DVD-RW in VR mode)


Selects whether or not to finalise the disc automatically following One Touch Dubbing (page 65).

Auto	Automatically finalises the disc following One Touch Dubbing.
<u>Manual</u>	Allows you to finalise the disc manually.

# Remote Control Settings/ Factory Settings (Others)

The “Others” setup allows you to set up other operational settings.

- 1 Press **SYSTEM MENU** while the recorder is in stop mode.
- 2 Select **“SETUP,”** and press **ENTER**.
- 3 Select **“Others,”** and press **ENTER**.  
The “Others” setup appears with the following options. The default settings are underlined.

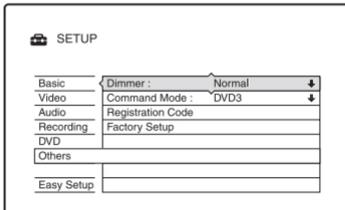

## Factory Setup

Allows you to select the setup settings by group, and return them to their default settings. Note that all of your previous settings will be lost.

- 1 Select **“Factory Setup”** in **“Others,”** and press **➡** or **ENTER**.  
The display for selecting a group of settings appears.
- 2 Select the group of settings you want to return to default from **“Basic,”** **“Video,”** **“Audio,”** **“Recording,”** **“DVD,”** **“Others,”** **“Parental Control,”** and **“All,”** and press **➡** or **ENTER**.
- 3 Select **“Start,”** and press **ENTER**.  
The selected settings return to their default settings.
- 4 Press **ENTER** when **“Finish”** appears.

## Dimmer

Adjusts the lighting of the front panel display.

<u>Normal</u>	Bright lighting.
Save Power	Low lighting. Turns off the lighting when the power is off.

## Command Mode

Changes the Command Mode of the recorder if other DVD equipment is assigned the same Command Mode. For details, see “If you have a Sony DVD player or more than one Sony DVD recorder” on page 17.

## Registration Code

Displays the registration code of DivX video files for this recorder.


For more information, go to <http://www.divx.com/vod> on the Internet.

---

## Easy Setup (Resetting the Recorder)

Select this to run the “Easy Setup” programme.

- 1** Press **SYSTEM MENU** while the recorder is in stop mode.
- 2** Select “**SETUP**,” and press **ENTER**.
- 3** Select “**Easy Setup**,” and press **ENTER**.

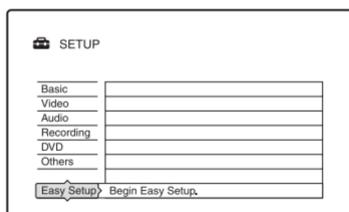

- 4** Select “**Start**.”
- 5** Follow the instructions for “**Easy Setup**” (page 19) from step 2.

## Additional Information

# Troubleshooting

If you experience any of the following difficulties while using the recorder, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

## Power

### The power does not turn on.

- ➔ Check that the AC power cord (mains lead) is connected securely.

## Picture

### There is no picture.

- ➔ Re-connect all connecting cords securely.
- ➔ The connecting cords are damaged.
- ➔ Check the connection to your TV (page 11).
- ➔ Switch the input selector on your TV (such as to "VCR") so that the signal from the recorder appears on the TV screen.
- ➔ This recorder cannot record NTSC signals.
- ➔ When playing a double-layer DVD, the video and audio may be momentarily interrupted at the point where the layers switch.

### Picture noise appears.

- ➔ If the picture output signal from your recorder passes through your VCR to get to your TV, or if you are connected to a combination TV/VIDEO player, the copy-protection signal applied to some DVD programmes could affect picture quality. If you still experience this problem even when you connect your recorder directly to your TV, try connecting your recorder to your TV's S VIDEO input.
- ➔ You have set the recorder to progressive format even though your TV cannot accept the progressive signal. In this case, hold down ■, and press PROGRAM – (minus) on the unit.

- ➔ Even if your TV is compatible with progressive format (525p/625p) signals, the image may be affected when you set the recorder to progressive format. In this case, hold down ■, and press PROGRAM – (minus) on the unit and the recorder is set to normal (interlace) format.
- ➔ You are playing a DVD recorded in a colour system that is different from your TV.
- ➔ When playing a double-layer DVD, the video and audio may be momentarily interrupted at the point where the layers switch.

---

### There is no picture or the picture noise appears when connected to the DV IN jack.

- ➔ Try the following:
  - ① Turn the recorder off and on again.
  - ② Turn the connected equipment off and on again.
  - ③ Disconnect and then connect the i.LINK cable again.

---

### TV programme reception does not fill the screen.

- ➔ Set the channel manually in "Channel Setting" in the "Basic" setup (page 68).
- ➔ Select the correct source using the INPUT SELECT button, or select a channel of any TV programme using the PROG +/- buttons.

---

### TV programme pictures are distorted.

- ➔ Reorient the TV aerial.
- ➔ Adjust the picture (see the TV's instruction manual).
- ➔ Place the recorder and TV farther apart.
- ➔ Place the TV and any bunched aerial cables farther apart.
- ➔ The aerial cable is connected to the AERIAL OUT jack on the recorder. Connect the cable to the AERIAL IN jack.

---

### TV channels cannot be changed.

- ➔ The channel is disabled (page 69).
- ➔ A timer recording started, which changed the channels.

---

### The picture from equipment connected to the recorder's input jack does not appear on the screen.

➔ If the equipment is connected to the LINE 1 IN jack, select "L1" in the front panel display by pressing PROG +/- or INPUT SELECT.

If the equipment is connected to the LINE 2 IN jacks, select "L2" in the front panel display by pressing PROG +/- or INPUT SELECT.

If the equipment is connected to the DV IN jack, (this is usually for a digital video camera connection), select "DV" in the front panel display by pressing INPUT SELECT.

➔ When an S video cable is connected to the recorder's LINE 1 IN jack, set "Line 1 Input" to "S Video" in the "Video" setup (page 74).

---

### The playback picture or TV programme from the equipment connected through the recorder is distorted.

➔ If the playback picture output from a DVD player, VCR, or tuner goes through your recorder before reaching your TV, the copy-protection signal applied to some programmes could affect picture quality. Disconnect the playback equipment in question and connect it directly to your TV.

---

### The picture does not fill the screen.

➔ Set "TV Type" of the "Video Output" in the "Video" setup in accordance with the screen size of your TV (page 73).

---

### The picture does not fill the screen, even though the picture size is set in "TV Type" of the "Video Output" in the "Video" setup.

➔ The picture size of the title is fixed.

## Sound

### There is no sound.

- ➔ Re-connect all connections securely.
- ➔ The connecting cord is damaged.
- ➔ The input source setting on the amplifier or the connection to the amplifier is incorrect.

- ➔ The recorder is in reverse play, fast-forward, slow motion, or pause mode.
- ➔ If the audio signal does not come through the DIGITAL OUT (COAXIAL) jack, check the "Audio Connection" settings in the "Audio" setup (page 75).

➔ The recorder supports only MP3 audio and MPEG audio for DivX video files. Press AUDIO and select MP3 audio or MPEG audio.

---

### Sound distortion occurs.

➔ Set "Audio ATT" in the "Audio" setup to "On" (page 75).

---

### Sound is noisy.

➔ When playing a CD with DTS sound tracks, noise will come from the LINE OUT R-AUDIO-L jacks (page 49).

---

### The sound volume is low.

➔ The sound volume is low on some DVDs. The sound volume may improve if you set "Audio DRC" in the "Audio" setup to "TV Mode" (page 76).

➔ Set "Audio ATT" in the "Audio" setup to "Off" (page 75).

---

### An alternate audio track cannot be recorded or played.

➔ When recording from connected equipment, set "Line Audio Input" in OPTIONS menu to "Bilingual" (page 44).

➔ Multilingual tracks (main and sub) cannot be recorded on DVD+RWs, DVD-RWs (Video mode), DVD+Rs, or DVD-Rs (Video mode). To record the language, set "Bilingual Recording" of the "DVD Rec. Settings" in the "Recording" setup to "Main" or "Sub" before recording (page 77). To record both the main and sub sounds, record on DVD-RWs/DVD-Rs (VR mode).

➔ Any discs other than DVD-RWs/DVD-Rs (VR mode) cannot be used for recording both main and sub sounds.

➔ If you have connected an AV amplifier to the DIGITAL OUT (COAXIAL) jack and want to change the audio track for DVD-RWs/DVD-Rs (VR mode) during playback, set "Dolby Digital" of the "Audio Connection" in the "Audio" setup to "D-PCM" (page 75).

## Playback

### The recorder does not play any type of disc.

- ➔ The disc is upside down. Insert the disc with the labelled side facing up.
- ➔ The disc is not correctly inserted.
- ➔ Moisture has condensed inside the recorder. In this case, if the recorder is on, leave it on (if it is off, leave it off) for about an hour until the moisture evaporates.
- ➔ If the disc was recorded on another recorder and was not finalised (page 32), the recorder cannot play the disc.

### The recorder does not start playback from the beginning.

- ➔ Resume play was activated (page 47).
- ➔ You have inserted a DVD whose Title menu or DVD menu automatically appears on the TV screen when it is first inserted. Use the menu to start playback.

### The recorder starts playing automatically.

- ➔ The DVD VIDEO features an auto playback function.

### Playback stops automatically.

- ➔ If the DVD has an auto pause signal, the recorder stops playback at the auto pause signal.

### Some functions such as Stop, Search, or Slow-motion Play cannot be performed.

- ➔ Depending on the DVD, you may not be able to do some of the operations above. See the instruction manual supplied with the disc.

### The language for the sound track cannot be changed.

- ➔ Multilingual tracks are not recorded on the DVD being played.
- ➔ The DVD VIDEO prohibits the changing of the language for the sound track.
- ➔ Try changing the language using the DVD VIDEO's menu.

### The subtitle language cannot be changed or turned off.

- ➔ Multilingual subtitles are not recorded on the DVD VIDEO.
- ➔ The DVD VIDEO prohibits changing of the subtitles.
- ➔ Try changing the subtitle using the DVD VIDEO's menu.
- ➔ The subtitles cannot be changed for the titles recorded on this recorder.

### The angles cannot be changed.

- ➔ Multi-angles are not recorded on the DVD VIDEO being played.
- ➔ You are trying to change the angles when "⏏" does not appear in the front panel display (page 46).
- ➔ The DVD VIDEO prohibits changing angles.
- ➔ Try changing the angle using the DVD VIDEO's menu.
- ➔ The angles cannot be changed for the titles recorded on this recorder.
- ➔ The angles cannot be changed during slow motion playback or when playback is paused.

### The DivX video files do not play.

- ➔ The file is not created in DivX format.
- ➔ The file has an extension other than ".avi" or ".divx."
- ➔ The DATA CD (DivX video)/DATA DVD (DivX video) is not created in a DivX format that conforms to ISO 9660 Level 1/ Level 2 or Joliet.
- ➔ The DivX video file is larger than 720 (width) × 576 (height).

### The MP3 audio tracks do not play.

- ➔ The MP3 audio tracks are not recorded in a format that the recorder can play (page 52).

### The JPEG image files do not play.

- ➔ The JPEG image files are not recorded in a format that the recorder can play (page 52).
- ➔ Progressive JPEG images cannot be played.

## Recording/Timer recording/ Editing

**The programme position cannot be changed from the programme position you are recording.**

- ➔ Set the TV's input source to "TV."

**Recording does not start immediately after you press ● REC.**

- ➔ Operate the recorder only after "LOAD," "FORMAT," or "INFOWRITE" disappears from the front panel display.

**Nothing was recorded even though you set the timer setting correctly.**

- ➔ There was a power failure during recording.
- ➔ The recorder's internal clock stopped due to a power failure that lasted for more than 1 hour. Reset the clock (page 72).
- ➔ The channel was disabled after the timer recording was set. See "Channel Setting" on page 68.
- ➔ Disconnect the AC power cord (mains lead) from the mains, and connect it again.
- ➔ The programme contains copy protection signals that restrict copying.
- ➔ Other timer setting overlapped the timer setting (page 42).
- ➔ There is no DVD inside the recorder.
- ➔ There is not enough disc space for the recording.
- ➔ The recorder was in the process of DV Dubbing.

**Recording does not stop immediately after you press ■ REC STOP.**

- ➔ It will take a few seconds for the recorder to input disc data before recording can stop.

**Recording does not stop after you press ■.**

- ➔ Press ■ REC STOP.

**Timer recording is not complete or did not start from the beginning.**

- ➔ There was a power failure during recording. If the power recovers when there is a timer recording, the recorder resumes recording. Should the power failure continue for more than 1 hour, reset the clock (page 72).
- ➔ Other timer setting overlapped the timer setting (page 42).
- ➔ Disc space was not enough.

**Contents previously recorded were erased.**

- ➔ Data that is not playable on this recorder but was recorded on a DVD with a PC will be erased from the disc when the disc is inserted.

## Recording from the equipment with a timer

**Nothing was recorded even though you set the Synchro-Rec setting correctly.**

- ➔ You forgot to turn off the connected equipment. Turn off the connected equipment and set the recorder to Synchro-Rec standby mode (page 43).
- ➔ The recorder was not set to the Synchro-Recording standby mode. Press
  - ➔ ● SYNCHRO REC to have the recorder stand by for recording. Make sure the SYNCHRO REC indicator lights up on the front panel (page 43).
- ➔ The equipment is not connected to the LINE 1 IN jacks of the recorder.
- ➔ The recorder is connected to the TV output jack of the connected equipment.

**Synchro-Recording does not complete.**

- ➔ The timer setting for the connected equipment overlapped the recorder's timer setting (page 44).
- ➔ There was a power failure during the recording.

**The recorder automatically starts recording when the satellite receiver is turned on.**

- ➔ The Synchro-Rec function was activated. Turn off the satellite receiver and cancel the Synchro-Rec function (page 43).

## Display

### The clock has stopped.

- ➔ Set the clock again (page 72).
- ➔ The clock stopped due to a power failure that lasted for more than 1 hour. Reset the clock (page 72).

### The clock is wrong.

- ➔ Set the clock again (page 72). If you cannot set the clock, wait until the clock data is received and the clock is automatically adjusted.

### The TIMER REC indicator is flashing.

- ➔ The disc does not have enough space.
- ➔ Insert a recordable disc inside the recorder.
- ➔ The inserted DVD is protected (page 31).

### The recording mode indication is incorrect.

- ➔ When the recording or dubbing is less than ten minutes, or if a picture with little movement is displayed for more than ten minutes, the recording mode indication may be displayed incorrectly. Note that the actual recording or dubbing itself was correctly made in the selected recording mode.
- ➔ After playing titles recorded in EP and SLP mode, the recording mode indication may change depending on the recorded programme.

### The clock does not appear in the front panel display when the recorder is turned off.

- ➔ “Dimmer” in the “Others” setup is set to “Save Power” (page 80).

## Remote control

### The remote does not function.

- ➔ Batteries are weak.
- ➔ The remote is too far from the recorder.
- ➔ The remote’s manufacturer code returned to the default setting when you replaced the batteries. Reset the code (page 16).
- ➔ The remote is not pointed at the remote sensor on the recorder.

- ➔ Different command modes are set for the recorder and remote. Set the same command mode (page 17). The default command mode setting for this recorder and the supplied remote is DVD3.
- ➔ Press ■ (stop) on the unit while the recorder is turned off to check the current command mode.

## Others

### The recorder does not operate properly.

- ➔ Restart the recorder. Press down I/⏻ on the recorder for more than ten seconds until “WELCOME” appears in the front panel display.
- ➔ When static electricity, etc., causes the recorder to operate abnormally, turn off the recorder and wait until the clock appears in the front panel display. Then, unplug the recorder and after leaving it off for a while, plug it in again.

### Five numbers or letters are displayed in the front panel display.

- ➔ The self-diagnosis function was activated (see the table on page 87).

### The disc tray does not open after you press ▲ (open/close).

- ➔ It may take a few seconds for the disc tray to open after you have recorded or edited a DVD. This is because the recorder is adding disc data to the disc.

### The disc tray does not open and “LOCKED” appears in the front panel display.

- ➔ The disc tray is locked. Cancel the Child Lock (page 47).

### The disc tray does not open and “TRAY LOCKED” appears in the front panel display.

- ➔ Contact your Sony dealer or local authorized Sony service facility.

---

**The disc tray does not open and you cannot remove the disc after you press  $\triangle$  (open/close).**

- ➔ Turn off the recorder. Once the clock appears in the front panel display, disconnect the AC power cord (mains lead). (If the recorder does not turn off or if the clock does not appear in the front panel display, disconnect the AC power cord (mains lead) anyway.) Connect the AC power cord (mains lead) again while pressing down  $\triangle$  on the recorder, and release the button when the disc tray opens. Then, keep  $\text{I}/\text{C}$  on the recorder pressed for about ten seconds until "WELCOME" appears in the front panel display.

---

**"RECOVERY" appears in the front panel display.**

- ➔ The recorder's recovery function was activated when the recorder was turned on because the power was turned off or failed during recording. Leave the recorder on until "RECOVERY" disappears from the front panel display.

---

**"FAN ERROR" appears in the front panel display.**

- ➔ Check that the vent on the rear of the recorder is not blocked. Then, immediately disconnect the AC power cord (mains lead). Leave the recorder off for a while, then re-connect the AC power cord (mains lead), and press  $\text{I}/\text{C}$  on the recorder.

---

**Mechanical sound is heard when the recorder is off.**

- ➔ During a timer recording, operational noises (such as the internal fan) may be heard, even when the power is off. This is not a malfunction.

---

## Self-diagnosis Function (When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the recorder from malfunctioning, a five-character service number (e.g., C 13 00) with a combination of a letter and four numbers appears in the front panel display. In this case, check the following table.

---

<b>First three characters of the service number</b>	<b>Cause and/or corrective action</b>
C 13	The DVD is dirty. ➔ Clean the disc with a soft cloth.
C 31	The DVD/CD is not inserted correctly. ➔ Re-insert the disc correctly.
E XX (xx is a number)	To prevent a malfunction, the recorder has performed the self-diagnosis function. ➔ Contact your nearest Sony dealer or local authorized Sony service facility and give the five-character service number. Example: E 61 10

---

---

## Notes About This Recorder

### On operation

- If the recorder is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the recorder. Should this occur, the recorder may not operate properly. In this case, if the recorder is on, leave it on (if it is off, leave it off) for about an hour until the moisture evaporates.
- When you move the recorder, take out any discs. If you don't, the disc may be damaged.

### On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speakers may be damaged when a peak level section is played.

### On cleaning

Clean the cabinet, panel, and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

### On cleaning discs, disc/lens cleaners

**Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the recorder to malfunction.**

### Notes about the discs

- To keep the disc clean, handle the disc by its edge. Do not touch the surface. Dust, fingerprints, or scratches on the disc may cause it to malfunction.



- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.
- Clean the disc with a cleaning cloth. Wipe the disc from the centre out.



- Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for vinyl LPs.
- Do not use the following discs.
  - A disc that has a non-standard shape (e.g., card, heart).
  - A disc with a label or sticker on it.
  - A disc that has cellophane tape or sticker adhesive on it.

# Specifications

## System

**Laser:** Semiconductor laser

### Channel coverage:

PAL/SECAM\* (B/G, D/K, I)

VHF: E2 to E12, R1 to R12, Italian A to H, Ireland A to J, South Africa 4 to 13

UHF: E21 to E69, R21 to R69, B21 to B69

CATV: S01 to S05, S1 to S20

HYPER: S21 to S41

\* not available on Oceanian models

The above channel coverage merely ensures the channel reception within these ranges. It does not guarantee the ability to receive signals in all circumstances. For details, see "Receivable channels" (page 69).

**Video reception:** Frequency synthesizer system

**Audio reception:** Split carrier system

**Aerial out:** 75-ohm asymmetrical aerial socket

**Timer:** Clock: Quartz locked/Timer indication: 24-hour cycle (digital)/Power back-up duration: 1 hour

**Video recording format:** MPEG-2, MPEG-1

### Audio recording format/applicable

**bit rate:** Dolby Digital 2 ch  
256 kbps/128 kbps (in EP and SLP mode)

## Inputs and outputs

### LINE OUT

**(AUDIO):** Phono jack/2 Vrms/10 kilohms

**(VIDEO):** Phono jack/1.0 Vp-p

**(S VIDEO):** 4-pin mini DIN/Y: 1.0 Vp-p,  
C: 0.3 Vp-p (PAL)

### LINE 1 IN/LINE 2 IN

**(AUDIO):** Phono jack/2 Vrms/more than 22 kilohms

**(VIDEO):** Phono jack/1.0 Vp-p

**(S VIDEO):** 4-pin mini DIN/Y: 1.0 Vp-p,  
C: 0.3 Vp-p (PAL)

**DV IN:** 4-pin/i.LINK S100

**DIGITAL OUT (COAXIAL):** Phono jack/  
0.5 Vp-p/75 ohms

### COMPONENT VIDEO OUT

**(Y, P<sub>B</sub>/C<sub>B</sub>, P<sub>R</sub>/C<sub>R</sub>):**

Phono jack/Y: 1.0 Vp-p,

P<sub>B</sub>/C<sub>B</sub>: 0.7 Vp-p,

P<sub>R</sub>/C<sub>R</sub>: 0.7 Vp-p

## General

**Power requirements:** 220-240 V AC,  
50/60 Hz

**Power consumption:** 22 W

### Dimensions (approx.):

430 × 58 × 291 mm (width/height/  
depth) incl. projecting parts

**Mass (approx.):** 3.1 kg

**Operating temperature:** 5°C to 35°C

**Operating humidity:** 25% to 80%

### Supplied accessories:

Audio/video cord (1)

Power cord (mains lead) (1)

Aerial cable (1)

Remote commander (remote) (1)

R6 (size AA) batteries (2)

Specifications and design are subject to change without notice.

## Compatible colour systems

This recorder is designed to record using the PAL colour system and play back using the PAL or NTSC colour systems.

### ◆ For all models except Oceanian models

The signals of the SECAM colour system can be received or recorded but played back in the PAL colour system only. Recording of video sources based on other colour systems cannot be guaranteed.

## About i.LINK

The DV IN jack on this recorder is i.LINK-compliant for digital video cameras. This section describes the i.LINK standard and its features.

### What is i.LINK?

i.LINK is a digital serial interface for handling digital video, digital audio and other data in two directions between equipment having the i.LINK jack, and for controlling other equipment.

i.LINK-compatible equipment can be connected by a single i.LINK cable. Possible applications are operations and data transactions with various digital AV equipment. When two or more i.LINK-compatible equipment are connected to this recorder in a daisy chain, operations and data transactions are possible with not only the equipment that this recorder is connected to but also with other devices via the directly connected equipment.

Note, however, that the method of operation sometimes varies according to the characteristics and specifications of the equipment to be connected, and that operations and data transactions are sometimes not possible on some connected equipment.

### Note

Normally, only one piece of equipment can be connected to this recorder by the i.LINK cable (DV connecting cable). When connecting this recorder to i.LINK-compatible equipment having two or more i.LINK jacks (DV jacks), see the instruction manual of the equipment to be connected.

### About the name “i.LINK”

i.LINK is a more familiar term for IEEE 1394 data transport bus proposed by SONY, and is a trademark approved by many corporations. IEEE 1394 is an international standard standardized by the Institute of Electrical and Electronics Engineers.

### i.LINK baud rate

i.LINK's maximum baud rate varies according to the equipment. Three maximum baud rates are defined:

S100 (approx. 100 Mbps\*)

S200 (approx. 200 Mbps)

S400 (approx. 400 Mbps)

The baud rate is listed under “Specifications” in the instruction manual of each equipment. It is also indicated near the i.LINK jack on some equipment.

The maximum baud rate of equipment on which it is not indicated such as this unit is “S100.”

When units are connected to equipment having a different maximum baud rate, the baud rate sometimes differs from the indicated baud rate.

#### \* What is Mbps?

Mbps stands for megabits per second, or the amount of data that can be sent or received in one second. For example, a baud rate of 100 Mbps means that 100 megabits of data can be sent in one second.

### i.LINK functions on this recorder

For details on how to dub when this recorder is connected to other video equipment having DV jacks, see page 63.

The DV jack on this recorder can only input DVC-SD signals. It cannot output signals. The DV jack will not accept MICRO MV signals from equipment such as a MICRO MV digital video camera with an i.LINK jack.

For further precautions, see the notes on page 63.

For details on precautions when connecting this recorder, also see the instruction manuals for the equipment to be connected.

### Required i.LINK cable


Use the Sony i.LINK 4-pin-to-4-pin cable (during DV dubbing).

i.LINK and  are trademarks.

# Guide to Parts and Controls

For more information, see the pages in parentheses.

## Remote

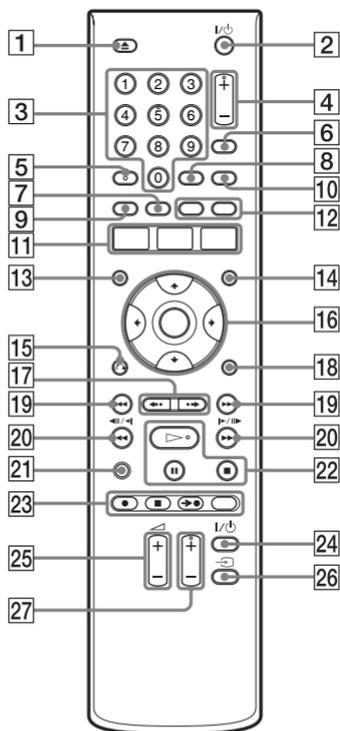


- 1 ▲ (open/close) button (23)
- 2 I/⏻ (on/standby) button (19)
- 3 Number buttons (39, 51)  
The number 5 button has a tactile dot\*.
- 4 PROG (programme) +/- buttons (23)  
The + button has a tactile dot\*.
- 5 AUDIO button (48)  
The AUDIO button has a tactile dot\*.
- 6 INPUT SELECT button (44, 63)
- 7 MENU button (46)
- 8 SUBTITLE button (48)
- 9 TOP MENU button (46)

- 10 TV/DVD button  
(This button has the same function as the 6 INPUT SELECT button.)
- 11 SYSTEM MENU button (65, 68)  
TITLE LIST button (25, 46, 57)  
TIMER button (37, 39)
- 12 CHAPTER MARK button (58)  
CHAPTER MARK ERASE button (58)
- 13 DISPLAY button (27)
- 14 TIMER LIST button (41)
- 15 ↶ RETURN button (41)
- 16 ←/↑/↓/→/ENTER button (19)
- 17 ◀• (instant replay)/•▶ (instant advance) buttons (25, 52)
- 18 OPTIONS button (34)
- 19 ◀◀/▶▶ (previous/next) buttons (48)
- 20 ◀◀◀◀/◀◀/▶▶/▶▶▶▶ (search/slow/freeze frame) buttons (48)
- 21 TIME/TEXT button (27)
- 22 ▷ (play) button (46)  
⏸ (pause) button (48)  
■ (stop) button (46)  
The ▷ button has a tactile dot\*.
- 23 ● REC button (23)  
■ REC STOP button (23)  
➔ ● SYNCHRO REC button (43)  
REC MODE button (23)
- 24 TV I/⏻ (on/standby) button (16)
- 25 TV 🔊 (volume) +/- buttons (16)
- 26 TV ⌂ button (16)
- 27 TV PROG (programme) +/- buttons (16)  
The + button has a tactile dot\*.

\* Use the tactile dot as a reference when operating the recorder.


## Front panel

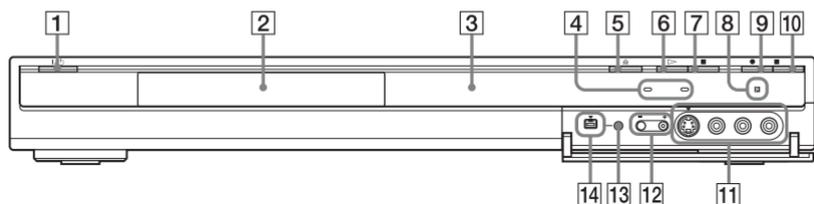

- 1** I/O (on/standby) button (19)
- 2** Disc tray (23)
- 3** Front panel display (28, 93)
- 4** TIMER REC indicator (37)  
SYNCHRO REC indicator (43)
- 5** ⇄ (open/close) button (23)
- 6** ▷ (play) button (46)
- 7** ■ (stop) button (46)
- 8** R (remote sensor) (16)
- 9** ● REC button (23)
- 10** ■ REC STOP button (23)
- 11** LINE 2 IN (S VIDEO/VIDEO/  
L(MONO) AUDIO R) jacks (21)
- 12** PROGRAM +/- buttons (23)  
The + button has a tactile dot\*.
- 13** ONE-TOUCH DUB button (65)
- 14** DV IN jack (63)

\* Use the tactile dot as a reference when operating the recorder.

## Front panel display

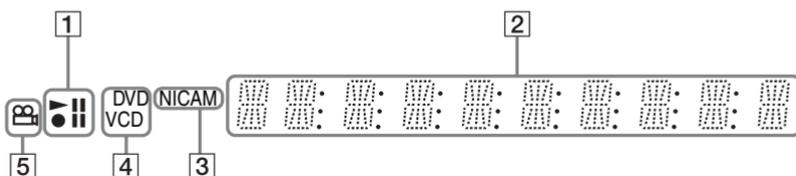


- |   |  |
|---|--|
| <p><b>1</b> Playing/recording status</p> <p><b>2</b> Displays the following (28):</p> <ul style="list-style-type: none"> <li>• Playing time/remaining time</li> <li>• Current title/chapter/track/index number</li> <li>• Recording time/recording mode</li> <li>• Clock</li> <li>• Programme position</li> </ul> | <p><b>3</b> NICAM indicator (36)</p> <p><b>4</b> Disc type*</p> <p><b>5</b>  (angle) indicator (46)</p> |
|---|--|

\* Displays DATA CDs as "CD."

### Hint

You can turn off the front panel display when the recorder is turned off by setting "Dimmer" to "Save Power" in the "Others" setup (page 80).

## Rear panel

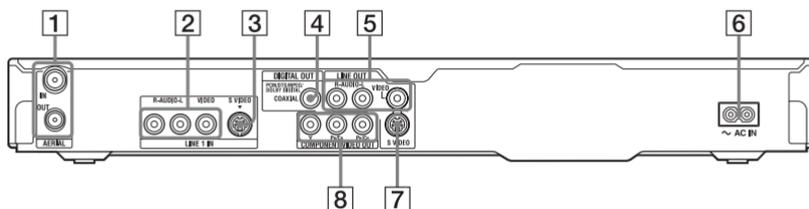

- |   |   |
|---|---|
| <p><b>1</b> AERIAL IN/OUT jacks (11)</p> <p><b>2</b> LINE 1 IN (R-AUDIO-L/VIDEO) jacks (12)</p> <p><b>3</b> LINE 1 IN (S VIDEO) jack (20)</p> <p><b>4</b> DIGITAL OUT (COAXIAL) jack (14)</p> <p><b>5</b> LINE OUT (R-AUDIO-L/VIDEO) jacks (12, 14)</p> | <p><b>6</b> AC IN terminal (15)</p> <p><b>7</b> LINE OUT (S VIDEO) jack (12)</p> <p><b>8</b> COMPONENT VIDEO OUT (Y, Pb/Cb, Pr/Cr) jacks (12)</p> |
|---|---|

## Language Code List

For details, see page 79.

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1183	Irish	1347	Maori	1507	Samoan
1028	Abkhazian	1186	Scots Gaelic	1349	Macedonian	1508	Shona
1032	Afrikaans	1194	Galician	1350	Malayalam	1509	Somali
1039	Amharic	1196	Guarani	1352	Mongolian	1511	Albanian
1044	Arabic	1203	Gujarati	1353	Moldavian	1512	Serbian
1045	Assamese	1209	Hausa	1356	Marathi	1513	Siswati
1051	Aymara	1217	Hindi	1357	Maltese	1514	Sesotho
1052	Azerbaijani	1226	Croatian	1358	Maltese	1515	Sundanese
1053	Bashkir	1229	Hungarian	1363	Burmese	1516	Swedish
1057	Byelorussian	1233	Armenian	1365	Nauru	1517	Swahili
1059	Bulgarian	1235	Interlingua	1369	Nepali	1521	Tamil
1060	Bihari	1239	Interlingue	1376	Dutch	1525	Telugu
1061	Bislama	1245	Inupiak	1379	Norwegian	1527	Tajik
1066	Bengali; Bangla	1248	Indonesian	1393	Occitan	1528	Thai
1067	Tibetan	1253	Icelandic	1403	(Afan)Oromo	1529	Tigrinya
1070	Breton	1254	Italian	1408	Oriya	1531	Turkmen
1079	Catalan	1257	Hebrew	1417	Punjabi	1532	Tagalog
1093	Corsican	1261	Japanese	1428	Polish	1534	Setswana
1097	Czech	1269	Yiddish	1435	Pashto; Pushto	1535	Tonga
1103	Welsh	1283	Javanese	1436	Portuguese	1538	Turkish
1105	Danish	1287	Georgian	1463	Quechua	1539	Tsonga
1109	German	1297	Kazakh	1463	Quechua	1540	Tatar
1130	Bhutani	1298	Greenlandic	1481	Rhaeto- Romance	1543	Twi
1142	Greek	1299	Cambodian	1482	Kirundi	1557	Ukrainian
1144	English	1300	Kannada	1483	Russian	1564	Urdu
1145	Esperanto	1301	Korean	1483	Russian	1572	Uzbek
1149	Spanish	1305	Kashmiri	1489	Russian	1581	Vietnamese
1150	Estonian	1307	Kurdish	1491	Kinyarwanda	1587	Volapük
1151	Basque	1311	Kirghiz	1495	Sanskrit	1613	Wolof
1157	Persian	1313	Latin	1498	Sindhi	1632	Xhosa
1165	Finnish	1326	Lingala	1501	Sango	1665	Yoruba
1166	Fiji	1327	Laothian	1502	Serbo- Croatian	1684	Chinese
1171	Faroese	1332	Lithuanian	1503	Singhalese	1697	Zulu
1174	French	1334	Latvian; Lettish	1505	Slovak		
1181	Frisian	1345	Malagasy	1506	Slovenian	1703	Not specified

## Area Code

For details, see page 78.

Code	Area	Code	Area	Code	Area	Code	Area
2044	Argentina	2165	Finland	2362	Mexico	2149	Spain
2047	Australia	2174	France	2376	Netherlands	2499	Sweden
2046	Austria	2109	Germany	2390	New Zealand	2086	Switzerland
2057	Belgium	2248	India	2379	Norway	2528	Thailand
2070	Brazil	2238	Indonesia	2427	Pakistan	2184	United Kingdom
2079	Canada	2254	Italy	2424	Philippines		
2090	Chile	2276	Japan	2436	Portugal		
2092	China	2304	Korea	2489	Russia		
2115	Denmark	2363	Malaysia	2501	Singapore		

# Index

Words in quotations appear in the on-screen displays.

## Numerics

- 16:9 19, 73
- 4:3 Letter Box 19, 73
- 4:3 Pan Scan 19, 73
- “48kHz/96kHz PCM” 76

## A

- “A-B Erase” 58
- AC power cord (mains lead) 15
- Adjusting
  - playback picture 49
  - playback sound 50
  - recording picture 40
- Aerial 11
- “AFT” 69
- Album 27, 54
- Album number 27
- “Album Search” 51
- Angle 46
- Area code 94
- AUDIO 48
- “Audio” 75, 79
- “Audio ATT” 75
- “Audio Connection” 19, 75
- Audio cord 14
- “Audio DRC” 76
- “Audio Settings” 50
- “Auto Adjust” 72
- “Auto Chapter” 77
- Auto Clock Set 72
- “Auto Display” 74
- “AV SYNC” 50

## B

- “Basic” 68
- Batteries 16
- “Bilingual” 43, 44
- “Bilingual Recording” 77

- Bilingual recording 36
- “BNR” 49
- “Brightness” 41, 49

## C

- CD 9
- “Change Angle” 46
- “Change Order” 61
- “Channel” 69
- “Channel Setting” 68
- “Channel Sort” 71
- Chapter 27, 41, 58
- CHAPTER MARK 58
- CHAPTER MARK ERASE 59
- Chapter number 27
- “Chapter Search” 51
- Chasing Playback 50
- “Check Overlap” 42
- Checking/changing/cancelling timer settings (Timer List) 41
- Child Lock 47
- Clock 19, 72
- “Colour” 41, 49
- “Colour System” 74
- Colour systems 89
- “Combine” 61
- “Command Mode” 18, 80
- COMPONENT VIDEO OUT 12
- Connecting
  - the aerial cable 11
  - the audio cords 14
  - the video cords 12
- “Contrast” 41, 49
- Controlling TVs with the remote 16
- Copy control signals 36
- Copy-Free 36
- Copy-Never 36
- Copy-Once 36
- CPRM 8
- “Create a Playlist” 59
- Creating chapters 58

## D

- DATA CD 9
- “Digital Out” 75
- Digital video camera 63
- “Dimmer” 80
- “Disc Information” 29, 31, 34
- Disc Settings 31, 34, 78
- Disc space 29, 56
- Disc types 7, 56
- “Divide” 62
- DivX video files 52
- Dolby Digital 14, 75
- “Downmix” 76
- DTS 76
- “DV Audio Input” 64
- DV Dubbing 63
  - One Touch Dubbing 65, 79
  - Program Edit 65
- “DV EDIT” 66
- DV IN 63
- “DVD” 78
- “DVD Menu” 79
- “DVD Rec. Picture Size” 40
- “DVD Rec. Settings” 77
- DVD VIDEO 9
- DVD+R 7, 56
- DVD+RW 7, 56
- DVD-R 7, 56
- DVD-RAM 9
- DVD-RW 7, 56

## E

- Easy Setup 19, 81
- Editing 56, 59
  - DV Edit 63
- Enter characters 29
- “Erase” 42, 57, 60, 66
- Erase all titles 58
- “Erase Titles” 57
- “Extend Rec” 38

## F

“Factory Setup” 80  
“File Search” 51  
“Finalise” 33  
“Finalise Disc” 79  
Finalising 32  
“FNR” 49  
“Format” 34  
“Format DVD-RW” 79  
Formatting 34  
Freeze Frame 48  
Front panel 92  
Front panel display 28, 93

## G

GB 34  
G-Code 39

## H

Handling discs 88  
“Hue” 49

## I

i.LINK 90  
INPUT SELECT 44, 64

## J

JPEG image files 52

## L

Labelling 31  
“Language” 79  
LINE 1 IN 20  
LINE 2 IN 21  
“Line Audio Input” 43, 44  
“Line1 Input” 74

## M

Main sound 36, 48, 77  
“Make a Playlist” 61  
Manual Clock Set 72  
MENU 46  
Menu  
    DVD’s Menu 46  
    Top menu 46  
“Mix” 64  
“MNR” 49  
“Modify” 42  
“Move” 60, 66  
MP3 audio tracks 52  
MPEG 76

## N

“Name” 69  
NICAM 36, 69  
Number buttons 30, 39

## O

One Touch Dubbing 65, 79  
Original 26, 56  
“OSD” 19, 72  
“Others” 80

## P

Page mode 26, 42  
Parental Control 47, 78  
Parts and controls 91  
“Pause Mode” 74  
“PB Video Equalizer” 49  
PBC 46  
Picture quality 40, 49  
Picture size 40  
“Play Beginning” 47, 52  
Play mode 27  
Playable discs 9

Playback 9, 46

    DivX video files 52  
    fast forward 48  
    fast reverse 48  
    freeze frame 48  
    instant advance 48  
    instant replay 48  
    JPEG image files 52  
    MP3 audio tracks 52  
    resume play 47  
    slow-motion play 48  
Playing status bar 27  
Playlist 26, 56, 59  
“Present Time” 72  
“Preview” 60, 66  
Program Edit 65  
“Progressive Mode” 74  
“Progressive Output” 73  
“Protect” 57  
“Protect Disc” 31  
Protection  
    disc 31  
    title 57

## Q

Quick guide to disc types 7  
Quick Timer 40

## R

Rear panel 93  
REC 24  
“Rec Mode” 40  
“Rec Mode Adjust” 38, 77  
“Rec NR” 41  
“Rec Settings” 40  
REC STOP 24, 65  
“Rec Video Equalizer” 41  
Recordable discs 7  
“Recording” 77

Recording 35  
    picture adjustment 40  
    recording format 7  
    recording mode 24,  
        35  
    recording time 24, 35  
    while watching  
        another  
        programme 24  
Recording time 35  
Region code 10  
"Registration Code" 80  
Remaining time 27  
Remote 16, 91  
Resetting the recorder 81  
Resume Play 47

## S

S VIDEO 12  
Satellite receiver 22  
Scene List 60  
"Screen Saver" 74  
"Search" 51  
Searching  
    fast reverse/fast  
        forward 48  
    locating the beginning  
        of the title/  
        chapter/track 48  
    search mode 51  
"Set Thumbnail" 57  
"Sharpness" 49  
Simultaneous Rec and Play  
50  
Slow-motion play 48  
Sort 26  
"Stereo1" 64  
"Stereo2" 64  
Sub sound 36, 48, 77  
SUBTITLE 48  
"Subtitle" 79  
Super VIDEO CD 9  
Synchro Rec 43  
"System" 68

## T

Teletext 24, 71  
Thumbnail picture 26  
"Time Search" 51  
TIME/TEXT 28  
TIMER 37  
Timer List 41  
Timer recording  
    check/change/cancel  
        41  
    G-Code 39  
    manual setting 37  
    "Rec Mode Adjust"  
        38  
    Synchro Rec 43  
"Timer Settings" 77  
Title 27  
TITLE LIST 46  
Title List 25, 46  
    Sort 26  
    Thumbnail 26  
"Title Name" 57  
Title number 27  
"Title Search" 51  
TOP MENU 46  
"Track Search" 51  
Troubleshooting 82  
Tuner System 19  
"TV Guide Page" 71  
TV system 68  
TV  16, 24  
"TV Type" 19, 73

## U

"Unfinalise" 33  
Unfinalising 33  
Usable discs 7, 9

## V

"Video" 73  
VIDEO CD 9  
Video cord 12  
Video input 12  
Video mode 7  
"Video Output" 73  
"Video Settings" 49  
VR mode 7

## Z

ZWEITON 36







Printed on 100% recycled paper using  
VOC (Volatile Organic Compound)-free  
vegetable oil based ink.



\*1-2679362115\*

2-679-362-11(1)