

SONY®

4-096-858-31 (1)



409685831

GRAND
WEGA

LCD Colour TV

Operating Instructions _____

GB



Before operating the TV, please read the “Safety Information” section of this manual. Retain this manual for future reference.

KF-50SX300U


KF-60SX300U

NOTICE FOR CUSTOMERS IN THE UNITED KINGDOM

A moulded plug complying with BS1363 is fitted to this equipment for your safety and convenience. Should the fuse in the plug supplied need to be replaced, a 5 AMP fuse approved by ASTA or BSI to BS 1362 (i.e. marked with ⚡ or ⚡) must be used.

When an alternative type of plug is used it should be fitted with a 5 AMP FUSE, otherwise the circuit should be protected by a 5 AMP FUSE at the distribution board.

If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

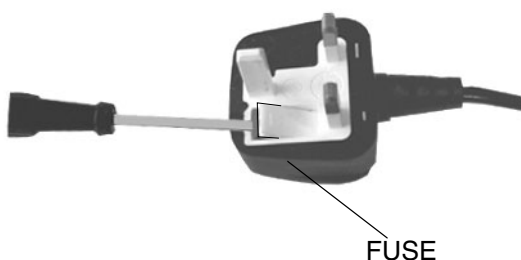

How to replace the fuse

Open the fuse compartment with a blade screwdriver, and replace the fuse.

• **IMPORTANT**

If the plug supplied is not suitable for the socket outlets in your home, it should be cut off and an appropriate plug fitted in accordance with the following instructions:

The wires in this mains lead are coloured in accordance with the following code:

Blue Neutral

Brown Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red. Do not connect either wire to the earth terminal in the plug which is marked by the letter E or by the safety earth symbol Y or coloured green or green and yellow.

WARNING

- To prevent the risk of electric shock, do not insert the plug cut off from the mains lead into a socket outlet. This plug cannot be used and should be destroyed.
- To prevent the risk of fire or electric shock, do not expose the unit to rain or moisture.
- Dangerously high voltages are present inside the set. Do not open the cabinet. Refer servicing to qualified personnel only.

Introduction

Thank you for choosing this Sony product.

Before operating the TV, please read this manual thoroughly and retain it for future reference.

• Symbols used in the manual:









 

 
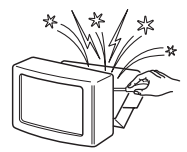
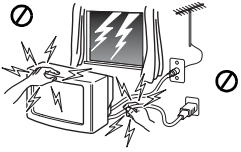
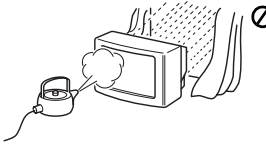
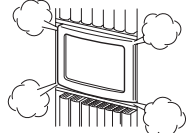
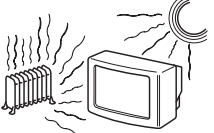
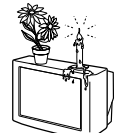



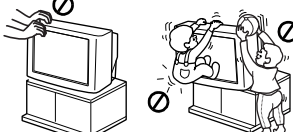

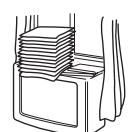
-  Important information.
-  Information on a feature.
- **1,2...** Sequence of instructions.
-  Buttons shaded white on the remote control show you the buttons you have to press to follow the sequence of the instructions.
-  Informs you of the result of the instructions.

Table of Contents

Notice for Customers in the United Kingdom.....	2
Introduction	3
Safety Information.....	4
Overview & Installation	
Checking the Accessories Supplied.....	6
Inserting Batteries into the Remote Control	6
Overview of Remote Control Buttons.....	7
Overview of the TV Buttons	8
Connecting the Aerial and VCR.....	9
Stabilizing the TV set	9
First Time Operation	
Switching on the TV and Automatically Tuning	10
TV Functions	
Introducing and Using the Menu System	12
 The Picture Adjustment menu	13
 The Sound Adjustment menu	14
 The Features menu.....	16
Autoformat	16
AV3 Output	17
Connection Guide.....	17
RGB Centring.....	17
 The Set Up menu	18
Language.....	18
Country.....	18
Auto Tuning	18
Programme Sorting	18
Programme Labels	19
AV Preset	19
Manual Programme Preset.....	20
PAP (Picture And Picture).....	21
Teletext	22
NexTVView	23
Additional Information	
Connecting Equipment to the TV	24
Viewing pictures from equipment connected to the TV.....	25
Remote Control Configuration for VCR or DVD	26
Optimum Viewing area	27
Replacing the lamp.....	28
Technical Specifications.....	30
PC Input Specifications	31
Troubleshooting.....	32
Television Channel Guide for United Kingdom.....	34
How to lift the TV	Back cover

GB

Safety Information

 <p>This set is to operate on a 220-240V AC supply only. Take care not to connect too many appliances to the same power socket as this could result in fire or electric shock.</p>	 <p>For environmental and safety reasons, it is recommended that the TV is not left in standby when unused. Disconnect from the mains. However, some TVs may have features which need the TV to be left in standby to work correctly. The instructions in this manual will inform you if this applies.</p>	 <p>Never push objects of any kind into the set as this could result in a fire or electric shock. Never spill liquid of any kind on the set. If any liquid or solid object does fall through, do not operate the TV. Have it checked immediately by qualified personnel.</p>
 <p>Do not open the cabinet and the rear cover of the TV. Refer to qualified service personnel only.</p>	 <p>For your own safety, do not touch any part of the TV, power lead or aerial lead during lightning storms.</p>	 <p>To prevent fire or shock hazard, do not expose the TV to rain or moisture.</p>
 <p>Do not cover the ventilation openings of the TV. For ventilation, leave a space of at least 10cm all around the set.</p>	 <p>Never place the TV in hot, humid or excessively dusty places. Do not install the TV where it may be exposed to mechanical vibrations.</p>	 <p>Do not place any objects on the TV. To prevent fire, keep inflammable objects or naked lights (e.g. candles) away from the TV.</p>
 <p>Clean the screen and cabinet with a soft, lightly dampened cloth. Do not use any type of abrasive pad, alkaline cleaner, scouring powder or solvent, such as alcohol or benzene, or antistatic spray. As a safety precaution, unplug the TV before cleaning it.</p>	 <p>Pull out the power lead by the plug. Do not pull on the power lead itself.</p>	 <p>Take care not to place heavy objects on the power lead as this could result in damage. We recommend you wind any excess lead around the holders provided on the rear of the TV.</p>
 <p>Place the TV on a secure stable stand. Never attempt to move the TV and stand together - always move the TV and stand separately. Do not place the TV on its side or face up. Do not allow children to climb on to it.</p>	 <p>Unplug the power lead before moving the TV. Avoid uneven surfaces, quick steps or excessive force. If the set has been dropped or damaged, have it checked immediately by qualified service personnel.</p>	 <p>Do not cover the ventilation openings of the TV with items such as curtains or newspapers etc.</p>

Additional Safety Information



- Do not block or cover the ventilation opening situated on the bottom rear of the TV set. For ventilation, leave a space of at least 10 cm from the wall.
- If after transporting the TV set, directly from a cold to a warm location, or if the room temperature has changed suddenly, pictures may be blurred or show poor colour over portions of the picture. This is because condensation has formed on the mirrors or lenses inside the TV set. Let the moisture evaporate before using the TV set.
- To obtain a clear picture, do not expose the screen to direct illumination or direct sunlight. If possible, use spot lighting directed down from the ceiling.
- This TV set incorporates the latest high-precision LCD technology. Even though the highest standards are applied in manufacture it is still possible that a few black dots or bright points (red, green or blue) may be visible on the screen under certain picture conditions. It is not possible to remove them and this is not a fault condition.
- The screen of this TV set has an anti-reflection screen coating. To avoid screen degradation, follow the advice given below:
 - To remove dust from the surface of the screen, wipe with the supplied cleaning cloth or a soft cloth.
 - Clean the screen and cabinet with a soft, lightly dampened cloth. Do not use any type of abrasive pad, alkaline cleaner, scouring powder or solvent, such as alcohol or benzine, or antistatic spray. As a safety precaution, unplug the TV before cleaning it.
 - Avoid touching the screen, and take care not to scratch the surface with hard objects.

Checking the Accessories supplied



2 Batteries (AAA size)



2 Brackets



1 Hexagon key



1 PC input cable



2 Screws



1 Cleaning cloth


1 Remote control (RM-906)

Inserting Batteries into the Remote Control




Make sure you insert the supplied batteries using the correct polarities.


Always remember to dispose of used batteries in an environmental friendly way.

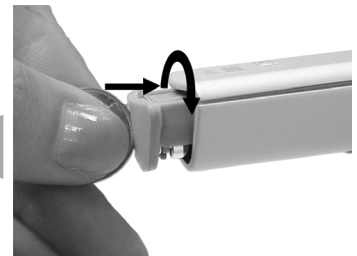

Overview of Remote Control Buttons

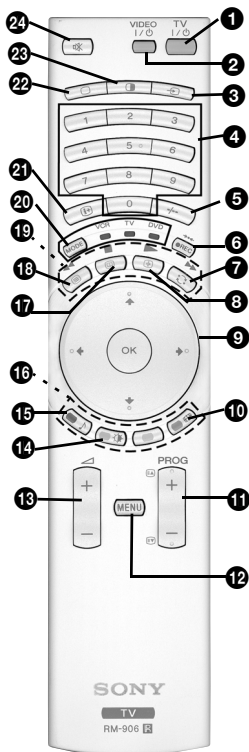


- 1 TV I/O ϕ : To Temporarily Switch Off TV (standby mode):**
 Press this button to temporarily switch off TV (the standby indicator ϕ on the TV lights up). Press again to switch on TV from standby mode.

 -  To save energy we recommend switching off completely when TV is not in use.
 - After 15 minutes without TV signal and without any button being pressed, the TV switches automatically into standby mode.
- 2 VCR or DVD on/off:** press this button to switch your VCR or DVD on or off.
- 3 Selecting input source:** press this button repeatedly until the desired input symbol of the source appears on the TV screen. Refer to page 25.
- 4 Selecting broadcast channels:** if Media Selector (20) is switched to TV, press these buttons to select channels. For double-digit programme numbers, enter the second digit within 2.5 seconds.
- 5 Selecting VCR double-digit:** if Media Selector (20) is switched to VCR, press this button to select double-digit channels for Sony's VCR e.g. 23, press -- first and next the buttons 2 and 3.
- 6 a) Recording button:**
 If Media Selector (20) is switched to VCR, press this button to record programmes.

b) Resetting to factory set levels:
 Press, for a minimum of 3 seconds, to return the picture and sound settings to the factory default levels. This will also return the set to the install condition and the "Auto Tuning" menu will appear on the screen. If this is the case refer to the section "Switching on the TV set and automatically Tuning" (page 11, step 5) of this manual.
- 7 Watching last channel selected:** if Media Selector (20) is switched to TV, press this button to return to the previous channel you were watching (provided you watched it for at least 5 seconds).
- 8 Freezing a teletext page:** in teletext mode, press this button to freeze a teletext page. Press it again to cancel the freeze.
- 9 a) Displaying a channel index:** if Media Selector (20) is switched to TV and MENU is switched off, press OK to display a channel overview. If you want to select a channel, press \downarrow or \uparrow next press again the OK button to watch the selected channel.

b) Navigator: if Media Selector (20) is switched to TV and MENU (12) is switched on, use these buttons to navigate through the menu system of the TV. Refer to page 12.
- 10 Selecting the screen format:** press this button repeatedly to change the format of the screen. Refer to page 16.
- 11 Selecting broadcast channels:** press these buttons to select the next or previous broadcast channel.
- 12 Menu system:** press this button to enter the TV menu system. Refer to page 12.
- 13 Adjusting volume:** press these buttons to increase or decrease the audio volume.
- 14 Selecting picture mode:** press this button repeatedly to change the picture mode. For details on the different picture modes. Refer to page 13.
- 15 Selecting the sound effect:** Press this button repeatedly to change the sound effect. For details on different sound effects. Refer to page 14.
- 16 Fastext:** In Teletext mode, these buttons can be used as Fastext buttons. For details see page 22.
- 17 NexTVView:** press this button to display NexTVView. For details. Refer to page 23.
- 18 Teletext:** press this button to switch on Teletext. For details see page 22.
- 19 Operating VCR or DVD:** if Media Selector (20) is switched to VCR or DVD, these buttons will operate the main functions of your VCR or DVD, once the remote control has been programmed. Refer to page 26.
- 20 Media Selector:** press this button to select which device you want to operate, TV, VCR or DVD. A green light will be momentarily lit to show which one you have selected. For details refer to page 26.
- 21 Displaying Info:** press this button to display all on-screen indication such as channel number, etc. Press again to cancel.
- 22 Selecting TV mode:** press this button to switch off PAP, Teletext or Video input mode.
- 23 PAP (Picture And Picture):** press this button to divide the screen into two for watching two channels simultaneously. Refer to page 21.
- 24 Muting the sound:** press this button to mute the TV sound. Press again to restore the sound.


Overview of the TV Buttons

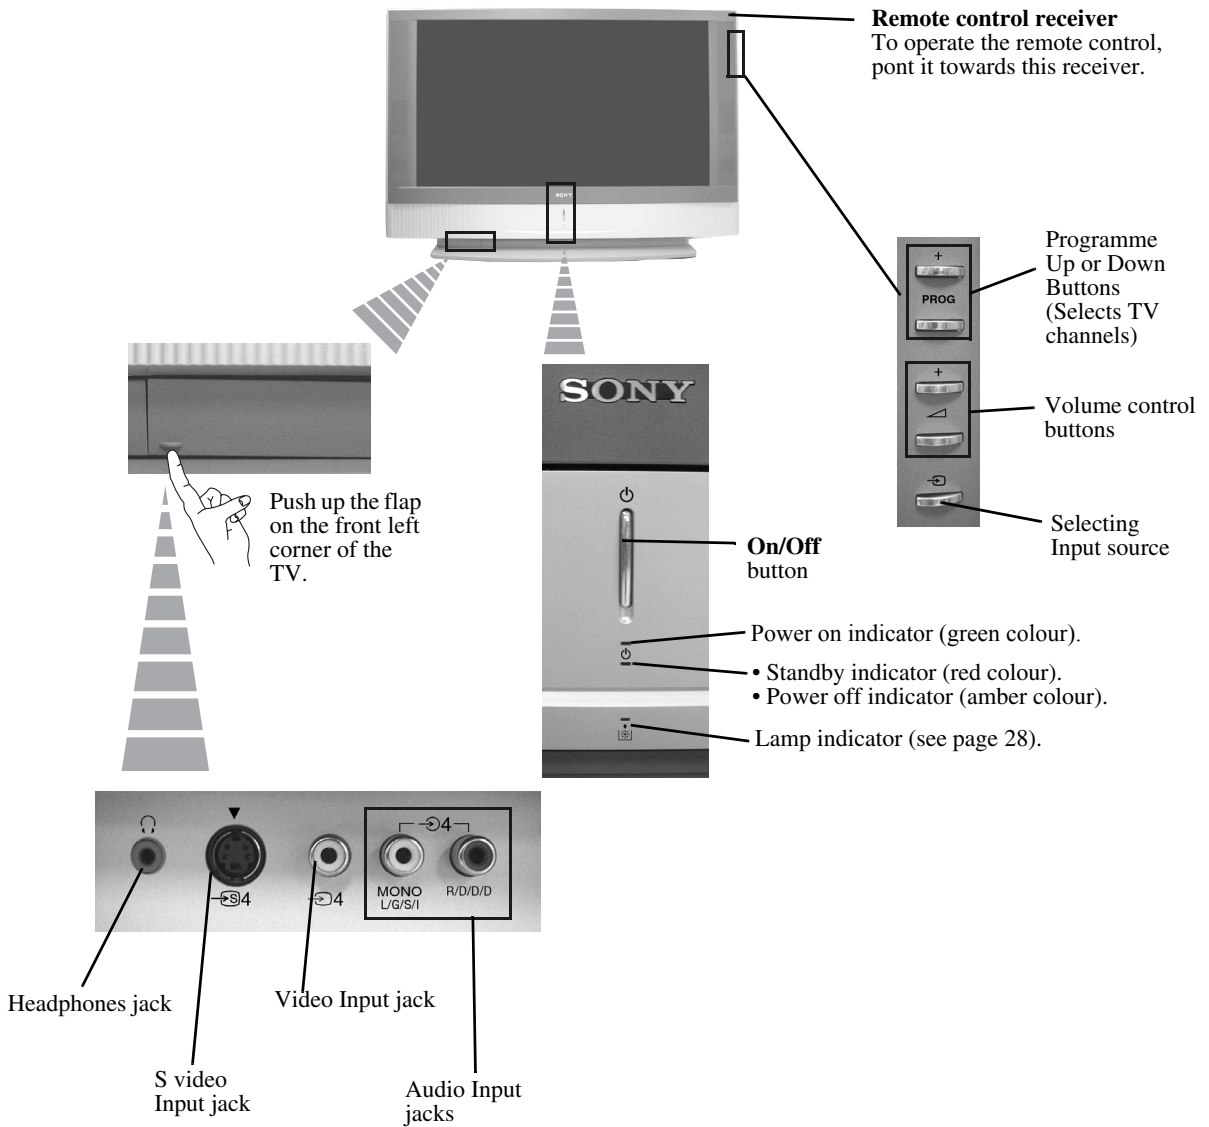

Connecting the Aerial and VCR



- Connecting cables are not supplied.
- For more details of VCR connections as well as other connections, please refer to page 24.

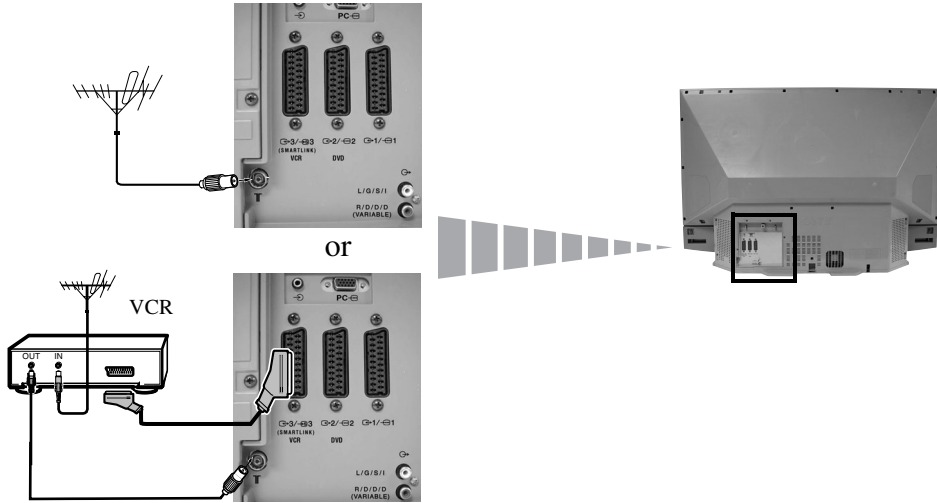

The Scart lead is optional. If you use this optional connection it can improve picture and sound quality when using a VCR.




If you do not use a Scart lead, you will need to manually tune the VCR to a spare channel once the autotune procedure has been completed. Refer to “Manual Programme Preset” on page 20. Also refer to your VCR instruction manual to find out how to find the output channel of your VCR.

Stabilizing the TV set



After setting up, secure the TV set to a wall, etc., using the supplied brackets and screws, for safety purposes.

1 Mount the two supplied brackets with the screws provided to the upper rear side of the TV set.

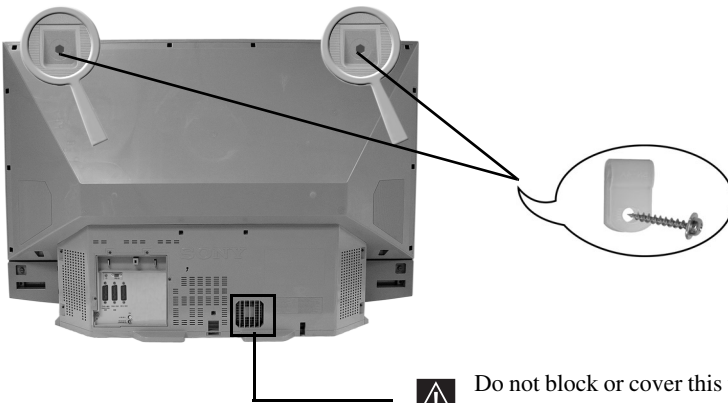


Do not block or cover this ventilation opening. For ventilation, leave a space of at least 10 cm from the wall.

 
2 Pass a strong cord or a chain through each bracket, and then secure to a wall or a pillar, etc.


Switching On the TV and Automatically Tuning

 



i The first time you switch on your TV, a sequence of menu screens appear on the TV enabling you to: 1) choose the language of the menu screen 2) Choose the country in which you are going to operate the TV, 3) check how to connect optional equipment to your TV, 4) search and store all available channels (TV Broadcast) and 5) change the order in which the channels (TV Broadcast) appear on the screen.

However, if you need to change any of these settings at a later date, you can do that by selecting the appropriate option in the  (Set Up menu).


 


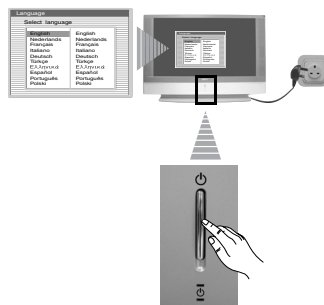-
- 1** Connect the TV plug to the mains socket (220-240V AC, 50Hz)
The first time that the TV set is connected, it is usually turned on.
If the TV is off, press the  on/off button on the TV set to turn on the TV.
The first time you switch on the TV, a **Language** menu displays automatically on the TV screen.



-
- 2** Press the , ,  or  buttons on the remote control to select your language, then press the **OK** button to confirm your selection. From now on all the menus will appear in your chosen language.




-
- 3** The **Country** menu appears automatically. Press the  or  button to select the country in which you are using the TV. Press the **OK** button to confirm your selection.


- i**
- If the country in which you want to use the TV set does not appear in the list, select "off" instead of a country.
 - To avoid wrong teletext characters for cyrillic languages we recommend selecting Russia country if your own country does not appear in the list.



 
continued...

- 4** A diagram will appear showing you how to connect a wide range of equipment to your TV set. Follow the instructions and finally press the **OK** button to remove the picture and continue the automatic process.

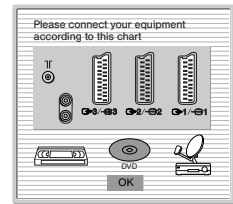


 
-  After the automatic tuning process has finished and the optional equipment has been connected at this stage, we recommend you follow the instructions explained on the section "Connection Guide" on page 17 to get the optimum settings related with the optional equipment.


- 5** The **Auto Tuning** menu appears on the screen. Press the **OK** button to select **Yes**.




 
- 6** The TV starts to automatically search and store all available broadcast channels for you.

-  This procedure could take some minutes. Please be patient and do not press any buttons, otherwise automatic tuning will not be completed.




-  In some countries the TV Broadcaster installs the channels automatically (ACI system). In this case, the TV Broadcaster sends a menu in which you can select your city by pressing the **↓** or **↑** button and **OK** to store the channels.

-  If no channels were found during the auto tune process, a message appears automatically on the screen asking you to connect the aerial. Check the aerial connection (refer to page 9). Press the **OK** button to restart the auto tuning process.




- 7** After all available channels are captured and stored, the **Programme Sorting** menu automatically appears on the screen enabling you to change the order in which the channels are stored.

- a)** If you wish to keep the broadcast channels in the tuned order, go to step 8.

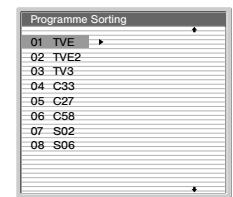


- b)** If you wish to store the channels in a different order:

- 1 Press the **↓** or **↑** button to select the programme number with the channel (TV Broadcast) you wish to move. Press the **→** button.
- 2 Press the **↓** or **↑** button to select the new programme number position for your selected channel (TV Broadcast). Press the **OK** button to store.
- 3 Repeat steps b)1 and b)2 if you wish to change the order of the other channels.

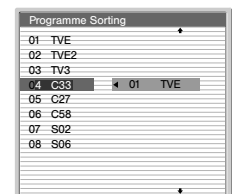


- 8** Press the **MENU** button to remove the menu from the screen



 Your LCD TV is now ready for use


Introducing and Using the Menu System

 Your LCD TV uses an On-Screen menu system to guide you through the operations. Use the following buttons on the Remote Control to operate the menu system:



1 To switch on the menu screens:

Press the **MENU** button to switch the first level menu on.

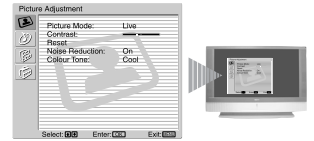

2 To navigate through the menus:

- To highlight and select the desired menu or option, press **↓** or **↑**.
- To enter the selected menu or option, press **OK** or **→**.
- To return to the last menu or option, press **OK** or **←**.
- To alter the settings of your selected option, press **↓/↑/←** or **→**.
- To confirm and store your selection, press **OK**.





3 To switch off the menu screens:

Press the **MENU** button to remove the menu from the screen.



The Picture Adjustment Menu

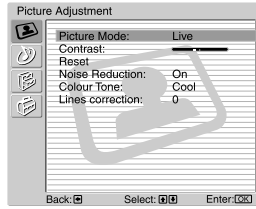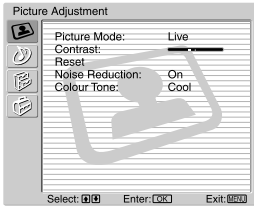

The "Picture Adjustment" menu allows you to alter the picture settings.

To do this:

Press the **MENU** button and then press **OK** to enter this menu. Next press **↓** or **↑** to select the desired option and press **OK**. Finally read below how to operate into each option.



Picture Mode

This option allows you to customise the Picture Mode based on the programme you are watching. After selecting this option press **OK**. Next press repeatedly **↓** or **↑** to select:

Personal (for individual settings).

Live (for live broadcast programmes, DVD and Digital Set Top Box receivers).

Movie (for films).

Once you have selected your desired option, press **OK** to store.



"Brightness", "Colour" and "Sharpness" level of "Live" and "Movie" mode are fixed on the factory to get the best picture quality.

Contrast

Press **←** or **→** to reduce or enhance picture contrast. Next press **OK** to store.

Brightness

Press **←** or **→** to darken or brighten the picture. Next press **OK** to store.

Colour

Press **←** or **→** to decrease or to increase color intensity. Next press **OK** to store.

Hue

Press **←** or **→** to decrease or to increase the green tones. Next press **OK** to store.

Sharpness

Press **←** or **→** to soften or to sharpen the picture. Next press **OK** to store.

Reset

Press **OK** to reset the picture to the factory preset levels.

 
Noise Reduction

This option is set to **On** to automatically reduce the snowy picture visible in the broadcast signal. To cancel this function, press **↓** or **↑** to select **Off**.


Colour Tone

This option allows you to alter the tint of the picture. After selecting this option press **→**. Next press repeatedly **↓** or **↑** to select: **Warm** (gives the white colours a red tint), **Normal** (gives the white colours a neutral tint), **Cold** (gives the white colours a blue tint). Next press **OK** to store.


Lines Correction

 
While viewing an RGB input signal from the PC  connector, some picture lines may be not correctly displayed. To correct this problem, select this option and press **→**. Next press repeatedly **↓** or **↑** to correct it between -20 and +20. Finally press **OK** to store.




- "Brightness" "Colour" and "Sharpness" only appears and only can be altered if "Picture mode" is set to "Personal".
- "Hue" only appears and only can be altered for NTSC signal (e.g. USA video tapes).
- For an RGB input signal connected to the PC  connector, only appear and only can be altered: "Contrast", "Brightness" and "Lines Correction".



The Sound Adjustment Menu

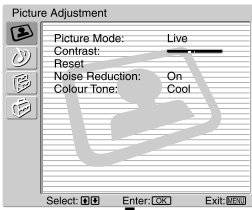

 The “Sound Adjustment” menu allows you to alter the sound settings.

To do this:

Press the **MENU** button and press **↓** to select , then press **OK** to enter this menu. Next press **↓** or **↑** to select the desired option and press **OK**. Finally read below how to operate into each option.

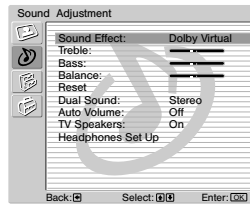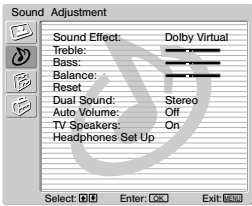

Sound Effect

This option allows you to customise the Sound Effect. After selecting this option press **OK**. Next press repeatedly **↓** or **↑** to select:

- Off** (Flat response).
- Natural** (Enhances clarity, detail and presence of sound by using “BBE High Definition Sound system”^{**}).
- Dynamic** (“BBE High Definition Sound system”^{**} intensifies clarity and presence of sound for better intelligibility and musical realism).
- Dolby** Virtual** (Dolby Virtual, simulates the sound effect of “Dolby Surround Pro Logic”).

Once you have selected your desired option, press **OK** to store.

Treble

Press **←** or **→** to decrease higher-frequency sounds. Next press **OK** to store.

Bass

Press **←** or **→** to decrease or to increase the lower-frequency sounds. Next press **OK** to store.

Balance

Press **←** or **→** to emphasise the left or the right speaker. Next press **OK** to store.

Reset


Press **OK** to reset the sound to the factory preset levels. Next press **OK** to store.

Dual Sound

- For a Stereo broadcast:
Press **↓** or **↑** to select **Stereo** or **Mono**. Next press **OK** to store.
- For a bilingual broadcast:
Press **↓** or **↑** to select **Mono** (for mono channel if available), **A** (for channel 1) or **B** (for channel 2). Next press **OK** to store.

continued...

Auto Volume Press **▼** or **▲** to select **On** (the volume level of the channels will stay the same, independent of the broadcast signal, e.g. in the case of advertisements) or **Off** (the volume level changes according to the broadcast signal). Next press **OK** to store.

 If you select “Dolby Virtual” on the “Sound Effect” option, the “Auto Volume” option will automatically be switched to “Off” and vice versa.

TV Speakers This option allows you to select if you want to listen the TV from the TV speakers or from an external amplifier connected to the audio outputs on the rear of the TV.


 
After selecting this option, press **OK**. Next press repeatedly **▼** or **▲** to select:

On (to listen the TV from the TV set speakers).

One time off (to listen to the TV from the external amplifier only one time. By using this option, any time the TV is turned off/on, it returns to the default setting “On”).

Permanent off (to always listen to the TV from external amplifier).


Once you have selected your desired option, press **OK** to store.


 If you have selected “One time off” or “Permanent off”, the volume of the external equipment can also be altered by pressing the **▲** **+/-** buttons of the remote control. When the volume buttons are pressed, the symbol  will appear indicating that the volume you are altering is not the volume of the TV set speakers, it is from the external equipment.




Headphones Set Up This option allows you to customise the headphones volume and the PAP settings (refer to page 21 for details on PAP).


After selecting this option press **OK**. Next press repeatedly **▼** or **▲** to select:

 **Volume** Press **◀** or **▶** to decrease or increase the volume level from the headphones.


 **Dual Sound**

- For a Stereo broadcast: Press **▼** or **▲** to select **Stereo** or **Mono**
- For a bilingual broadcast: Press **▼** or **▲** to select **Mono** (for mono channel if available), **A** (for channel 1) or **B** (for channel 2).


 **PAP Sound** Select **Frame** if you want to listen to the active screen (framed) of the PAP screen (see page 21), select **Left picture** if you want to listen to the left screen or select **Right picture** if you want to listen to the right screen.

 * The “BBE High Definition Sound system” is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word “BBE” and BBE Symbol are trademarks of BBE Sound, Inc.

**This TV has been designed to create surround sound effect by simulating the sound of four speakers with two speakers, when the broadcast audio signal is Dolby Surround encoded. The sound effect can also be improved by connecting a suitable external amplifier (for details refer to page 25).


** Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol  are trademarks of Dolby Laboratories.

The Features Menu

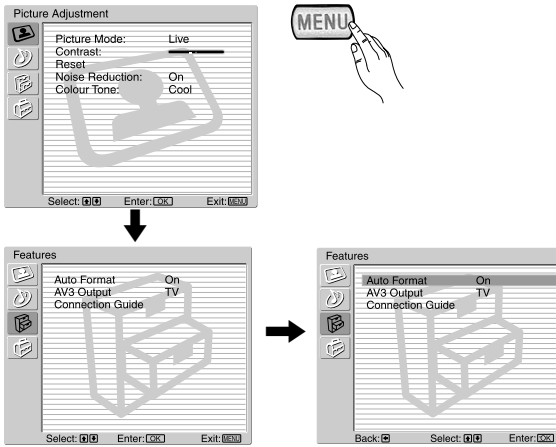

i The “Features” menu allows you to alter various settings of the TV.

 To do this:


Press the **MENU** button and press **↓** twice to select , then press **OK** to enter this menu. Next press **↓** or **↑** to select the desired option and press **OK**. Finally read below how to operate into each option.

AUTO FORMAT

This option allows you to automatically change the aspect ratio of the screen.

To do this:

After selecting the option, press **OK**. Then press **↓** or **↑** to select **On** (if you wish the TV set to automatically switch the screen format according to the broadcast signal) or **Off** (if you wish to keep your preference). Finally press **OK** to store.

i Even if you have selected “On” or “Off”, you can always modify the format of the screen by pressing  repeatedly on the remote control to select one of the following formats:



SMART: Imitation of wide screen effect for 4:3 broadcast.



4/3: Conventional 4:3 picture size, full picture information.



14/9: Compromise between 4:3 and 16:9 picture size.




ZOOM: Widescreen format for letterbox movies.



WIDE: For 16:9 broadcast. Full picture information.



- i** In “SMART”, “ZOOM” and “14/9” modes, parts of the top and bottom of the screen are cut off. Press **↓** or **↑** to adjust the position of the image on the screen (e.g. to read subtitles).
- Only “WIDE” and “4/3” modes can be selected for an RGB signal connected to the PC  connector.
- According to the format of diffusion, black bands can always appear whatever the selected mode.

AV3 OUTPUT


This option allows you to select the source to be output from the Scart connector $\rightarrow 3 / \leftarrow 3$ so that you can record from this Scart any signal coming from the TV or from an external equipment connected to the Scart connector $\rightarrow 1 / \leftarrow 1$, $\rightarrow 2 / \leftarrow 2$ or front connectors $\rightarrow 4$ or $\leftarrow 4$ and $\rightarrow 4$.

 If your VCR supports SmartLink, this procedure is not necessary.

To do this:

Once you have entered into the "Features" menu as it is explained in the previous page and after selecting the option, press OK. Then press \downarrow or \uparrow to select the desired output signal:

- TV** to output the aerial source.
- AV1** to output sources connected to $\rightarrow 1 / \leftarrow 1$.
- AV2** to output sources connected to $\rightarrow 2 / \leftarrow 2$.
- AV4** to output sources connected to $\rightarrow 4$ or $\leftarrow 4$ and $\rightarrow 4$.
- AUTO** to output the signal that is being viewed on the TV.

-  • If you select "AUTO", the output signal will always be the same one that is displayed on the screen.
- If you have connected a decoder to the Scart $\rightarrow 3 / \leftarrow 3$ or to a VCR connected to this Scart, please remember to change back the "AV3 Output" to "TV" for correct unscrambling.



GB

CONNECTION GUIDE

Even you have already connected the external equipment to the TV set, it is important for you to follow the instructions of this menu. If you proceed in this way, you will get the optimum picture settings related with the optional equipment.

To do this:

- 1** Once you have entered the "Features" menu as it is explained in the previous page and after selecting the option, press **OK**. Next press \downarrow or \uparrow to chose the equipment you want to connect among the available: **SAT** (satellite), **Decoder**, **DVD**, **GAME**, **VIDEO** or **DVD rec.** (DVD recorder). Next press \rightarrow to select the equipment chosen (equipment selected also can be deleted by pressing \leftarrow). Once you have selected all the equipment to be connected, press \downarrow or \uparrow to select "**Confirm**" and press **OK**.
- 2** A new menu will appear showing you on which Scart connector of the rear of the TV should be connected each equipment. Please connect each equipment according to this information to get the optimum picture setting of the optional equipment.
- 3** Once you have connected the optional equipment, press \leftarrow or \rightarrow to select "**OK**" and finally press the **OK** button of the remote control.

We strongly recommend you to follow our connection proposals, but in case you do not agree press \leftarrow or \rightarrow to select "No" and next press the OK button. A new menu appears on the screen in which you can assign the connections according to your preferences.

RGB CENTRING


 This option is only available if an RGB source has been connected to the TV.

This option allows you to readjust the horizontal position of the picture in case you need to do it when connecting an RGB source.

To do this:


Once you have entered the "Features" menu as it is explained in the previous page and while watching an RGB source select the "RGB Centring" option and press **OK**. Then press \downarrow or \uparrow to adjust the centre of the picture between -5 and +5. Finally press **OK** to confirm and store.



The Set Up Menu

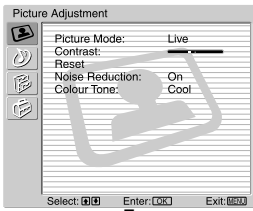

The “Set Up” menu allows you to alter various options on this TV.

To do this:

Press the **MENU** button and press **↓** three times to select , then press **OK** to enter this menu. Next press **↓** or **↑** to select the desired option and press **OK**. Finally read below how to operate into each option.

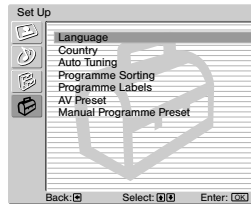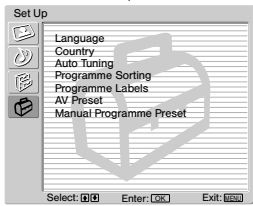

LANGUAGE

This option allows you to select the language that menus are displayed in.

To do this:

After selecting the option, press **OK** and then proceed in the same way as in step 2 of the section “Switching On the TV and Automatically Tuning” on page 10.

COUNTRY

This option allows you to select the country in which you wish to operate the TV set.

To do this:

After selecting the option, press **OK** and then proceed in the same way as in step 3 of the section “Switching On the TV and Automatically Tuning” on page 10.

AUTO TUNING

This option allows you to automatically search for and store all available TV channels.

To do this:

After selecting the option, press **OK** and then proceed in the same way as in the steps 5 and 6 of the section “Switching On the TV and Automatically Tuning” on page 11.

PROGRAMME SORTING

This option allows you to change the order in which the channels (TV Broadcast) appear on the screen.

To do this:


After selecting the option, press **OK** and then proceed in the same way as in the step 7 of the section “Switching On the TV and Automatically Tuning” on page 11.

continued...

PROGRAMME LABELS

This option allows you to name a channel using up to five characters (letters or numbers).

To do this:

- 1 Once you have entered the "Set Up" menu as it is explained in the previous page and after selecting the option, press **OK**, then press **▼** or **▲** to select the programme number with the channel you wish to name. Next press **OK**.
- 2 With the first element of the **Label** column highlighted, press **OK** and **▼**, **▲**, **◀** or **▶** to select the letter, next press **OK**.
When you have finished, press **▼**, **▲**, **◀** or **▶** to select the word "End" on the screen and finally press **OK** to turn off the menu from the screen.
 -  • To correct the letter, select "◀" on the screen to go back and press **OK**.
 - For a blank, select "□" on the screen and press **OK**.

AV PRESET

This option allows you to:


- a) Designate a name to the external equipment you have connected to the input sockets of the TV set.

To do this:


- 1 Once you have entered the "Set Up" menu as it is explained in the previous page and after selecting the option, press **OK**, then press **▼** or **▲** to select the input source you wish to name: **AV1**, **AV2** or **AV3** for the rear Scarts, **AV4** for front connectors and **AV5** for the PC input connector. Next press **OK** twice.

- 2 A label automatically appears in the label column:

- a) If you want to use one of the predefined labels, press **▼** or **▲** to select the desired label and finally press **OK**.

 The total predefined labels are: **VIDEO**, **DVD**, **CABLE**, **GAME**, **CAM** (camcorder), **SAT** (satellite) or **PC** (only for the AV5).

- b) If you want to set a different label, select **Edit** and press **OK**. Then, with the first element highlighted, press **▼**, **▲**, **◀** or **▶** to select the letter, next press **OK**. When you have finished, press **▼**, **▲**, **◀** or **▶** to select the word "End" on the screen and finally press **OK** to turn off the menu from the screen.

-  • To correct the letter, select "◀" on the screen to go back and press **OK**.
- For a blank, select "□" on the screen and press **OK**.

- b) Change the input sound level of the optional equipment connected.

To do this:

Once you have entered the "Set Up" menu as it is explained in the previous page and after selecting the option press **OK**, then press **▼** or **▲** to select the input source you want to alter the input sound level: **AV1**, **AV2** or **AV3** for the rear Scarts and **AV5** for the PC input connector. Next press twice **▶** to highlight the **Sound Offset** column. Finally press **OK** and **▼** or **▲** to alter the input sound level between -9 and +9.


continued...

MANUAL PROGRAMME PRESET

This option allows you to:

- a) Preset channels or the VCR channel one by one to the programme order of your choice.

To do this:


 

- 1 Once you have entered the "Set Up" menu as it is explained on page 18 and after selecting the "Manual Programme" option, press **OK**. Next with **Programme** option highlighted press **OK**. Press **↓** or **↑** to select which programme number you want to preset the channel on (for VCR, select programme number "0"). Then press **←**.
- 2  The following option is only available depending on the country you have selected in the "Country" menu.
After selecting the **System** option, press **OK**. Then press **↓** or **↑** to select the TV Broadcast system (**B/G** for western European countries, **D/K** for eastern European countries, **L** for France or **I** for United Kingdom). Then press **←**.
- 3 After selecting the **Channel Number** option, press **OK**. Next press **↓** or **↑** to select the channel tuning ("C" for terrestrial channels or "S" for cable channels). Then press the number buttons to enter directly the channel number of the TV Broadcast or the channel of the VCR signal. If you do not know the channel number, press **→** and **↓** or **↑** to search for it. When you have tuned the desired channel, press **OK** twice to store.

Repeat all the above steps to tune and store more channels.

- b) Label a channel using up to five characters.

To do this:

Once you have entered the "Set Up" menu as it is explained on page 18 and after selecting the "Manual Programme" option, press **OK**. Next with the **Programme** option, highlighted press the **PROG +/-** button to select the programme number with the channel you wish to name. When the programme you want to name appears on the screen, select the **Label** option and press **OK**. Then, with the first element highlighted, press **↓**, **↑**, **←** or **→** to select the letter, next press **OK**. When you have finished, press **↓**, **↑**, **←** or **→** to select the word "End" on the screen and finally press **OK** to turn off the menu from the screen.

-  • To correct the letter, select "" on the screen to go back and press **OK**.
- For a blank, select "" on the screen and press **OK**.

- c) Fine tune the broadcast reception. Normally the automatic fine tuning (AFT) will give the best possible picture, however you can manually fine tune the TV to obtain a better picture reception in case the picture is distorted.

To do this:



While watching the channel (TV Broadcast) you wish to fine tune, and once you have entered the "Set Up" menu as it is explained on page 18 and after selecting the "Manual Programme" option, press **OK**. Then select the **AFT** option and press **→**. Next press **↓** or **↑** to adjust the fine tuning between -15 and +15. Finally press **OK** twice to store.


- d) Skip any unwanted programme numbers when they are selected with the **PROG +/-** buttons.

To do this:

Once you have entered the "Set Up" menu as it is explained on page 18 and after selecting the "Manual Programme" option, press **OK**. Next with the **Programme** option highlighted, press the **PROG +/-** button to select the programme number you want to skip. When the programme you want to skip appears on the screen, select the **Skip** option and press **→**. Next press **↓** or **↑** to select **On**. Finally press **OK** twice to confirm and store.

To cancel this function afterwards, select "Off" instead of "On" in the step above.

- e) View and record scrambled channels (e.g. from a pay TV decoder) when using a decoder connected to Scart  3/  3 directly or through a VCR.

-  This option is only available depending on the country you have selected in the "Country" menu.

To do this:

Once you have entered the "Set Up" menu as it is explained on page 18 and after selecting the "Manual Programme Preset" option, press **OK**. Next select the **Decoder** option and press **→**. Next press **↓** or **↑** to select **On**. Finally press **OK** twice to confirm and store.

To cancel this function afterwards, select "Off" instead of "On" in the step above.

PAP (PICTURE AND PICTURE)

i PAP divides the screen into two to watch two pictures in format 4:3 simultaneously.



Switching PAP on and off

1 Press **PAP** to display PAP.

i One of the screens will be framed to indicate that this is the active screen. It means that when you want to select the PAP source, you will be doing it in the active screen.

2 Press **PAP** again to remove PAP.

i On the screen appears a banner guiding you how to operate PAP. This banner will disappear after some seconds but it always can be displayed again by pressing the **INFO** button.



Changing the active screen

A This is only possible if Media Selector is set to TV.

To change the active screen (framed), press the **←** or **→** buttons.

Selecting PAP source

1 **Selecting a TV channel:**

Press the **←** button to select the left screen as the active screen. Next press the number buttons or **PROG +/-** to select a TV channel.

A Video input signals can not be displayed on the left screen.

2 **Selecting an input source:**

Press the **→** button to select the right screen as the active screen. Next press repeatedly the **↻** button to watch the input signal of a connected equipment onto the TV right screen. For more details on which input symbol you want to choose, please see section "Viewing pictures from equipment connected to the TV" on page 25.

A RF signal (TV broadcast channels) can not be displayed on the right screen.

Selecting the sound

The sound of the active screen (framed) always comes from the TV set loudspeakers. Besides that, you can listen to the active screen as well as the non active screen via headphones.

To do this:

With the PAP switched on, refer to the section "The Sound Adjustment Menu", select "Headphones Set Up" and set the option "PAP Sound" according your preference. For details see page 15.

i In PAP mode, the output from the Scart **2/2** is fixed to the right picture.

GB

Teletext

i Teletext is an information service transmitted by most TV stations. The index page of the teletext service (usually page 100) gives you information on how to use the service. To operate teletext, use the remote control buttons as indicated below.

A Teletext errors may occur if you use a channel (TV Broadcast) with a weak signal.



To switch on Teletext :

- 1 Select the broadcast channel which carries the teletext service you wish to view.
- 2 Press the **P&T** button one time to enter Picture and Text (P&T) mode. The screen is divided into two with the Text display on the left and the TV channel in the right corner.
- 3 If you wish to view the Text in full screen mode, press the **P&T** button a second time.



To select a Teletext page:

Input 3 digits for the page number, using the numbered buttons.

- If you make a mistake, retype the correct page number.
- If the counter on the screen continues searching, it is because the page is not available. If this is the case, input another page number.

To access the next or preceding page:

Press PROG + (**▲**) or PROG - (**▼**).

To freeze a teletext page:

Press **Freeze**. Press it again to cancel the freeze.

To select a sub page:

A teletext page may consist of several sub pages. In this case, one or more arrows appear next to the page number and an information box is displayed at the bottom of the screen showing the number of sub pages contained on this page. As soon as sub pages are available, they start to automatically run. If you want to stop the show and select your desired sub page, press repeatedly **Left** or **Right**.

To Switch Off Teletext:

Press **Off**.

Fastext

- i** Fastext service lets you access Teletext pages with one button push. When you are in Teletext mode and Fastext is broadcast, a colour coded menu appears at the bottom of the teletext page. Press the appropriate coloured button (red, green, yellow or blue) to access the page corresponding to your menu choice.

NexTVView*

*(depending on availability of service).

i NexTVView is an on-screen electronic programme guide, providing you with programme information for different broadcasters. When looking for information you can search by theme (sports, art, etc...) or date.

A If wrong characters appear when viewing NexTVView, use the menu system to enter the “Language” menu (see page 18) and select the same language as the NexTVView is broadcasted.


Displaying NexTVView




- 1** Select a broadcast channel providing a NexTVView service. In this case the indication “NexTVView” is displayed as soon as data is available.
- 2** To see NexTVView service you have two different types of NexTVView interface. These depend on the % of available data:
 - a) “Programme List” interface:
Whilst you are watching TV, and after the indication “NexTVView” (coloured white) is displayed on the screen, press the **⏏** button on the remote control to watch the “Programme List” interface (see fig. 1).
 - b) “Overview” interface:
Whilst you are watching TV, and after more than 50% of NexTVView data is available (100% data may not be available depending on the area) the indication “NexTVView” (coloured black) is displayed on the screen. Press the **⏏** button on the remote control to watch the “Overview” interface (see fig. 2).
- 3** To navigate through NexTVView:
 - Press **◀** or **▶** to move left or right.
 - Press **↓** or **↑** to move downwards or upwards.
 - Press **OK** to confirm a selection.
 - If you have selected a programme, press **OK** to get more information on the selected programme.
- 4** To switch NexTVView off, press the **⏏** button on the remote control.

GB

“Programme List” interface (fig. 1):

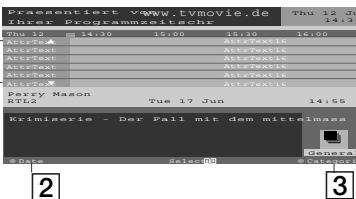

“Overview” interface (fig. 2):

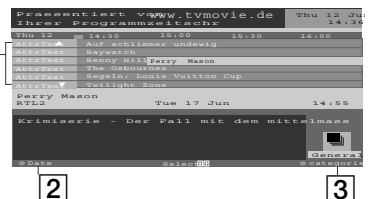

1 Programme list

2 Date:
Press the **red button** of the remote control to display the date screen, you can select the desired date by pressing **↓** or **↑**. Next press **OK** to confirm.

3 Categories:
Press the **blue button** of the remote to display the icons (see below the Icon’s key) for different themes. Next press **↓** or **↑** to select the desired icon and finally press the **OK** button to confirm.


Icons’ key:

- General:**
All the programme information is listed by time and broadcast channels order.
- News**
- Movie**
- Sports**

- Show**
- Children**
- Arts**
- Music**

Connecting Equipment to the TV

- i** • Using the following instructions you can connect a wide range of optional equipment to your TV set.
- Connecting cables are not supplied.

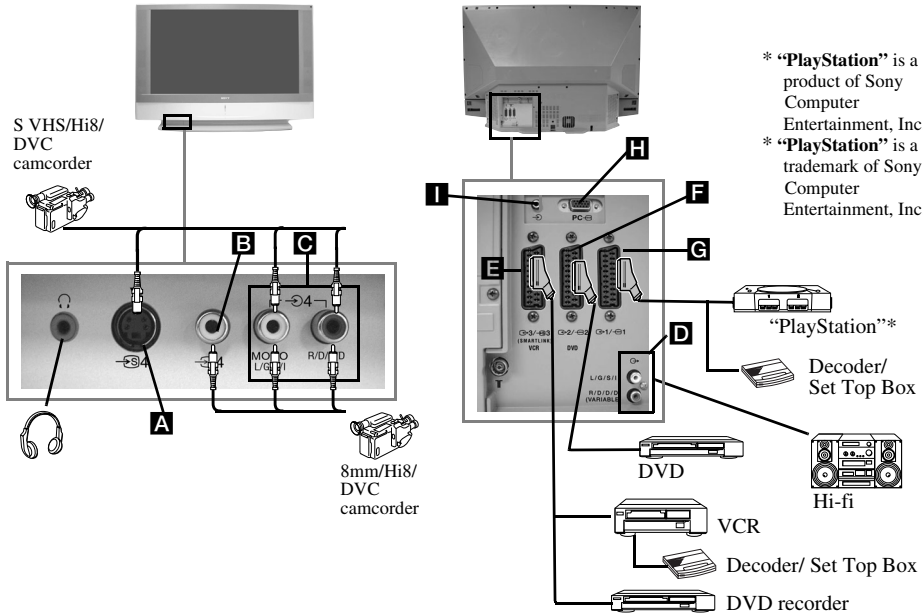

- A** • To avoid picture distortion, do not connect external equipment to connectors **A** and **B** at the same time.
- Do not connect a Decoder to the Scart **F**.

Connecting a VCR

To connect a VCR, please refer to the section "Connecting the aerial and VCR" of this instruction manual on page 9.

Connecting a VCR that supports SmartLink

i SmartLink is a direct link between the TV set and the VCR. For more information on SmartLink, please refer to the instruction manual of your VCR.

If you use a VCR that supports SmartLink, please connect the VCR to the TV using a Scart lead to the Scart **3/3 E**.

If you have connected a decoder or a Set Top Box to the Scart **3/3 E** or through a VCR connected to this Scart


Select the "Manual Programme Preset" option in the "Set Up" menu and after entering in the "Decoder**" option, select "On" (refer to page 20). Repeat this option for each scrambled signal.

**This option is only available depending on the country you have selected in the "Country" menu.

continued...

Connecting Audio Equipment to the TV


Connect your audio equipment to the audio output sockets **D** if you wish to amplify the audio output from TV. Next, using the menu system, select the "Sound Adjustment" menu and set the "TV Speakers" to "One time off" or "Permanent off" (see page 15).

 The volume of the external speakers can be altered by pressing the volume buttons on the remote control. The Treble and Bass settings can also be altered through the "Sound Adjustment" menu (see page 14).

To enjoy "Dolby Virtual" sound effect through your audio equipment

Place the speakers of your equipment in front of your listening position and beside the TV set, keeping a distance of 50 cm between each speaker and the TV set.


Then by using the menu system, select the menu "Sound Adjustment". Next select "Dolby Virtual" on the "Sound Effect" option (see page 14).

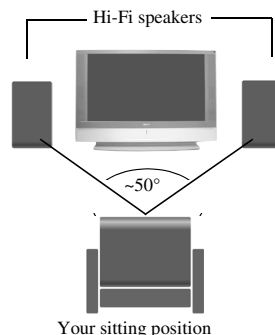










GB


Viewing pictures from equipment connected to the TV





- 1 Connect your equipment to the designated TV socket, as indicated in the previous page.
- 2 Switch on the connected equipment.
- 3 To watch the picture of the connected equipment, press the  button repeatedly until the correct input symbol appears on the screen.

Symbol Input Signals

- | | |
|---|--|
|  | • Audio / video input signal through the Scart connector G |
|  | • RGB input signal through the Scart connector G . This symbol appears only if an RGB source has been connected. |
|  | • Audio / video input signal through the Scart connector F . |
|  | • RGB input signal through the Scart connector F . This symbol appears only if an RGB source has been connected. |
|  | • Audio/video input signal through the Scart connector E . |
|  | • S Video Input signal through the Scart connector E . This symbol appears only if an S Video source has been connected. |
|  | • Video input signal through the phono socket B and Audio input signal through C . |
|  | • S Video Input signal through the front S Video input jack A and Audio signal through C . This symbol appears only if an S Video source has been connected. |
|  | • RGB input signal through the PC connector H and I . |

- 4 Press the  button on the remote control to return to the normal TV picture.

  For Mono Equipment

Connect the phono plug to the L/G/S/I socket on the front of the TV and select  or  input signal using the instructions above. Next, refer to the "Sound Adjustment" section of this manual and set "Dual Sound" option to "A" on the sound menu screen (see page 14).

Remote Control Configuration for VCR or DVD


i In its default condition this remote control will operate the basic functions of this Sony TV, Sony DVDs and most Sony VCRs. To control VCRs and DVDs of other manufacturers (and some Sony VCR models), the remote control needs to be configured.

fig. 3 To do this:



- A** • Before you start, look up the 3 digit code for your brand of DVD or VCR from the list below. On those brands that have more than one code, enter the first code number.
- A small label is added inside the battery door to allow you to record your brand codes.


- 1** Press the **Media Selector button** until the required green light (VCR or DVD) is lit (see fig. 1).
- 2** Before the green light goes out, press and hold the **yellow button** for approximately 6 seconds until the green light (VCR or DVD) starts flashing (see fig. 2.).
- 3** While the VCR and DVD lights are flashing, enter all three digits of the code for your brand of VCR or DVD (see the list below) using the **number buttons** on the remote control (see fig. 3).

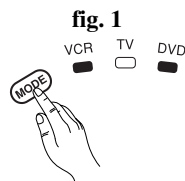

i If your selected code is entered correctly, the three green lights will be lit momentarily. Otherwise repeat all the above steps.

- 4** Turn on your VCR or DVD and check that the main functions work.

A • If your device is not working or some of the functions do not work please check that you entered the correct code set or try the next code listed against the brand.

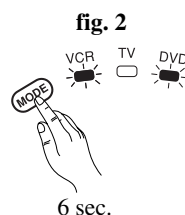

• Not all brands are covered and not all models of every brand may be covered.


- 5** Always remember to press **Media Selector button** until the green light illuminates according to the equipment you want to operate with this remote control: **VCR, TV** or **DVD**.

VCR Brand List		DVD Brand List	
Brand	Code	Brand	Code
SONY (VHS)	301, 302, 303, 308, 309,362	SONY	001, 029, 030, 036, 037, 038, 039, 040, 041, 042, 043, 044, 053, 054, 055
SONY (BETA)	303, 307, 310	AIWA	021
SONY (DV)	304, 305, 306	AKAI	032
AIWA	325, 331, 351	DENON	018, 027, 020, 002
AKAI	326, 329, 330	GRUNDIG	009, 028, 023, 024, 016, 003
DAEWOO	342, 343	HITACHI	025, 026, 015, 004, 035
GRUNDIG	358, 355, 360, 361, 320, 351, 366	JVC	006, 017
HITACHI	327, 333, 334	KENWOOD	008
JVC	314, 315, 322, 344, 352, 353, 354, 348, 349	LG	015, 014, 034
LG	332, 338	LOEWE	009, 028, 023, 024, 016, 003
LOEWE	358, 355, 360, 361, 320, 351	MATSUI	013, 016
MATSUI	356, 357	ONKYO	022, 033
ORION	328	PANASONIC	018, 027, 020, 002, 045, 046, 047
PANASONIC	321, 323	PHILIPS	009, 028, 023, 024, 016, 003, 031
PHILIPS	311, 312, 313, 316, 317, 318, 358, 359, 363, 364	PIONEER	004, 050, 051, 052
SAMSUNG	339, 340, 341, 345	SAMSUNG	011, 014
SANYO	335, 336	SANYO	007
SHARP	324	SHARP	019, 027
THOMSON	319, 350, 365	THOMSON	012
TOSHIBA	337	TOSHIBA	003, 048, 049
		YAMAHA	018, 027, 020, 002

Optimum Viewing Area


i For the best picture quality, try to position the TV set so that you can view the screen from within the areas shown below.

Horizontal viewing area

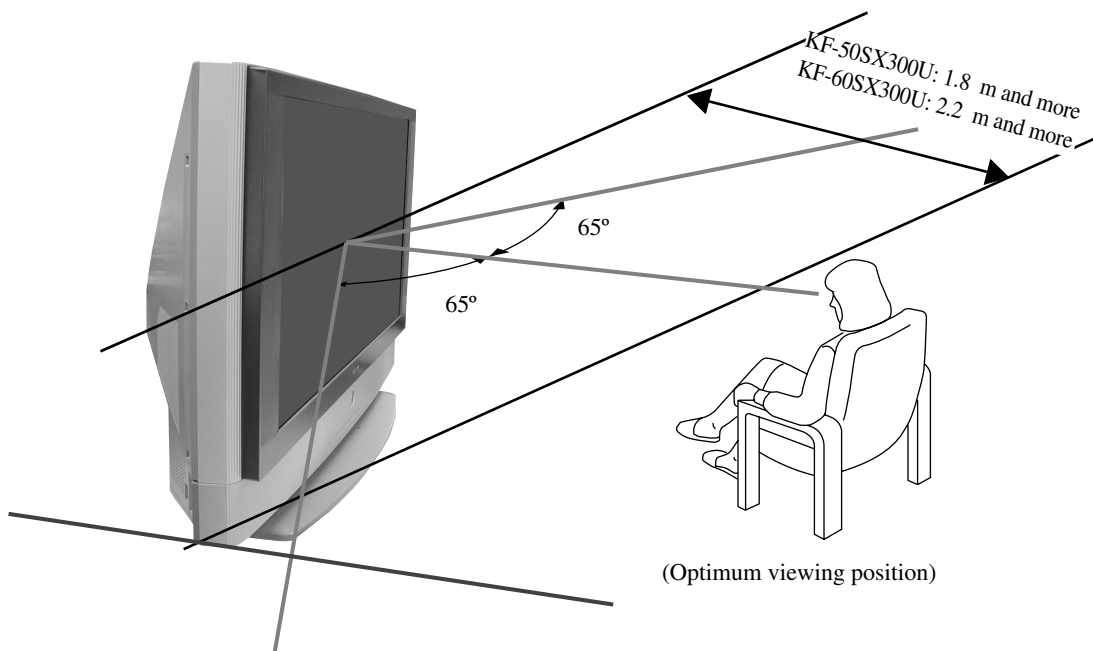


GB

Vertical viewing area

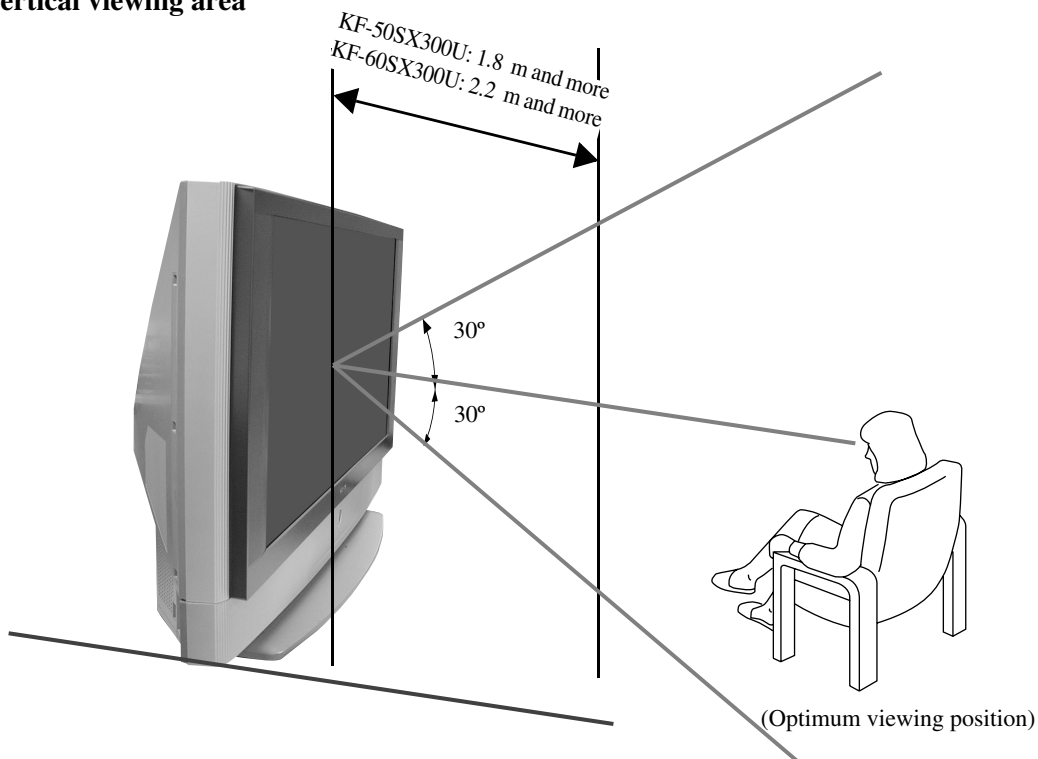


Replacing the lamp


i When the lamp becomes dark or the picture colour is not normal or the lamp indicator  on the TV set flashes, replace with a new lamp.

- A**
- Only use the lamp XL-2100E for replacement. If you use another lamp, it may cause damage to the TV set.
 - Do not remove the lamp except when replacing it.
 - Before replacing the lamp, turn off the power and disconnect the power cord.
 - Replace the lamp only after it becomes cool. The front glass of the lamp remains at least 100 °C (212 °F) even after the power has been turned off for 30 minutes.
 - Do not place the old lamp in proximity to children or flammable material.
 - Do not get the old lamp wet, or insert objects inside the lamp. It may cause the lamp to explode.
 - Do not place the old lamp near easily flammable objects, as this may cause fire. Also, do not put your hand inside the lamp compartment, as you may be burned.
 - Attach the new lamp securely. If it is not securely attached, the picture may become dark.
 - Do not touch or stain the front glass of the new lamp or the glass of the lamp compartment. If the glass become dirty, the picture quality may deteriorate or the lamp life may shorten.
 - Attach the lamp cover firmly. If it is not firmly attached, the power will not turn on.
 - When the lamp burns out, a noise is audible. This does not indicate damage to the TV set.
 - Consult your nearest Sony service center to obtain a new lamp.
 - Always remember to dispose of used lamps in an environmentally friendly way.

 1 Turn off the power and disconnect the power cord.


- If you start changing the lamp without disconnecting the power cord, the standby indicator  on the TV set flashes. Disconnect the power cord to continue changing the lamp.
- Replace the lamp 30 minutes or more after the power is turned off to allow it to cool.
- Prepare the new lamp.

2 Loosen the two screws placed on the left and right corner of the rear of the TV with an object such as a coin.

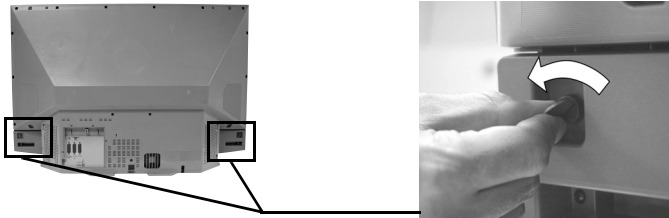


3 Remove the front panel.

Remove the front panel without moving the TV set

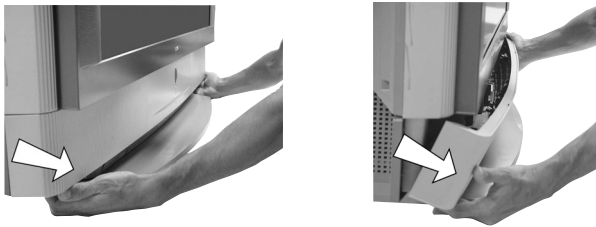


A Grasp the left and right side of the front panel with your fingers and pull it forward. Be careful not to catch your fingernails.


4 Loosen the screw with an object such as a coin and remove the lamp cover.

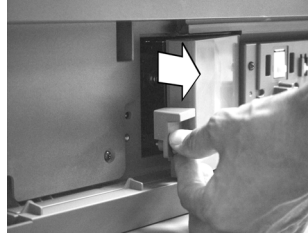


5 Loosen the two screws and pull out the lamp.

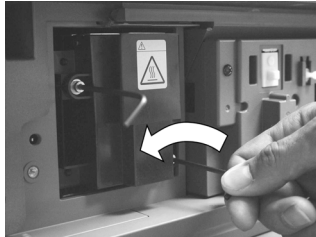

Loosen two screws with the hexagon key supplied.

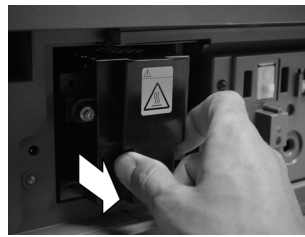

Pull out the lamp by the handle.

 The lamp is still extremely hot immediately after the power is turned off. Be careful that you don't touch the front glass or surrounding area of the lamp or the glass of the lamp compartment.

6 Attach the new lamp.

Replace the new lamp securely in the lamp receptacle and fasten the screws tightly using the hexagon key supplied.

7 Attach the lamp cover.

Fasten the screw tightly with an object such as a coin.

8 Attach the front panel.

Attach the front panel by pushing left and right side into place. Next, fast again the two screws placed on the left and right corner of the rear of the TV.

Technical Specifications

TV system:

Depending on your country selection:
B/G/H, D/K, L, I

Colour system:

PAL
SECAM, NTSC 3.58, 4.43 (only Video In)

Channel Coverage:

VHF: E2-E12
UHF: E21-E69
CATV: S1-S20
HYPER: S21-S41
D/K: R1-R12, R21-R69
L: F2-F10, B-Q, F21-F69
I: UHF B21-B69

Panel System:

 
LCD (Liquid Crystal Display) panel.

Projected picture size:

- KF-50SX300U: 50 inches (approx. 127 cm measured diagonally).
- KF-60SX300U: 60 inches (approx. 153 cm measured diagonally).


Rear Terminals

• AV1




21-pin scart connector (CENELEC standard) including audio/video input, RGB input, TV audio/video output.

 • AV2



21-pin Scart connector (CENELEC standard) including audio / video input, RGB input, monitor audio/video output.

 • AV3



21-pin Scart connector (CENELEC standard) including audio / video input, S video input, selectable audio / video output and SmartLink interface.

- audio outputs (Left/Right) - phono jacks

- PC audio input - minijack.

- PC input.

Front Terminals

- 4 S Video input – 4 pin DIN
- 4 video input – phono jack
- 4 audio input – phono jacks
- headphones jack

Sound Output:

2 x 20 W (music power)
2 x 10 W (RMS)
Woofer:
30 W (music power)
15 W (RMS)

Power Consumption:

210 W

Standby Power Consumption:

≤ 1 W

Dimensions (w x h x d) :

- KF-50SX300U:
approx. 1376 x 923 x 442 mm.
- KF-60SX300U:
approx. 1618 x 1062 x 542 mm.

Weight:

- KF-50SX300U:
approx. 37.5 kg.
- KF-60SX300U:
approx. 48.5 kg.

Accessories supplied:

- 1 Remote Control (RM-906)
- 2 Batteries (IEC designated, AAA size)
- 1 PC input cable.
- 1 Hexagon key.
- 2 Brackets.
- 2 Screws.
- 1 Cleaning Cloth.

Other features:

- Digital Comb Filter (High resolution).
- Teletext, Fasttext, TOPtext.
- NexTView.
- SmartLink.
- TV system autodetection.
- Dolby Virtual.
- BBE Digital.
- NICAM.
- PAP.
- ACI (Auto Channel Installation).
- Auto Format.

Optional accessories:

- Stand especially designed for these sets (SU-5060SX3).

Design and specifications are subject to change without notice.

This instruction manual has been printed on:

Ecological Paper - Totally Chlorine Free

PC Input Specifications

PC Input Timing

Input signal frequency:

Horizontal: 31,4 - 48,4 KHz.

Vertical: 59 - 61 Hz.

Maximum Resolution: 1024 dots x -768 lines.

Preset mode timing table for PC

N°	Resolution (dots x lines)	Graphic mode	Horizontal frequency (kHz)	Vertical frequency (Hz)
1	640 x 480	VESA 60	31.469	59.940
2	800 x 600	VESA 60	37.879	60.317
3	1024 x 768	VESA 60	48.363	60.004

GB

Troubleshooting





Here are some simple solutions to problems which may affect the picture and sound.

TV

Problem	Solution
No picture (screen is dark) and no sound.	<ul style="list-style-type: none">• Check the aerial connection.• Plug the TV in and press the ⓘ button on the front of the TV.• If the standby indicator ⓪ is on, press TV I/⓪ button on the remote control.
Poor or no picture (screen is dark), but good sound.	<ul style="list-style-type: none">• Using the menu system, select the “Picture Adjustment” menu and select “Reset” to return to the factory settings (see page 13).
No picture or no menu information from equipment connected to the Scart connector.	<ul style="list-style-type: none">• Check that the optional equipment is on and press the ↺ button repeatedly on the remote control until the correct input symbol is displayed on the screen (see page 25).
Good picture, no sound.	<ul style="list-style-type: none">• Press the ∟ + button on the remote control.• Check that “TV Speakers” is “On” in the “Sound Adjustment” menu (see page 14).• Check that headphones are not connected.
No colour on colour programmes.	<ul style="list-style-type: none">• Using the menu system, select the “Picture Adjustment” menu and select “Reset” to return to factory settings (see page 13).
When you switch on the TV the last channel you were watching before switching the TV off does not appear.	<ul style="list-style-type: none">• This is not a malfunction. Press the number buttons on the remote control to select the desired channel.
Distorted picture when changing programmes or selecting teletext.	<ul style="list-style-type: none">• Turn off any equipment connected to the Scart connector on the rear of the TV.
Wrong characters appear when viewing teletext.	<ul style="list-style-type: none">• Use the menu system to enter the “Country” menu (see page 18) and select the country in which you operate the TV set. For cyrillic languages, we recommend selecting Russia country if your own country does not appear in the list.
Wrong characters appear when viewing NexTVView.	<ul style="list-style-type: none">• Use the menu system to enter the “Language” menu (see page 18) and select the same language that NexTVView is broadcast in.
Snowy picture when viewing a TV channel.	<ul style="list-style-type: none">• Using the menu system, select the “Manual Programme Preset” menu and adjust Fine Tuning (AFT) to obtain better picture reception (see page 20).• Using the menu system, select the “Noise Reduction” option in the “Picture Adjustment” menu and select “On” to reduce the noise in the picture (see page 13).
No unscrambled picture whilst viewing an unscrambled channel with a decoder or a Set Top Box connected through the Scart connector ⓪ 3/ ⓪ 3.	<ul style="list-style-type: none">• Using the menu system, select the “Features” menu and set “AV3 Output” to “TV” (see page 17).• Check that the Decoder or the Set Top Box is not connected on the scart ⓪ 2/ ⓪ 2.

continued...

Problem	Solution
↓, ↑, ← and → buttons do not work in PAP mode.	<ul style="list-style-type: none"> • PAP navigation is only possible in TV mode, please check that Media Selector is set to TV.
Remote control does not function.	<ul style="list-style-type: none"> • Be sure you are pointing it towards the remote control receiver (see page 8). • Check that the Media Selector on the remote control is set to the device you are using (VCR, TV or DVD). • If the remote control does not operate the VCR or DVD even when the Media Selector has been set correctly. Enter the necessary code set as explained on page 26. • Replace the batteries.
The standby indicator  on the TV flashes.	<ul style="list-style-type: none"> • Contact your nearest Sony service centre.
The lamp indicator  on front of the TV set is lit.	<ul style="list-style-type: none"> • Turn the TV off. Turn the TV on again, if the lamp indicator is still lit then replace the internal lamp. For details refer to pages 28 and 29.

Personal Computer

Problem	Solution
If no picture is displayed and the NO SYNC message appears on the screen.	<ul style="list-style-type: none"> • Check that the video signal cable is properly connected and all plugs are firmly seated in their sockets. • Check that the 15-Dsub video input connector's pins are not bent or pushed in. <p>Personal Computer output format</p> <ul style="list-style-type: none"> • Check that the output signal format of the Personal computer is set to the corresponding format for the television. In case it is not, adjust the resolution and refresh rate to the corresponding signal (refer to page 31). <p>Problems caused by the connected computer</p> <ul style="list-style-type: none"> • The computer is in power saving mode. Try pressing any key on the computer keyboard. • Check that the computer's keyboard is properly connected. • Check that the computer's power is "on". • Check that the graphic board is completely seated in the proper bus slot. • In case of a notebook PC, check that the monitor signal is set to the external output, and the signal is correctly output to the television.
Some picture lines are not correctly displayed.	<ul style="list-style-type: none"> • Using the menu system, select the "Picture Adjustment" menu and adjust the "Lines Correction" option between -20 and +20 (see page 13).
Blurred letters or vertical lines or shade or noise is visible in detailed patterns.	<ul style="list-style-type: none"> • Small letters, check or mesh patterns cannot be accurately displayed. In this case, increase the size of the fonts and/or reduce the mesh pattern brightness.
The Startup or the Setting screens of the Personal Computer cannot be displayed.	<ul style="list-style-type: none"> • Depending on the PC, the Startup or Setting screens may not be displayed due to the output format of the image. These screens can be displayed on the monitor of the Personal Computer.



- If you continue to experience problems, have your TV serviced by qualified personnel.
- Never open the casing yourself.

Television Channel Number Guide channels

i Only the main transmitters are listed. Information regarding the regional sub-relay channel numbers can be obtained by contacting The BBC Engineering Information Dept., Telephone Number 020 7852 5040.

MAIN TRANSMITTERS	BBC1	BBC2	ITV	CH4	CH5
London & South East					
① Bluebell Hill	40	46	43	65	-
② Crystal Palace	26	33	23	30	-
③ Dover	50	56	66	53	-
④ Heathfield	49	52	64	67	-
⑤ Oxford	57	63	60	53	49
South-West					
⑥ Beacon Hill	57	63	60	53	-
⑦ Caradon Hill	22	28	25	32	-
⑧ Huntshaw Cross	55	62	59	65	67
⑨ Redruth	51	44	41	47	37
⑩ Stockland Hill	33	26	23	29	-
Channel Islands					
⑪ Fremont Point	51	44	41	47	-
South					
⑫ Hannington	39	45	42	66	-
⑬ Midhurst	61	55	58	68	-
⑭ Rowridge	31	24	27	21	-
West					
⑮ Mendip	58	64	61	54	37
East					
⑯ Sandy Heath	31	27	24	21	39
⑰ Sudbury	51	44	41	47	-
⑱ Tacolneston	62	55	59	65	52
Midlands (West)					
⑲ Ridge Hill	22	28	25	32	-
⑳ Sutton Coldfield	46	40	43	50	-
㉑ The Wrekin	26	33	23	29	-
Midlands (East)					
㉒ Waltham	58	64	61	54	-
Northern Ireland					
㉓ Brougher Mountain	22	28	25	32	-
㉔ Divis	31	27	24	21	-
㉕ Limavady	55	62	59	65	-
North					
㉖ Belmont	22	28	25	32	56
㉗ Emley Moor	44	51	47	41	37
North-West					
㉘ Winter Hill	55	62	59	65	48
North-East					
㉙ Bilsdale West Moor	33	26	29	23	-
㉚ Caldbeck	30	34	28	32	56
㉛ Chatton	39	45	49	42	-
㉜ Pontop Pike	58	64	61	54	-
Scotland					
㉝ Angus	57	63	60	53	-
㉞ Black Hill	40	46	43	50	37
㉟ Sandale	22	67	-	-	-
㊱ Caldbeck	-	-	28	32	56
㊲ Craigkelly	31	27	24	21	48
㊳ Darvel	33	26	23	29	-
㊴ Durris	22	28	25	32	67
㊵ Eitshal (Lewis)	33	26	23	29	-
㊶ Keelylang Hill	40	46	43	50	-
㊷ Knock More	33	26	23	29	-
㊸ Rosemarkie	39	45	49	42	-
㊹ Rumster Forest	31	27	24	21	-
㊺ Selkirk	55	62	59	65	52
Wales					
㊻ Blaenplwyf	31	27	24	21	56
㊼ Carmel	57	63	60	53	-
㊽ Llanddona	57	63	60	53	-
㊾ Moel-y-Parc	52	45	49	42	-
㊿ Presely	46	40	43	50	37
① Wenvoe	44	51	41	47	-

