




CD/DVD-spiller


Oppstartsveiledning

1

A

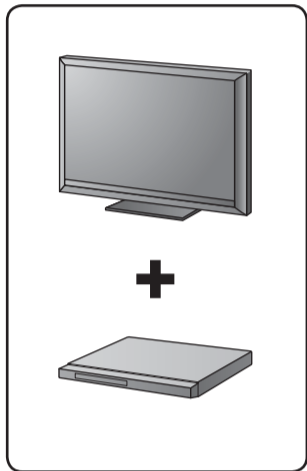


■ HDMI

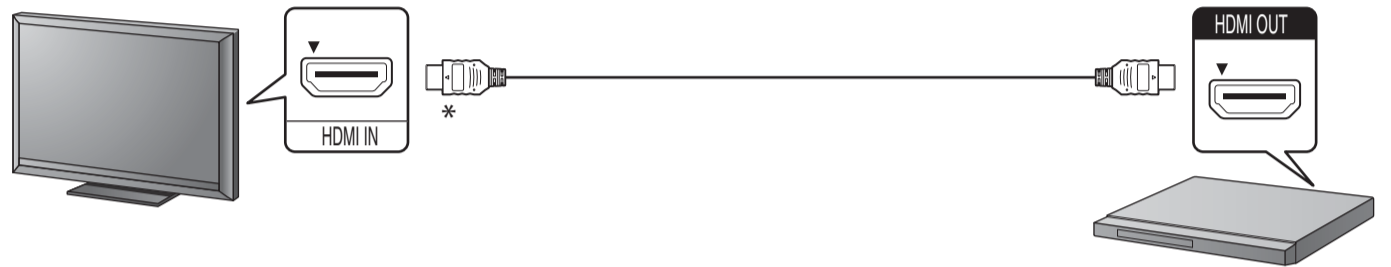


■ VIDEO & AUDIO




B

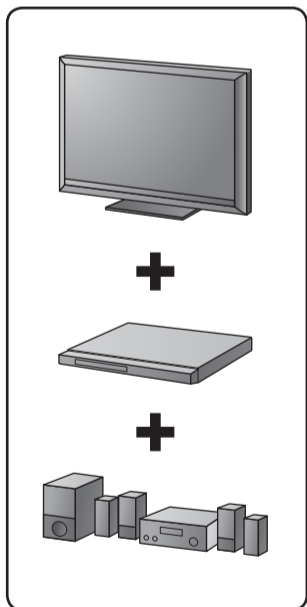

■ HDMI

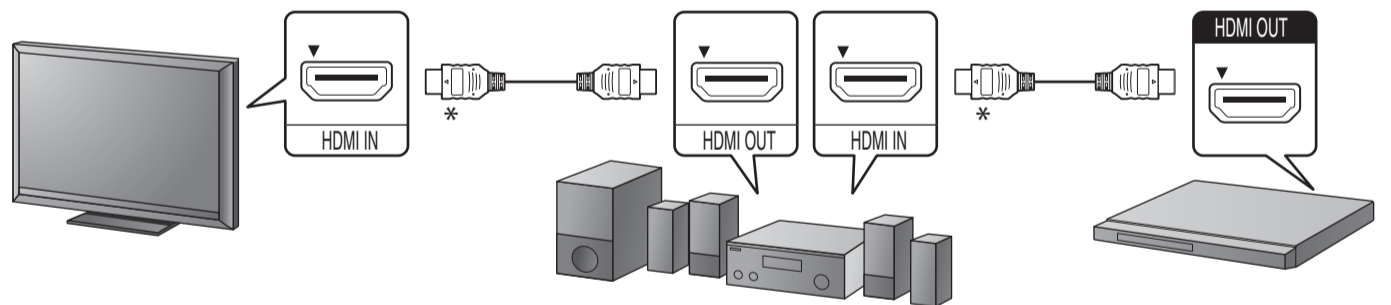


■ COAXIAL

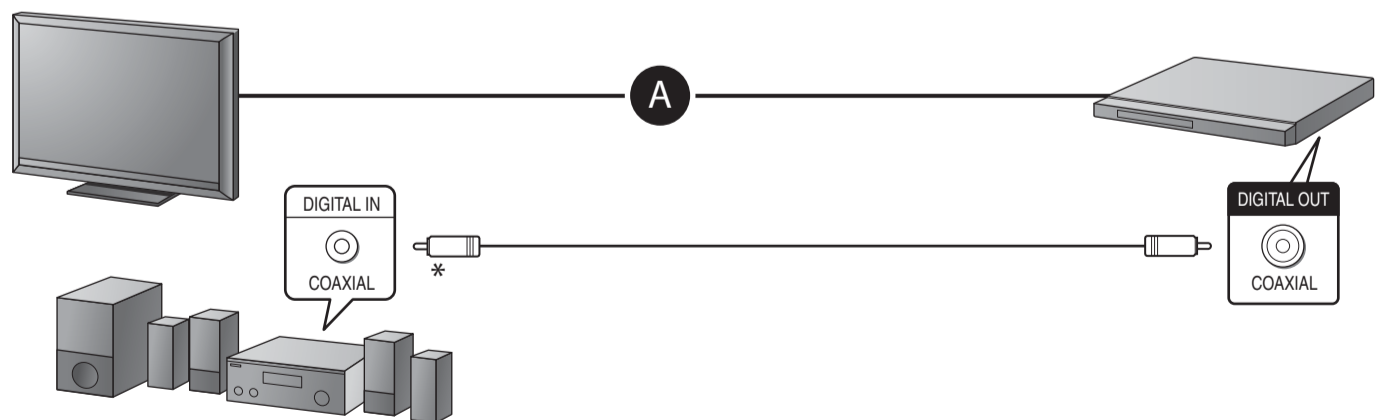


* Medfølger ikke

2



1

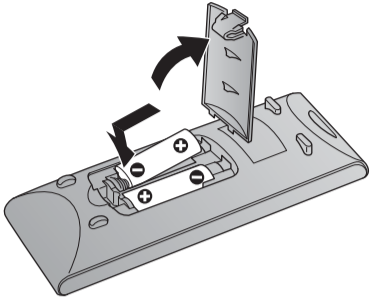

2

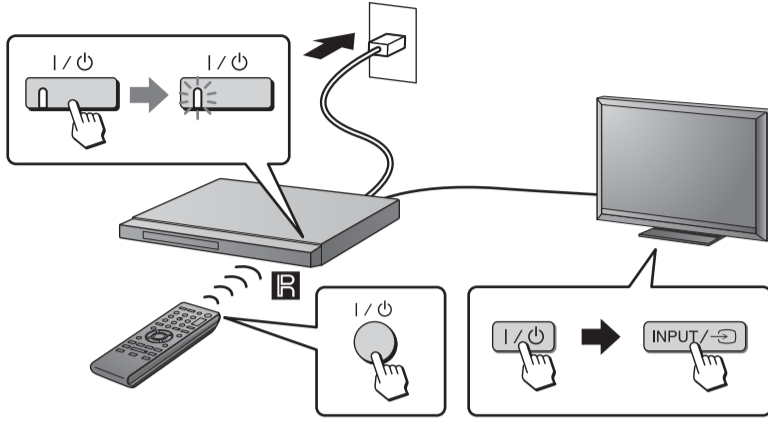


3

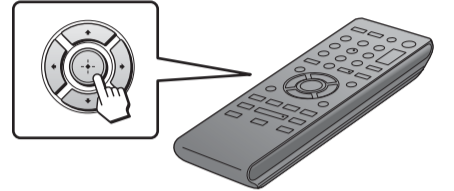
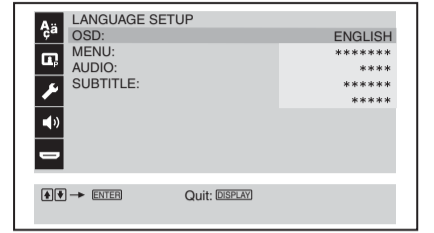


3

1

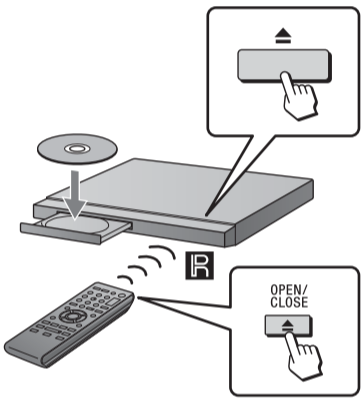

2

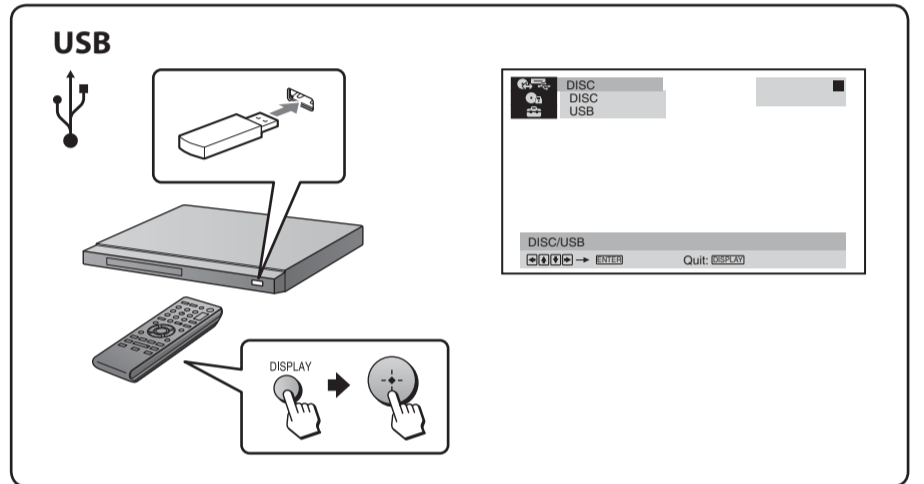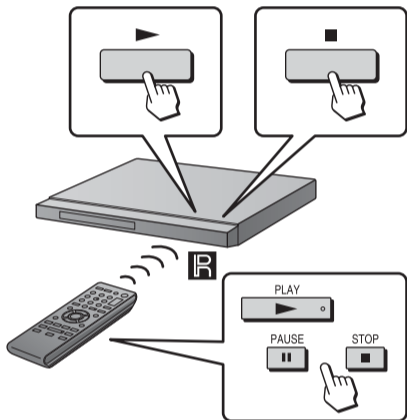

TIME/TEXT

PICTURE NAVI

AUDIO

SUBTITLE

MENU

DISPLAY

PLAYBACK CONTROLS