



START


SRS-XB20

4-693-259-11(1)
©2017 Sony Corporation




* 4 6 9 3 2 5 9 1 1 * (1)




1

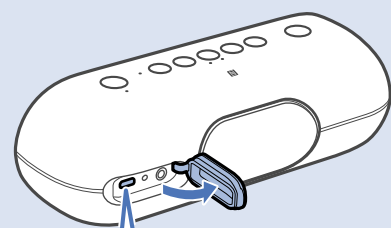





DC IN 5V

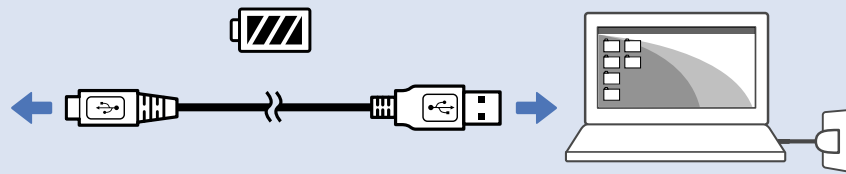






CHARGE ⏱ 12 h : 00 m (500mA) CHARGE
⏱ 04 h : 00 m (1.5A)

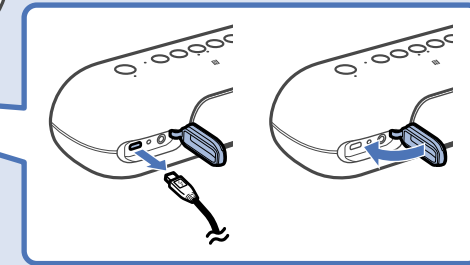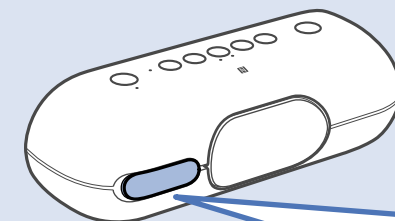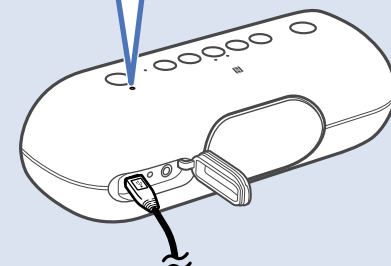








2

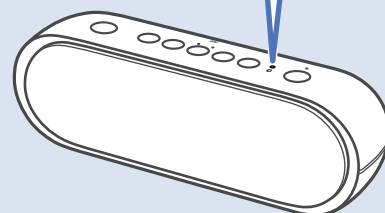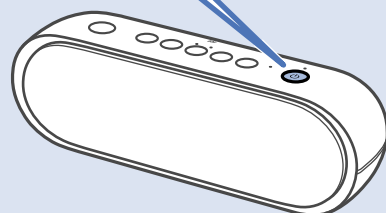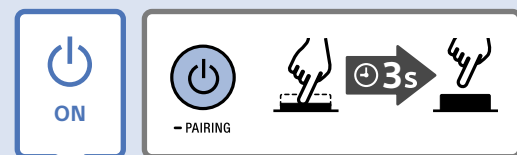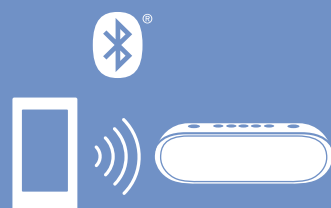



Android iPhone

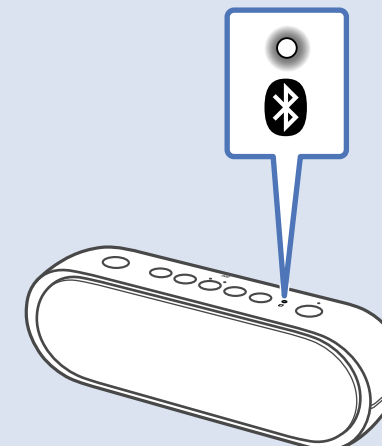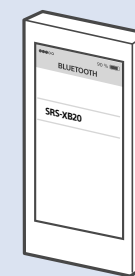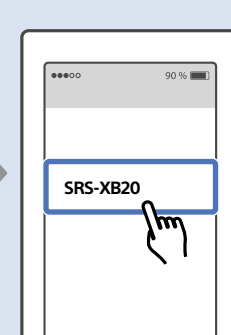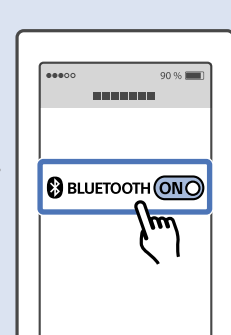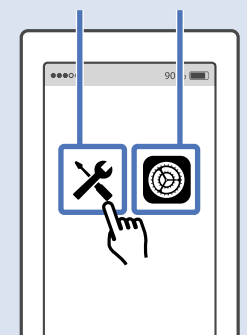





3

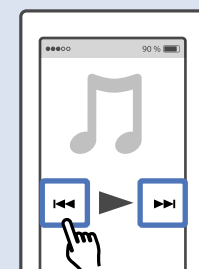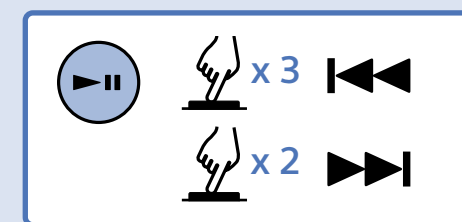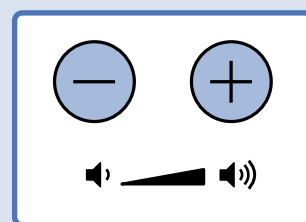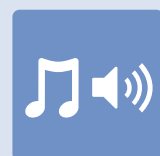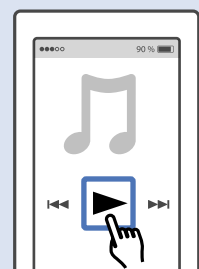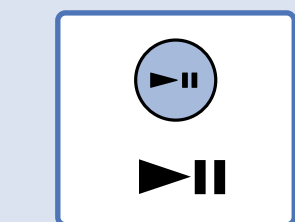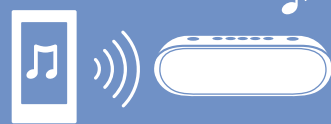

звучник

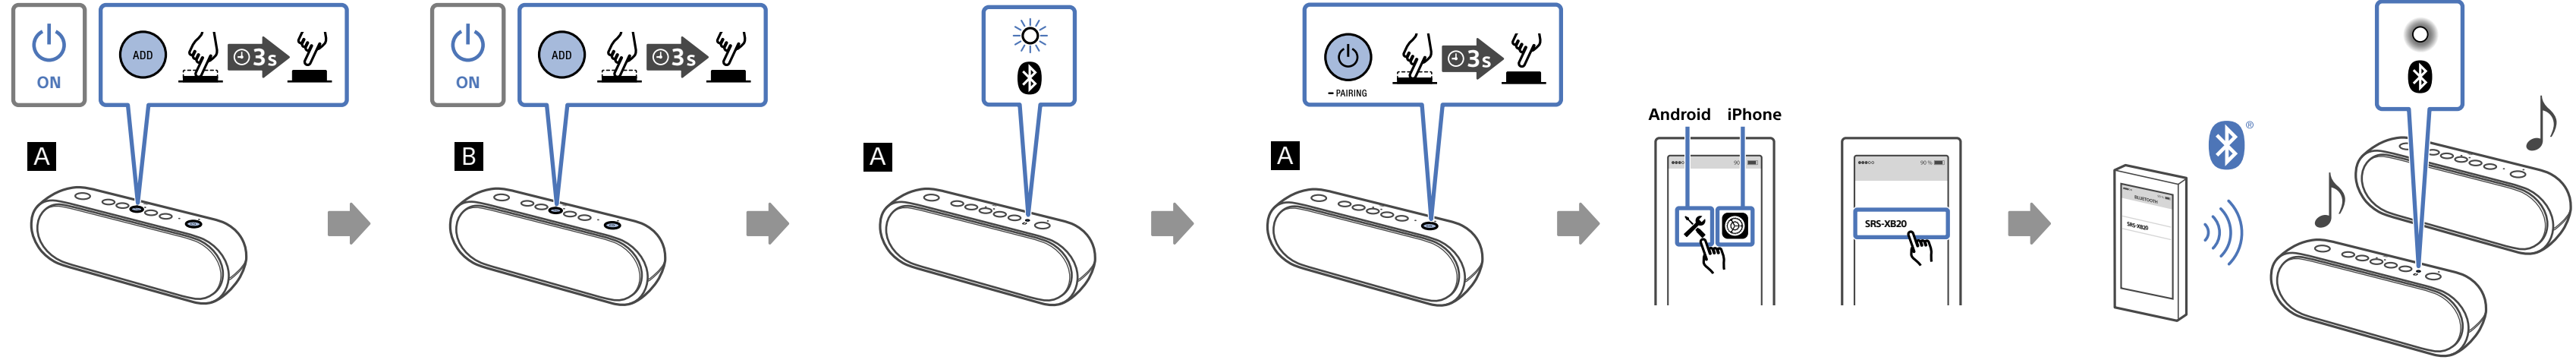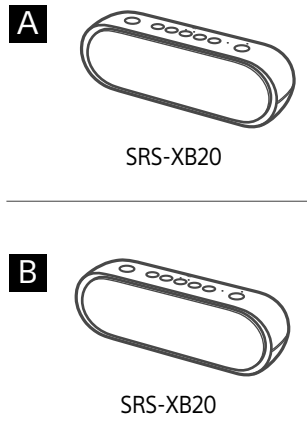

Безжичен Party Chain

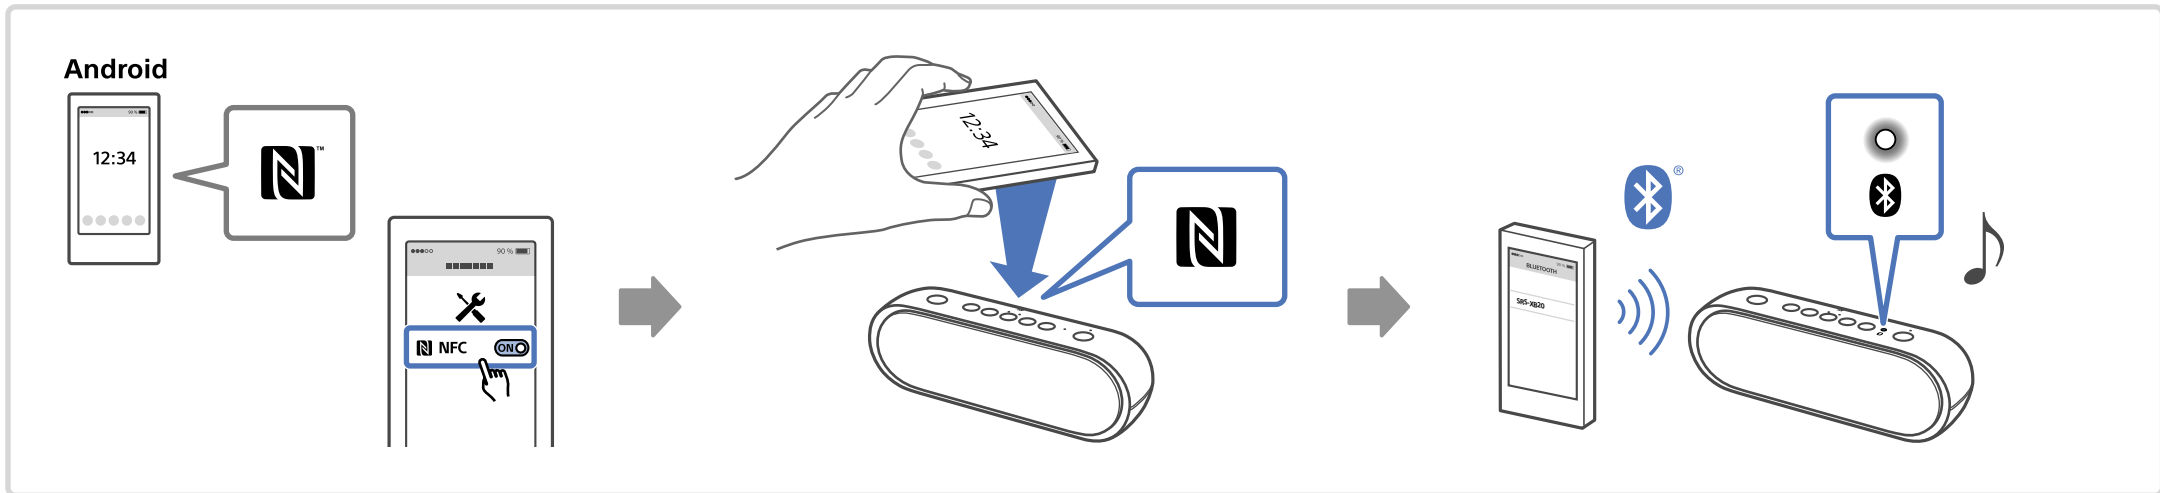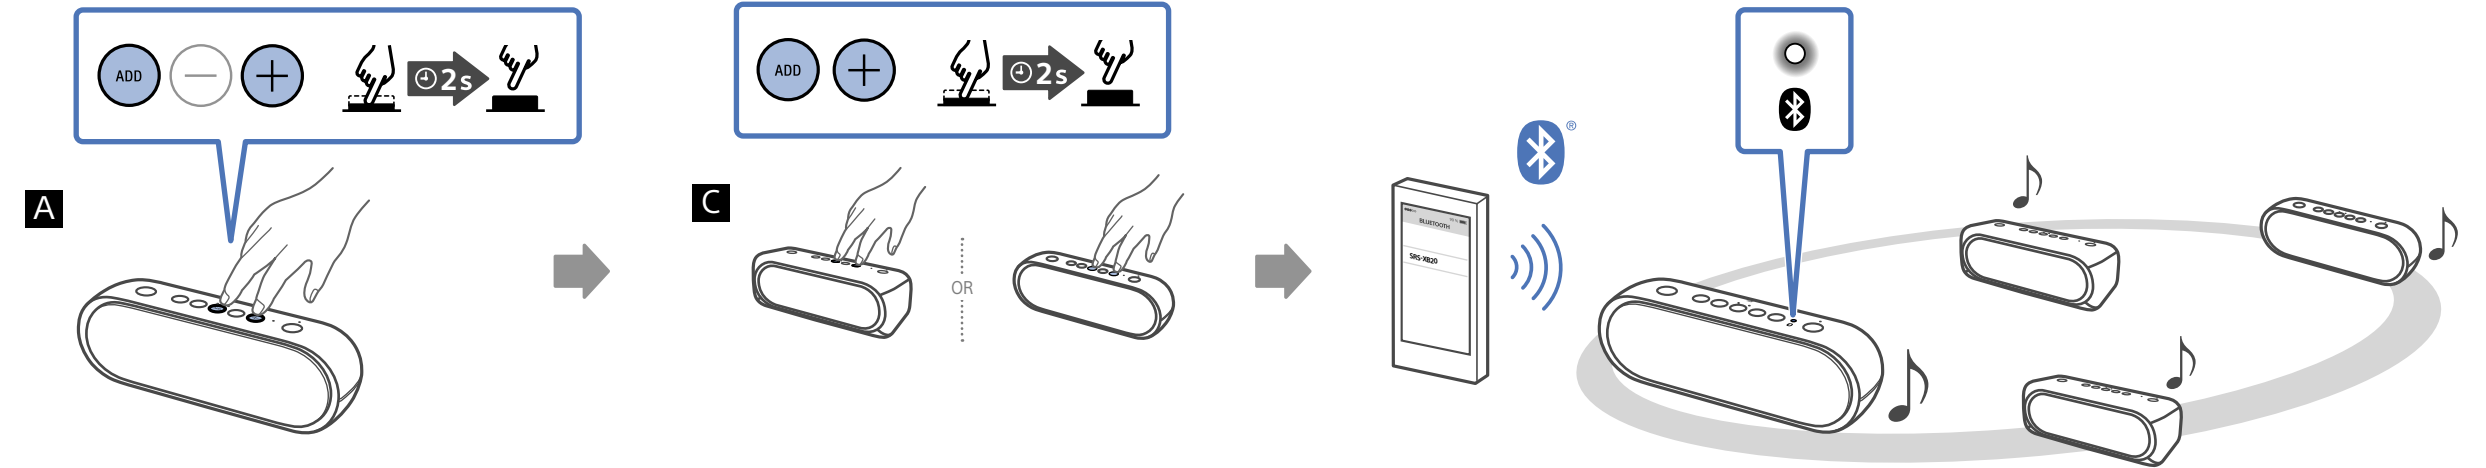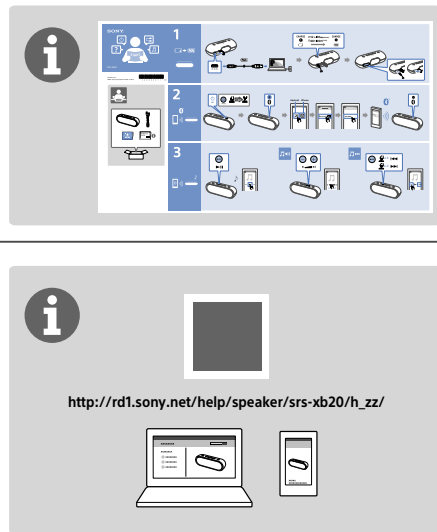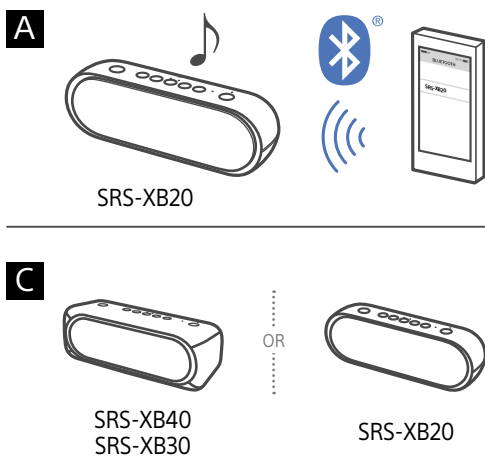

Android / iPhone

SongPal

<http://sonyapp.jp/songpal.html>

http://rd1.sony.net/help/speaker/srs-xb20/h_zz/