

**SONY**<sup>®</sup>

# Operating Instructions

Personal Entertainment Organizer

**CLiÉ**

**PEG-N760C**

---

## Chapter 1

Basic operations of your  
Sony CLiÉ Handheld

---

## Chapter 2

Using basic applications

---

## Chapter 3

Exchanging and updating  
data using a HotSync<sup>®</sup>  
operation

---

## Chapter 4

Communicating using  
your Sony CLiÉ Handheld

---

## Chapter 5

Customizing your Sony  
CLiÉ Handheld  
(Preferences)

---

## Chapter 6



Additional information





# Table of contents

## Chapter 1

Basic operations of your Sony CLIÉ Handheld	
<b>Turning your Sony CLIÉ Handheld on and off</b> .....	7
<b>Using the stylus</b> .....	8
<b>Using the Jog Dial™ navigator</b> .....	10
<b>Entering data into your Sony CLIÉ Handheld</b> .....	11
Using Graffiti® writing to enter data .....	11
Using the onscreen keyboard .....	20
Using your computer keyboard .....	22
<b>Changing the frontlight level</b> .....	23
<b>Resetting your Sony CLIÉ Handheld</b> .....	24
Performing a soft reset .....	24
Performing a hard reset .....	25

## Chapter 2

Using basic applications	
 <b>Managing schedules and events (Date Book)</b> .....	27
Scheduling an event .....	27
Checking schedules .....	34
Editing Date Book events .....	40
Using the Date Book menus .....	45
 <b>Managing addresses and phone numbers (Address Book)</b> .....	47
Creating a new Address Book entry .....	47
Viewing Address Book entries .....	49
Editing Address Book entries .....	53
Using the Address Book menus .....	59

 <b>Managing tasks and things to do (To Do List)</b> .....	61
Creating To Do List items .....	61
Viewing To Do List items .....	62
Checking off a To Do List item .....	63
Working with To Do List .....	64
Using the To Do List menus .....	68
 <b>Creating memos (Memo Pad)</b> .....	69
Creating a new memo .....	69
Reviewing memos .....	71
Editing memos .....	74
Using the Memo Pad menus .....	76
 <b>Managing expenses (Expense)</b> .....	77
Recording a new Expense item .....	77
Editing Expense items .....	79
Using the Expense menus .....	86
 <b>Using Calculator (Calc)</b> .....	87
Calculating with Calculator .....	87
Using the Calculator buttons .....	88
Using the Calculator menus .....	88
<b>Performing common tasks</b> .....	89
Using the Application Launcher .....	89
Categorizing records .....	93
Finding records .....	96
Protecting your data (Security) .....	100
Attaching notes .....	106
Purging records .....	107
Using the Edit menu .....	108
Choosing fonts .....	109

Continued on next page

## Table of contents

### Chapter 3

Exchanging and updating data using a HotSync® operation

What is a HotSync® operation? ..... 111

Performing a local HotSync® operation with the cradle ..... 112

Using the Palm™ Desktop for CLIÉ software ..... 114

Starting the Palm Desktop for CLIÉ software ..... 114

Basic operations of the Palm Desktop for CLIÉ software ..... 114

Locating the Palm Desktop for CLIÉ components ..... 115

Advanced HotSync® operations ..... 116

Setting the HotSync® setup options .... 116

Customizing HotSync application settings (Conduit) ..... 118

Conducting an IR HotSync operation ... 120

Conducting a HotSync operation via modem ..... 123

Conducting a HotSync operation via a network ..... 129

Importing data from a Windows application ..... 134

Synchronizing with external data (File Link) ..... 136

### Chapter 4

Communicating using your Sony CLIÉ Handheld

Beaming between your Sony CLIÉ Handheld and another Palm OS® PDA.. 138

What you can do with beaming ..... 138

Beaming information ..... 139

Receiving beamed information ..... 140

Tips on beaming information ..... 140

Using Memory Stick® media ..... 141

What is Memory Stick® media? ..... 141

Inserting and removing Memory Stick media ..... 142

Protecting the data in Memory Stick media ..... 144

Starting an application in Memory Stick media ..... 145

Starting an application automatically when Memory Stick media is inserted ..... 145

Viewing information of the inserted Memory Stick media (Card Info) ..... 146

Formatting Memory Stick media ..... 147

Exchanging data via Memory Stick® media ..... 149

Starting Memory Stick Gate (MS Gate) ..... 149

Creating the default folder in Memory Stick media ..... 152

Copying your CLIÉ handheld data to Memory Stick media ..... 153

Copying data in Memory Stick media to your CLIÉ handheld ..... 155

Deleting data in Memory Stick media .. 158

Using the MS Gate menus ..... 160

How to read the online manual ..... 161

Installing applications to/from Memory Stick® media without using MS Gate ..... 162

Continued on next page

## Table of contents

### Chapter 5

Customizing your Sony CLIÉ Handheld (Preferences)



**What you can do with**

**Preferences** ..... 165

**Changing the Buttons preferences** .... 167

Assigning applications to buttons ..... 167

Changing the full-screen pen stroke activities ..... 168

Assigning applications to HotSync® buttons ..... 169

**Changing the Jog Dial™ navigator preferences** ..... 170

**Setting the display format of the time, date, and numbers (Formats)** ... 171

Selecting a country default ..... 171

Selecting the time, date, and numbers formats ..... 172

**Setting the Date & Time preferences** .. 173

Setting the date ..... 173

Setting the time ..... 174

Setting the time zone and daylight saving time ..... 175

**Setting the General preferences** ..... 176

Setting the automatic shut-off time ..... 176

Setting sounds ..... 177

Turning on or off the Beam Receive feature ..... 178

**Entering owner information** ..... 179

**Creating Graffiti® ShortCuts** ..... 180

**Changing the Network preferences** ... 182

Selecting a service ..... 182

Entering a user name ..... 183

Entering a password ..... 183

Selecting a connection ..... 184

Adding telephone settings ..... 184

Creating additional service templates . 185

Adding detailed information to a service template ..... 187

Creating log in scripts ..... 188

Using the Network preferences menus .. 191

**Setting the High Resolution Assist function** ..... 192

### Chapter 6

Additional information

**Backing up data of your Sony CLIÉ Handheld** ..... 194

Backing up data to your computer through HotSync operation ..... 194

Backing up all CLIÉ data to a Memory Stick media (using MS Backup) ..... 195

Backing up CLIÉ data to a Memory Stick media using MS Gate ..... 197

**Using data of another Sony CLIÉ Handheld** ..... 199

Using the Palm Desktop for CLIÉ software to transfer data ..... 199

Using Memory Stick media to transfer data ..... 201

Performing HotSync between your old CLIÉ handheld and the new Palm Desktop for CLIÉ software ..... 203

**Precautions** ..... 204

Notes on use ..... 204

Battery considerations ..... 205

**Troubleshooting – Frequently Asked Questions** ..... 207

**Getting Help** ..... 221

**Specifications** ..... 222

**Limited Warranty Statement** ..... 223

**Index** ..... 227

# About this manual

Welcome to the Sony Personal Entertainment Organizer (referred to as the “CLIE handheld” in this manual).

Your CLIE handheld comes with three manuals:

## Read This First

Read This First gives an overview of your CLIE handheld’s features, hardware and software setup, installation instructions, and other important details. Before reading the rest of the manuals, read the Read This First manual.

## Operating Instructions (this manual)

This manual describes all you need to know about how to use your CLIE handheld and the Personal Information Management applications that come with it.

The manual shows you how to:

- Turn your CLIE handheld on and off, reset your CLIE handheld, and enter data, explained in greater detail **(Chapter 1)**
- Use Personal Information Management applications: Date Book, Address Book, To Do List, Memo Pad, Expense, and Calculator **(Chapter 2)**
- Perform a HotSync® operation with your computer **(Chapter 3)**
- Exchange data with another handheld by beaming or via Memory Stick® media **(Chapter 4)**
- Personalize your CLIE handheld with your own preferences settings **(Chapter 5)**
- Maintain your CLIE handheld and work with the Troubleshooting section and other technical information **(Chapter 6)**

## Add-on Application Guide

The Add-on Application Guide describes how to install and use the supplied add-on applications which include:

- Audio Player/OpenMG Jukebox/RealJukebox
- PictureGear Pocket/Photo Stand/PictureGear 4.4Lite
- gMovie
- MS Autorun
- MS Import/Export

---

# Chapter 1

## *Basic operations of your Sony CLIÉ Handheld*

This chapter explains how to turn on and off your CLIÉ handheld, enter data, and perform other basic operations.

---

### **Contents**

Turning your Sony CLIÉ Handheld on and off .....	7
Using the stylus .....	8
Using the Jog Dial™ navigator .....	10
Entering data into your Sony CLIÉ Handheld .....	11
Using Graffiti® writing to enter data .....	11
Using the onscreen keyboard .....	20
Using your computer keyboard .....	22
Changing the frontlight level .....	23
Resetting your Sony CLIÉ Handheld .....	24
Performing a soft reset .....	24
Performing a hard reset .....	25


---

# Turning your Sony CLIÉ Handheld on and off

## Turning on your CLIÉ handheld

Press the POWER button.

Your CLIÉ handheld is turned on, and the last screen you viewed is displayed.

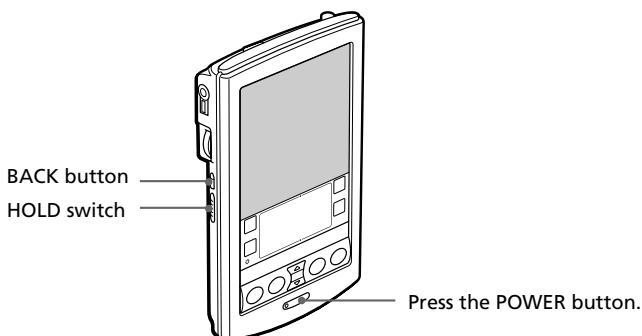

When you turn on your CLIÉ handheld for the first time, the Setup screen appears.

### Note

If the power is not turned on, make sure that the HOLD switch is not in the protect position.

### Tip

You can set to turn on/off the power with the BACK button. For details, see page 170.

## Turning off your CLIÉ handheld

Press the POWER button again.

The power is turned off. You do not have to save data, quit an application or perform any of the other shutdown procedures that your computer requires.

### Note

If you press the POWER button and hold it down for two seconds or longer, you can turn the frontlight on the screen on or off.


---

# Using the stylus

With your CLIÉ handheld, you can use the supplied stylus to enter characters or specify an application you want to run.

## Taking out the stylus


The stylus is stored in the holder on the back panel of your CLIÉ handheld. Pull it out when using your CLIÉ handheld.

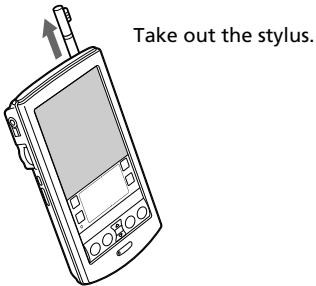

To avoid losing the stylus, always put it back into its holder on your CLIÉ handheld after use.

## Tapping

When you enter characters on the onscreen keyboard of your CLIÉ handheld, open an application, or select an item, press lightly on the desired button or icon with the stylus.

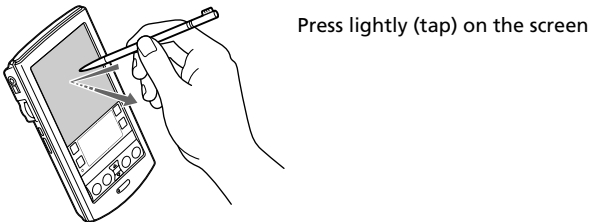

This action is called “tapping.”




---

## Using the stylus

### Dragging

Just as you can drag the mouse to select (and drag) text or move objects on your computer, you can also use the stylus to drag an item on the screen of your CLiÉ handheld. Press the stylus lightly on the item and move it along the screen surface.

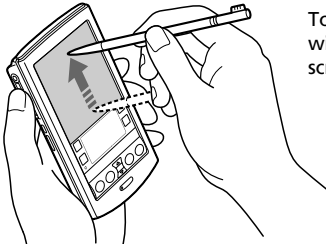

Touch the desired item on the screen with the stylus and move it along the screen surface (drag).

### Examples of dragging:

To display data above or below the current viewing area on the screen, use the stylus to drag the slider of any scroll bar.


To select multiple characters or items together, use the stylus to drag along the desired characters or items.

### On full-screen dragging

By default, full-screen dragging from the bottom of the writing area to the top of the screen displays the Graffiti® Help on the screen. You can assign the full-screen dragging to another activity. See page 168 for details.

# Using the Jog Dial™ navigator

Your CLIÉ handheld is equipped with a Jog Dial™ navigator, which allows you to perform all major operations without the stylus. You can operate your CLIÉ handheld using the Jog Dial navigator with just one hand.

The icon of any application that supports Jog Dial navigator operations is marked with the  Jog Dial navigator mark.




For other applications, you can also use the JogAssist function to enable Jog Dial navigator operations. For details, see “Changing the Jog Dial™ navigator preferences” on page 170.

## Rotating the Jog Dial navigator

Rotate the Jog Dial navigator to select various items in succession or to select an application to start.


The operations you can perform by rotating the Jog Dial navigator differ depending on the application you are using. For details, refer to the instructions for each application.

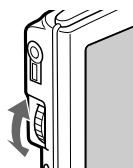

## Pressing the Jog Dial navigator

Press the Jog Dial navigator to highlight the item selected by rotating the Jog Dial navigator, or to run the selected application.

The operations you can do by pressing the Jog Dial navigator differ depending on the application you are using. For details, refer to the instructions for each application.

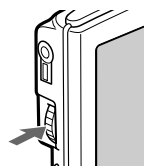

## Rotating while holding down the Jog Dial navigator

Some applications support operations executed by rotating and pressing the Jog Dial navigator. For details, refer to the instructions for each application.

# Entering data into your Sony CLIÉ Handheld

## Using Graffiti® writing to enter data

This section explains the procedures for creating letters, numbers, punctuation, and symbols, as well as teaching you some Graffiti® tips and tricks.

### What is Graffiti writing?

Most people find they can enter text quickly and accurately with only minutes of practice. Graffiti writing includes any character you can type on a standard keyboard. The Graffiti strokes closely resemble the upper case letters of the regular alphabet, which makes Graffiti writing easy to learn.

### There are four basic concepts for success with Graffiti writing:

- If you draw the character shape exactly as shown in the tables later in this chapter (like the shapes shown in the following diagram), you can achieve 100% accuracy.




Graffiti writing examples:  
A, B, C, D, and E

- The heavy dot on each shape shows where to begin the stroke. Certain characters have similar shapes, but different beginning and end points. Always begin the stroke at the heavy dot (you should not create the heavy dot; it is only there to show you where to begin the stroke).
- Most characters require only a single stroke. When you lift the stylus from the Graffiti writing area, your CLIÉ handheld recognizes and displays the text character immediately.

To allow you to write an entire character with a single stroke, some Graffiti strokes are portions of the regular alphabet equivalents.

- The Graffiti writing area is divided into two parts: one for writing the letters of the alphabet and one for writing numbers. The small marks at the top and bottom of the Graffiti writing area separate the two areas.

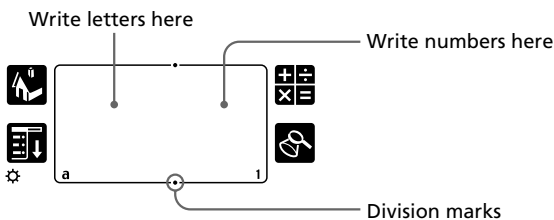

# Entering data into your Sony CLIÉ Handheld

## Writing Graffiti letters

- 1 Tap where you want your text to go.


### Note

You need to tap above the Graffiti writing area, and you must see a flashing cursor before you write the text.

- 2 Use the tables on the following pages to find the stroke shape for the letter you want to create. For example, the stroke shown below creates the letter "n".


### Note

There are two different stroke shapes available for some letters. For these letters, choose the one that's easiest for you.

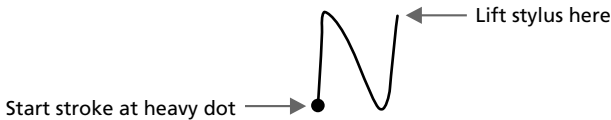

As you will see later, you use the same shape to create both the upper case and lower case version of a letter.

- 3 Position the stylus in the left-hand side of the Graffiti writing area.

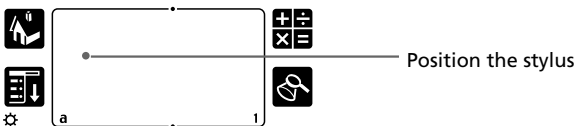

- 4 Start your stroke at the heavy dot and draw the stroke shape as it appears in the tables.

- 5 Lift the stylus from the screen at the end of the stroke shape. That is all there is to it. When you lift the stylus from the screen, your CLIÉ handheld recognizes your stroke immediately and prints the letter at the insertion point on the screen.

As soon as you lift the stylus from the screen, you can begin the stroke for the next character you want to write.

Continued on next page

---

## Entering data into your Sony CLIÉ Handheld

### Note

You must begin the character strokes in the Graffiti writing area. If you do not make Graffiti strokes in the Graffiti writing area, your CLIÉ handheld does not recognize them as text characters.

### Tips

- Accuracy improves when you write large characters. You should draw strokes that nearly fill the Graffiti writing area.
- To delete characters, simply set the insertion point to the right of the character you want to delete and make the backspace stroke (a line from right to left) in the Graffiti writing area.
- Write at natural speed. Writing too slowly can generate recognition errors.
- Do not write on a slant. Vertical strokes should be parallel to the sides of the Graffiti writing area.
- Press firmly.






























### To display the Graffiti onscreen help

Drag the stylus from the bottom of the writing area to the top of the screen. Graffiti Help opens a series of screens that show the complete Graffiti character set.

# Entering data into your Sony CLIÉ Handheld

## Writing Graffiti alphabet

Draw Graffiti letters according to the following alphabet in the left-hand side of the Graffiti writing area.

A		N	
B		O	
C		P	
D		Q	
E		R	
F		S	
G		T	
H		U	
I		V	
J		W	
K		X	
L		Y	
M		Z	
Space		BackSpace	
Carriage Return		Period	Tap twice


## Entering data into your Sony CLIÉ Handheld

### To write capital letters

Shift to caps and then you can make capital letters with the same stroke shapes as the basic alphabet characters.

- To draw the first letter of a word as a capital letter

Use the Caps Shift stroke .




To return to the lower case, use the Backspace stroke .


#### Note

When you create a new sentence or a new record (by tapping New or a blank line), the first letter is automatically capitalized.

- To enter only capital letters (Caps Lock)











Use the Caps Lock stroke .



To return to the lower case, use the Caps Shift stroke .

### Writing numbers


Write the following numbers on the right-hand side (numbers side) of the Graffiti writing area.

0		5	
1		6	
2		7	
3		8	
4		9	

# Entering data into your Sony CLIÉ Handheld

## Writing punctuation marks

Make a single tap on the Graffiti writing area to activate Punctuation Shift. The next stroke you make anywhere in the Graffiti area (the letters or numbers side) creates a punctuation mark.





(.) Period	•	(—) Dash	—
(,) Comma	,	(( ) Left Paren	(
(') Apostrophe	'	( ) Right Paren	)
(?) Question	?	(/) Slash	/
(!) Exclamation	!	(\$) Dollar	\$
(@) At	@	(\ ) Back slash	\
(#) Number	#	({ ) Left brace	{
(%) Percent	%	(} ) Right brace	}
(^) Circumflex	^	([ ) Left square bracket	[
(&) Ampersand	&	(] ) Right square bracket	]
(*) Asterisk	*	(~) Swung dash	~
(<) Left angle bracket	<	(` ) Grave accent	`
(>) Right angle bracket	>	(;) Semicolon	;
(_) Under bar	_	(:) Colon	:
(") Ditto	"	Tab	↵



























# Entering data into your Sony CLIÉ Handheld

## Writing symbols and extended characters

Make a Symbol Shift stroke  on the Graffiti writing area to activate Symbol Shift. The next stroke you make creates a symbol or extended character.



(•) Bullet	•	x	
(™) Trademark		÷	
(®) Registered		=	
(©) Copyrighted		(¢) Cent	
(') Left single quotation		(¥) Yen	
(') Right single quotation		(£) Pound	
(") Left double quotation		(€) Euro	
(") Right double quotation		ı	
(§) Section		i	
(°) Degree		β	
+		μ	
±		f	
		ø	

## Entering data into your Sony CLIÉ Handheld

### Writing accented characters and non-English characters

To create accented characters, draw the stroke normally used to create the letter, followed by an accent stroke. Graffiti writing then adds the accent to the letter.

To enter “é,” for example, draw and then .

à è ì ò ù		á é í ó ú ´ý	
â ê î ô û		ã õ ñ	
ä ï ö ü ÿ		å	

### To write non-English characters

You can write the following characters without any special punctuation or shifting:

ç		æ	
---	--	---	--

#### Note






You must write these non-English characters on the left side of the Graffiti writing area.

# Entering data into your Sony CLIÉ handheld

## Using Navigation strokes

In addition to character symbols, Graffiti writing includes special strokes that you can use to navigate within text or fields in your applications.


---





<b>Move cursor right</b>	
<b>Move cursor left</b>	
<b>Go to the previous field (Address Book only)</b>	
<b>Go to the next field (Address Book only)</b>	
<b>Open Address Record (Address Book only)</b>	

---

## Using Graffiti ShortCuts

Graffiti ShortCuts, similar to the glossary or autotext features of some word processors, allow you to enter commonly used words or phrases quickly and easily. In addition to the following predefined ShortCuts, you can create your own ShortCuts for your name or the header of a memo (page 180). Each ShortCut can represent up to 45 characters.

To use a ShortCut, draw the ShortCut stroke  followed by the ShortCut characters. When you draw the ShortCut stroke, the ShortCut symbol appears at the insertion point to show that you are in ShortCut mode.

When you enter  and dts (, , and ) you can enter date and time stamps.

---

<b>Date stamp</b>	<b>ds</b>	<b>Breakfast</b>	<b>br</b>
<b>Time stamp</b>	<b>ts</b>	<b>Lunch</b>	<b>lu</b>
<b>Date/time stamps</b>	<b>dts</b>	<b>Dinner</b>	<b>di</b>
<b>Meeting</b>	<b>me</b>		

---


# Entering data into your Sony CLIÉ Handheld

## Using the onscreen keyboard

You can open the onscreen keyboard any time you need to enter text or numbers into your CLIÉ handheld. Note that you cannot enter Graffiti characters while using the onscreen keyboard.


To use the onscreen keyboard:

- 1** Open any application (such as Memo Pad).
- 2** Tap any record, or tap New.

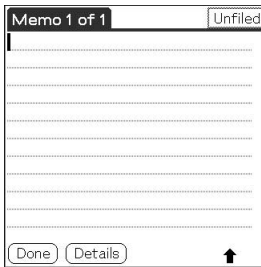




- 3** Tap "a" to open the alphabetic keyboard, or tap "1" to open the numeric keyboard.

The selected keyboard is displayed.

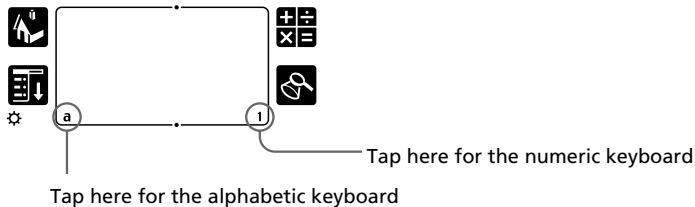

Continued on next page


# Entering data into your Sony CLIÉ Handheld

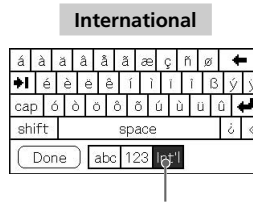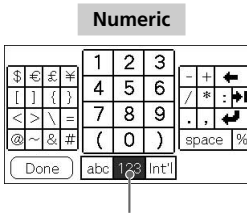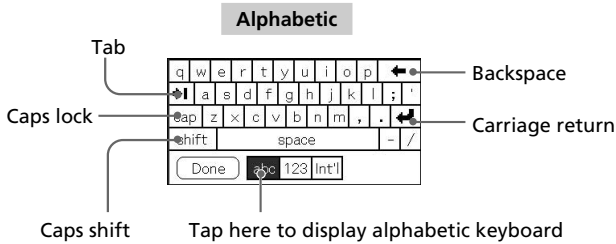

## 4 Select the desired keyboard and tap the characters to enter text and numbers.

You can use the onscreen keyboard in the same way as in the keyboard of your computer. To enter capital letter, tap cap and then tap the character button. To delete a character, tap ←.

## 5 After you finish, tap Done to close the onscreen keyboard and place the text in the record.

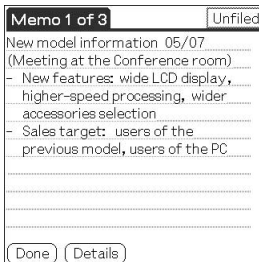

---

## Entering data into your Sony CLIÉ Handheld

### Using your computer keyboard

If you have a lot of data to enter, or prefer to use the computer keyboard, you can use Palm™ Desktop for CLIÉ software or any other supported personal information manager (PIM), such as Microsoft Outlook®, to enter information. You can then perform a HotSync® operation to synchronize the information on your computer with the information on your CLIÉ handheld. All the main applications on your CLIÉ handheld are also available in Palm Desktop for CLIÉ software and in most PIMs, so you don't need to learn different applications.

Refer to the Palm Desktop for CLIÉ software online Help for more information on entering data on your computer.

#### **To import data from your computer or another handheld**

If you have data stored in computer applications such as spreadsheets, databases, or if you want to import data from another handheld, you can transfer the data to your CLIÉ handheld and use it without entering data manually. Save the data in a compatible file format (.csv, .txt, .tab, .tsv, .dba, .aba, .tda, .mpa), import it into your Palm Desktop for CLIÉ software, and then perform a HotSync operation to transfer the data to your CLIÉ handheld. For details, see “Chapter 3: Exchanging and updating data using a HotSync® operation.”

# Changing the frontlight level

You can turn the frontlight on the screen off or on or adjust the frontlight level according to the lighting conditions or temperature of the environment where you use your CLIÉ handheld.

## Turning the frontlight off and on


Press and hold down the POWER button for more than two seconds to turn the frontlight off or on.

## Adjusting the frontlight level

Even with the frontlight on, you may need to further adjust the brightness on the screen.

You can use the onscreen brightness control to adjust the frontlight level.

### 1 Tap .

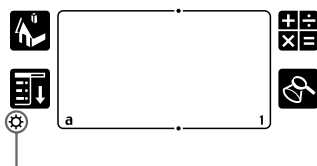

Tap this icon.

The adjustment control screen is displayed.

### 2 To change the level in small increments, tap to the left or right.

To change the brightness level in larger increments, drag the slider to the left or right.

#### Tip

You can also press the scroll button or rotate the Jog Dial navigator to move the slider incrementally.

### 3 Tap Done.

#### Note

If the digitizer is not configured correctly, you may not be able to make the adjustments properly. For details, see "Turning on your Sony CLIÉ Handheld for the first time" in the Read This First manual.


# Resetting your Sony CLIÉ Handheld

Under normal circumstances, you do not have to reset your CLIÉ handheld. On rare occasions, however, your CLIÉ handheld may no longer respond to buttons or the screen due to insufficient memory or other reasons. In this case, you need to perform a reset to get your CLIÉ handheld running again.


## Performing a soft reset

A soft reset tells your CLIÉ handheld to stop what it's doing and start over again. All records and entries stored in your CLIÉ handheld are retained in a soft reset.

- 1** Take out the reset tip by unscrewing the metal barrel from the stylus quill.

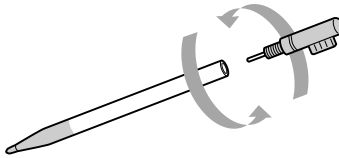

- 2** Use the reset tip to gently press the reset button inside the hole on the back panel of your CLIÉ handheld.

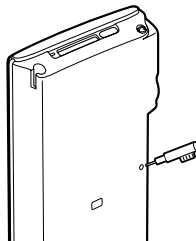

The system shuts down and then restarts.

After restarting, the system displays “palm powered,” “CLIÉ,” and “Sony,” followed by the preferences screen for setting the time and date.



## Resetting your Sony CLIÉ Handheld

### Performing a hard reset


If the soft reset does not solve the problem, you need to perform a hard reset to restart your CLIÉ handheld.

#### Note

**With a hard reset, all records and entries stored in your CLIÉ handheld are erased. Only perform a hard reset if a soft reset does not solve your problem.**

If you save a backup of your CLIÉ handheld data on your computer, you can restore any data previously synchronized with your computer during the next HotSync® operation.

- 1** Hold down the POWER button on your CLIÉ handheld.
- 2** While holding down the POWER button, use the reset tip to gently press and release the reset button.

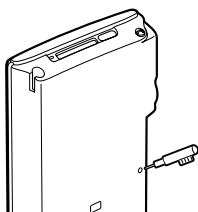

The Palm Powered logo screen is displayed.

- 3** Release the POWER button.

A message warning that you are about to erase all the data stored on your CLIÉ handheld is displayed.

- 4** Press the upper half of the scroll button on the front panel of your CLIÉ handheld.

Your CLIÉ handheld undergoes a hard reset.

After a hard reset, only the current date and time are retained. Formats, Preferences, and other settings are restored to their factory default settings.

#### Note

If the scroll button was used just prior to hard-resetting, the hard-reset may not be performed.







# Chapter 2

## *Using basic applications*

This chapter describes how to do tasks that are specific or common to the basic applications of your CLiÉ handheld: Date Book, Address Book, To Do List, Memo Pad, Expense, and Calculator.

---

### Contents

 Managing schedules and events (Date Book) .....	27
 Managing addresses and phone numbers (Address Book) .....	47
 Managing tasks and things to do (To Do List) .....	61
 Creating memos (Memo Pad) .....	69
 Managing expenses (Expense) .....	77
 Using Calculator (Calc) .....	87
Performing common tasks .....	89
Using the Application Launcher .....	89
Categorizing records .....	93
Finding records .....	96
Protecting your data (Security) .....	100
Attaching notes .....	106
Purging records .....	107
Using the Edit menu .....	108
Choosing fonts .....	109



# Managing schedules and events (Date Book)

Date Book lets you quickly and easily schedule appointments or any activity associated with a date, or a date and time. A record in Date Book is called an “event.”

## Note

If the HOLD switch is in the protect position, you cannot operate your CLIÉ handheld.

## Scheduling an event

### Scheduling an event for the current date


- 1 Press the Date Book  button on the front panel.

Date Book starts up. Today’s schedule is displayed with a list of times for a standard business day.

## Tip

Press the Date Book button repeatedly to cycle through the Day, Week, Month, and Agenda views. The Date Book views are displayed at the bottom left of the screen.

- 2 Tap the time line that corresponds to the beginning of the event.

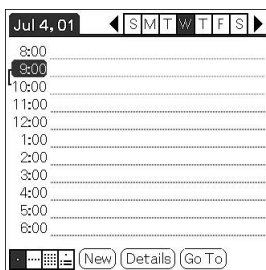

Continued on next page



## Managing schedules and events (Date Book)

### 3 Enter a description of the event.


You can enter a description or a note of up to 255 characters in length.



### 4 If the event is one hour long, skip to step 7. If the event is longer or shorter than one hour, tap the time of the event to open the Set Time dialog box.

### 5 Do one of the following to set the duration of the event:

- Tap the time columns on the right side of the Set Time dialog box to set the Start Time, and tap the End Time box. Then tap the time columns to set the End Time.
- Tap All Day to automatically insert the start and end time of the event as defined in your Date Book preferences.

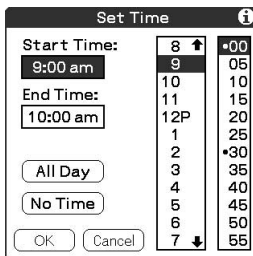

### 6 Tap OK.

### 7 Tap a blank area of the screen to deselect the event.

A vertical line appears next to the time, indicating the duration of the event.

Continued on next page



## Managing schedules and events (Date Book)

### Tip


You can open the Set Time dialog box (to select a start time) by writing a number on the number side of the Graffiti writing area and making sure no event is selected.

### To schedule an untimed event


In step 5, tap No Time. A new untimed event is displayed in the first line in Date Book with a ♦ mark.

### Scheduling a timed event for another date

- 1 Press the Date Book button on the front panel.  
Date Book starts up.
- 2 Do one of the following to select the date you want for the event:
  - Tap the day of the week on top of the Date Book screen.  
To move to another week, tap one of the scroll arrows of either side of the day of the week area.



- Tap Go To at the bottom of the screen.  
The Go To Date dialog box appears. Select a date by tapping a year, month, and day in the calendar.

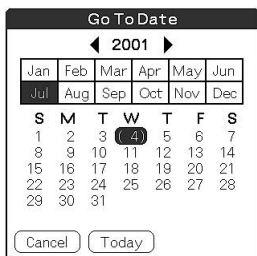

- 3 Follow the steps for “Scheduling an event for the current date.”

Continued on next page



## Managing schedules and events (Date Book)

### Tip

You can also use the scroll button on the front panel to move forward or backward one day or one month at a time.

### To schedule an untimed event

In step 3, tap New and then tap No Time. Then follow the steps for “Scheduling an event for the current date.”

### Tip

You can create a new untimed event by making sure no event is selected and then writing letters in the Graffiti writing area. When you start writing, the untimed event appears at the top of the screen.

## Scheduling repeating or continuous events

The Repeat function lets you schedule events that recur at regular intervals or extend over a period of consecutive days.

### Examples of repeating or continuous events

- **Birthday:** an event that repeats annually
- **Weekly guitar lesson:** an event that falls on the same day of the week and the same time of day
- **Business trip or vacation:** a continuous event


**1** Press the Date Book  button on the front panel.

Date Book starts up.

**2** Tap the description of the event.

**3** Tap Details.

The Event Details dialog box appears.

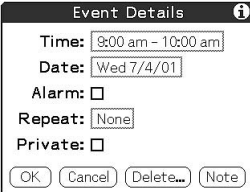

The Event Details dialog box is shown with the following fields and options:

- Time:** 9:00 am - 10:00 am
- Date:** Wed 7/4/01
- Alarm:**
- Repeat:** None
- Private:**
- Buttons:** OK, Cancel, Delete..., Note

Continued on next page



## Managing schedules and events (Date Book)

### 4 Tap the Repeat box.

The Change Repeat dialog box appears.

The dialog box is titled "Change Repeat" and has an information icon. It contains a row of buttons: "None", "Day", "Week", "Month", and "Year". Below this is the instruction: "Tap one of the above buttons to set a repeat interval." A text box below contains "No Repeat". At the bottom are "OK" and "Cancel" buttons.

### 5 Tap Day, Week, Month, or Year to set how often the event repeats.

For a continuous event, tap Day.

The dialog box is titled "Change Repeat" and has an information icon. The "Day" button is selected. Below the buttons, it says "Every: 1 Day(s)" and "End on: No End Date". A text box below contains "Every day". At the bottom are "OK" and "Cancel" buttons.

### 6 Enter a number that corresponds to how often you want the event to repeat on the Every line.

- **When you tap Week:** Tap a letter representing each day of the week on Repeat on line to specify the day you want the event to repeat.

The dialog box is titled "Change Repeat" and has an information icon. The "Week" button is selected. Below the buttons, it says "Every: 3 Week (s)" and "End on: No End Date". The "Repeat on:" line has letters S, M, T, W, T, F, S. A text box below contains "Every 3rd week on Sun and Wed". At the bottom are "OK" and "Cancel" buttons.

Continued on next page



## Managing schedules and events (Date Book)

- **When you tap Month:** On the Repeat by line, tap Day to repeat the event on the specified day of the same week each month, or tap Date to repeat the event on the specified date each month.

Change Repeat ⓘ

None Day Week Month Year

Every: 3 Month(s)

End on: ▼ No End Date

Repeat by: Day Date

The 1st Wednesday of every 3rd month

OK Cancel

- 7 To specify an end date for the repeating or continuous event, tap the arrow ▼ next to End on to display the drop-down list and then tap Choose Date.

The Ending On screen appears.

Ending On

◀ 2001 ▶

Jan	Feb	Mar	Apr	May	Jun	
Jul	Aug	Sep	Oct	Nov	Dec	
S	M	T	W	T	F	S
1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31				

Cancel Today

- 8 Tap the end date on the screen.  
The Change Repeat screen appears again.
- 9 Tap OK.  
The Event Details screen appears again.

Continued on next page






## Managing schedules and events (Date Book)


### 10 Tap OK.

The Date Book screen is displayed again.

Make sure that the repeat  icon is displayed to the far right of the event.



### Notes

- If you change the start date of a repeating event, your CLIÉ handheld calculates the number of days you moved the event. Your CLIÉ handheld then automatically changes the end date to maintain the duration of the repeating event.
- If you change the repeat interval (e.g., daily to weekly) of a repeating event, past occurrences (prior to the day on which you change the setting) are not changed, and your CLIÉ handheld creates a new repeating event.
- If you change the date of an occurrence of a repeating event (e.g., from January 14 to January 15) and apply the change to all occurrences, the new date becomes the start date of the repeating event. Your CLIÉ handheld adjusts the end date to maintain the duration of the event.
- If you change other repeat settings (e.g., time, alarm, private) of a repeating event and apply the change to all occurrences, your CLIÉ handheld creates a new event. The start date of this new event is the day on which the setting is changed. Past occurrences (prior to the day of the change) are not changed.
- If you apply a change to a single occurrence of a repeating event (e.g., time), that occurrence no longer shows the repeat  icon.




## Managing schedules and events (Date Book)

### Checking schedules

#### Displaying the Day view

You can display and check the events for a specific day.

- 1 Press the Date Book  button on the front panel.  
Date Book starts. Today's schedule is displayed.
- 2 Rotate the Jog Dial™ navigator to display the events for yesterday or tomorrow.  
You can display the schedule for a specific day and time.


#### To change the Date Book view

In addition to displaying the time list for a specific day, you can also display a whole week, a month, or an agenda.





To display the next view, press the Jog Dial navigator repeatedly.

#### Tip

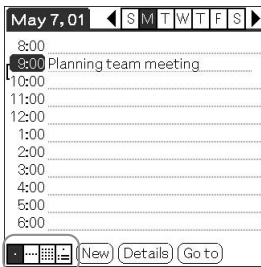You can also select the Date Book view by tapping an icon on the Date Book screen. Tap one of the following icons to rotate to the corresponding calendar view:



Tap the desired view icon.

-  : Day view
-  : Week view
-  : Month view
-  : Agenda view




## Managing schedules and events (Date Book)

### Displaying the Week view


Week view displays a calendar of your events for an entire week. This view lets you quickly review your appointments and available time slots. In addition, the graphical display helps you spot overlaps and conflicts in your schedule.

- 1 Press the Date Book  button on the front panel.

Date Book starts up.

- 2 Press the Jog Dial navigator repeatedly or tap the  Week view icon.

The Week view appears. Untimed events are also displayed in the Week view.

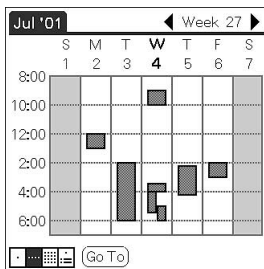


- 3 Rotate the Jog Dial navigator to select the week that you want to review.

To select the next week, rotate the Jog Dial navigator.

- 4 Press the Jog Dial navigator.

The details of the selected week are displayed.

#### Tips

- To reschedule an event while in the Week view, tap and drag the event to a different time or day.
- Tap a blank time on any day to move to that day and have the time selected for a new event.
- Tap any day or date that appears at the top of the Week view to move directly to that day without selecting an event.
- The Week view displays the time span defined by the Start Time and End Time in the Date Book Preferences settings. If you have an event before or after this time span, a bar appears at the top or bottom of that day's column. Use the onscreen scroll arrows  to scroll to the event.


Continued on next page



## Managing schedules and events (Date Book)


### To view the detail of an event

Tap each time bar to view the detail of that event.

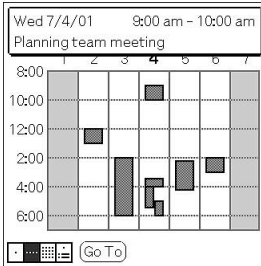

### To spot event conflicts

An event conflict (time overlap) appears in the Week view as overlapping time bars and in the Day view as overlapping brackets to the left of the conflicting times.

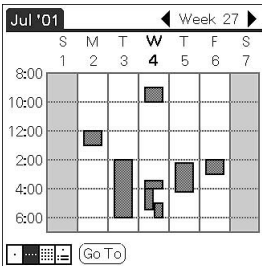




## Managing schedules and events (Date Book)

### Displaying the Month view


The Month view screen shows which days have events scheduled. Dots and lines in the Month view indicate events, repeating events, and untimed events.

- 1 Press the Date Book  button on the front panel.

Date Book starts up.

- 2 Press the Jog Dial navigator repeatedly or tap the  Month view icon.

The Month view screen appears.

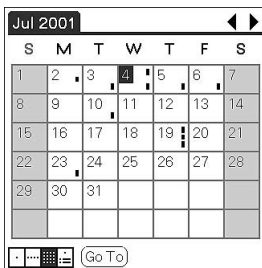


- 3 Rotate the Jog Dial navigator to select the day that you want to review.

To select the next day, rotate the Jog Dial navigator.

- 4 Press the Jog Dial navigator.

The details of the selected day are displayed.

#### Tips

- Tap a day in the Month view to display that day in the Day view.
- Tap the scroll arrows  in the upper right corner to move forward or backward a month.
- Tap Go To to open the Go To Date dialog box to select a different month.
- Use the scroll buttons on the front panel of your CLIÉ handheld to move between months. Press the upper half of the scroll button to display the previous month, the lower half of the scroll button to display the next month.




## Managing schedules and events (Date Book)

### Displaying the Agenda view


The Agenda view shows you your appointments, untimed events, and To Do List items in a single screen. As well as checking the detailed information of an event, you can also use the Agenda view to check off completed To Do List items.

- 1 Press the Date Book  button on the front panel.

Date Book starts up.

- 2 Press the Jog Dial navigator repeatedly or tap the  Agenda view icon.

The Agenda view screen appears. Today's schedule and To Do List is displayed.

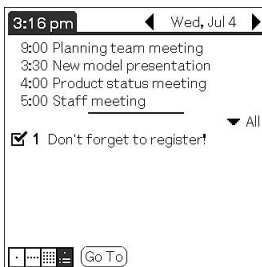

- 3 Rotate the Jog Dial navigator to select the day that you want to review.

To select the next day, rotate the Jog Dial navigator.

#### Tips

- Tap any appointment while in Agenda view to display the Day view of the appointment.
- Check off completed To Do List items in the Agenda view, or tap a description of an item to go directly into the To Do List application.



## Managing schedules and events (Date Book)

### Changing Date and Time view

Tap and hold the date in the title bar of Date Book.  
The current time appears.



When you release the stylus, the menu bar appears. If you want to avoid displaying the menu when releasing the stylus, drag the stylus away from the date indication after the current time appears.



### Editing Date Book events

#### Changing a date or time for an event

**1** On the Date Book screen, tap the event you want to edit.

**2** Tap Details.

The Event Details dialog box appears.

Event Details ⓘ

Time: 3:30 pm - 4:00 pm

Date: Wed 7/4/01

Alarm:

Repeat: None

Private:

OK Cancel Delete... Note

**3** • To change the time, tap the Time box and select a new time.

The Set Time dialog box appears. Tap the Start Time and the End Time.

• To change the date, tap the Date box and select a new date.

The Set Date dialog box appears. Specify the year, month, and day in the calendar.

**4** Tap OK.





## Managing schedules and events (Date Book)

### Changing a timed event to an untimed event

- 1 On the Date Book screen, tap the event you want to edit.
- 2 Tap Details.
- 3 Tap the Time box.  
The Set Time screen appears.
- 4 Tap No Time and then tap OK.  
The Event Details screen appears.



The image shows a dialog box titled "Event Details" with an information icon in the top right corner. It contains the following fields and options:

- Time: [No time]
- Date: [Wed 7/4/01]
- Alarm:
- Repeat: [None]
- Private:

At the bottom, there are four buttons: OK, Cancel, Delete..., and Note.

- 5 Tap OK.

The untimed event is displayed in the first line with the untimed ♦ mark.



The image shows a Date Book screen for "Jul 4, 01" with a day-of-the-week indicator (S M T W T F S). The first event is "♦ New model presentation" starting at 8:00. Below it is a bracketed list of events: "9:00 Planning team meeting", "10:00", "11:00", "12:00", "1:00", "4:00 Product status meeting", "5:00 Staff meeting", "5:30", and "6:00". At the bottom, there are icons for a calendar, a list, and a grid, followed by buttons for (New), (Details), and (Go To).



## Managing schedules and events (Date Book)

### Setting an alarm for an event

The Alarm setting enables you to set an audible alarm for events in your Date Book. You can set an alarm to sound minutes, hours, or days before an event. The default Alarm setting is 5 minutes before the time of the event, but you can change this to any number of minutes, hours, or days.

When you set an alarm, an alarm  icon appears to the far right of the event with the alarm.


**1** On the Date Book screen, tap the event to which you want to assign an alarm.


**2** Tap Details.

The Event Details dialog box appears.

**3** Tap the Alarm check box to select it.

The alarm is set.

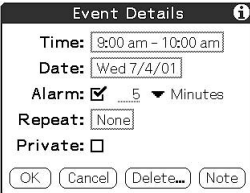

Event Details 

Time: 9:00 am - 10:00 am

Date: Wed 7/4/01

Alarm:  5 Minutes

Repeat: None

Private:

OK Cancel Delete... Note

**4** Tap the arrow ▼ to select the time unit from among Minutes, Hours, or Days.

**5** Tap the "5" next to the Alarm check box and enter any number from 0 to 99 as the number of time units.

**6** Tap OK.

Continued on next page



## Managing schedules and events (Date Book)

### Setting an alarm for an untimed event

You can set a silent alarm for an untimed event. In this case, the alarm triggers at the specified period of minutes, hours, or days before midnight (beginning) of the day of the untimed event. No audible alarm sounds for an untimed event. The reminder message appears onscreen instead.

**Example:** When you set an alarm for an untimed event that occurs on February 4 and if the alarm is set for 5 minutes, the reminder message appears at 11:55 PM on the night of February 3. The reminder remains onscreen until you turn on your handheld and tap OK to erase it.

### Making an event private

You can hide records that you mark as private. If you define a password for your CLÍÉ handheld, you must enter it to display private records.

- 1** On the Date Book screen, tap the event you want to mark as private.
- 2** Tap Details.  
The Event Details dialog box appears.
- 3** Tap the Private check box.

Event Details

Time: [9:00 am - 10:00 am]

Date: [Wed 7/4/01]

Alarm:

Repeat: [None]

Private:

OK Cancel Delete... Note

- 4** Tap OK.

The event is marked as private. For hiding or masking private events, see “Protecting your data (Security)” on page 100.



## Managing schedules and events (Date Book)

### Deleting events

You can delete existing events in Date Book.

#### Note

If you delete the contents of a repeating event, all the related events will be deleted. When deleting an event in Delete Event dialog box, you can delete a single event as an exception or all the related events.

**1** On the Date Book screen, tap the event you want to delete.

**2** Tap Details.

**3** Tap Delete.

The Delete Event dialog box appears.

**4** Tap OK to delete the event.

The selected event is deleted. To cancel deletion, tap Cancel.

#### Tip

If you select the "Save archive copy on PC" check box, the deleted event will be saved onto the Palm™ Desktop for CLIE software on your computer during the next HotSync® operation.



## Managing schedules and events (Date Book)

### Using the Date Book menus

This section explains the menu commands specific to Date Book. For the Edit menu, see “Using the Edit menu” on page 108.

#### Record menus

<b>New Event</b>	Creates a new event. The Set Time dialog box for selecting the start and end times is displayed.
<b>Delete Event</b>	Deletes the currently selected event. The Delete Event dialog box appears.
<b>Attach Note</b>	Attaches notes to the current event. This menu opens up a dialog box for entering comments.
<b>Delete Note</b>	Deletes notes from the current event. The Delete Note dialog box is displayed.
<b>Purge</b>	<p>You can specify a certain period based on the current date and discard any events that were formed before the specified date. Use this function to save memory space.</p> <p><b>Notes</b></p> <ul style="list-style-type: none"><li>• A repeating event will not be deleted.</li><li>• By default, the events that you purge will be saved in the Palm Desktop for CLIÉ software on your computer at the next HotSync operation. To delete the events completely, deselect the check box (<input type="checkbox"/>) for “Save archive copy on PC” in the Purge dialog box.</li></ul>
<b>Beam Event</b>	Sends the current event to another CLIÉ handheld via the infrared communications port.




## Managing schedules and events (Date Book)

### Options menus

---

<b>Font</b>	You can select a desired font in the Select Font dialog box.
-------------	--------------------------------------------------------------

---

<b>Preferences</b>	<ul style="list-style-type: none"><li>• <b>Start/End Time:</b> Defines the start and end times for Date Book screens. If the time slots you select do not fit on one screen, you can tap the scroll arrows  to scroll up and down.</li><li>• <b>Alarm Preset:</b> Automatically sets an alarm for each new event. The silent alarm for untimed events is defined by minutes, days, or hours before midnight of the date of the event.</li><li>• <b>Alarm Sound:</b> Sets the tone of the alarm.</li><li>• <b>Remind Me:</b> Defines how many times the alarm sounds. The choices are Once, Twice, 3 Times, 5 Times, and 10 Times.</li><li>• <b>Play Every:</b> Defines how often the alarm sounds. The choices are Minute, 5 minutes, 10 minutes, and 30 minutes.</li></ul>
--------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

<b>Display Options</b>	<p>Changes the Date Book's appearance and which events display.</p> <ul style="list-style-type: none"><li>• <b>Show Time Bars:</b> Activates the time bars that appear in the Day view. The time bars show the duration of an event and illustrates event conflicts.</li><li>• <b>Compress Day View:</b> Controls how times appear in the Day view. When Compress Day view is off, all time slots are displayed. When it is on, start and end times display for each event, but blank time slots toward the bottom of the screen disappear to minimize scrolling.</li><li>• <b>Month View settings:</b> These check boxes apply to the Month view of Date Book. You can activate any or all of these settings to show that you have Timed, Untimed, or Daily Repeating events in the Month view only.</li></ul>
------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---

<b>Phone Lookup</b>	The Phone Number Lookup screen appears. If there is an Address Book entry, you can look up the phone number of the selected item.
---------------------	-----------------------------------------------------------------------------------------------------------------------------------

---

<b>Security</b>	Hides the current item unless the password is entered. You can select the view option among Show Records, Mask Records, or Hide Records.
-----------------	------------------------------------------------------------------------------------------------------------------------------------------

---

<b>About Date Book</b>	Shows version information for Date Book.
------------------------	------------------------------------------

---

Chapter2 Using Basic applications

46



## Managing addresses and phone numbers (Address Book)

Address Book lets you keep names, addresses, telephone numbers, and other information about your personal or business contacts.

An item in Address Book is called an “entry.”

### Note

If the HOLD switch is in the protect position, you cannot operate your CLIÉ handheld.

## Creating a new Address Book entry

- 1 Press the Address Book  button on the front panel.


The Address screen is displayed.

### Note

Press the Address Book button repeatedly to cycle through the categories in which you have entries.

- 2 Tap New.

The Address Edit screen appears.

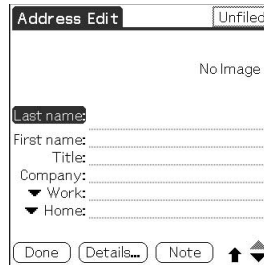


- 3 Enter the last name of the person you want to add to Address Book.

The first letter of each field (except numeric and e-mail fields) is automatically capitalized.

- 4 Tap First name.

The cursor shifts to the first name field.

You can also use the Graffiti software to move the cursor to the next field by entering .

Continued on next page



### 5 Enter the first name in the First name field.

Address Edit Unfiled

No Image

Last name: **Carter**

First name: **Melanie**

Title: \_\_\_\_\_

Company: \_\_\_\_\_

▼ Work: \_\_\_\_\_

▼ Home: \_\_\_\_\_

Done Details... Note

### 6 Repeat steps 4 and 5 to enter the other items of information that you want to include.

You can tap the scroll arrow ▼ next to each item to display the list of choices and then tap the desired item in the list.

### 7 To move to the next page of information, tap the scroll arrow ▼ on the bottom-right corner of the screen.

### 8 After you finish entering all the necessary information, tap Done.

The Address screen is displayed again.

Address All

Carter, Mela ###-###-###...W

Look Up New

#### Tip


You can also use the Palm™ Desktop for CLIE software to create entries on your computer and then download them to your CLIE handheld with your next HotSync® operation. See “Performing a local HotSync® operation with the cradle” on page 112 for details.





## Managing addresses and phone numbers (Address Book)


### Viewing Address Book entries

- 1** Press the Address Book  button on the front panel.  
The Address screen is displayed, listing your current entries.
- 2** Rotate the Jog Dial™ navigator to select the address entry you want to view.  
If the desired address entry is not displayed, rotate the Jog Dial navigator further to scroll up or down the entire list.
- 3** Press the Jog Dial navigator.  
The Address View screen of the selected entry is displayed.



- 4** To return to the list of address entries, press the Jog Dial navigator again or press the BACK button.  
The Address screen is displayed again.

#### Tips

- If there are multiple pages of information, the scroll button moves up or down an address list or the Address View screen. If you hold down the scroll button, you accelerate the scrolling and display every third screen.
- You can also use the stylus to tap the onscreen scroll arrows  to scroll to the entry.

#### To view an image pasted to an address entry

Tap an image on the Address View screen. The image is displayed across the whole screen. To return the Address View screen, tap the image again.

#### To view the next page of the Address View screen

Rotate the Jog Dial navigator. The next or previous page within the data is displayed.




### Viewing addresses by category

Press the Jog Dial navigator when the address list is displayed but none of the listed entries are selected.

Each time you press the Jog Dial navigator, the display toggles through all the available categories.

#### To select category from the categories list

Tap the arrow ▼ at the upper right corner of the screen to display the category list. You can select the desired category from the list.

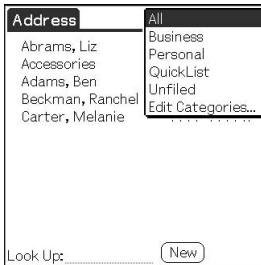




## Managing addresses and phone numbers (Address Book)

### Sorting the address entries in the list

You can sort the address entries in your desired order: listing by last and then first name, or listing by company and then last name. The address entries will be displayed in the selected order when you start Address Book. Any changes in the address order, however, do not affect the original address entries.

- 1 Press the Address Book  button on the front panel.


The Address screen is displayed, listing your current entries.

- 2 Tap the Menu  icon.

Address Book menu is displayed.

- 3 Tap Options, and then tap Preferences.

The Address Book Preferences dialog box appears.

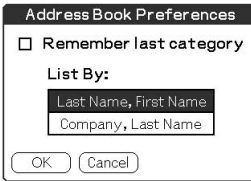

- 4 Tap the desired order of the address entries in the List By field.

Select the desired order that the address entries are to be listed when Address Book starts.

- 5 Tap OK.

The address entries are sorted in the selected order.

#### Notes

- When you tap Last Name, First Name, the address entries are sorted in alphabetical order of an individual's last name and then first name.
- When you tap Company, Last Name, the address entries are sorted in alphabetical order of the company name, and then an individual's last name.



## Managing addresses and phone numbers (Address Book)


### Looking up an address entry

The Look Up feature helps you to quickly scroll to any of your address entries.

- 1 On the Address Book list screen, enter the first letter of the entry you want to find.

The list scrolls to the first entry that begins with that letter. If you write another letter, the list scrolls to the first entry that starts with those two letters.

For example, writing an “s” scrolls to “Sands,” and writing “sm” scrolls further to “Smith.” If you sort the list by company name, the Look Up feature scrolls to the first letter of the company name.

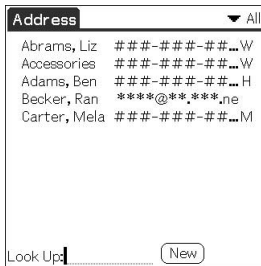

- 2 Tap the entry you want to view or press the Jog Dial navigator.

The entry you selected is shown.



### Editing Address Book entries

#### Pasting an image to an address entry

You can paste an image to the address entry. Paste a photograph of a person or restaurant, for example, as a reminder of an address entry.

To paste an image, install the PictureGear™ Pocket software onto your CLIÉ handheld. For installation, see “Installing add-on applications onto your Sony CLIÉ Handheld or Memory Stick media” in the Read This First manual.

- 1** Tap the address entry to which you want to paste an image in the address list.

The Address View screen of the selected address record appears.

- 2** Tap Edit.


The Address Edit screen appears.

- 3** Tap No Image in the upper right of the screen.



Tap No Image.

The PG Pocket screen appears.

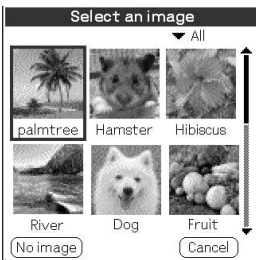

Continued on next page




## Managing addresses and phone numbers (Address Book)

### 4 Tap the image you want to paste.

The image you selected is pasted to the address entry.

### 5 Tap Done.

The Address screen is displayed again.

A camera  icon is attached to the entry that has the pasted image.

A camera  icon

#### Note

If you use the Palm Desktop for CLIÉ software to change the category of the address entry that has a pasted image, the image will no longer be associated with the address entry after the next HotSync operation. To edit an address entry with a pasted image, use the Address Book application in your CLIÉ handheld.

#### To change the image

Tap the image and then select another image in the “Select an image” screen.

#### To remove the image

Tap the image and then tap No image in the “Select an image” screen.



### Modifying an address entry

You can modify part of the address entry.

- 1 On the Address Book list screen, tap the entry you want to modify.

The Address View screen of the selected entry appears.

- 2 Tap Edit.

The Address Edit screen appears.

- 3 Tap the field that you want to edit.

You can edit the tapped field.

- 4 Edit the entry.

- 5 When modification is complete, tap Done.

The Address screen is displayed again.

### To select types of phone numbers

You can select the types of phone numbers or e-mail addresses that you associate with an Address Book entry. Any changes you make apply only to the current entry. To select other types of phone numbers in an entry, tap the arrow ▼ and select the desired label from the drop-down list.





## Managing addresses and phone numbers (Address Book)

### Duplicating an address entry


You can copy existing address entries you have created. This feature is useful when you use the address of one person or edit part of the address for another person.

- 1 On the Address Book list screen, tap the entry you want to copy.

The Address View screen of the selected record appears.

- 2 Tap the Menu  icon.

The Address Book menu is displayed.

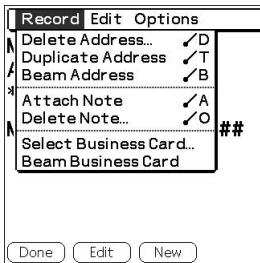

- 3 Tap Duplicate Address from the Record menu.

The entry you selected in step 2 is copied.

The word “Copy” is added to the end of the name field of the copied information.



- 4 Tap Done.

The Address screen is displayed again.

#### Note

The pasted image is not duplicated.





### Deleting an address entry

- 1 On the Address Book list screen, tap the entry you want to delete.

The Address View screen of the selected record appears.

- 2 Tap Edit.

The Address Edit screen appears.

- 3 Tap Details.

The Address Entry Details dialog box appears.



- 4 Tap Delete.

The Delete Address dialog box appears.



- 5 Tap OK to delete the entry.

The selected entry is deleted. To cancel deletion, tap Cancel.

#### Tip

If you select the “Save archive copy on PC” check box, the deleted data will be saved onto the Palm Desktop for Sony software on your computer during the next HotSync operation.



### Changing the address entry details

You can change the type of information that appears in the address list screen, categorize an entry, and hide an entry for security reasons. You can also delete entries.

**1** On the Address Book list screen, tap the entry you want to change.  
The Address View appears.

**2** Tap Edit.  
The Address Edit screen appears.

**3** Tap Details.  
The Address Entry Details dialog box appears.

**4** Change desired settings.

**Show in List:** Select which type of entries or other information appears in the Address list screen. Tap the arrow ▼ and select from Work, Home, Fax, Other, or E-mail.



**Category:** Assign the entry to a category.



**Private:** Select the Private check box to hide the current entry when Security is turned on. For details on Security, see “Protecting your data (Security)” on page 100.



**5** Tap OK.  
The address entry details are saved.



## Managing addresses and phone numbers (Address Book)

### Using the Address Book menus

This section explains the menu commands specific to Address Book. For the Edit menu, see “Using the Edit menu” on page 108. The Record and Options menus differ depending on whether you are displaying the Address List screen or the Address View screen.

#### Record menus

---

**Delete Address** Deletes the current address entry. The Delete Address dialog box appears.

##### Notes

- By default, the entry that you delete will be saved onto the Palm Desktop for CLIÉ software on your computer during the next HotSync operation. To delete the entry completely, deselect the check box (  ) for “Save archive copy on PC” in the Delete Address dialog box.
- If the current entry has an image pasted, the image will not be deleted.

---

**Duplicate Address** Makes a copy of the current entry and displays the copy in Address Edit so you can make changes to the copied entry. The copy has the same category and attached notes as the original entry.

---

**Beam Address** Sends all the address entries in the currently selected category to another CLIÉ handheld via the infrared communications port.

---

**Beam Category** Sends all the Address Book entries in the currently selected category to another CLIÉ handheld via the infrared communications port.


---

**Attach Note** Adds comments to the current address entry. Choosing this menu opens up a screen for entering comments.

---

**Delete Note** Deletes comments from the current address entry. Choosing this menu opens up the Delete Note dialog box. Tap Yes to delete comments and No to cancel the delete function.

---

**Select Business Card** Defines the current address entry on a business card. A business card icon () will be displayed when you set an entry as a business card.

---

**Beam Business Card** Sends the current business card to another CLIÉ handheld via the infrared communications port. You can also send a business card via the infrared communications port by pressing and holding down the Address Book button for longer than 2 seconds. This menu item is highly useful because you can exchange business cards with other CLIÉ handhelds with ease.

---



### Options menus

---

<b>Font</b>	You can select a desired font in the Select Font dialog box .
<b>Preferences</b>	<b>Remember last category:</b> Determines how Address Book appears when you return to it from another application. If you select this check box, Address Book shows the last category you selected. If you clear it, Address Book displays the All category.
<b>Rename Custom Fields</b>	These custom fields appear at the end of the Address Edit screen. Rename them to identify the kind of information you enter in them. The names you give the custom fields appear in all entries.
<b>Security</b>	Hides the current record unless the password is entered. You can select the view option among Show Records, Mask Records, or Hide Records.
<b>About Address Book</b>	Shows the version information for Address Book.

---



## Managing tasks and things to do (To Do List)

A To Do List is a reminder of some task you have to complete. A record in To Do List is called an “item.”

### Note

If the HOLD switch is in the protect position, you cannot operate your CLIÉ handheld.

## Creating To Do List items


- 1 Press the To Do List (☰) button on the front panel.  
To Do List opens and displays the category of items you last viewed.

### Note

Press the To Do List application button repeatedly to cycle through the categories in which you have items.

- 2 Tap New.

A new To Do item is added to To Do List.

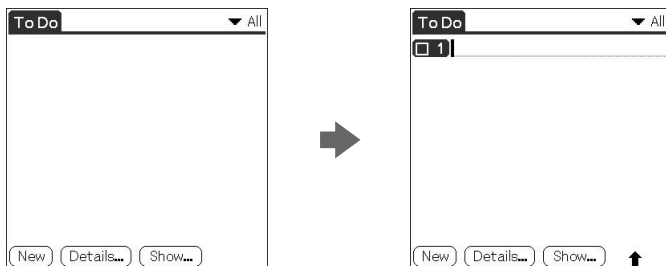

- 3 Enter the text of the To Do item.  
You can enter multiple lines of text.
- 4 Tap anywhere onscreen to deselect the To Do List item.  
The item is deselected and the new item is recorded to To Do List.

### Tips

- If no To Do List item is currently selected, writing in the Graffiti writing area automatically creates a new item.
- To display text that does not fit on the screen, tap the text line.



## Managing tasks and things to do (To Do List)

### Viewing To Do List items

You can check the items you recorded in To Do List.

- 1** Press the To Do List (☰) button on the front panel.  
The To Do screen appears.
- 2** Rotate the Jog Dial™ navigator to select the To Do List item that contains the note you want to view.
- 3** Press the Jog Dial navigator.  
The notes of the selected item are displayed. If the item does not fit on the screen, rotate the Jog Dial navigator to scroll the screen.
- 4** Press the Jog Dial navigator.  
The To Do List box reappears.


### Viewing To Do List items by category

Press the Jog Dial navigator when To Do List is displayed but no To Do item is selected.

Each time you press the Jog Dial navigator, the display toggles through all the available categories.

#### To select the desired category from the categories list

Tap the arrow ▼ at the upper right corner of the screen to display the category list. You can select the desired category from the list.

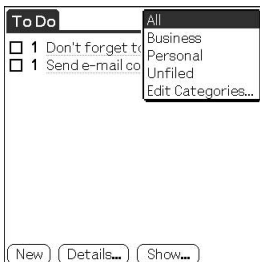






## Managing tasks and things to do (To Do List)

### Checking off a To Do List item

You can check off a To Do List item to remind you that you've completed it. You can set To Do List to record the date that you completed the To Do item, and you can choose to show or hide completed items. For details, see "Changing the appearance of To Do List" on page 67.

- 1** Press the To Do List  button on the front panel.  
The To Do screen appears.
- 2** Tap to select the check box on the left side of the item.  
The check box changes to .

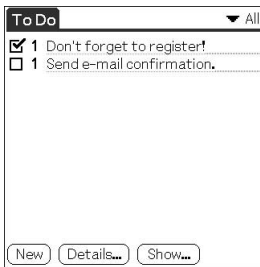



## Managing tasks and things to do (To Do List)


### Working with To Do List

#### Setting the priority of an item

The priority setting for items lets you arrange the tasks in your To Do List according to their importance or urgency. The default setting for To Do List is to arrange items by priority and due date, with priority 1 items at the top. If you have a number of items in your list, changing an item's priority setting may move its position in the list.


On the To Do List screen, tap the Priority number on the left side of the item and then tap the desired Priority number.

You can select the Priority numbers 1 through 5, with 1 being the most important.

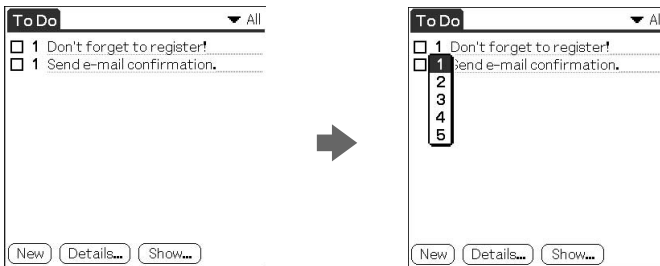

#### Tip

You can also set the priority from the To Do Item Details dialog box.

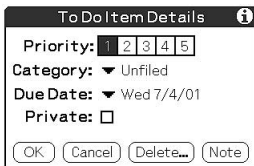





## Managing tasks and things to do (To Do List)

### Setting the due date for an item

You can associate a due date with any To Do List item. You can also sort the items that appear in the list based on their due date.

- 1 On the To Do List screen, tap the text of the item whose due date you want to set.
- 2 Tap Details.
- 3 Tap the arrow ▼ next to Due Date and then tap a desired due date from the drop-down list.

You can select one of the following options:



- **Today:** Assigns the current date.
- **Tomorrow:** Assigns the next day's date.
- **One week later:** Assigns the date exactly one week from the current date.
- **No Date:** Assigns no due date.
- **Choose Date:** Opens the Due Date screen, where you can choose any date from the calendar.

- 4 Tap OK.

#### Tip

If you turn on the Show Due Dates option in the To Do Preferences dialog box, you can tap directly on the due date in To Do List to select a desired due date.



## Managing tasks and things to do (To Do List)

### Deleting an item

You can delete items from To Do List.


**1** On the To Do List screen, tap the item you want to delete.

**2** Tap Details.

The To Do Item Details dialog box appears.

**3** Tap Delete.

The Delete To Do dialog box appears.

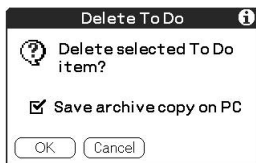

**4** Tap OK to delete the item.

The selected event is deleted. To cancel deletion, tap Cancel.

#### Tip

If you check the “Save archive copy on PC” check box, the deleted item will be saved onto the Palm Desktop for CLIÉ software on your computer during the next HotSync® operation.




## Managing tasks and things to do (To Do List)

### Changing the appearance of To Do List

The To Do Preferences dialog box enables you to control the appearance of To Do List.

#### 1 On the To Do List screen, tap Show.

The To Do Preferences dialog box appears.

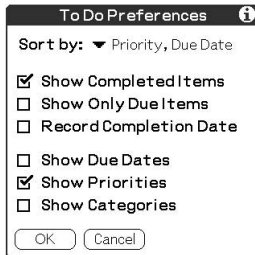

#### 2 Change the To Do Preferences settings.

You can choose any of the following settings:

- **Show Completed Items:** Displays your completed items in To Do List. If you turn off this setting, your To Do items disappear from the list when you complete (check) them.
- **Show Only Due Items:** Shows only the items that are currently due, past due, or have no due date specified. When this setting is active, items that are not yet due do not appear in the list until their due date.
- **Record Completion Date:** Replaces the due date with the actual date when you complete (check) the item. If you do not assign a due date to an item, the completion date still records when you complete the item.
- **Show Due Dates:** Displays the due dates associated with items in To Do List and displays an exclamation mark next to items that remain incomplete after the due date passes.
- **Show Priorities:** Shows the priority setting for each item.
- **Show Categories:** Shows the category for each item.

#### 3 Tap OK.



## Managing tasks and things to do (To Do List)

### Using the To Do List menus

This section explains the menu commands specific to To Do List. For the Edit menu, see “Using the Edit menu” on page 108.

#### Record menus

<b>Delete Item</b>	Deletes the current To Do item. The Delete To Do dialog box appears.
<b>Attach Note</b>	Adds comments to the current To Do item. Choosing this menu item opens up a screen for entering comments.
<b>Delete Note</b>	Deletes comments from the current To Do item. Choosing this menu item opens up the Delete Note dialog box.
<b>Purge</b>	Allows you to delete any completed items from To Do List. Run this command to save memory if you find too many recorded To Do items in your CLIÉ handheld. <b>Note</b> By default, the items that you purge will be saved onto the Palm Desktop for CLIÉ software on your computer during the next HotSync operation. To delete the items completely, deselect the check box ( <input type="checkbox"/> ) for “Save archive copy on PC” in the Purge dialog box.
<b>Beam Item</b>	Sends the current To Do item to another CLIÉ handheld via the infrared communications port.
<b>Beam Category</b>	Sends all the To Do items in the currently selected category to another CLIÉ handheld via the infrared communications port.

#### Options menus

<b>Font</b>	You can select a desired font in the Select Font dialog box.
<b>Phone Lookup</b>	The Phone Number Lookup screen appears. If there is an Address Book entry, you can look up the phone number of the selected item.
<b>Security</b>	Hides the current item unless the password is entered. You can select the view option among Show Records, Mask Records, or Hide Records.
<b>About To Do List</b>	Shows the version information for To Do List.



## Creating memos (Memo Pad)

You can use Memo Pad to make brief memos on your CLIÉ handheld. You can also display TXT or CSV (Comma Separated Value) document files created on your computer (page 134). A record in Memo Pad is called a “memo.”

### Note


If the HOLD switch is in the protect position, you cannot operate your CLIÉ handheld.

## Creating a new memo

A memo can contain up to 4,000 characters. The number of memos you can store is limited only by the memory available on your CLIÉ handheld.

### 1 Press the Memo Pad button on the front panel.

Memo Pad starts up. Memo Pad opens to display the last Memo Pad screen that you viewed.

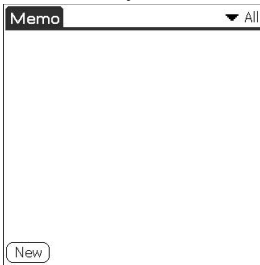


### Tip

Press the Memo Pad button repeatedly to cycle through the categories in which you have memos.

### 2 Tap New.

A new memo is created.

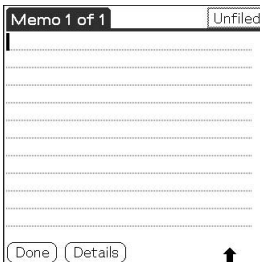


Continued on next page



## Creating memos (Memo Pad)


### 3 Enter the text you want to appear in the memo.

To move down to a new line, tap the Enter key when using the software keyboard or write  $\swarrow$  when using Graffiti writing.

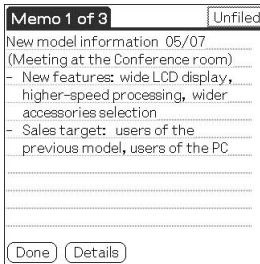

### 4 Tap Done or press the BACK button when you finish.

The first line of the memo is displayed.

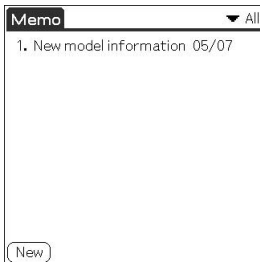

#### Tips

- You can also create a new memo by beginning your memo in the Graffiti writing area on the Memo screen. The first letter is automatically capitalized and begins your new memo.
- While entering text, the text may overlap the Done or Details buttons. After you finish entering the text, the overlap disappears.

---

 **Creating memos (Memo Pad)**

## Reviewing memos

The first line of a memo appears in the Memo List. This makes it easy to locate and review your memos.

- 1** Press the Memo Pad  button on the front panel.

Memo Pad starts and the Memo List is displayed.

- 2** Rotate the Jog Dial™ navigator to select the memo you want to view.

If the desired memo is not displayed, rotate the Jog Dial navigator further to scroll up or down the memo list.

- 3** Press the Jog Dial navigator.

The content of the selected memo is displayed. If the memo text does not fit on the screen, rotate the Jog Dial navigator to scroll the screen.

- 4** Press the Jog Dial navigator.

The Memo list is displayed again.

## Creating memos (Memo Pad)


### Viewing memos by category

Press the Jog Dial navigator when the memo list is displayed but no memo is selected.

Each time you press the Jog Dial navigator, the display toggles through all the available categories.



#### Selecting the desired category from the categories list

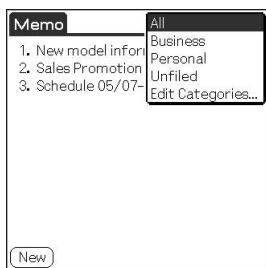Tap the arrow ▼ at the upper right corner of the screen to display the category list. You can select the desired category from the list.



### Sorting memos

You can change the order in which Memo Pad shows your memos.

- 1** Press the Memo Pad  button on the front panel.  
Memo Pad starts and the Memo list is displayed.
- 2** Tap the Menu  icon.  
A menu of commands appears.
- 3** Tap Options, and then tap Preferences.  
The Memo Preferences dialog box appears.


Continued on next page



---

## Creating memos (Memo Pad)

**4** Tap the desired order of the memos in the Sort by field.



- **Manual:** Sorts the memos manually.
- **Alphabetic:** Sorts the memos in numerical and then alphabetical order.

**5** Tap OK.

### To sort the memos manually

In step 4, select Manual to activate manual sorting.

Tap the memo you want to move in the Memo screen and drag it into the desired location. The memo is placed where you released the stylus.

The memos are renumbered accordingly.

## Creating memos (Memo Pad)

### Editing memos

#### Deleting a memo

You can delete an unnecessary memo from Memo Pad.

- 1** On the Memo Pad screen, tap the memo you want to delete.  
The contents of the memo you tapped appears.

- 2** Tap Details.

The Memo Details dialog box appears.



- 3** Tap Delete.

The Delete Memo dialog box appears.



- 4** Tap OK to delete the memo.

The selected record is deleted. To cancel deletion, tap Cancel.


#### Tip

If you select the “Save archive copy on PC” check box, the deleted memo will be saved onto the Palm Desktop for CLIÉ software on your computer during the next HotSync® operation.

## Creating memos (Memo Pad)

### Categorizing a memo

You can categorize your memo. In step 2 of “Deleting a memo,” tap the arrow ▼ next to Category to display the list of available categories and then tap the desired category for the memo.

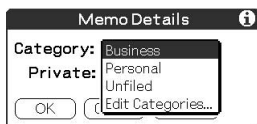

### Making a memo private

You can hide a memo that you mark as private. If you define a password for your CLIÉ handheld, you must enter it to display private records.

- 1** On the Memo Pad screen, tap the memo you want to mark as private.
- 2** Tap Details.  
The Memo Details dialog box appears.
- 3** Tap and select the Private check box.



- 4** Tap OK.

The memo is marked as private. For details on hiding or masking private events, see “Protecting your data (Security)” on page 100.

## Creating memos (Memo Pad)

### Using the Memo Pad menus

This section explains the menu commands specific to Memo Pad. For the Edit menu, see “Using the Edit menu” on page 108. The Record and Options menus differ depending on the screen displayed.

#### Record menus

<b>Beam Category</b>	Sends all the memos in the currently selected category to another CLIÉ handheld via the infrared communications port.
<b>New Memo</b>	Creates a new memo.
<b>Delete Memo</b>	Deletes the current memo. The Delete Memo dialog box appears. <b>Note</b> By default, the memos that you delete will be saved onto the Palm Desktop for CLIÉ software on your computer during the next HotSync operation. To delete the memos completely, deselect the check box ( <input type="checkbox"/> ) for “Save archive copy on PC” in the Delete Memo dialog box.
<b>Beam Memo</b>	Sends the current memo to another CLIÉ handheld via the infrared communications port.

#### The Options menus

<b>Font</b>	You can select a desired font in the Select Font dialog box.
<b>Phone Lookup</b>	Phone Number Lookup screen appears. If there is an Address Book entry, you can look up the phone number of the selected memo.
<b>Preferences</b>	Specifies how the memos are displayed. The Memo Preferences screen appears.
<b>Security</b>	Hides the current memo unless the password is entered. You can select the view option among Show Records, Mask Records, or Hide Records.
<b>About Memo Pad</b>	Shows the version information for Memo Pad.



## Managing expenses (Expense)


You can use Expense for many disbursement purposes such as recording expenditures for business trips and personal expenses. A record in Expense is called an “item.”

### Note

If the HOLD switch is in the protect position, you cannot operate your CLIE handheld.

## Recording a new Expense item

Expense allows you to record the date, Expense type, and the amount you spent. You can sort Expense items into categories or add other information to an item.

- 1 Rotate the Jog Dial™ navigator to select Expense and then press the Jog Dial navigator. Or tap the Expense  icon on the Application Launcher screen.

The Expense screen appears.



- 2 Tap New.

New Expense item is created.



Continued on next page

## Managing expenses (Expense)

### 3 Enter the amount of the expense.



The screenshot shows the 'Expense' screen with a dropdown menu set to 'All'. The entry '5/8' is on the left, '-Expense type-' is in the middle, and '\$ .....150' is on the right. At the bottom are three buttons: 'New', 'Details...', and 'Show...'.

### 4 Tap **-Expense Type-** and select an Expense type from the drop-down list box.

The item you entered in Step 3 is saved when you select an Expense Type.



The screenshot shows the 'Expense' screen with the dropdown menu open. The entry '5/8' is on the left, 'Airfare' is selected in the dropdown, and '150.00' is on the right. The dropdown list includes: Airfare, BreakFast, Bus, Business Meals, Car Rental, Dinner, Entertainment, Fax, Gas, Gifts, Hotel, and Incidentals. At the bottom are three buttons: 'New', 'Details...', and 'Show...'.

#### Note

If you do not select an Expense type, the entered data will not be saved.

#### Tip

You can also create a new Expense item on the Expense screen by writing on the number side of the Graffiti® writing area. The first number you write begins your new Expense item.

## Managing expenses (Expense)


### Editing Expense items

#### Changing the display option

You can change display options of Expense items.

**1** On the Expense screen, tap Show.

The Show Options dialog box appears.

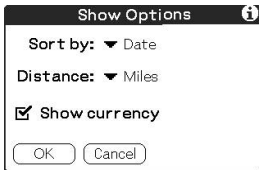

**2** Select the desired display mode option.

- **Sort by:** Tap the arrow ▼ next to Sort by and then select Date or Type to sort Expense items.
- **Distance:** Tap the arrow ▼ and then select Miles or Kilometers so that you can display Mileage entries in miles or kilometers.
- **Show currency:** Shows or hides the currency symbol in the Expense list.

**3** Tap OK.

The Expense items are sorted according to the display mode option you selected.

## Managing expenses (Expense)

### Changing the date of an Expense item

The Expense item is initially displayed with the date when it is entered. If you want to record a past payment date for an Expense item, you can change the payment date of the item to the correct date.

- 1 On the Expense screen, tap the Expense item whose date you want to change.

The date is highlighted.




A screenshot of the 'Expense' screen. The title bar says 'Expense' with a dropdown arrow and 'All'. The list contains the following items:

7/2	Bus	\$	20,00
7/3	Business Meals	\$	50,00
7/4	Gifts	\$	35,00
7/4	Parking	\$	40,00
7/4	Postage	\$	22,00

At the bottom, there are three buttons: 'New', 'Details...', and 'Show...'.

- 2 Tap the date area of the selected Expense item.

The Date screen appears.

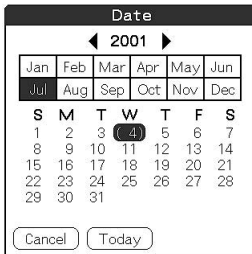

A screenshot of the 'Date' selection screen. The title bar says 'Date'. Below it is a year selector '2001' with left and right arrows. The calendar shows months from Jan to Dec. The days of the week are listed as S, M, T, W, T, F, S. The date '4' is selected in the month of July. At the bottom, there are two buttons: 'Cancel' and 'Today'.

- 3 Tap the desired date.

The date is changed.



## Managing expenses (Expense)

### Entering receipt details for an Expense item

You can add details to an Expense item in the Receipt Details screen.

**1** On the Expense screen, tap the Expense item to which you want to assign details.

**2** Tap Details.

The Receipt Details dialog box appears.



**3** Change the Receipt Details settings.

You can choose any of the following options:

- **Category:** Specify the category of the Expense item. The Expense has two sample categories named “New York” and “Paris” which may be used to sort Expense items by the destination of the business trip. To rename an existing category or add a new category, tap the arrow ▼ and choose a category from the Edit Categories drop-down list box.
- **Type:** Tap the arrow ▼ and select an Expense type from the drop-down list box.
- **Payment:** Tap the arrow ▼ and select a payment method from the drop-down list box.
- **Currency:** Tap the arrow ▼ and select the currency in which you made the payment. Expense can show a maximum of four currencies. You can also change the currencies to be displayed.
- **Vendor:** Enter the name of the vendor associated with Expense.
- **City:** Enter the name of the payee (normally a company name) and the name of the city where the company is located. For example, you may specify “Rose Cafe” as the payee of a business lunch charge and “Tokyo” as the location.

Continued on next page

---

## Managing expenses (Expense)

- **Attendees:** Expense opens the Attendees screen which looks like a memo screen of Memo Pad. In this screen, you can enter the names of attendees and purposes of expenditures. To display the address information in Address Book, tap Address Lookup.

**4** Tap OK.

### Creating/printing an Expense report

By performing a HotSync® operation to transfer your latest Expense data to your computer, the Palm™ Desktop for CLIÉ software makes it easy to view your Expense data in a Microsoft Excel spreadsheet. You can also print the Expense report from a printer connected to your computer.

- 1** Perform a HotSync operation to transfer the Expense data from your CLIÉ handheld to your computer.
- 2** Click Expense in the Palm Desktop for CLIÉ software. Microsoft Excel opens, and the Expense Report dialog box appears.

#### Note

If you launch Expense from the Start menu instead of the Palm Desktop for CLIÉ software, you must first choose your handheld user name.

- 3** Click the expense category that you want. If you want to define an end date for the expense report, enter the date in the End Date box.

#### Tips

- You can press Ctrl+click to select multiple categories. To print the expenses associated with all of your Expense categories, select All in the Categories group.
- If you do not specify an end date, all the expense entries for the selected categories (up to the date of the last HotSync operation) appear.

 Continued on next page

## Managing expenses (Expense)

- 4** Click one of the following:
- **Print:** The expense report is displayed in the Print Preview window. Click Print in the Microsoft Excel window to print your expense report.
  - **Create:** Your expense data is displayed in Microsoft Excel spreadsheet form. You can enter information, make formatting changes, and save and print the file in the normal manner.

### Using expense report templates

Palm Desktop for CLIÉ software includes several expense report templates. When you use one of these templates, you can edit your expense data in Microsoft Excel.

To view your expense data using a Microsoft Excel template, click Options after creating an expense report. Click the templates menu, then select an expense template. Then, click OK.

#### Tip

The templates have the extension .xlt and are stored in the Template folder in the “C:\Program Files\Sony Handheld” directory on your computer. To see what a template looks like before you use it, open the template in Microsoft Excel.

### Customizing the Currency list

You can change the currencies and symbols that appear for currencies to be used in Expense.

#### To change the currency list

- 1** On the Expense screen, tap the Expense item whose currency type you want to change.
- 2** Tap Details.  
The Receipt Details dialog box appears.

Continued on next page

## Managing expenses (Expense)

- 3 Tap the arrow ▼ next to Currency and then tap Edit currencies from the drop-down list.


The Select Currencies dialog box appears.



- 4 Tap the arrow ▼ for each Currency and then tap the country whose currency you want to display in the Currency list.
- 5 Tap OK to close the Select Currencies dialog box.
- 6 Tap OK.

### To change your default currency


You can change the currency displayed as the default in the Currency list.

- 1 On the Expense screen, tap the Menu  icon.

The menu is displayed.

- 2 Tap Options and then Preferences.

The Preferences dialog box appears.

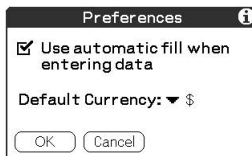


- 3 Tap the arrow ▼ next to Default Currency and then tap the currency symbol you want to appear in Expense.
- 4 Tap OK.

---

## Managing expenses (Expense)

### To create a new currency symbol

If the currency you want to use is not included in the Currency list, you can create your own custom country and currency symbol.

- 1 On the Expense screen, tap the Menu  icon.


The menu is displayed.

- 2 Tap Options and then Custom Currencies.

The Custom Currencies dialog box appears.

- 3 Tap one of the four country boxes.

The Currency Properties dialog box appears.



Currency Properties

Country: .....

Symbol: .....

OK Cancel

- 4 Enter the name of the country and a currency symbol, and then tap OK.

#### Tips

- To use a newly defined currency symbol as a standard currency symbol, it is necessary to select the target currency symbol in advance in the Preferences option.
- To use a currency symbol only for a specific Expense item, select the currency symbol in the Receipt Details dialog box of that Expense item.

## Managing expenses (Expense)

### Using the Expense menus

This section explains the menu commands specific to Expense. For the Edit menu, see “Using the Edit menu” on page 108.

#### Record menus

---

<b>Delete Item</b>	Deletes the current Expense item. The Delete Expense dialog box appears. <b>Note</b> By default, the items that you delete will be saved in Palm Desktop for CLIÉ software on your computer at the next HotSync operation. To delete the items completely, deselect the check box ( <input type="checkbox"/> ) for “Save archive copy on PC” in the Delete Expense dialog box.
<b>Purge</b>	Allows you to delete any category that is no longer used from the Expense category set. Run this command to save memory if you find too many Expense items in your CLIÉ handheld.

---

#### Options menus

---



<b>Preferences</b>	<ul style="list-style-type: none"><li>• <b>Use automatic fill:</b> Lets you select an Expense type by writing the first letter of an Expense type in the Graffiti writing area. For example, if you write the letter “T,” it enters the “Taxi” Expense type. Writing “T” and then “E” enters “Telephone” which is the first Expense type beginning with the letters “TE.”</li><li>• <b>Default Currency:</b> Specifies the currency to be displayed as the default currency.</li></ul>
<b>Custom Currencies</b>	You can create and add a new currency if you cannot find the currency you want to use in Expense.
<b>About Expense</b>	Shows the version information for Expense.


---



# Using Calculator (Calc)

## Calculating with Calculator

- 1 Do either of the following to start the Calculator:
  - Tap the Calculator  icon.
  - Rotate the Jog Dial™ navigator to select Calc and then press the Jog Dial navigator.
  - Tap the Calc  icon on the Application Launcher screen.  
The Calculator screen appears.

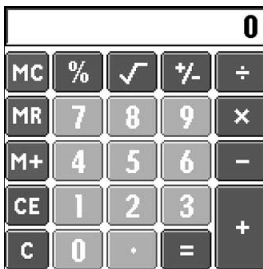

- 2 Perform calculations using Calculator.

To use Calculator, tap the numbers and symbol icons on the screen with the stylus.



## Using Calculator (Calc)

### Using the Calculator buttons

Calculator has several buttons to help you perform calculations.

<b>CE</b>	Clears the last number you entered. Use this button if you make a mistake while entering a number in the middle of a calculation. This button enables you to re-enter the number without starting the calculation over.
<b>C</b>	Clears the entire calculation and enables you to begin a new calculation.
<b>+/-</b>	Toggles the current number between a negative and positive value. If you want to enter a negative number, enter the number first and then press the +/- button.
<b>M+</b>	Places the current number in memory. Each new number you enter with the M+ button is added to the total stored in memory. The number that you add can be either a calculated value or any number you enter by pressing the number buttons. Pressing this button has no effect on the current calculation (or series of calculations); it merely places the value into memory until it is recalled.
<b>MR</b>	Recalls the stored value from memory and inserts it in the current calculation.
<b>MC</b>	Clears any value that is stored in the Calculator memory.
<b><math>\sqrt{\quad}</math></b>	Calculates the square root of the entered number. Tap the button after entering the number.

### Using the Calculator menus

<b>Copy, Paste</b>	Copies a number from Calculator and pastes it into another application. Similarly, you can also paste numeric values you copied from another application such as Expense into Calculator.
<b>Recent Calculations</b>	You can review the last series of calculations.
<b>About Calculator</b>	Shows the version information for Calculator.




# Performing common tasks

This section explains how to perform tasks that you can do in most or all of the basic applications.

## Using the Application Launcher

This section explains how to switch between applications, how to change application settings so they are customized to your work methods, and how to categorize applications so you view them in related groups.

- 1 To open the Application Launcher screen, tap the Home  icon.







### Tip

In addition to providing a way for you to open applications, the Application Launcher screen displays the current time, battery level, and application category.

## Selecting applications

To open an application, choose from the following options:

- Tap the icon of the application you want to open. If you have many applications installed on your CLIE handheld, tap the scroll bar to see all the available applications.
- Rotate the Jog Dial™ navigator to select the application. Push the Jog Dial navigator to launch the selected application.
- Press an application button , , , or  on the front panel to display the selected application immediately.

## Performing common tasks

### To open applications in the Memory Stick media

To open an application in the Memory Stick media from the Application Launcher screen, tap the arrow ▼ in the upper-right corner of the Application Launcher screen and select Card (or a category with the Card icon). Then, tap the icon of the application you want to open.

The Card icon is displayed only when a Memory Stick media is inserted in the CLIE handheld.

#### Note

There are some restrictions when opening an application copied (not installed using MS Gate) onto the CLIE handheld from the Memory Stick media. For details, see page 163.


## Categorizing applications

The category feature enables you to manage the number of application icons that appear in the Application Launcher screen. You can assign an application to a category and then display a single category or all your applications.

### To categorize an application

- 1 Tap the Home icon.
- 2 Tap the Menu icon.
- 3 Tap Category from the App menu.

The Category screen appears.

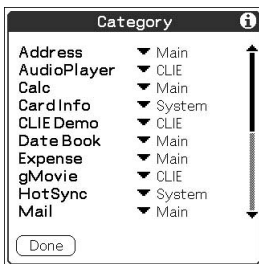

Continued on next page

## Performing common tasks



- 4 Tap the arrow ▼ next to each application to select a category from the drop-down list.

### Tip

To create a new category for an application, tap Edit Categories from the drop-down list. Tap New, enter the category name, and then tap OK to add the category. Tap OK again.

- 5 Tap Done.

### To display applications by category



- 1 Tap the Home  icon.
- 2 Do one of the following:
  - Tap the Home  icon repeatedly to cycle through all the categories.
  - Tap the arrow ▼ in the upper right corner of the screen and then tap the desired category from the drop-down categories list.
  - Push the Jog Dial navigator repeatedly while no applications are highlighted.


## Changing the Application Launcher display

By default, the Application Launcher displays each application as an icon. As an alternative, you can display applications in a list format.

You can also choose to view the same category of applications each time you open the Application Launcher screen.

### To change the view of applications

- 1 Tap the Home  icon.
- 2 Tap the Menu  icon.  
The menu is displayed.
- 3 Tap Options, and then tap Preferences.  
The Preferences screen is displayed.

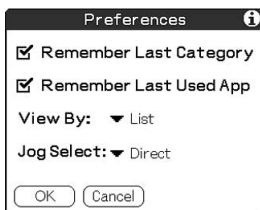

Continued on next page

## Performing common tasks

4 Tap the arrow ▼ next to View By and then tap List.

5 Tap OK.

The applications are displayed in a list.



**To open the Application Launcher screen to the last-opened category or the last-used application**

1 Tap the Home  icon.

2 Tap the Menu  icon.

The menu is displayed.

3 Tap Options, and then tap Preferences.

The Preferences screen is displayed.

4 Tap the Remember Last Category check box to select it or the Remember Last Used App to select it.

5 Tap OK.

### Note

Only application started from the Application Launcher screen will be remembered as the last-used application.

**To display the Pop-up application menu with the Jog Dial navigator**

In step 4, tap the arrow ▼ next to Jog Select and then tap PopUp.



---

## Performing common tasks

### Categorizing records

You can categorize records in Address Book, To Do List, Memo Pad, and Expense applications for easy retrieval. (Date Book does not have categories.) When you create a record, it is automatically assigned to the currently displayed category. For example, if the All category is displayed, the record is assigned to the Unfiled category. A record can remain unfiled or it can be assigned to a category at any time.

#### System-defined and user-defined categories

By default, your CLÍÉ handheld includes system-defined categories, such as All and Unfiled, and user-defined categories, such as Business and Personal. You cannot modify the system-defined categories, but you can rename or delete the user-defined categories. In addition, you can create your own user-defined categories. You can have a maximum of 15 user-defined categories in each application.

#### Tips

- Address Book contains the QuickList user-defined category, in which you can store the names, addresses, and phone numbers of which you might need in emergencies (doctors, fire department, lawyers, etc.).
- Expense contains two user-defined categories, New York and Paris, to show how you might sort your expenses according to different business trips.

---

## Performing common tasks

### Moving a record into a category

- 1 Tap the record that you want to categorize.
- 2 Address Book only: Tap Edit.  
The Address Edit screen appears.
- 3 Tap Details.
- 4 Tap the arrow ▼ next to Category to display the list of available categories.
- 5 Tap the desired category for the item.
- 6 Tap OK.

### Displaying the category of records

- 1 Tap the arrow ▼ at the upper right corner of the screen.  
A list of available categories appears.




- 2 Tap the category you want to view.  
The list screen now displays only the records assigned to that category.

---

## Performing common tasks

### Defining a new category

- 1** Tap the arrow ▼ at the upper right corner of the screen.  
A list of available categories appears.
- 2** Tap Edit Categories.  
The Edit Categories screen is displayed.
- 3** Tap New.  
The Edit Categories dialog box is displayed.



- 4** Enter a new category name and then tap OK.  
You can assign any of your entries to the new category.

## Performing common tasks

### Finding records

Your CLIÉ handheld lets you find information by entering text in the Find option dialog box or searching for a phone number using the Phone Lookup option. These two options are available for all the basic CLIÉ applications.

Each application offers ways to find information:

- **Date Book, To Do List, Memo Pad:** Phone Lookup displays the Address List screen and lets you add the information that appears in this list to a record.
- **Address Book:** The Look Up line lets you enter the first letters of a name to scroll immediately to that name.
- **Expense:** Lookup displays the names in your Address Book that have data in the Company field. You can add these names to a list of attendees associated with an Expense record.

### Using the Find option

The Find option lets you locate any text you specify in any application. For example, if the text appears in Address Book and Date Book, the Find option displays both occurrences in the Find dialog box.

#### 1 Tap the Find icon.

The Find dialog box appears.



#### 2 Enter the text you want to find.

You can enter letters, symbols, or numbers.



Continued on next page




---

## Performing common tasks

### 3 Tap OK.

Find searches for the text in records and notes and then displays the results.

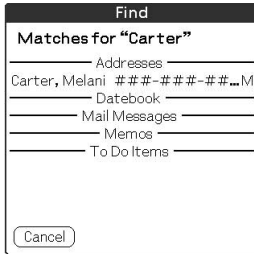

### 4 Tap the text in the find result list that you want to review.

The application associated with the data automatically starts to display the data.

#### To stop searching midway

Tap Stop. To resume the search, tap Find More.

#### Note

The Find option is not case sensitive; searching for "sony" also finds "Sony."

#### Tip

Select text in an application before tapping the Find icon to automatically place the text in the Find dialog box.


## Performing common tasks

### Using the Phone Lookup option

The Phone Lookup option lets you find a telephone number from the Address list screen and lets you add the information that appears in this list to a record. For example, you can add a telephone number from the Address list to an entry in Memo Pad.

- 1 Display the record in which you want to insert a phone number.


The record can be in Date Book, To Do List, or Memo Pad.

- 2 Tap the Menu  icon.

The menu of the application appears.

- 3 Tap Options and then Phone Lookup.

The Phone Number Lookup screen appears.

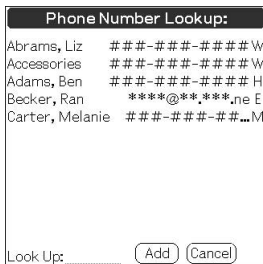

- 4 Tap the phone number you want to add.

#### Tip

To quickly find a phone number, enter the first few letters of the name you want to find in the Look Up field in the lower screen.


Continued on next page

---


## Performing common tasks

### 5 Tap Add.


The Phone Lookup closes and the name and phone number are added to the record you displayed in step 1.

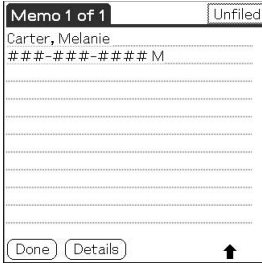

### To activate Phone Lookup with Graffiti

Write the Graffiti® Command stroke  to activate Phone Lookup.

### Phone Lookup using text

Drag and highlight text and then write the Graffiti Command stroke . The selected text is replaced with the found name and phone number. If multiple records are found, the Phone Number Lookup screen appears.

## Performing common tasks

### Protecting your data (Security)

Your CLIÉ handheld includes a Security application that allows you to protect your data from unauthorized users.


In Security, you can do the following:

- Lock and turn off your CLIÉ handheld so that it does not operate until you enter the correct password.
- Set the CLIÉ handheld to automatically lock at/after a preset time, or whenever you turn it off.
- Mask all records that you mark as private so the information appears greyed out.
- Hide all records that you mark as private so they do not appear on any screen.


You can mask or hide private records with or without a password. Without a password, private records are hidden or masked until you set the Security application to show them. With a password, you must enter the password to view the private records.

### Assigning a password

You can assign a password to protect your private records and to lock your CLIÉ handheld.

- 1 Rotate the Jog Dial navigator to select Security and then press the Jog Dial navigator. Or tap the Security  icon on the Application Launcher screen.

The Security screen appears.

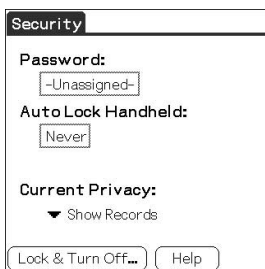

Continued on next page

## Performing common tasks

### 2 Tap Unassigned.

The Password dialog box appears.



### 3 Enter a password and a hint to remember it, then tap OK.

The dialog box for verifying the password appears.

### 4 Enter the same password again to verify it and then tap OK.

Your password is assigned. In Password, “-Assigned-” is displayed.

To lock your CLÍÉ handheld with this password, see page 103.

## Changing or deleting a password

### 1 Rotate the Jog Dial navigator to select Security and press the Jog Dial navigator. Or tap the Security icon on the Application Launcher screen.

The Security screen appears.

### 2 Tap -Assigned-.

The Password dialog box appears.



### 3 Enter the current password and then tap OK.

The dialog box used to enter a new password appears.

Continued on next page

---

## Performing common tasks

- 4 • To change the password, enter a new password and then tap OK.
  - To delete the password, tap Unassign.

### If you forget your password

If you forget your password, you can delete it. Note, however, that deleting a forgotten password also deletes all entries and records marked as Private. (If you synchronize with your computer before deleting a forgotten password, you can restore your private records at the next HotSync® operation.)

- 1 Tap Lost Password in step 3.

The Delete Password dialog box appears.



- 2 Tap Yes.

Your password and private records are deleted.


## Performing common tasks

### Locking your CLIÉ handheld with a password

You can lock your CLIÉ handheld so that you have to enter your password to operate it.

#### Note

If you lock your CLIÉ handheld, you must enter the exact password to restart your CLIÉ handheld. If you forget the password, you must perform a hard reset to resume using your CLIÉ handheld. Performing a hard reset deletes all the records in your CLIÉ handheld; however, you can restore all synchronized data at the next HotSync® operation.


- 1** Perform a HotSync operation to synchronize the data between your CLIÉ handheld and your computer.  
See “Chapter 3: Exchanging and updating data using a HotSync® operation” for more information.
- 2** Assign a password and a hint to remember it.  
Follow the steps described in “Assigning a password.”
- 3** Rotate the Jog Dial navigator to select Security and press the Jog Dial navigator. Or tap the Security  icon on the Application Launcher screen.

The Security screen appears.



- 4** Tap Lock & Turn Off.

The System Lockout dialog box appears.

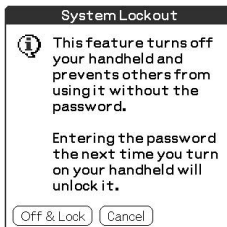

Continued on next page

---

## Performing common tasks

### 5 Tap Off & Lock.

Your CLIÉ handheld is turned off and locked.

To start your CLIÉ handheld, turn it on and enter the password.



### Setting your CLIÉ handheld to lock automatically

You can set your CLIÉ handheld to lock whenever you turn it off.

#### 1 Back up your data and assign a password.


Follow the steps described in “Assigning a password.”

#### 2 Tap Never.

The Password screen appears.

#### 3 Enter your password, and then tap OK.

The Lock Handheld screen appears.

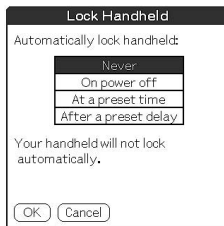

#### 4 Tap your choice from the list.

- **Never:** Your CLIÉ handheld will not lock automatically. To lock it manually, you must tap Lock & Turn Off in the Security screen.
- **On power off:** Your CLIÉ handheld will lock when it is turned off.
- **At a preset time:** The Set Time dialog box appears. Set a time so your CLIÉ handheld will lock at that preset time.
- **After a preset delay:** Set your CLIÉ handheld to lock if inactive for a preset time. Enter the time, and tap the arrow ▼ next to it to select minute(s) or hour(s).

#### 5 Tap OK.




## Performing common tasks

### Making records private

In all basic applications except Expense, you can make individual records private. Private records remain visible and accessible, until you select the Security setting to hide all private records.

#### To mask or hide private records


You can mask or hide your private records. To view the masked or hidden records, you need to enter the password.

- 1 Rotate the Jog Dial navigator to select Security or tap the Security  icon on the Application Launcher screen.

The Security screen appears.

- 2 Tap the arrow ▼ next to Current Privacy to select Mask Records or Hide Records from the drop-down list.

- **Mask Records:** Masked records appear as grey placeholders in their position with a lock mark.
- **Hide Records:** Hidden records disappear completely from the screen.

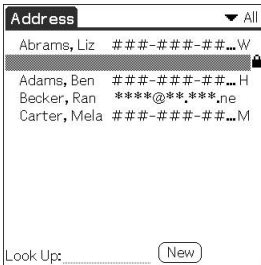

When you select Mask Records



When you select Hide Records

- 3 Tap OK.

#### To display private records

In step 2, select Show Records.

If you have a password, the Show Records screen appears. Enter the password and then tap OK.

## Performing common tasks

### Attaching notes


In all basic applications except Memo Pad, you can attach a note to a record. A note can be up to several thousand characters long. For example, for an appointment in Date Book, you can attach a note with directions to a location.

- 1 Tap the record to which you want to add a note.
- 2 Address Book only: Tap Edit.  
The Address Edit screen appears.
- 3 Tap Details.
- 4 Tap Note.
- 5 Enter your note.



- 6 Tap Done.

A small note icon appears at the right side of any item that has a note.

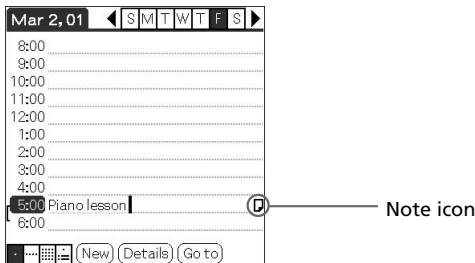


#### Tip

To display the note, tap the note icon. You can review or edit the note. To delete the note, tap Delete and then tap Yes.

## Performing common tasks

### Purging records


If outdated records of Date Book, To Do List, or Expense take up memory on your CLIÉ handheld, it's a good idea to remove them by using Purge. If you think Date Book or To Do List records might prove useful later, you can save them in an archive file on your computer. Purging is not available in Address Book or Memo Pad, so delete outdated records from these applications.

- 1 Open the application.
- 2 Tap the Menu  icon.
- 3 Tap Purge from the Record menu.

The Purge screen appears.



Date Book, To Do List

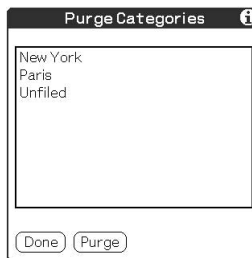

Expense

**Date Book, To Do List:** Tap the arrow ▼ and select how old a record must be to be purged. If you want to save a copy of the purged records on your computer, select the “Save archive copy on PC” check box. If you want to delete the records completely, clear it.

**Expense:** Tap the category you want to delete.

- 4 Date Book, To Do List: Tap OK.

Expense: Tap Purge.

If you chose to save a copy of the purged records, your CLIÉ handheld transfers them to an archive file on your computer the next time you perform a HotSync operation.

#### Note

Purging does not happen automatically. You must tap the command to make it happen.

## Performing common tasks

### Using the Edit menu

The Edit menu is available with any screen where you enter or edit text. In general, commands available in the Edit menu apply to the text that you select in an application.

#### Selecting text in an application

- 1 Tap the beginning of the text that you want to select.
- 2 Drag the stylus over the text to highlight it.

#### Notes

- You can also double tap to select a word, or triple tap to select a line of text.
- You can also drag across the text to select additional words, or drag down to select a group of lines.

#### Edit menu

To display the Edit menu, tap the Menu  icon and then select Edit.


<b>Undo</b>	Reverses the action of the last edit command. For example, if you used Cut to remove text, Undo restores the text you removed. Undo also reverses deletions done by using backspace.
<b>Cut</b>	Removes the selected text and stores it temporarily in the memory of your CLIÉ handheld. You can paste the text you cut into another area of the current application or into a different application.
<b>Copy</b>	Copies the selected text and stores it temporarily in the memory of your CLIÉ handheld. You can paste the text that you copy into another area of the current application or into a different application.
<b>Paste</b>	Inserts the text that you cut or copied at the selected point in a record. The text you paste replaces any selected text. If you did not previously cut or copy text, Paste does nothing.
<b>Select All</b>	Selects all of the text in the current record or screen. This enables you to cut or copy all of the text and paste it elsewhere.
<b>Keyboard</b>	Opens the onscreen keyboard. When you finish with the onscreen keyboard, tap Done.
<b>Graffiti Help</b>	Opens screens that show all the Graffiti character strokes. Use this command any time you forget a stroke for a character.

---

## Performing common tasks

### Choosing fonts

In all basic applications except Expense, you can change the font style to make text easier to read. You can choose a different font style for each application.

- 1** Open an application.
- 2** Tap the Menu  icon.  
The menu is displayed.
- 3** Tap Options, and then tap Font.
- 4** Tap the font style you want to use.  
You can select small, bold, or large font.



- 5** Tap OK.  
The text in the application is displayed in the selected font style.

---

# Chapter 3

## *Exchanging and updating data using a HotSync® operation*

This chapter describes how to select HotSync® operation options and how to perform a HotSync operation via cradle, infrared communications port, or network. Other advanced HotSync operations include how to use file link functions and how to import data from Windows applications.


---

### **Contents**

What is a HotSync® operation? .....	111
Performing a local HotSync® operation with the cradle .....	112
Using the Palm™ Desktop for CLIE software .....	114
Starting the Palm Desktop for CLIE software .....	114
Basic operations of the Palm Desktop for CLIE software .....	114
Locating the Palm Desktop for CLIE components .....	115
Advanced HotSync® operations .....	116
Setting the HotSync® setup options .....	116
Customizing HotSync application settings (Conduit) .....	118
Conducting an IR HotSync operation .....	120
Conducting a HotSync operation via modem .....	123
Conducting a HotSync operation via a network .....	129
Importing data from a Windows application .....	134
Synchronizing with external data (File Link) .....	136

# What is a HotSync® operation?

A HotSync® operation is a one-step operation that allows you to synchronize data between your CLIÉ handheld and your computer. With just one press on the HotSync button, you can synchronize your CLIÉ handheld application data with the Palm™ Desktop for CLIÉ software data on your computer, back up the data of your CLIÉ handheld on your computer, or install add-on applications.

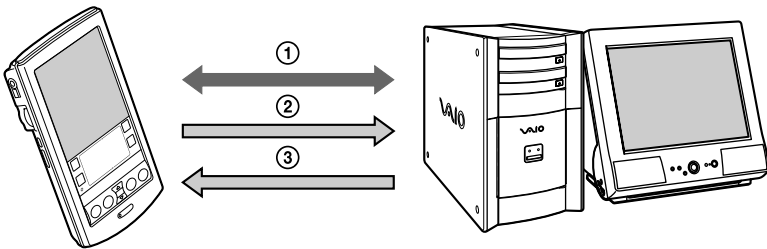


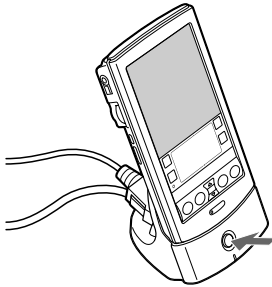
- ① Synchronize the Date Book, the Address Book, the To Do List, the Memo Pad, and the Expense data on your CLIÉ handheld and your computer. The Palm Desktop for CLIÉ software can manage the data of multiple CLIÉ handhelds independently.
- ② Back up the data stored on your CLIÉ handheld onto your computer. Synchronization ensures that your data is always safe and up-to-date. In case you need to perform a hard reset, a HotSync operation allows you to restore the data.
- ③ Import the data on your computer or install add-on applications onto your CLIÉ handheld.

---

# Performing a local HotSync® operation with the cradle

This section describes how to perform a HotSync® operation using the cradle (local HotSync), assuming that you have done all the necessary preparations and installations for your CLIÉ handheld and your computer. For the required preparations and software installation, and for information on performing a HotSync for the first HotSync operation, see the Read This First manual.

- 1** Place your CLIÉ handheld on the cradle.
- 2** Press the HotSync  button on the front panel of the cradle. The HotSync operation starts.






When the HotSync operation is complete, a message showing the HotSync completion is displayed on your CLIÉ handheld.

## Note

Do not remove your CLIÉ handheld from the cradle until the HotSync operation is complete. Otherwise the Palm Desktop for CLIÉ software may not quit normally.

## If the HotSync operation does not start

Make sure that the HotSync  icon is displayed in the Windows task tray on your computer screen and Local Serial is not selected from the shortcut menu. If the HotSync  icon is not shown in the task tray, click Start, point to Programs, Sony Handheld, and then click HotSync Manager. Press the HotSync  button on the cradle to start the HotSync operation.




---

## Performing a local HotSync® operation with the cradle

### If a message stating that the selected COM port is not available is displayed

Follow the procedures below. If the same message appears again, uninstall the Palm Desktop for CLIÉ software and then re-install it.

- 1** Click the HotSync  icon in the Windows® task tray (bottom-right corner of the taskbar).

A shortcut menu is displayed.

- 2** Make sure that Local USB is selected.

If it is selected, click Local USB to clear it.

#### Notes

- Do not remove your CLIÉ handheld from the cradle during a HotSync operation.
- Do not press the HotSync button during a HotSync operation. It might cause errors and force the operation to quit.
- Do not enter power saving mode during a HotSync operation. If your computer enters power saving mode during a HotSync operation, the HotSync Manager will be forced to quit.

### To change the user name

- 1** In the Palm™ Desktop for CLIÉ window, click Users from the Tools menu.

The Users dialog box is displayed.

- 2** Click the user name you want to change in the list box and then click Rename.

The Rename User dialog box is displayed.

- 3** Enter a new user name and then click OK.

Your CLIÉ handheld user name is changed at the next HotSync operation.

---

# Using the Palm™ Desktop for CLIÉ software


The Palm™ Desktop for CLIÉ software duplicates Date Book, Address Book, To Do List, Expense, and Memo Pad applications on your CLIÉ handheld, so you can view, enter, and modify data stored on your CLIÉ handheld with your computer. You can also import data from Windows applications onto your CLIÉ handheld.

## Starting the Palm Desktop for CLIÉ software

Double-click the Palm Desktop for CLIÉ software icon on the Windows desktop or click Start, select Programs, Sony Handheld, and then click Palm Desktop for CLIÉ.

The Palm Desktop for CLIÉ software starts.

### To quit the Palm Desktop for CLIÉ software

Click the close button  in the upper right of the screen or click File, and then Exit.


## Basic operations of the Palm Desktop for CLIÉ software

Click the icon of the application that you want to use. The screen switches to the selected application screen.

Basic operations for each application are the same as those of the corresponding CLIÉ application. For details, see the Palm Desktop online help. To display the online help, click Help and then Palm Desktop Help.

# Using the Palm™ Desktop for CLIÉ software

## Locating the Palm Desktop for CLIÉ components

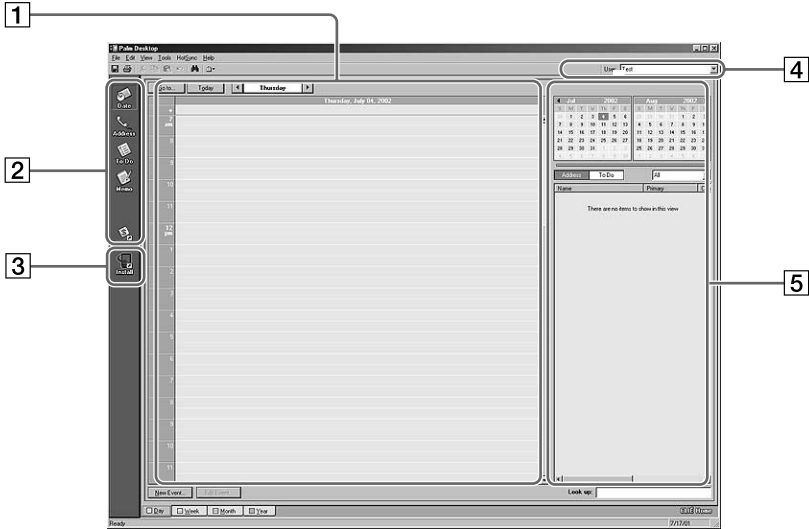

- 1 List pane**

Displays the records in the current Desktop application.
- 2 Application Launch bar**

Provides one-click access to each Desktop application. Click an icon to open its associated application.
- 3 Install Tool icon**

Displays the Install Tool dialog box to select the application you want to install onto your CLIÉ handheld the next time you perform a HotSync operation.
- 4 User name display**


Displays the user name of the owner of the information being displayed.
- 5 Record pane**

Displays full details of the record that is selected in the List pane. The information displayed here is the same as that displayed on your CLIÉ handheld's Details screen.


# Advanced HotSync® operations

## Setting the HotSync® setup options

You can change how to start the HotSync Manager or make the local HotSync settings.

- 1 Click the HotSync  icon in the Windows® task tray (bottom-right corner of the taskbar) and then select Setup from the shortcut menu.

The Setup dialog box appears.

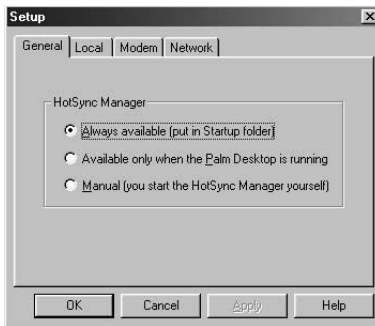

- 2 Click the General tab to select one of the following options.

If you are not sure which option to use, keep the default setting: (Always available)

- **Always available:** Adds the HotSync Manager to the Startup folder and starts the HotSync Manager to monitor the USB port as soon as Windows is started. This allows you to perform a HotSync operation even when the Palm Desktop for CLIÉ software is not running.
- **Available only when the Palm Desktop is running:** Starts the HotSync Manager when you start the Palm Desktop for CLIÉ software.
- **Manual:** Starts the HotSync Manager only when you select HotSync Manager from the Windows Start menu.

Continued on next page

---

## Advanced HotSync® operations

- 3** Click the Modem tab to display the modem settings and then adjust the options as needed.  
See “Conducting a HotSync operation via modem” on page 123 for more information.
- 4** If you are attached to a network, click the Network tab to display the network settings and then adjust the options as needed.  
See “Conducting a HotSync operation via a network” on page 129 for more information.
- 5** Click OK.

## Advanced HotSync® operations


### Customizing HotSync application settings (Conduit)

#### What is a “Conduit”?

For each application, you can define a set of options that determines how records are handled during synchronization. These options are called a “conduit.” By default, a HotSync operation synchronizes all files between your CLIÉ handheld and the Palm Desktop for CLIÉ software.


In general, you should leave the settings as they are to synchronize all files. The only reason you might want to change these settings is to overwrite data on either your CLIÉ handheld or the Palm Desktop for CLIÉ software, or to avoid synchronizing a particular type of file because you do not use it.

In addition to the conduits for Date Book, Address Book, To Do List, Memo Pad, and Expense, the Palm Desktop for CLIÉ software offers System and Install conduits. The System conduit backs up the system information stored on your CLIÉ handheld. The Install conduit installs add-on applications to your CLIÉ handheld.

- 1 Click the HotSync  icon in the Windows task tray (bottom-right corner of the taskbar) and then select Custom from the HotSync Manager menu.

Or, select Custom from the HotSync menu of the Palm Desktop for CLIÉ software.

The Custom dialog box appears.

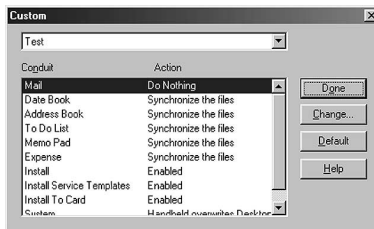


- 2 Select the appropriate user name you are using on your CLIÉ handheld from the drop-down list.
- 3 Select an application in the Conduit list.

Continued on next page

## Advanced HotSync® operations

### 4 Click Change.

The Change HotSync Action dialog box appears.

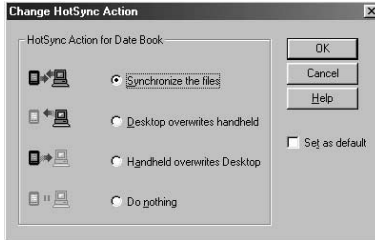

### 5 Click the direction in which you want to write data, or click Do nothing.

### 6 Click OK.

### 7 Repeat steps 2 through 6 to change conduit settings for other applications (or users).

### 8 Click Done.

#### Notes

- Any change in the HotSync setting from the default affects only the next HotSync operation. Thereafter, the HotSync Actions revert to their default settings. To use a new setting on an ongoing basis, check the Set as default box.
- To restore the default settings, click Default in the Custom dialog box.

---

## Advanced HotSync® operations

### Conducting an IR HotSync operation

You can use the IR (infrared) port of your CLIE handheld to perform an IR HotSync operation with a computer equipped with an IrDA (Infrared Data Association) IR port. An IR HotSync operation allows you to perform a HotSync operation without using the cradle.

#### Before you start performing an IR HotSync operation

Check the following:

- Your computer is equipped with an infrared port supporting the IrDA standards.
- The infrared port of your computer is enabled for Windows use.



To enable the IR port with Windows, see the manual of the computer you are using or the Windows online help.

- Which port number is allocated to the infrared port.

Check the infrared port number in the Infrared Monitor in the Control Panel. For information on the Infrared Monitor, see the manual of the computer you are using or the Windows online help.

#### Preparing your computer

To perform an IR HotSync operation, you have to allocate a virtual port to an IR HotSync operation.

- 1** Click the HotSync  icon in the Windows task tray (bottom-right corner of the taskbar) and then select Local Serial from the shortcut menu.
- 2** Click the HotSync  icon in the Windows task tray again and then select Setup from the shortcut menu.  
The setup dialog box is displayed.

Continued on next page 



## Advanced HotSync® operations

- 3 Click the Local tab to change the setting for an IR HotSync operation as needed.
  - **Serial Port:** Specifies a virtual port for an infrared port. If you are not sure of the connection port, see the Infrared Monitor in the Windows Control Panel.
  - **Speed:** Determines the speed at which data is transferred. Try the “As Fast As Possible” rate first, and then adjust downward if you experience problems.
- 4 Tap OK.


Your computer is ready to perform an IR HotSync operation.


### Note

When performing a local HotSync operation with the cradle after you make the HotSync Setup settings for an IR HotSync operation, you should restore the local HotSync settings. For details, see “To restore the local HotSync settings” on page 122.

### Performing an IR HotSync operation

After you prepare your computer and your CLIÉ handheld, and then select your Conduit Setup options, you are ready to perform an IR HotSync operation.

- 1 Rotate the Jog Dial™ navigator to select HotSync and then press the Jog Dial navigator. Or tap the HotSync  icon on the Application Launcher screen.

The HotSync dialog box appears.
- 2 Tap Local.
- 3 Tap the arrow ▼ beneath the  icon and then select IR to a PC/Handheld from the drop-down list.
- 4 Point the IR port of your CLIÉ handheld directly at the IR port of the receiving computer.

Continued on next page

---

## Advanced HotSync® operations



### Tip

For best results, your computer and your CLIÉ handheld should be 4 to 8 inches (approximately 10 to 20 centimeters) apart, and the path between your CLIÉ handheld and the computer must be clear of obstacles.

### 5 Tap the icon.

The HotSync operation starts. Wait for the message showing that the HotSync operation is complete.


### To restore the local HotSync settings

- 1 Connect the cradle to your computer.
- 2 Click the HotSync  icon in the Windows task tray and clear the check mark of Local Serial from the shortcut menu.
- 3 Click the HotSync  icon in the Windows task tray again and then select Setup from the shortcut menu.  
The setup dialog box is displayed.
- 4 Click the Local tab to display the setting for a local HotSync operation as needed.
- 5 Click OK.  
Your computer is now ready to perform a local HotSync operation.

## Advanced HotSync® operations

### Conducting a HotSync operation via modem

You can use a modem to synchronize your CLIÉ handheld when you are away from your computer. A HotSync operation via modem allows you to back up your CLIÉ data to your computer away from your computer.

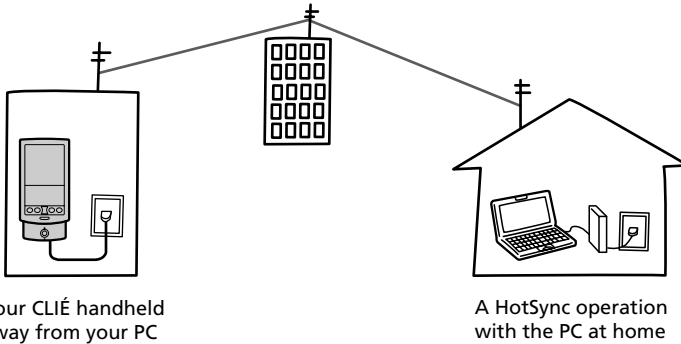

#### Notes

- The first HotSync operation must be local, using the cradle. After that, you can perform a modem HotSync operation.
- It may take many minutes to complete a HotSync operation via modem. To minimize the time required to synchronize data with a modem, we suggest you define the files and/or applications you synchronize during a modem HotSync operation in advance. For details, see “To select the conduits for a modem HotSync operation” on page 127.

#### Before you start performing a HotSync operation via modem



Check the following:

- A modem or terminal adapter is connected to your computer.
- The CLIÉ Modem PEGA-MD700 (not supplied) must be connected to your CLIÉ handheld.
- The Palm Desktop for CLIÉ software must be properly configured for use with the modem.


## Advanced HotSync® operations

### Preparing your computer

There are a few steps you must perform to prepare your computer for a modem HotSync operation. Be sure to perform these steps before you leave your office or home so that your computer is ready to receive a call from your CLIE handheld.

- 1 Check the following to prepare your computer for a modem HotSync operation:
  - The computer modem must be connected to your computer and both the modem and computer are turned on.
  - No communication applications, such as fax or telephony software, are running on the COM port.
  - The computer is disconnected from all online services. This helps to avoid conflicts with the COM port.
- 2 Click the HotSync  icon in the Windows task tray (bottom-right corner of the taskbar) and then select Modem from the shortcut menu.
- 3 Click the HotSync  icon in the Windows task tray again and then select Setup from the shortcut menu.

The Setup dialog box is displayed.
- 4 Click the Modem tab.

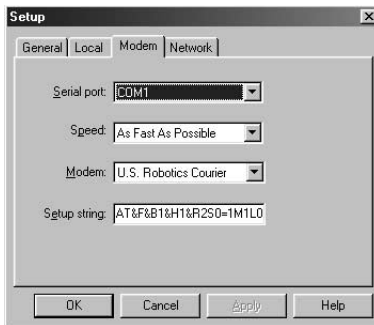

Continued on next page

## Advanced HotSync® operations


### 5 Adjust the following options as needed.

- **Serial Port:** Identifies the port for the modem. If you are unsure of the port assignment, look at the Modem Properties in the Windows Control Panel.
- **Speed:** Determines the speed at which data is transferred. Try the “As Fast As Possible” rate first, and then adjust downward if you experience problems. This setting allows the Palm Desktop for CLIE software and your CLIE handheld to find and use the fastest speed.
- **Modem:** Identifies the modem type or manufacturer. Refer to your modem manual or face plate for its type or settings. If you’re not sure of your modem type or your modem doesn’t match any that appear in the list, select Hayes Basic.
- **Setup String:** Identifies the setup string for your particular modem. Not all modems require a setup string. Refer to your modem manual and enter a setup string if recommended by the manufacturer.

### 6 Click OK.


## Preparing your CLIE handheld

Follow the procedures below to prepare your CLIE handheld for a modem HotSync operation.

- 1 Rotate the Jog Dial navigator to select HotSync and then press the Jog Dial navigator. Or tap the HotSync  icon on the Application Launcher screen.


The HotSync dialog box appears.

### 2 Tap Modem.

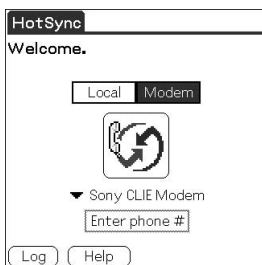


Continued on next page

## Advanced HotSync® operations


- 3 Tap the arrow ▼ beneath the  icon and then select the modem type from the drop-down list.

Select Sony CLIÉ Modem.

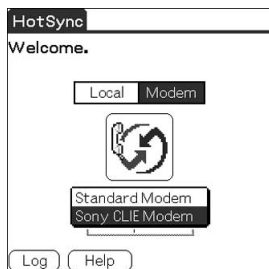

- 4 Tap the Enter Phone # field.

The Phone Setup dialog box is displayed.

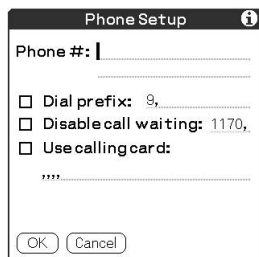

- 5 When using Sony CLIÉ Modem PEGA-MD700, skip to step 6.

When using another modem or adapter, change the settings as follows:

- ① Enter the telephone number used to access the modem connected to your computer.  
If needed, enter a dial prefix (such as “9”) to access an outside line, and then tap the Dial prefix check box. You can enter a comma in the field to introduce a “pause” in the dialing sequence. Each comma equals a two second pause.
- ② If the phone line you’re using for your CLIÉ handheld has Call Waiting, select the “Disable call waiting” check box to avoid an interruption during the modem HotSync operation.

Continued on next page

## Advanced HotSync® operations

- ③ If you want to use a calling card to place the call, select the “Use calling card” check box and enter the calling card number.

### Note

If you plan to connect to your company’s dial-in server (network modem) instead of connecting to a computer modem, see “Conducting a HotSync operation via a network” on page 129.


## 6 Tap OK.

The HotSync screen is displayed again.

### To select the conduits for a modem HotSync operation

The Conduit Setup dialog box on your CLIE handheld enables you to define which files and/or applications synchronize during a modem HotSync operation. You can use these settings to minimize the time required to synchronize your data when using a modem.

To change the Conduit Setup for a modem HotSync operation:


- 1 Rotate the Jog Dial navigator to select HotSync and then press the Jog Dial navigator. Or tap the HotSync  icon on the Application Launcher screen.

The HotSync screen appears.

- 2 Tap the Menu  icon.

- 3 Tap Options, and then tap Conduit Setup.

The Conduit Setup screen is displayed.

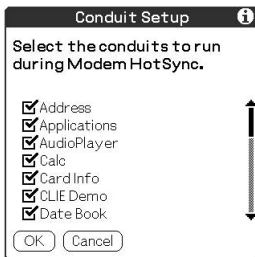

---

## Advanced HotSync® operations

- 4 Tap the check boxes to clear the selection of the files and applications that you do not want to synchronize during a modem HotSync operation.

The default setting is to synchronize all files.


### Note

Applications that do not have a database (such as games) do not synchronize, even if you select the item in the Conduit Setup dialog box.


- 5 Tap OK.

### Performing a HotSync operation via modem

After you prepare your computer and your CLIÉ handheld, and then select your Conduit Setup options, you are ready to perform a modem HotSync operation.

- 1 Rotate the Jog Dial navigator to select HotSync and then press the Jog Dial navigator, or tap the HotSync  icon on the Application Launcher screen.

The HotSync screen appears.

- 2 Tap the  icon.

A HotSync operation starts. Wait for the message showing that the HotSync operation is complete.



## Advanced HotSync® operations

### Conducting a HotSync operation via a network

When you use the Network HotSync application, you can take advantage of the LAN and WAN connectivity available in many office environments. The Network HotSync application enables you to perform a HotSync operation by dialing in to a network (Network Modem Sync) or by using a cradle that is connected to any computer on your LAN or WAN (LAN Sync) (provided that the computer connected to the cradle also has the Network HotSync application installed, your computer is on, and the HotSync Manager is running).



#### To connect to your company's dial-in server

The Network HotSync application requires the following:

- Your computer has TCP/IP support installed.
- Both your company's network system and its remote access server support TCP/IP.
- You have a remote access account.


Everything you need to connect to your company's dial-in server (network modem) is included in the Palm Desktop for CLIÉ software and your CLIÉ handheld. You need to activate certain features, however, on both the Palm Desktop for CLIÉ software and your CLIÉ handheld.

#### Preparing your computer

- 1** Click the HotSync  icon in the Windows task tray and then select Network from the shortcut menu.
- 2** Click the HotSync  icon in the Windows task tray again and then select Setup from the shortcut menu.  
The Setup screen is displayed.
- 3** Click the Network tab and make sure your user name has a check mark next to it. If the check mark is not there, click the check box next to your user name.
- 4** Click OK.


Continued on next page

## Advanced HotSync® operations

- 5** Place your CLIÉ handheld on the cradle and then press the HotSync  button on the front panel of the cradle.

The HotSync operation starts. This HotSync operation records the network information about your computer onto your CLIÉ handheld.

- 6** Check if your computer's network information (Primary PC name and Primary PC address) is entered in your CLIÉ handheld:


- ①** Rotate the Jog Dial navigator to select HotSync and then press the Jog Dial navigator. Or tap the HotSync  icon on the Application Launcher screen.

The HotSync screen appears.

- ②** Tap the Menu  icon.

- ③** Tap Primary PC Setup from the Options menu.

The Primary PC Setup screen is displayed.

- ④** On your computer, click the HotSync  icon in the Windows task tray and then select Setup from the shortcut menu.


- ⑤** Click the Network tab, then click TCP/IP Settings to open the TCP/IP Settings screen.

- ⑥** Confirm that the Primary PC name and Primary PC address on both screens displayed in step **③** and **⑤** match. If they do not, change the Primary PC name and Primary PC address entered in your CLIÉ handheld, then tap OK.

- ⑦** On your computer, tap OK to close the TCP/IP Settings screen and the Setup screen.

### Preparing your CLIÉ handheld and performing a network HotSync operation

#### When dialing into a network (Network Modem Sync)

- 1** Rotate the Jog Dial navigator to select HotSync and then press the Jog Dial navigator. Or tap the HotSync  icon on the Application Launcher screen.


The HotSync screen appears.

- 2** Tap the Menu  icon.


Continued on next page

## Advanced HotSync® operations

- 3 Tap Modem Sync Prefs from the Options menu.  
The Modem Sync Preferences screen is displayed.

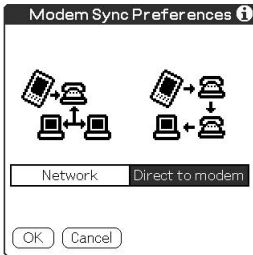

- 4 Tap Network.
- 5 Tap OK.  
The HotSync screen appears again.
- 6 Tap Modem and then Select Service.  
The Preferences screen is displayed.

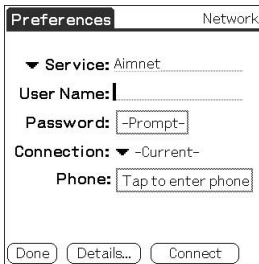

### Note

See “Changing the Network preferences” on page 182 for information on creating a network connection.

- 7 Tap the arrow ▼ next to Service and then select a service from the drop-down list.

Continued on next page

## Advanced HotSync® operations

**8** Tap Done.

**9** Tap the Menu  icon.


**10** Tap Conduit Setup from the Options menu.

Follow the instructions in “To select the conduits for a modem HotSync operation ” on page 127.

**11** Perform a HotSync operation via modem.

Follow the instructions in “Performing a HotSync operation via modem” on page 128.

### When connecting via cable to the network computer (LAN Sync)


**1** Rotate the Jog Dial navigator to select HotSync and then press the Jog Dial navigator. Or tap the HotSync  icon on the Application Launcher screen.

The HotSync screen appears.

**2** Tap the Menu  icon.

**3** Tap LAN Sync Prefs from the Options menu.

The LANSync Preferences screen is displayed.

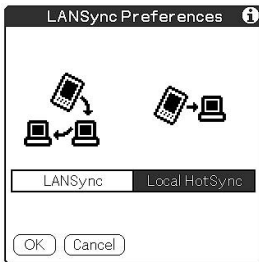

Continued on next page

---

## Advanced HotSync® operations

**4** Tap LANSync.

**5** Tap OK.

The HotSync screen appears again.

**6** Tap the Menu  icon.

**7** Tap Conduit Setup from the Options menu.

Follow the instructions in “To select the conduits for a modem HotSync operation ” on page 127.

**8** Perform a local HotSync operation.

Follow the instructions in “Performing a local HotSync operation with the cradle” on page 112.

---

## Advanced HotSync® operations

### Importing data from a Windows application

If you have data stored in Windows computer applications such as spreadsheets and databases, you can transfer that data to your CLIÉ handheld.

#### Importable file formats

Save data in one of the file formats listed below, import it into the Palm Desktop for CLIÉ software, and then perform a HotSync operation to transfer the data to your CLIÉ handheld.

The Palm Desktop for CLIÉ software can import data in the following file formats:

- Comma delimited (\*.csv, \*.txt): Address Book and Memo Pad only
- Tab separated values (\*.tab, \*.tsv, \*.txt): Address Book and Memo Pad only
- vCard File (\*.vcf): Address Book only
- CSV (Lotus Organizer 2.x/97 Mapping): Address Book only
- Text (\*.txt): Memo Pad only
- Date Book archive (\*.dba)
- vCal File (\*.vcs): Date Book only
- Address Book archive (\*.aba)
- To Do archive (\*.tda)
- Memo Pad archive (\*.mpa)

Archive formats can only be used with the Palm Desktop for CLIÉ software. Use the archive file formats to share information with other people who use a Palm OS® platform handheld or to create a copy of your Palm Desktop for CLIÉ software information.

---

## Advanced HotSync® operations

### Importing data

- 1** Start the Palm Desktop for CLIÉ software.
- 2** Click the application into which you want to import data.
- 3** If you are importing records that contain a field with category names, select All in the Category box.  
Be sure that the same categories that appear in the imported file also exist in the application. If the categories do not exist, create them now; otherwise, the records will be imported into the Unfiled category.
- 4** Click Import from the File menu.  
The Import dialog box is displayed.
- 5** Select the file you want to import.
- 6** Click Open.
- 7** To import data into the correct Palm Desktop for CLIÉ fields, drag the fields in the left-hand column so that they become side-by-side to the corresponding imported fields on the right.
- 8** Clear the check box for the field that you do not want to import.
- 9** Click OK.  
The imported data is highlighted in the application.
- 10** To add the imported data to your CLIÉ handheld, perform a HotSync operation.

See the Palm Desktop for CLIÉ online Help for more information on importing and exporting data.

---

## Advanced HotSync® operations

### Synchronizing with external data (File Link)

The File Link feature allows you to import Address Book and Memo Pad information onto your CLIÉ handheld from a separate external file such as a company phone list. HotSync Manager stores the data in a separate category on your Palm Desktop for CLIÉ software and your CLIÉ handheld. You can set the File Link feature to check for changes to the external file when you perform a HotSync operation.

With File Link, you can import data stored in any of the following file formats:

- Comma-delimited (\*.csv)
- Palm Desktop for CLIÉ software's Memo Pad archive (\*.mpa)
- Palm Desktop for CLIÉ software's Address Book archive (\*.aba)
- Text (\*.txt)

For information on how to set up File Link, see the Desktop for CLIÉ online help.



---

# Chapter 4

## *Communicating using your Sony CLIÉ Handheld*

This chapter describes how to communicate with another Palm OS® PDA device via the infrared communications port or Memory Stick® media. It also explains how to handle Memory Stick media and how to use the MS Gate application software for managing the data in Memory Stick media.

---

### Contents


Beaming between your Sony CLIÉ Handheld and another Palm OS® PDA .....	138
What you can do with beaming .....	138
Beaming information .....	139
Receiving beamed information .....	140
Tips on beaming information .....	140
Using Memory Stick® media .....	141
What is Memory Stick® media? .....	141
Inserting and removing Memory Stick media .....	142
Protecting the data in Memory Stick media .....	144
Starting an application in Memory Stick media .....	145
Starting an application automatically when Memory Stick media is inserted .....	145
Viewing information of the inserted Memory Stick media (Card Info) .....	146
Formatting Memory Stick media .....	147
Exchanging data via Memory Stick® media .....	149
Starting Memory Stick Gate (MS Gate) .....	149
Creating the default folder in Memory Stick media .....	152
Copying your CLIÉ handheld data to Memory Stick media .....	153
Copying data in Memory Stick media to your CLIÉ handheld .....	155
Deleting data in Memory Stick media .....	158
Using the MS Gate menus .....	160
How to read the online manual .....	161
Installing applications to/from Memory Stick® media without using MS Gate .....	162

---

# Beaming between your Sony CLIÉ Handheld and another Palm OS® PDA

## What you can do with beaming


Your CLIÉ handheld is equipped with an IR (infrared) port that you can use to beam information to another Palm OS® PDA device that's close by and also has an IR port. The IR port is located at the top of your CLIÉ handheld, behind the small dark shield.

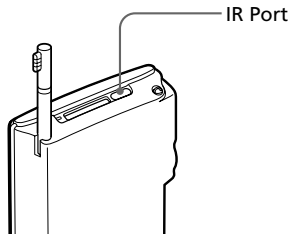

You can beam the following information between your CLIÉ handheld and another Palm OS PDA:

- The record currently displayed in Address Book, Date Book, To Do List, or Memo Pad.
- All records of the category currently displayed in Address Book, Date Book, To Do List, or Memo Pad.
- A special Address Book entry that you designate as your business card.
- An application installed in RAM memory.


### Note


Some applications are protected and cannot be beamed, as indicated by a lock  icon to the side of applications.

## Beaming between your Sony CLIÉ Handheld and another Palm OS® PDA

### Beaming information

You can beam a record, business card, or category of records between your CLIÉ handheld and another Palm OS PDA.

- 1** Locate the record, business card, or category you want to beam.
- 2** Tap the Menu  icon.
- 3** Tap one of the following from the Record menu:
  - The Beam command for an individual record
  - In Address Book only: Beam Business Card
  - Beam Category
- 4** When the Beam dialog box appears, point the IR port directly at the IR port of the receiving handheld.

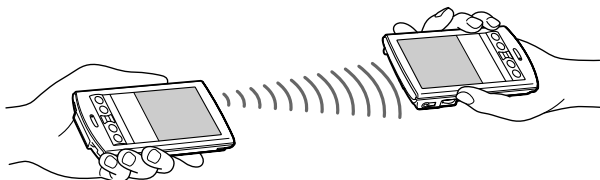

#### Tip

For best results, your CLIÉ handheld and another Palm OS PDA should be 4 to 8 inches (approximately 10 to 20 centimeters) apart, and the path between the two handhelds must be clear of obstacles and shielded from fluorescent lighting. Beaming distance to other Palm OS PDA handhelds may be different.

- 5** Wait for the Beam dialog box to indicate that the transfer is complete before you continue working on your CLIÉ handheld.

## Beaming between your Sony CLIÉ Handheld and another Palm OS® PDA




### Receiving beamed information

- 1 Turn on your CLIÉ handheld.
- 2 Point the IR port directly at the IR port of the other Palm OS PDA handheld transmitting the data.  
The Beam dialog box is displayed. Beaming data starts.  
You can select the category in which you save the data in a dialog box.
- 3 Tap Yes.  
The data is saved to the unfiled category.

#### Note

If Beam Receive in the Preferences menu is set to Off, you cannot receive data using the beaming feature. Before beaming data, make sure to set Beam Receive to On.

### Tips on beaming information

- Incoming data or application should be placed in the Unfiled category.
- You can press the Address Book  button for about two seconds to beam your business card.
- You can use Graffiti to beam the current entry ( / then , or / and then tap ).

---

# Using Memory Stick® media


## What is Memory Stick® media?

Memory Stick® media is a new compact, portable and versatile Integrated Circuit recording medium with a data capacity that exceeds a floppy disk. Memory Stick media is specially designed for exchanging and sharing digital data among Memory Stick media compatible products such as a digital video camera. Because it is removable, Memory Stick media can also be used for external data storage.

Memory Stick media allows you to exchange data between your CLIÉ handheld and your computer or a digital camera that supports Memory Stick media. To exchange data via Memory Stick media, your CLIÉ handheld uses the supplied Memory Stick Gate (MS Gate) software.

### Types of Memory Stick media

There are two types of Memory Stick media:

- MagicGate Memory Stick media equipped with “MagicGate” copyright protection technology. MagicGate Memory Stick media is distinguished by the  logo.
- Memory Stick media that is not equipped with “MagicGate” copyright protection technology.

**You can use both types of Memory Stick media with this CLIÉ handheld (PEG-N760C). However, to play back OpenMG audio files, make sure to use MagicGate Memory Stick media (color: white).**

**To play back MP3 files, you can use the standard Memory Stick media (color: purple) as well as the MagicGate Memory Stick media.**

#### Note on using MagicGate Memory Stick media


If you use MS Gate or Windows® Explorer to copy a protected file onto a MagicGate Memory Stick media or if you handle a folder containing a protected file, the file may be disabled. To handle the copyright-protected file, use a “MagicGate” compliant application such as OpenMG Jukebox.

## Using Memory Stick® media

### Inserting and removing Memory Stick media

Insert Memory Stick media into the Memory Stick slot as illustrated below. The contents of the Memory Stick media is displayed automatically.

The Memory Stick indicator lights in orange while your CLIÉ handheld is accessing Memory Stick media.

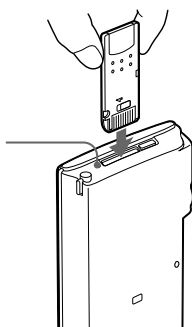


#### Note

Insert Memory Stick media in the right direction. If Memory Stick media is forced in the wrong way, it may be damaged.


#### To remove Memory Stick media

Make sure that your CLIÉ handheld is not writing to or reading data from Memory Stick media.

Push Memory Stick media gently into the slot and then release it so that Memory Stick media pops out. Then pull it out from your CLIÉ handheld.

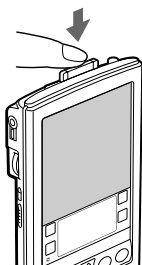

Push Memory Stick media in.

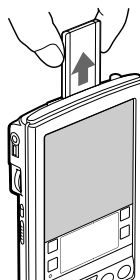

Pull Memory Stick media out.

---

## Using Memory Stick® media

### Notes on using Memory Stick media

When you use Memory Stick media, follow these precautions:

- Avoid touching the terminal of Memory Stick media or contacting it with a metal object.
- Do not drop, bend, or submit Memory Stick media to external shock.
- Do not disassemble or modify Memory Stick media.
- Avoid getting liquids on Memory Stick media.
- Avoid using or storing Memory Stick media in a location subject to:
  - extremely high temperature such as the hot inside of a car, the outdoors exposed to direct sunlight, or near a heater.
  - direct sunlight
  - high humidity
  - corrosive substances
  - excessive dust
  - magnetic fields
- When storing and carrying Memory Stick media, keep it in its original case to ensure protection of important data.
- Save a backup for important data.
- Avoid removing Memory Stick media from the insertion slot while data is being written or read.
- To avoid damaging or erasing data, do not
  - release Memory Stick media or unplug the AC power adapter while formatting, or reading or writing data.
  - use Memory Stick media in a location subject to static electricity or electric noise.
- If the battery of your CLIÉ handheld is running out, an error message is displayed and you cannot exchange data with Memory Stick media. If this occurs, connect the AC power adapter or fully charge your CLIÉ handheld.
- Use the MS Gate software to format Memory Stick media you use in your CLIÉ handheld. If you format it using another application, further operation with your CLIÉ handheld is not guaranteed.
- If you insert Memory Stick media that has been formatted by another application, a message prompting you to format it is displayed. To use Memory Stick media in your CLIÉ handheld, follow the instructions to format it. Note, however, that all stored data will be erased.

## Using Memory Stick® media

### Protecting the data in Memory Stick media


To prevent accidental erasure of important data, you can use the write protect tab of Memory Stick media. Slide the tab to the left or right to enable or disable writing to Memory Stick media.

#### Write enable position

Slide the tab to the left to select the write enable position. You can read and write data in the Memory Stick media.

#### Write protect position (LOCK)

Slide the tab to the right. You can only read the data in the Memory Stick media. Select the write protect position when you do not want to overwrite or delete the data in the inserted Memory Stick media.

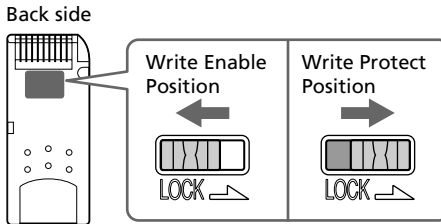



## Using Memory Stick® media

### Starting an application in Memory Stick media

To open an application in the Memory Stick media from the Application Launcher screen, tap the arrow ▼ in the upper-right corner of the Application Launcher screen and select Card (or a category with the Card icon). Then, tap the icon of the application you want to open.



#### Note

If the application you are about to open had been installed to the Memory Stick media through a HotSync operation, some Sony application may not start. For details, see page 163.

### Starting an application automatically when Memory Stick media is inserted


The Memory Stick Autorun (MS Autorun) allows you to start a specified application automatically when Memory Stick media is inserted into your CLIÉ handheld. You can select your favorite application as the auto-run application. For example, if you like watching still images, set PictureGear™ Pocket to start automatically.

See the supplied Add-On Application Guide for details.


## Using Memory Stick® media

### Viewing information of the inserted Memory Stick media (Card Info)


The Card Info gives you the outline (such as the remaining memory space) of the Memory Stick media inserted into your CLIE handheld. You can also give a name to each Memory Stick media, which comes in handy when you have more than one Memory Stick media.

- 1 Rotate the Jog Dial™ navigator to select Card Info and press the Jog Dial navigator. Or tap the Card Info  icon on the Application Launcher screen.


The Card Info screen appears.

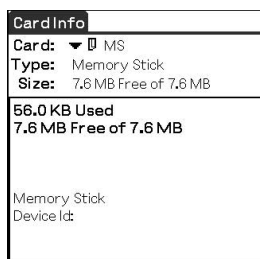

### Attaching a name to a Memory Stick media

- 1 Rotate the Jog Dial™ navigator to select Card Info and press the Jog Dial navigator. Or tap the Card Info  icon on the Application Launcher screen.

The Card Info screen appears.

- 2 Tap the Menu  icon.
- 3 Tap Rename Card.

The Rename Card dialog box appears.




Continued on next page

## Using Memory Stick<sup>®</sup> media


- 4 Enter a new name for the inserted Memory Stick media.
- 5 Tap Rename.


## Formatting Memory Stick media


Commercially available Memory Stick media is already formatted and you can use it as soon as you buy it. Follow the procedures below if you need to format your Memory Stick media again:

- 1 Rotate the Jog Dial<sup>™</sup> navigator to select MS Gate and press the Jog Dial navigator. Or tap the  icon on the Application Launcher screen.

MS Gate starts up.

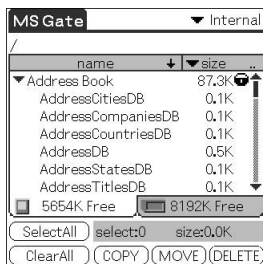

- 2 Tap the Menu  icon.  
The Menu screen appears.
- 3 Tap Options, and then Format.  
The confirmation message appears.

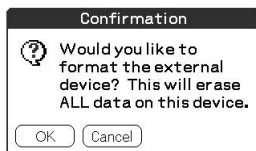

- 4 Tap OK.  
Formatting starts.

Continued on next page

---

## Using Memory Stick® media

### To cancel formatting

Tap Cancel in step 3.

### To format a Memory Stick media in the Card Info screen

You can also format a Memory Stick media by tapping the Menu  icon on the Card Info screen, and selecting Format Card from the Card menu.

### What is formatting?

Formatting defines the recording format for your Memory Stick media so that you can access data with your CLIÉ handheld.


#### Notes

- If formatted, all the data previously recorded in Memory Stick media will be erased. Make sure to check the data before formatting so that you do not delete important data.
- To use Memory Stick media on your CLIÉ handheld, format it in your CLIÉ handheld. You may not be able to write or read properly on Memory Stick media formatted by the computer.
- If you remove or insert Memory Stick media during initialization, your Memory Stick media is not recognized by your computer. In this case, remove Memory Stick media, reinsert it, and then start formatting again.

# Exchanging data via Memory Stick<sup>®</sup> media

## Starting Memory Stick Gate (MS Gate)

MS Gate allows you to copy, move, or delete data in Memory Stick<sup>®</sup> media and in your CLIÉ handheld.


Rotate the Jog Dial<sup>™</sup> navigator to select MS Gate and then press the Jog Dial navigator. Or tap the MS Gate  icon on the Application Launcher screen.

MS Gate starts up and data lists appear on your CLIÉ handheld screen.

### When displaying the contents of your CLIÉ handheld

Once you create the default folder, the "PALM/PROGRAMS/MSFILES" folder is displayed even when Internal is selected.

Tap this icon to switch the view between your CLIÉ handheld and Memory Stick media.

Lock  icon.

Tap here to switch the view.  
size : File size  
creator : Creator ID of the file  
type : File type  
version : Version of the file  
none : no items displayed

Tap this icon to switch the view between your CLIÉ handheld and Memory Stick media.

Displays the files which belong to the same creator (ID) as one grouped item.

Tap this icon to display or hide the contents.


Tap this icon to sort in ascending or descending order.


Continued on next page


# Exchanging data via Memory Stick® media

## When displaying the contents of Memory Stick media

The following icons with explanations are displayed only when you view the contents of Memory Stick media. For the other icons, see “When displaying the contents of your CLIÉ handheld” (page 149).

 : Tap this icon to display upper the folder.

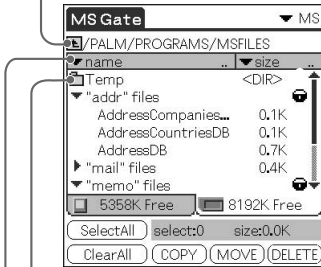

 : Tap this icon to display the contents of the folder.

Tap here to display “file name” to show the file name with PC file extensions.

---

## Exchanging data via Memory Stick® media

### Notes on moving or copying data using MS Gate

In some cases when you move or copy a specific file using the MS Gate software, a CLIÉ application may not function properly. Sony is not liable for any trouble with applications or data that arises out of your deletion or moving of a file.

Do not move or delete the following files:

- **Saved Preference:** Saves the final operation status or settings for various applications.
- **Unsaved Preference:** Saves the settings of various applications or user information of your CLIÉ handheld. When this file is deleted, you may not be able to synchronize correct information.
- **NetworkDB:** Saves network settings. When this file is deleted, network connection is disabled.
- **AddressDB:** Saves the database for Address Book.\*
- **DatebookDB:** Saves the database for Date Book.\*
- **MemoDB:** Saves the database for Memo Pad.\*
- **ExpenceDB:** Saves the database for Expense.\*
- **MailDB:** Saves the database for Mail.\*
- **ToDoDB:** Saves the database for To Do List.\*

\* These database files can be copied to Memory Stick media for backup. If you copy them back to your CLIÉ handheld, the identical files in your CLIÉ handheld will be overwritten with the information at the time of backup. Note that any added or edited data in your CLIÉ handheld after the backup will be erased.



## Exchanging data via Memory Stick® media

### Creating the default folder in Memory Stick media


When using either of the following Memory Stick media, you should create the default folder in the Memory Stick media.


- Memory Stick media to be used in MS Gate Ver.2.1 for the first time.
- Memory Stick media just formatted.

The “default folder” stands for the standard working folder where MS Gate Ver.2.1 reads and writes data. A folder named “PALM/PROGRAMS/MSFILES” is created in Memory Stick media.

- 1** Insert Memory Stick media into your CLIÉ handheld.
- 2** Tap the Home  icon.
- 3** Rotate the Jog Dial navigator to select MS Gate and then press the Jog Dial navigator. Or tap the MS Gate  icon on the Application Launcher screen.

MS Gate starts, The data in your CLIÉ handheld is listed.

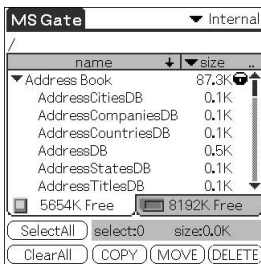

- 4** Tap the Menu  icon.  
The Menu screen appears.
- 5** Tap Create Default Folder in the Tools menu.  
The default folder (“/PALM/PROGRAMS/MSFILES”) is created in the Memory Stick media.



## Exchanging data via Memory Stick® media

### Copying your CLIÉ handheld data to Memory Stick media

MS Gate allows you to save data inside your CLIÉ handheld onto Memory Stick media.

#### Notes

- Since data copying consumes a lot of power, you cannot use Memory Stick media when your CLIÉ handheld is short of battery power. Connect the AC adapter.
- If you receive infrared communication while copying data, the copying will be terminated. Do not allow infrared communication while copying data.


#### 1 Insert Memory Stick media into your CLIÉ handheld.

The contents of the Memory Stick media is displayed.

#### 2 Tap the Home icon.

#### 3 Rotate the Jog Dial navigator to select MS Gate and then press the Jog Dial navigator. Or tap the MS Gate icon on the Application Launcher screen.

MS Gate starts. The data in your CLIÉ handheld is listed.

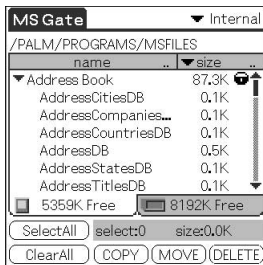


#### 4 Tap to select the data you want to copy to Memory Stick media.

#### Tip

You can select multiple files.

#### Note

You cannot copy data marked with a lock  icon.

Continued on next page

---

## Exchanging data via Memory Stick® media

### 5 Tap COPY.

The Copy File dialog box is displayed.



### 6 Tap OK.

The data selected in step 4 is copied to the default folder (“/PALM/PROGRAMS/MSFILES”) in Memory Stick media.

#### To copy all the data at once



Tap Select All in step 4.

#### To cancel the selection

- To cancel all the selections, tap Clear All.
- To clear the selection of individual selected items only, tap them one at a time.

#### To change the destination folder

Tap the arrow ▼ in the upper right corner to select MS from the drop-down list. The contents of Memory Stick media are listed.

Tap  or  to select the destination folder, so that the folder display changes and you can specify the destination folder.

You can only select a folder under the “PALM/PROGRAMS” or “PALM/Launcher” folder. The other folders cannot be selected as destination.

## Moving your CLIÉ handheld data to Memory Stick media

If your CLIÉ handheld is running out memory space, it is a good idea to move the data from your CLIÉ handheld to Memory Stick media.

### In step 5, tap Move.

The data on your CLIÉ handheld is deleted after saved on Memory Stick media.

#### Note



When low battery error message is displayed while you are copying or moving data in your CLIÉ handheld to Memory Stick media, data copying or moving may fail, leaving invalid files in Memory Stick media. If this occurs, charge your CLIÉ handheld and try copying or moving again. When an overwrite confirm message appears, tap Yes or Yes to all.


## Exchanging data via Memory Stick® media

### Copying data in Memory Stick media to your CLIÉ handheld

#### Note

Make sure your CLIÉ handheld has enough space before copying.

- 1 Insert Memory Stick media into your CLIÉ handheld.  
The contents of the Memory Stick media is displayed.
- 2 Tap the Home  icon.
- 3 Rotate the Jog Dial navigator to select MS Gate and then press the Jog Dial navigator. Or tap the MS Gate  icon on the Application Launcher screen.  
MS Gate starts. The data in your CLIÉ handheld is listed.  
MS Gate starts. The data in your CLIÉ handheld is listed.
- 4 Press the Jog Dial navigator to select MS.  
You can also tap the arrow ▼ in the upper right corner to select MS from the drop-down list.

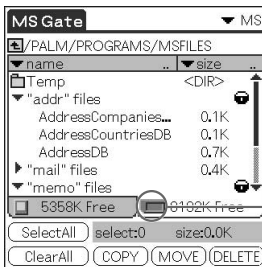

The data in the default folder (“/PALM/PROGRAMS/MSFILES”) in Memory Stick media is listed.

Continued on next page

## Exchanging data via Memory Stick® media

**5** Tap to select the data you want to copy to your CLIÉ handheld.

**6** Tap COPY.  
The Copy File dialog box is displayed.

**7** Tap OK.  
The data selected in step 5 is copied to your CLIÉ handheld.



### To copy all the data at once

Tap Select All in step 5.

### To cancel the selection


- To cancel all the selections, tap Clear All.
- To clear the selection of individual selected items only, tap them one at a time.

### To change the folder to be copied

Tap  or  to select the folder that you want to copy, so that the folder display changes and you can specify a folder to be copied.

You can only select a folder under the “PALM/PROGRAMS” or “PALM/Launcher” folder. The other folders cannot be selected.

### To rename the file or folder name

Select the file or folder that you want to rename, and then tap the Menu  icon. Tap Rename in the Tools menu. Rename the file or folder in the following dialog box.



The image shows a dialog box titled "Rename file". It contains a text input field with the text "AddressCompaniesDB.PDB" and a dotted line to its right. Below the input field are two buttons: "OK" and "Cancel".

#### Note

You cannot rename a read-only file.

Continued on next page

---

## Exchanging data via Memory Stick® media

### Moving data in Memory Stick media to your CLIÉ handheld

You can also move data from Memory Stick media to your CLIÉ handheld.

Tap **MOVE** in step 6.

The data in Memory Stick media is deleted after being saved in your CLIÉ handheld.



#### **Notes**


- Some data such as those copied from Memory Stick media to your CLIÉ handheld will not be backed up during the next HotSync operation.
- A read-only file cannot be deleted. If you attempt to move a read-only file, it will be copied onto your CLIÉ handheld instead.


## Exchanging data via Memory Stick® media

### Deleting data in Memory Stick media

MS Gate allows you do delete unnecessary data from Memory Stick media.

- 1** Insert Memory Stick media in your CLIÉ handheld.  
The contents of the Memory Stick media is displayed.
- 2** Tap the Home  icon.
- 3** Rotate the Jog Dial navigator to select MS Gate and then press the Jog Dial navigator. Or tap the MS Gate  icon on the Application Launcher screen.  
MS Gate starts. The data in your CLIÉ handheld is listed.
- 4** Press the Jog Dial navigator to select MS.  
You can also tap the arrow ▼ in the upper right corner to select MS from the drop-down list.

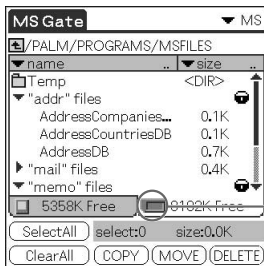

You can also select MS by tapping .

The data in the “/PALM/PROGRAMS/MSFILES” folder of Memory Stick media is listed.

- 5** Tap to select the data that you want to delete.
- 6** Tap DELETE.

The Delete File dialog box is displayed.



Continued on next page

---

## Exchanging data via Memory Stick® media

### 7 Tap OK.

The data selected in step 5 is deleted from Memory Stick media.



#### To delete all data at once

Tap Select All in step 5.

#### To cancel the selection

- To cancel all the selections, tap Clear All.
- To clear the selection of individual selected items only, tap them one at a time.

#### To change the folder to be deleted

Tap  or  to select the folder that you want to delete, so that the folder display changes and you can specify a folder to be deleted.

You can only select a folder under the “PALM/PROGRAMS” or “PALM/Launcher” folder. The other folders cannot be selected.

#### **Note**

You cannot delete a read-only file.

## Exchanging data via Memory Stick® media

### Using the MS Gate menus

MS Gate menu commands allow you to exchange data between your CLIÉ handheld and Memory Stick media.

#### Tools menus

The menu items differ depending on the screen being displayed.

<b>Select All</b>	Selects all the data displayed in the selected tab.
<b>Clear All</b>	Cancels the selection of the data.
<b>Move</b>	Moves the selected data to your CLIÉ handheld or Memory Stick media. The Move File screen appears.
<b>Copy</b>	Copies the selected data to your CLIÉ handheld or Memory Stick media. The Copy File screen appears.
<b>Delete</b>	Deletes the selected data from your CLIÉ handheld or Memory Stick media. The Delete File screen appears.
<b>Rename</b>	Changes the name of the selected file or folder of Memory Stick media.
<b>Create Folder</b>	Creates a folder in the current folder.
<b>Create Default Folder</b>	Creates the default folder (“/PALM/PROGRAMS/MSFILES”) in Memory Stick media.
<b>Change to Default Folder</b>	Changes the current folder to default folder.

#### Options menus

<b>Format</b>	Formats Memory Stick media inserted in your CLIÉ handheld.
<b>Media Information</b>	Displays the memory information of Memory Stick media.
<b>About MS Gate</b>	Shows the version information for MS Gate.



---

## Exchanging data via Memory Stick® media

### How to read the online manual

Detailed information on MS Gate software is provided in the online manual on the supplied CD-ROM.

To see the online manual, the Adobe Acrobat Reader® software must be installed on your computer.

- 1** Insert the Installation CD-ROM into your computer's CD-ROM drive.

The installation launcher window is displayed.

- 2** Click Manuals.

- 3** Double-click MSGate Manual.pdf.

The online manual appears.

#### If the Acrobat Reader software is not installed

- 1** Insert the Installation CD-ROM into your computer's CD-ROM drive.

The installation launcher window is displayed.

- 2** Click Exit to close the installation launcher window.

- 3** Double-click the My computer icon on the Windows desktop.

- 4** Right-click the CD-ROM drive icon, and then click Open from the shortcut menu.

- 5** Click the PC folder.

- 6** Double-click the Acrobat folder.

- 7** Double-click ar500enu.exe to install the Acrobat Reader onto your computer.

Follow the instructions onscreen to finish installation.

## Exchanging data via Memory Stick® media

### Installing applications to/from Memory Stick® media without using MS Gate

You can copy and install applications to/from a Memory Stick media from/to your CLIÉ handheld from the Application Launcher screen.

However, observe the following as malfunction may occur depending on the application.

- You can only copy application files (files with extensions such as .prc, .pdb) with the following procedure. Related files will not be copied together at the same time.
- Data stored in the Memory Stick media (such as image files) will not be displayed.

**1** Insert the Memory Stick media into the Memory Stick slot of your CLIÉ handheld.

The contents of Memory Stick media are displayed.

**2** Tap the Menu  icon on your CLIÉ handheld.

**3** Tap Copy from the drop-down list.

The Copy dialog box appears.

**4** Tap arrow ▼ next to Copy to, and select Handheld or Card.

**5** Tap the application you want to install.

**6** Tap Copy.

The selected application is installed onto your CLIÉ handheld.

**Tip**

You do not necessarily have to install add-on applications to the CLIÉ handheld in order to use it. If you want to save the CLIÉ handheld's memory space, you can simply tap to select the application in step 1. (Note, that such applications can only be used while the Memory Stick media containing the application is inserted in the CLIÉ handheld).

Continued on next page

---

## Exchanging data via Memory Stick® media

### Notes on starting applications installed from the Memory Stick media (without using MS Gate)

Observe the following when starting applications installed to a Memory Stick media without using MS Gate (i.e., when you installed them through a HotSync operation or by copying from the Application Launcher screen).

- You can only start application files (files with extensions such as .prc, .pdb). Image files and movie files that come with the application cannot be started (played).


If you cannot start the installed file data, move the file data to the CLIÉ handheld using MS Gate, or delete the files. If you do not use MS Gate when installing, applications and data files are stored in the "PALM/Launcher" folder.

# Chapter 5

## Customizing your Sony CLIÉ Handheld (Preferences)

This chapter describes how to customize your CLIÉ handheld by changing the Preferences settings.

### Contents

 What you can do with Preferences .....	165
Changing the Buttons preferences .....	167
Assigning applications to buttons .....	167
Changing the full-screen pen stroke activities.....	168
Assigning applications to HotSync® buttons .....	169
Changing the Jog Dial™ navigator preferences .....	170
Setting the display format of the time, date, and numbers (Formats) .....	171
Selecting a country default .....	171
Selecting the time, date, and numbers formats.....	172
Setting the Date & Time preferences .....	173
Setting the date .....	173
Setting the time .....	174
Setting the time zone and daylight saving time .....	175
Setting the General preferences .....	176
Setting the automatic shut-off time .....	176
Setting sounds .....	177
Turning on or off the Beam Receive feature.....	178
Entering owner information .....	179
Creating Graffiti® ShortCuts .....	180
Changing the Network preferences .....	182
Selecting a service .....	182
Entering a user name .....	183
Entering a password .....	183
Selecting a connection .....	184
Adding telephone settings .....	184
Creating additional service templates.....	185
Adding detailed information to a service template.....	187
Creating log in scripts .....	188
Using the Network preferences menus .....	191
Setting the High Resolution Assist function .....	192



## What you can do with Preferences

The Preferences screen enables you to customize the configuration options on your CLIE handheld.

- **Buttons**

Assign different applications to the buttons on the front panel of your CLIE handheld and the HotSync® button on the cradle, and reassign the full-screen pen stroke command.

- **Connection**

Configure serial, modem, and infrared communication settings.

- **Date & Time**

Set the current date and time, the time zone of your present area, and turn on/off the daylight saving.

- **Digitizer**

Calibrate the screen on your CLIE handheld. The same digitizer calibration screen is displayed when you start your CLIE handheld for the first time. You can recalibrate your screen after a hard reset or if you find that “tapping” does not work as expected. For details, see “Step 2: Turning on your Sony CLIE Handheld for the first time” in the Read This First manual.

- **Formats**

Set the country default and the formats for dates, times, calendar, and numbers.

- **General**

Set the current date and time, the auto shut-off interval, the “Stay on in Cradle” feature, the Beam Receive feature, system, alarm, and game sounds.

- **HiRes**

Set the High Resolution Assist feature.

- **Jog**

Enable or disable the JogAssist feature.

- **Network**

Configure your CLIE handheld for use with a network.

- **Owner**

Assign your name, phone number, and other owner information.

- **ShortCuts**

Define a list of Graffiti® abbreviations.


- **Web Clipping**

Configure Internet connection and proxy server settings.




## What you can do with Preferences


### Viewing Preference

- 1 Rotate the Jog Dial™ navigator to select Prefs and then press the Jog Dial navigator. Or tap the Prefs  icon on the Application Launcher screen.

The Preferences screen appears.

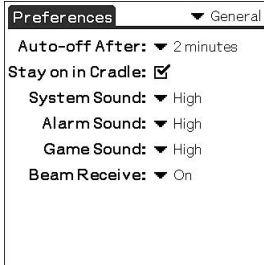

- 2 Tap the arrow ▼ in the upper right corner of the screen and then select the Preferences screen you want to view from the drop-down list.

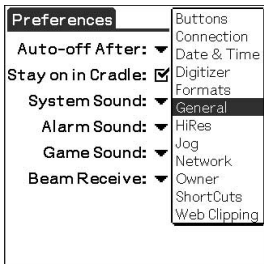


# Changing the Buttons preferences


## Assigning applications to buttons

The Buttons Preferences screen enables you to assign different applications to the buttons on the front panel of your CLIÉ handheld.

For example, you can assign the To Do List button to start Expense.

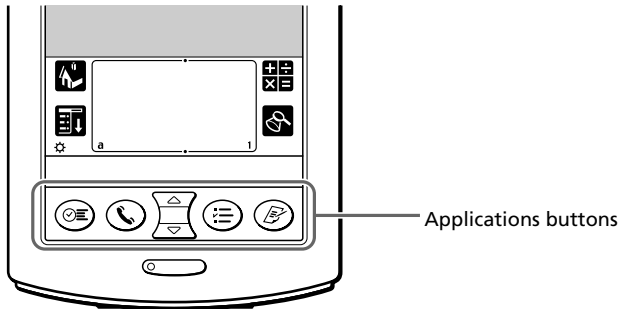

- 1 Tap Buttons from the drop-down list on the Preferences screen. The Buttons Preferences screen is displayed.

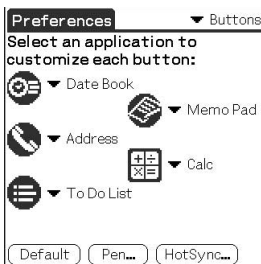

- 2 Tap the arrow ▼ next to a button and then tap the application that you want to assign to the button.

### To launch the original applications

When you have assigned another application to the button, you can start the original application using the Application Launcher.


### To reset to the default settings

Tap Default in step 2. All application buttons are reset to their factory settings.

## Changing the Buttons preferences

### Changing the full-screen pen stroke activities

The Buttons Preferences screen enables you to change the assignment of the full-screen pen stroke. By default, the full-screen pen stroke activates the Graffiti® Help.

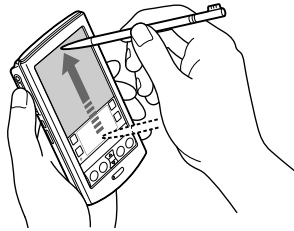

Drag the stylus from the bottom of the writing area to the top on the screen.

- 1 Tap Buttons from the drop-down list on the Preferences screen. The Buttons Preferences screen is displayed.
- 2 Tap Pen.
- 3 Tap the arrow ▼ and then select one of the following settings for the full-screen pen stroke.



- **Frontlight:** Turns on the frontlight of your CLIÉ handheld without using the POWER button.
- **Brightness:** Opens the brightness adjustment screen.
- **Keyboard:** Opens the onscreen keyboard for entering text.
- **Graffiti Help:** Opens a series of screens that show the complete Graffiti character set.
- **Turn Off & Lock:** Turns off and locks your CLIÉ handheld. To lock your CLIÉ handheld, assign a password. When locked, you need to enter the password to use your CLIÉ handheld.
- **Beam Data:** Beams the current record to another Palm OS® PDA.

- 4 Tap OK.



## Changing the Buttons preferences

### Assigning applications to HotSync® buttons

The Buttons Preferences screen also enables you to assign different applications to the HotSync® buttons on the cradle and the modem.

- 1** Tap Buttons from the drop-down list on the Preferences screen.

The Buttons Preferences screen is displayed.

- 2** Tap HotSync.

The HotSync Buttons dialog box appears.

- 3** Tap the arrow ▼ next to each button and then select the application you want to assign to the button.

The HotSync button assignment is changed.



- 4** Tap OK.

Any changes that you make in the HotSync Buttons screen become effective immediately. You can activate the selected application by pressing the HotSync button.

# Changing the Jog Dial™ navigator preferences

The Jog Preferences screen enables you to change the default Jog Dial™ navigator and BACK button functions, which are:

- Scroll the screen with the Jog Dial navigator.
- Select an item from a pop-up list with the Jog Dial navigator.
- Move back and forth between screens with the BACK button.


You can set to use the Jog Dial navigator to operate a third-party application that is not designed to use Jog Dial navigator operations (JogAssist feature). You can also change the BACK button function so your CLIÉ handheld turns on or off when the BACK button is pressed/kept pressed.

## Notes

- The functions activated by the JogAssist feature differ depending on the application you use.
- In some applications with the Jog Dial navigator mark, part of functions may change when the JogAssist feature is activated.

### 1 Tap Jog from the drop-down list on the Preferences screen.

The Jog Preferences screen is displayed.

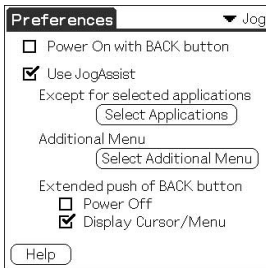

### 2 To enable the JogAssist function, select Use JogAssist.

The Jog Dial navigator functions change.

### 3 In order to set to turn on the power by pressing the BACK button, select Power On with BACK button.

You need to keep the BACK button pressed for a several seconds to turn on the power.

### 4 To set to turn off the power by keeping the BACK button pressed, select Power Off.

Display Cursor/Menu is selected by default (☑). You can display the cursor or menu by keeping the BACK button pressed.

# Setting the display format of the time, date, and numbers (Formats)

The Formats Preferences screen enables you to set the country default, and the display format of dates, times, and numbers on your CLIE handheld.


## Selecting a country default

When you select the country where you use your CLIE handheld, the display format of the time, date, the week start day, and numbers is adjusted. For example, in England, time is expressed using a 24-hour clock; in the United States, time is expressed using a 12-hour clock with an AM or PM suffix.

All your CLIE applications use the Country default settings. However, you can customize your own settings for time, date, week start day, or numbers.

- 1 Tap Formats from the drop-down list on the Preferences screen.

The Formats Preferences screen is displayed.

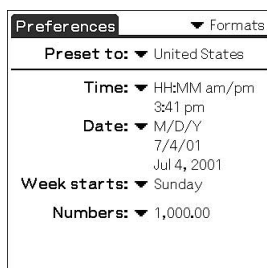

- 2 Tap the arrow ▼ next to "Preset to" and then select a country name.




- 3 Tap OK.

## Setting the display format of the time, date, and numbers (Formats)

### Selecting the time, date, and numbers formats

You can select the desired formats for the time, date, week start day, and numbers. The selected formats apply to all your CLIÉ applications.

- 1 On the Formats Preferences screen, tap the arrow ▼ next to Time and then select the desired format from the drop-down list.

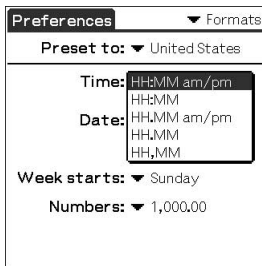

- 2 Tap the arrow ▼ next to Date and then select the desired format from the drop-down list.
- 3 Tap the arrow ▼ next to “Week starts” and then select whether you want the first day of the week to be Sunday or Monday.

This setting controls the Day, Week, Month, and Agenda views in Date Book and all other aspects of your CLIÉ handheld that display a calendar.

- 4 Tap the arrow ▼ next to Numbers and then select formats for the decimal point and thousands separator.


# Setting the Date & Time preferences

The Date & Time Preferences screen enables you to set the date, time, time zone, and the on/off of daylight savings for your CLIÉ handheld. After you set the local date and time of your home base, you can change the displayed time (for example, during business trips) by simply switching the time zones.

## Setting the date


- 1 Tap Date & Time from the drop-down list on the Preferences screen.

The Date & Time Preferences screen is displayed.

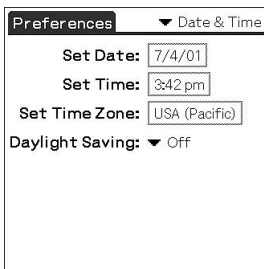

- 2 Tap Set Date.

The Set Date screen appears.

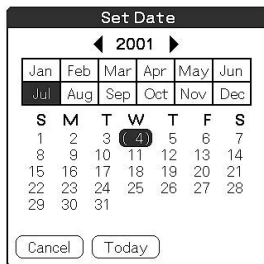

- 3 Tap the arrow ◀ or ▶ beside the year at the top of the screen to set the year.
- 4 Tap the current month.
- 5 Tap the current date.

## Setting the Date & Time preferences

### Setting the time

- 1** Tap Date & Time from the drop-down list on the Preferences screen.

The Date & Time Preferences screen is displayed.

- 2** Tap Set Time.

The Set Time screen appears.



- 3** Tap the arrow ▼ or ▲ to set the hour.
- 4** Tap the minute box and then tap the arrow ▼ or ▲ to set the minute.
- 5** Tap AM or PM.
- 6** Tap OK.

## Setting the Date & Time preferences

### Setting the time zone and daylight saving time

#### Setting the time zone

- 1 Tap Date & Time from the drop-down list on the Preferences screen.

The Date & Time Preferences screen is displayed.

- 2 Tap the Set Time Zone field.

The Set Time Zone screen appears.



- 3 Select the time zone that corresponds to where you are.

- 4 Tap OK.

#### Setting the daylight saving time

- 1 Tap Date & Time from the drop-down list on the Preferences screen.

The Date & Time Preferences screen is displayed.

- 2 Tap the arrow ▼ next to Daylight saving.

- 3 Tap and select On or Off.

# Setting the General preferences

The General Preferences screen enables you to set the auto shut-off interval and sounds for your CLIÉ handheld.

## Setting the automatic shut-off time

Your CLIÉ handheld has an automatic shut-off feature that turns off the power after a period of inactivity. This feature helps conserve battery power in case you forget to turn off your CLIÉ handheld. If you find that your CLIÉ handheld shuts itself off too early or too late, you can increase or decrease the time setting for the automatic shut-off feature.


By default, your CLIÉ handheld will turn off after two minutes of inactivity and will be on as long as it is connected to the cradle.

- 1** Tap General from the drop-down list on the Preferences screen.

The General Preferences screen is displayed.

- 2** Tap the arrow ▼ next to Auto-off After and then select the desired time setting for the automatic shut-off feature.

You can select 30 seconds, 1 minute, 2 minutes, or 3 minutes.

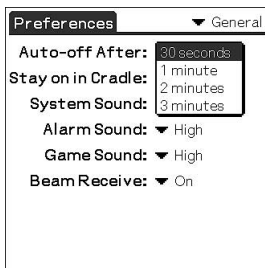

- 3** If you want to leave your CLIÉ handheld turned on while it is connected to the cradle, make sure that the check box next to "Stay on in Cradle" is selected. To turn it off automatically, clear the check box.



## Setting the General preferences

### Setting sounds

Your CLIÉ handheld uses a variety of sounds. The System, Alarm, and Game Sound settings enable you to turn the sounds on or off, and to adjust the volume level.

- 1** Tap **General** from the drop-down list on the Preferences screen.

The General Preferences screen is displayed.


- 2** Tap the arrow ▼ next to **System Sound** and then select the desired sound level or **Off** from the drop-down list.

When you turn the System Sound off, you also turn off the “chime” tones associated with the HotSync operation.

- 3** Tap the arrow ▼ next to **Alarm Sound** and then select the desired sound level from the drop-down list.

- 4** Tap the arrow ▼ next to **Game Sound** and then select the desired sound level or **Off** from the drop-down list.

The Game Sound setting works only with the games that are programmed to respond to this setting.

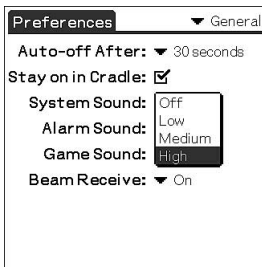

## Setting the General preferences


### Turning on or off the Beam Receive feature

You can choose to turn off the Beam Receive feature. This prohibits anyone from beaming information to your CLIÉ handheld. It also results in a slight saving of battery power. By default, the Beam Receive is set to On.

- 1 Tap **General** from the drop-down list on the Preferences screen.

The General Preferences screen is displayed.

- 2 Tap the arrow ▼ next to **Beam Receive** and then select **On** or **Off** from the drop-down list.

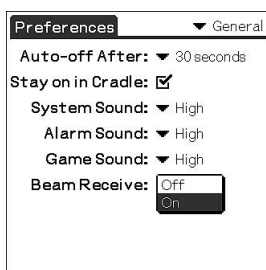

- **On:** Enables the Beam Receive feature.
- **Off:** Disables the Beam Receive feature.


# Entering owner information

The Owner Preferences screen enables you to record a name, company name, or phone number, or any other information that you want to associate with your CLIÉ handheld.

If you use the Security application to lock your CLIÉ handheld with a password, the information that you enter in the Owner Preferences screen appears the next time you turn on your CLIÉ handheld.

## 1 Tap Owner from the drop-down list on the Preferences screen.

The Owner Preferences screen is displayed.

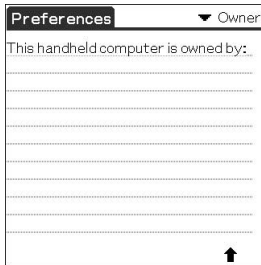

## 2 Enter your owner information.

If you enter more text than can fit on one screen, a scroll bar appears at the right side of the screen.

### To unlock the Owner Preferences screen

If you assigned a password in the Security application, the information in the Owner Preferences screen cannot be changed. In this case, an Unlock button is displayed at the bottom of the screen.

## 1 Tap Unlock.

The Unlock Message dialog box appears.




## 2 Enter your current password (the one you entered in the Security application) and then tap OK.

# Creating Graffiti® ShortCuts

The ShortCuts Preferences screen enables you to define abbreviations (ShortCuts) for entering text with Graffiti® strokes. You can create a ShortCut for any words, letters, or numbers. All ShortCuts you create appear on the list in the ShortCut Preferences screen. All the ShortCuts are available in any of your CLIÉ applications and are backed up on your computer when you perform a HotSync operation. See “Using Graffiti® writing to enter data” on page 11 for more information on the use of ShortCuts.


## 1 Tap ShortCut from the drop-down list on the Preferences screen.

The ShortCut Preferences screen is displayed.

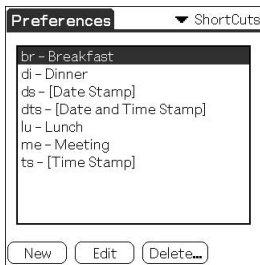

## 2 Tap New.

The ShortCut Entry screen is displayed.

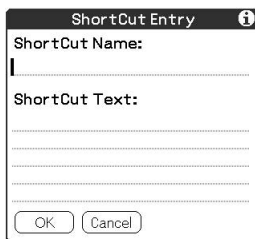

## 3 On the ShortCut name line, enter the letters you want to use to activate the ShortCut.

## 4 Tap the ShortCut Text area and then enter the text that you want to appear when you write the ShortCut characters.

## 5 Tap OK.

---

## Creating Graffiti® ShortCuts

### To Edit a ShortCut

- 1** Tap the ShortCut you want to edit in the ShortCuts list and then tap Edit.
- 2** Make the changes you want and then tap OK.

### To Delete a ShortCut

If you no longer need a ShortCut, you can delete it from the list of ShortCuts.

- 1** Tap the ShortCut you want to delete in the ShortCuts list and then tap Delete.  
The confirmation dialog box is displayed.
- 2** Tap Yes.

# Changing the Network preferences

In order to use your CLIÉ handheld with a network (such as using the Web Clipping application or performing a network HotSync operation), you must set the Network Preferences settings.

## Note


The Network settings preferences provides the ability to connect to your ISP (Internet Service Provider) or dial-in (remote access) server with applications (e.g. Web Clipping) that allow you to view the transmitted data.

## Selecting a service

Use the Service setting to select the service template for your Internet Service Provider or a dial-in server. Service templates are a set of ISP and dial-in server configuration settings that you can create, save, and reuse.

- 1 Tap Network from the drop-down list on the Preferences screen.

The Network Preferences screen is displayed.

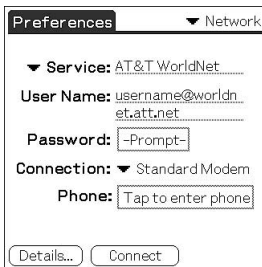

Preferences ▼ Network

▼ Service: AT&T WorldNet

User Name: username@worldn.et.att.net

Password: -Prompt-

Connection: ▼ Standard Modem

Phone: Tap to enter phone

Details... Connect

- 2 Tap the arrow ▼ next to Service and then select the predefined service template you want to use.

---

## Changing the Network preferences

### Entering a user name

The User Name setting identifies the name you use when you log into your Internet Service Provider or your dial-in server.

- 1 On the Network Preferences screen, tap User Name field.
- 2 Enter your user name.

#### Notes

- Although this field can contain multiple lines of text, only two lines appear onscreen.
- Most dial-in servers do not accept spaces in the user name.

### Entering a password

The Password box identifies the password you use to log into your server or ISP. Your entry in this field determines whether your CLIÉ handheld prompts you to enter a password each time you log into your network:

- If you do not enter a password, your CLIÉ handheld displays the word “-Prompt-” in this field and asks you to enter a password during the login procedure.
- If you enter a password, your CLIÉ handheld displays the word “-Assigned-” in this field and does not prompt you to enter a password during the login procedure.

#### Note

If you are concerned about security, select the Prompt option and do not enter a password.

- 1 On the Network Preferences screen, tap the Password field.
- 2 Enter the password you use to log into your server.
- 3 Tap OK.

The Password field updates to display the word “-Assigned-.”

## Changing the Network preferences

### Selecting a connection

Use the Connection setting to select the method you want to use to connect to your Internet Service Provider or a dial-in server.

- 1 On the Network Preferences screen, tap the arrow ▼ next to Connection and then select the connection you want to use.
  - When using Sony CLIÉ Modem PEGA-MD700: select Sony CLIÉ Modem.
  - When using another modem or adapter: select Standard Modem.

### Adding telephone settings

When you select the Phone field, your CLIÉ handheld opens a dialog box in which you define the telephone number you use to connect with your ISP or dial-in server. In addition, you can also define a prefix, disable Call Waiting, and give special instructions for using a calling card.

#### Note

The Phone Setup dialog box works correctly for AT&T and Sprint long-distance services. However, because MCI works differently, MCI customers need to put the calling card number in the Phone # field and the phone number in the Use calling card field.

- 1 On the Network Preferences screen, tap the Phone field.  
The Phone Setup screen appears.
- 2 Enter the phone number for your ISP or dial-in server in the Phone# field.
- 3 When using Sony CLIÉ Modem PEGA-MD700, skip to step 4. When using another modem or adapter, change the settings as follows:
  - ① Enter the telephone number used to access the modem.  
If needed, enter a dial prefix (such as "9") to access an outside line, and then tap the Dial prefix check box. You can enter a comma in the field to introduce a "pause" in the dialing sequence. Each comma equals a two second pause.

Continued on next page



---

## Changing the Network preferences

- ② If the phone line you're using for your CLIE handheld has Call Waiting, select the "Disable call waiting" check box to avoid an interruption during a modem HotSync operation or accessing a Web Clipping site.

### Note

Each telephone company assigns a code to disable Call Waiting. Contact your local telephone company for the code that is appropriate for you.

- ③ If you want to use a calling card to place the call, select the "Use calling card" check box and enter the calling card number.

### Tip


There is usually a delay before you enter your calling card number. It's a good idea to add at least three commas before your calling card number to compensate for the cue delay.

## 4 Tap OK.

## Creating additional service templates

You can create additional service templates from scratch or by duplicating existing templates and editing information. After you create a new or duplicate template, you can add and edit settings.

### To add a new service template


- 1 On the Network Preferences screen, tap the Menu  icon.
- 2 Tap New from the Service menu.  
An Untitled service template is added to the drop-down list for the Service field.

Continued on next page


---

## Changing the Network preferences

### To duplicate an existing service template

- 1** On the Network Preferences screen, tap the arrow ▼ next to Service and then select the predefined service template you want to duplicate.
- 2** Tap the Menu  icon .
- 3** Tap Duplicate from the Service menu.  
A copy of the service template is added to the drop-down list for the Service field.

### To delete a service template

- 1** On the Network Preferences screen, tap the arrow ▼ next to Service and then select the predefined service template you want to delete.
- 2** Tap the Menu  icon .
- 3** Tap Delete from the Service menu.  
The Delete Service dialog box is displayed.
- 4** Tap OK.  
The selected service template is deleted.

## Changing the Network preferences

### Adding detailed information to a service template

If you are using one of the predefined service templates, you probably only need to enter your user name and telephone number. If you are creating a new service template, you may need to provide additional information to your ISP or dial-in server. You use the Details dialog box to add additional information to a selected service template.

#### To select a connection type

- 1** On the Network Preferences screen, tap the service field.
- 2** Tap Details.  
The Details screen is displayed.
- 3** Tap the arrow ▼ next to Connection type and select one of the following connection types.
  - **PPP:** Point-to-Point protocol
  - **SLIP:** Serial Line Internet Protocol
  - **CSLIP:** Compressed Serial Line Internet Protocol

#### Tip

If you are not sure, try PPP; if that doesn't work, ask your Internet Service Provider or your System Administrator for the correct connection type.

- 4** Tap the arrow ▼ next to Idle timeout and select one of the following options.
  - **1 minute:** Waits one minute for you to open another application before it drops the connection.
  - **2 minutes:** Waits two minutes.
  - **3 minutes:** Waits three minutes.
  - **Never:** Keeps your PPP or SLIP connection until you turn off your CLIÉ handheld (or until it times out).  
Note that this option will be more costly than others.
- 5** Tap the Query DNS check box to deselect it.

Continued on next page

---

## Changing the Network preferences

- 6** Enter the IP address for the Primary and Secondary DNS (Domain Naming System).

Ask your Internet Service Provider or System Administrator for the correct Primary or Secondary DNS IP numbers.

- 7** If you need to enter the CLIÉ handheld's IP Address, tap the IP Address check box to deselect it and display a permanent IP address field below the check box.

Normally, you do not have to enter this. If you are not sure, select Automatic and go to step 9.

- 8** Enter the CLIÉ handheld's IP Address.

- 9** Tap OK.

## Creating log in scripts

A log in script is a series of commands that automates logging in to a network server, for example, your corporate network or your Internet Service Provider (ISP). It is something that you are likely to receive from your IS System Administrator, if your company has a system in which you log in to the corporate servers from your CLIÉ handheld using a modem or network connection.

### Notes

- When using Sony CLIÉ Modem PEGA-MD700, you do not have to create a log in script.
- You can also use non-ASCII and literal characters in your log in script. For more information, see page 190.

- 1** On the Network Preferences screen, tap the service field.

- 2** Tap Details.

The Details screen is displayed.

- 3** Tap Script.

The Log in Script screen is displayed.

Continued on next page

---

## Changing the Network preferences

- 4** Tap the arrow ▼ next to End and select one of the following commands. If the command requires additional information, a field appears to the right of it for you to enter the information.
  - **Wait For:** Tells your CLIÉ handheld to wait for specific characters from the TCP/IP server before executing the next command.
  - **Wait For Prompt:** Detects a challenge-response prompt coming from the server and then displays the dynamically generated challenge value. You then enter the challenge value into your token card, which in turn generates a response value for you to enter on your CLIÉ handheld. This command takes two arguments, separated by a vertical bar (|) on the input line.
  - **Send:** Transmits specific characters to the TCP/IP server to which you are connecting.
  - **Send CR:** Transmits a carriage return or LF character to the TCP/IP server to which you are connecting.
  - **Send User ID:** Transmits the User ID information entered in the User ID field of the Network Preferences screen.
  - **Send Password:** Transmits the password entered in the Password field of the Network Preferences screen. If you did not enter a password, this command prompts you to enter one. The Password command is usually followed by a Send CR command.
  - **Delay:** Tells your CLIÉ handheld to wait a specific number of seconds before executing the next command in the login script.
  - **Get IP:** Reads an IP address and uses it as the IP address for your CLIÉ handheld. This command is used with SLIP connections.
  - **Prompt:** Opens a dialog box and prompts you to enter text of some kind (for example, a password or a security code).
  - **End:** Identifies the last line in the log in script.
- 5** Repeat step 4 until the log in script is complete.
- 6** Tap OK.
- 7** Tap OK.

---

## Changing the Network preferences

### Non-ASCII Characters for Log in Scripts

The following information enables you to create custom log in scripts that require non-ASCII characters. It is provided for advanced users who understand the use and requirements of such characters in a custom log in script.

#### Use of ^char

You may use the caret ( ^ ) to transmit ASCII command characters. If you send ^char, and the ASCII value of char is between @ and \_ , then the character is automatically translated to a single-byte value between 0 and 31. For example, ^M is converted to a carriage return.

If char is a value between a and z, then the character sequence is translated to a single-byte value between 1 and 26. If char is any other value, then the character sequence is not subject to any special processing. For example, the string "Joe^M" transmits Joe, followed by a carriage return.

#### Carriage return and line feed

You may include carriage return and line feed commands as part of the login script, when entered in the following format.

- **<cr>** : Sends or receives a carriage return
- **<lf>** : Sends or receives a line feed

For example, the string "waitfor Joe<cr><lf>" waits to receive Joe followed by a carriage return and line feed from the remote computer before executing the next command in the script.

#### Literal characters

The backslash ( \ ) character defines that the next character is transmitted as a literal character, and is not subject to any special processing ordinarily associated with that character.

Examples:

- **\^** : Includes a caret as part of the string
- **\<** : Includes a < as part of the string
- **\** : Includes a backslash as part of the string

## Changing the Network preferences

### Using the Network preferences menus

This section explains the menu commands specific to network preferences. For the Edit menu, see “Using the Edit menu” on page 108.

#### Service menus

---

<b>New</b>	Creates a new service template.
<b>Delete</b>	Deletes the current service template. The Delete Service dialog box appears.
<b>Duplicate</b>	Duplicates the current service template.

---

#### Options menus

---


<b>View Log</b>	Displays the Network Log. The Network Log lists all of the communication that occurs between your modem and your dial-in server during the log in procedure. The information in the Network Log can help your ISP or your System Administrator pinpoint where the log in procedure communication fails and why.
-----------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

---


# Setting the High Resolution Assist function

The High Resolution Assist function enables the high resolution display of an application that does not support the high resolution mode.

- 1 Tap HiRes from the drop-down list on the Preferences screen. The HiRes Preferences screen is displayed.

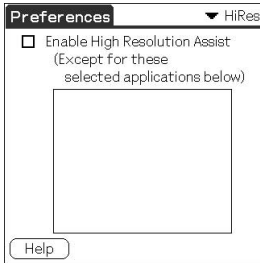

- 2 To enable the High Resolution Assist function, select Enable High Resolution Assist. The confirmation dialog box is displayed.
- 3 Tap OK.
- 4 Select the application(s) that you do not want to display in high resolution mode in the list box.

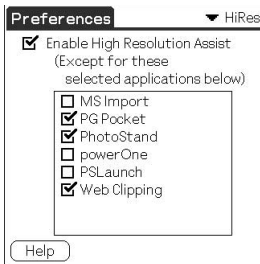

## Note

In step 4, check an application when the following occurs in the high resolution mode:

- Performances are largely deteriorated (e.g. game).
- Display is divided into two, characters are distorted, or other operational irregularities occur.



# Chapter 6

## *Additional information*

This chapter describes how to upgrade your CLIÉ handheld, as well as some precautions, troubleshooting information, and other technical information about your CLIÉ handheld.

---

### **Contents**

Backing up data of your Sony CLIÉ Handheld .....	194
Backing up data to your computer through HotSync operation .....	194
Backing up all CLIÉ data to a Memory Stick media (using MS Backup) .....	195
Backing up CLIÉ data to a Memory Stick media using MS Gate .....	197
Using data of another Sony CLIÉ Handheld .....	199
Using the Palm Desktop for CLIÉ software to transfer data .	199
Using Memory Stick media to transfer data .....	201
Performing HotSync between your old CLIÉ handheld and the new Palm Desktop for CLIÉ software .....	203
Precautions .....	204
Notes on use .....	204
Battery considerations .....	205
Troubleshooting – Frequently Asked Questions .....	207
Getting Help .....	221
Specifications .....	222
Limited Warranty Statement .....	223
Index .....	227

---

# Backing up data of your Sony CLIÉ Handheld

You can save a back-up copy of your CLIÉ handheld by performing either of the following three methods:

- Backing up data to your computer through HotSync® operation
- Backing up all data to a Memory Stick® media using the MS Backup application
- Backing up data to a Memory Stick® media using the MS Gate application

## Backing up data to your computer through HotSync operation

By default, you can back-up the following data in your computer with a HotSync operation:

- Memo Pad data files
- Address Book data files
- To Do List data files
- Date Book data files
- Expense data files
- Preferences data files
- Network Setup information
- Applications files that have been installed using a HotSync operation
- User information files when you perform a HotSync operation

During the next HotSync operation, the back-up data is compared with the data in your computer, and the newer one becomes effective.

If you perform a hard reset, all records and entries stored in your CLIÉ handheld are erased and reset to the initial status. If you save a back-up of your CLIÉ handheld data, you can restore any data previously synchronized with your computer during the next HotSync operation.

### Notes

- Some applications are not designed to be backed up. Therefore, you may not be able to restore some applications and data. It is recommended that you re-install those applications.
- If you change settings in the Change HotSync Action dialog box, you may not be able to save a back-up. You cannot back-up an application or restore its data if you select an option other than “Synchronize the files.” For details, see “Customizing HotSync application settings (Conduit)” on page 118.

## Backing up data of your Sony CLIÉ Handheld

### Backing up all CLIÉ data to a Memory Stick media (using MS Backup)

With MS Backup, you can backup all the following CLIÉ handheld application and data to a Memory Stick media with a single tap.



To separately backup applications and data to the Memory Stick media, use MS Gate (see page 197).

- Memo Pad data files
- Address Book data files
- To Do List data files
- Date Book data files
- Expense data files
- Preferences data files
- Network Setup information
- Applications files that have been installed using a HotSync operation
- User information files when you perform a HotSync operation

### Backing up data with the MS Backup application

#### Note

When you back-up your CLIÉ data on a Memory Stick, the data size of the back-up may become larger than the total data size displayed in MS Gate. This is not a malfunction. Make sure you have more space free on the Memory Stick than the displayed CLIÉ data size before taking a back-up.

- 1** Insert a Memory Stick media into the Memory Stick slot.
- 2** Tap the Home  icon.
- 3** Rotate the Jog Dial navigator to select MS Backup and then press the Jog Dial navigator. Or tap the MS Backup  icon on the Application Launcher screen.

MS Backup starts up and the backup list appears.

- 4** Tap  (Backup).

The Backup All Files dialog box appears.

Continued on next page

---

## Backing up data of your Sony CLIÉ Handheld

### 5 Tap OK.

The Backup Progress screen appears, and the back-up's general information (its date, size, and number of contents) appears in the list.

#### Note

Do not make any changes to the directory tree on the Memory Stick after taking a back-up. If you do, you will not be able to restore the back-up data to your CLIÉ handheld.

#### Tips

- In most cases, the back-up will be finished within approximately a minute.
- In step 4, you can also select an existing file from the back-up list, then tap Backup to overwrite it.

### To delete back-up files from the Memory Stick

Tap to select the back-up in the Backup list, and tap Delete. The selected file is deleted from the Memory Stick.

## Restoring back-up data and applications to your CLIÉ handheld

#### Notes

- When you restore back-up data and applications to your CLIÉ handheld, the data currently saved in your CLIÉ handheld will be overwritten with the back-up data. Any data created or edited after you saved the back-up will be erased.
- You can only restore data to the CLIÉ handheld from which you took that back-up.

**1** Insert the Memory Stick media with the back-up files into the Memory Stick slot.

**2** Tap the Home  icon.

**3** In the MS Backup screen, tap to select the back-up data that you want to restore from the list.

**4** Tap  (Restore).

The Restore Confirm dialog box appears.

**5** Tap OK.

After the back-up data is restored, the CLIÉ handheld automatically shuts itself down and restarts.

---

## Backing up data of your Sony CLIÉ Handheld

### Backing up CLIÉ data to a Memory Stick media using MS Gate

MS Gate allows you to save a backup of the following application and data of your CLIÉ handheld to Memory Stick media. (The file name after the colon is the name displayed in MS Gate.)

#### ■ Applications


- Plugin files: CmPl...
- PictureGear Pocket: PictureGear Pocket
- gMovie: gMovie
- Network setup data: inetSetup

#### ■ Data

- Address Book data files: AddressDB
- Date Book data files: DatebookDB
- Memo Pad data files: MemoDB
- Expense data files: ExpenseDB
- To Do List data files: ToDoDB
- Network setup information: NetworkDB
- Other application setting data files: SavedPreferences
- User information and other preferences data files: UnsavedPreferences

For details on how to use MS Gate, see “Copying your CLIÉ handheld data to Memory Stick media” on page 153.

#### Notes

- Applications may not function properly if the necessary files are not backed up.
- Do not select Graffiti® ShortCuts, Net Prefs, and sonyres files, since they cannot be copied.
- You cannot copy data marked with a lock  icon.
- You may not be able to back up full information since some data is locked or shared.

---

## Backing up data of your Sony CLIÉ Handheld

### Restoring backup data and applications to your CLIÉ handheld

#### Note

When you restore (copy) backup data and applications to your CLIÉ handheld, the data currently saved in your CLIÉ handheld will be overwritten with the backup data. Any data created or edited after you saved the backup will be erased.

Insert Memory Stick media storing the backup data into your CLIÉ handheld and use MS Gate to copy the data to your CLIÉ handheld. For details, see “Copying data in Memory Stick media to your CLIÉ handheld” on page 155.

If an overwrite confirm message is displayed, tap Yes to all.

#### Notes

- If a delete or access error message is displayed while copying files, tap OK to proceed to the next step in copying. Those files, however, will not be copied.
- Depending on the application configurations or file protection status, some necessary files may not be copied. In such a case, an application may not function properly.
- Some applications are not designed to be backed up. Therefore, you may not be able to restore some applications and data. It is recommended that you re-install those applications.

# Using data of another Sony CLIÉ Handheld

If you already own a Sony CLIÉ Handheld, you can use data of your old CLIÉ handheld with your new CLIÉ handheld. You can transfer data from your old CLIÉ handheld to your new CLIÉ handheld with either of the following methods:

- **Using Palm™ Desktop for CLIÉ to copy data:** You can transfer data of the Palm OS basic applications easily.
- **Using Memory Stick® media to copy data:** You can transfer all the necessary data and settings information more securely than using the Palm Desktop for CLIÉ software.

## Note on add-on applications that you have installed

Install add-on applications using the same procedures as the previous CLIÉ handheld. Some third-party applications may operate only on your old CLIÉ handheld.

## Using the Palm Desktop for CLIÉ software to transfer data

For the Palm OS® basic applications data such as Address Book, Memo Pad, To Do List, Date Book, you can use the Palm Desktop for CLIÉ software to transfer data from your old CLIÉ handheld to your new CLIÉ handheld by exporting and importing data.

Before you start, perform a HotSync® operation to the Palm Desktop for CLIÉ software using your new CLIÉ handheld with a different user name from that you have used with the old CLIÉ handheld.

- 1** Start the Palm Desktop for CLIÉ software.
- 2** Click the user name of your previous CLIÉ handheld from the User name list in the upper right of the screen.
- 3** Click the icon of the application whose data you want to copy in the left panel of the screen.
- 4** Click Export from the File menu.
- 5** Enter the file names and click Export.

The data of your old CLIÉ handheld is exported. Change the destination folder if necessary.

Continued on next page

---

## Using data of another Sony CLIÉ Handheld

- 6** Repeat steps 3 through 5 to export data of other applications.
- 7** Click the user name of your new CLIÉ handheld from the User name list in the upper right of the screen.  
If you have never performed a HotSync operation with your new CLIÉ handheld, select Users from the Tools menu. Click New in the Users screen and enter a new user name. Then select that new user name.
- 8** Click Import from the File menu.
- 9** Select the files you have exported in steps 3 through 6 and then click Open.
- 10** Place your new CLIÉ handheld on the cradle and perform a HotSync operation.

The data exported from your old CLIÉ handheld is copied onto your new CLIÉ handheld.

### Notes on a HotSync operation

- Do not attempt to transfer data from your old CLIÉ handheld to your new CLIÉ handheld by performing HotSync operations with the identical user name. Doing so may cause trouble.
- When you perform a HotSync operation with your new CLIÉ handheld and the New User dialog box is displayed, enter a different user name from that of your old CLIÉ handheld. If you enter the identical user name, the Palm Desktop for CLIÉ software may not be able to recognize the difference between your CLIÉ handhelds and the data of both handhelds may be mixed up or deleted.
- If you copy UnsavedPreference, the user name is also copied. This prevents you from managing the two CLIÉ handhelds with different user names.




## Using data of another Sony CLIÉ Handheld

### Using Memory Stick media to transfer data

You can use Memory Stick media to transfer your old CLIÉ handheld to your new CLIÉ handheld.

#### Notes

- Use Memory Stick media that has sufficient free memory space.
- Make sure that the write protect tab on the Memory Stick media not set to LOCK.

- 1** Insert Memory Stick media into your old CLIÉ handheld.
- 2** Rotate the Jog Dial™ navigator to select MS Gate and then press the Jog Dial navigator. Or tap the MS Gate  icon on the Application Launcher screen.


MS Gate starts up. The data in your CLIÉ handheld is listed.

- 3** Tap to select the data of the application whose settings and information you want to use with your new CLIÉ handheld.

You can select multiple files.

- Address Book: AddressDB
- Date Book: DatebookDB
- Memo Pad: MemoDB
- Expense: ExpenseDB
- Mail: MailDB
- To Do List: ToDoDB
- Network setup information: NetworkDB

#### Notes

- You cannot copy data marked with the lock  icon.
- You cannot copy Graffiti® ShortCuts, Net Prefs, and sonyres (the database for accessing the files in Memory Stick media).
- Do not select UnSavedPreference. Your computer may not be able to distinguish your new CLIÉ handheld from your old CLIÉ handheld.


- 4** Tap COPY.

The File Overwrite confirmation message is displayed.

Continued on next page

---

## Using data of another Sony CLIÉ Handheld

- 5** Tap OK.  
The data selected in step 3 is copied onto Memory Stick media.
- 6** Remove the Memory Stick media from your old CLIÉ handheld and then insert it into your new CLIÉ handheld.
- 7** Rotate the Jog Dial navigator to select MS Gate and then press the Jog Dial navigator. Or tap the MS Gate  icon on the Application Launcher screen.  
MS Gate starts. The data in your CLIÉ handheld is listed.
- 8** Press the Jog Dial navigator to select MS.  
You can also tap the arrow ▼ in the upper right corner to select MS from the drop-down list.
- 9** Tap to select the applications and data you have previously copied from the older device.
- 10** Tap COPY.  
The File Overwrite confirmation message is displayed.
- 11** Tap OK.
- 12** If the file overwrite confirmation message is displayed, tap Yes to All.  
The data of your old CLIÉ handheld is copied onto your new CLIÉ handheld.

### Note

If a file-locked, access, or delete error message is displayed while copying files, tap OK to proceed to the next step in copying. Those files, however, will not be copied.

---

## Using data of another Sony CLIÉ Handheld

### Performing HotSync between your old CLIÉ handheld and the new Palm Desktop for CLIÉ software

You can use your other CLIÉ handhelds (PEG-S300, PEG-S320, PEG-N710C, PEG-N610C) with the Palm Desktop for CLIÉ software supplied to this newest CLIÉ handheld (PEG-N760C).

After setting up your CLIÉ handheld as indicated in the Read This First manual, perform the HotSync operation as indicated on page 112.

If you have any trouble with the HotSync operation, check the following.

- Check the Windows task tray to make sure that Local Serial is selected.
- Check the Windows task tray to make sure that the USB Switcher is running.

---

# Precautions

## Notes on use

- Take care not to scratch or damage your CLIÉ handheld's screen or the Graffiti® writing area. Always use the supplied stylus or a plastic-tipped pointer to tap on the screen. Do not use a real pen, pencil, or other sharp object on the screen.
- Do not expose your CLIÉ handheld to rain or moisture. Should water enter the circuitry through the crevice around the front buttons, your CLIÉ handheld may be damaged.
- Your CLIÉ handheld screen is made of glass. Do not drop or submit your CLIÉ handheld to external shock. Do not carry your CLIÉ handheld in your back pocket. If you sit down with your CLIÉ handheld in the back pocket, it may break.
- Avoid using or storing your CLIÉ handheld in locations subject to:
  - extremely high temperature such as the hot inside of a car exposed to the sun, or near a heater.
  - direct sunlight
  - high humidity
  - excessive dust
- The rubber feet of the cradle may lose their adhesion as they become dirty. If this occurs, wipe the feet with a moistened soft cloth to recover their adhesion.

### On cleaning

Clean your CLIÉ handheld with a soft, dry cloth.

## Precautions

### Battery considerations

Follow these precautions when you charge your CLIÉ handheld.

#### On charging

- It takes about four hours to charge your CLIÉ handheld when the battery is empty.
- When you charge your CLIÉ handheld every day, it takes only a few minutes to charge the battery.
- You can view data or play audio files with your CLIÉ handheld while it is being charged.

#### On the battery life

- With a fully-charged battery, you can use your CLIÉ handheld for about fifteen days, 30 minutes each day if you do not use the audio playback function.
- If you set the HOLD switch to OFF and turn on the frontlight at the maximum level, you can play music continuously for about 3 hours.
- If you set the HOLD switch to ON, you can play music continuously for about 11 hours.
- Battery life varies depending on the conditions and environment where you use your CLIÉ handheld.
- If the battery in your CLIÉ handheld is fully discharged, all data stored on the DRAM (memory) is lost. Performing another HotSync operation once the battery is recharged can restore information saved from the last HotSync operation. For details, see “Backing up data to your computer through HotSync operation” on page 194.

#### Tips on conserving the battery

- Turn off the frontlight under good lighting conditions. For turning off the frontlight, see “Changing the frontlight level” on page 23.
- Change the automatic shut-off time setting so that your CLIÉ handheld will automatically turn off after a short period of inactivity. For details, see “Setting the automatic shut-off time” on page 176.
- If you play with the Audio Player, the battery may run out quickly.

Continued on next page

---

## Precautions

### When your battery runs out

- When the battery runs out, a caution message appears on the screen. If this occurs, perform a HotSync® operation to back up all your CLIÉ handheld's data on your computer. Then charge your CLIÉ handheld using the cradle. This helps prevent accidental data loss.
- If your CLIÉ handheld does not turn on when you press the POWER button, charge your CLIÉ handheld immediately.
- The remaining battery indicator does not always reflect the actual battery amount. The battery is designed to provide years of service under normal use. To prolong the battery's life, charge it frequently even when it is not fully discharged.
- You do not have to replace batteries. When the remaining battery indicator reads zero, place your CLIÉ handheld on the cradle and start charging immediately. Never disassemble your CLIÉ handheld to take out the battery.

### When the remaining battery indicator reads 0.

If your battery drains and you leave your CLIÉ handheld in an uncharged state for an extended period of time, all of the stored data will be erased. Sony suggests you charge your CLIÉ handheld frequently.

## Troubleshooting – Frequently Asked Questions

This section describes how to solve common problems you may encounter when using your CLIÉ handheld. If a problem arises, we suggest you charge your CLIÉ handheld. If the problem persists, review the following list of frequently asked questions for possible solutions before you contact Sony Customer Information Service Center.

### Note

Thousands of third-party add-on applications are available for the Palm OS® platform. Sony does not support third-party applications. If you have a problem with a third-party application, please contact the developer or publisher of that software.

### Operating problems

#### I do not see anything on my CLIÉ handheld's screen.

- ➔ Recharge your CLIÉ handheld. If your CLIÉ handheld still does not operate, try a soft reset. See “Resetting your Sony CLIÉ Handheld” (page 24).
- ➔ Make sure that the HOLD switch is not in the protect position.

#### I get a warning message telling me my CLIÉ handheld's memory is full.

- ➔ Purge records from Date Book and To Do List. This deletes To Do List items and past Date Book events from the memory of your CLIÉ handheld.
- ➔ Delete unused address entries, memos and records. If necessary, you can save a backup for these records. See explanations for each application.
- ➔ If you have installed additional applications on your CLIÉ handheld, remove them to recover memory. See “Removing add-on applications” in the Read This First manual.
- ➔ Some applications may not operate properly if the memory is insufficient.

Continued on next page

---

## Troubleshooting – Frequently Asked Questions

### **My CLIÉ handheld keeps turning itself off.**

- ➔ Your CLIÉ handheld is designed to turn itself off after a period of inactivity. This period can be set at one, two, or three minutes. See “Setting the automatic shut-off time” (page 176).

### **My CLIÉ handheld is not making any sounds.**

- ➔ Check the System Sound setting. See “Setting sounds” (page 177).
- ➔ You can only hear such sounds through the supplied headphones if you have them connected to the CLIÉ handheld.

### **My CLIÉ handheld has frozen.**

- ➔ Perform a soft reset. See “Resetting your Sony CLIÉ Handheld” (page 24).
- ➔ Make sure that the HOLD switch is not in the protect position.

### **I cannot use the Jog Dial navigator.**

- ➔ Check that the JogAssist feature is activated. See “Changing the Jog Dial™ navigator preferences” (page 170).

### **An error message is displayed repeatedly.**

- ➔ Follow the instructions of the message.

### **Frontlight turns on when I am adjusting the frontlight level.**

- ➔ When you are adjusting the frontlight level, the LCD frontlight turns on.



---

## Troubleshooting – Frequently Asked Questions

### Tapping and writing problems

**When I tap the buttons or screen icons, my CLIÉ handheld activates the wrong feature.**

- ➔ Calibrate the screen. See “What you can do with Preferences” (page 165).

**When I tap the Menu icon, nothing happens.**

- ➔ Not all applications or screens have menus. Try changing to a different application.

**I cannot get my CLIÉ handheld to recognize my handwriting.**

- ➔ For your CLIÉ handheld to recognize handwriting input with the stylus, you need to use Graffiti® writing. See “Using Graffiti® writing to enter data” (page 11).
- ➔ Make the Graffiti character strokes in the Graffiti writing area, not on the display part of the screen.
- ➔ Write Graffiti strokes for letters on the left-hand side, and the strokes for numbers on the right-hand side of the Graffiti writing area.
- ➔ Make sure that Graffiti has not shifted into extended or punctuation modes. See “Using Graffiti® writing to enter data” (page 11).
- ➔ For tips on successful Graffiti writing, see “Using Graffiti® writing to enter data” (page 11).

## Troubleshooting – Frequently Asked Questions

### Application problems

**I tapped the Today button, but it does not show the correct date.**

- ➔ Your CLIÉ handheld is not set to the current date. Make sure the Set Date box in the Date & Time Preferences screen displays the current date. See “Setting the Date & Time preferences” (page 173).
- ➔ Your CLIÉ handheld is not set to the correct time zone or the correct daylight saving setting. Make sure the Set Time Zone box and the Daylight Saving box in the Date & Time Preferences screen displays the correct setting. See “Setting the Date & Time preferences” (page 173).

**I know I entered some records, but they do not appear in the application.**

- ➔ Check the Categories drop-down list (upper-right corner). Choose All to display all of the records for the application.
- ➔ Check Security and confirm that Current Privacy is set to Show Records.
- ➔ In To Do List, tap Show and see if “Show Only Due Items” is selected.

**I am having problems listing memos the way I want to see them.**

- ➔ If you cannot manually arrange the order of the memos in the list screen, check the Memo Preferences setting. Make sure that Sort by is set to Manual.
- ➔ If you choose to view your memos alphabetically on the Palm™ Desktop for CLIÉ software and then perform a HotSync® operation, the memos on your CLIÉ handheld still appear in the order defined in the Memo Preferences setting. In other words, the sort settings you use with the Palm Desktop for CLIÉ software are not transferred to your CLIÉ handheld.

Continued on next page

---

## Troubleshooting – Frequently Asked Questions

### **I created an event in Date Book, but it does not appear in the Week view.**

- ➔ In the Week view, you cannot select overlapping events that have the same start time. If you have two or more events with the same start time, choose the Day view to see overlapping events.

### **I cannot find an image pasted in an Address Book entry.**

- ➔ If you use the Palm Desktop for CLIÉ software to change the category of the Address Book entry, you may not be able to locate the pasted image on your CLIÉ handheld. Change the category on your CLIÉ handheld.

### **I changed Currencies in Expense, but they do not appear in the application.**

- ➔ Retry setting Currencies in the Select Currencies dialog box.

### **I cannot start applications installed in the Memory Stick media.**

- ➔ In order to open such applications from the Application Launcher screen, a memory space exceeding the application size must be kept free on your CLIÉ handheld.
- ➔ Check if the application files or data files (such as image files) essential to starting the applications are stored under the “/PALM/Launcher/” directory of the Memory Stick media. If so, the CLIÉ handheld may not be able to access the data files or application files. Copy or move the file data to the CLIÉ handheld using MS Gate (**page 155, 157**).
- ➔ Check if you installed application or data from your computer to the CLIÉ handheld by a HotSync operation, and selected Memory Stick as their destination. If so, copy or move the data to your CLIÉ handheld (**page 155, 157**).

Continued on next page

## Troubleshooting – Frequently Asked Questions

### HotSync problems

#### **I cannot perform a HotSync operation. What should I check to make sure I am doing it correctly?**

- ➔ Check that the operating system of your computer is Windows® 98/98SE/Me/2000 Professional.
- ➔ Make sure that the cradle is connected securely to the computer.

#### **I performed a HotSync operation, but one of my applications did not synchronize.**

- ➔ Click the HotSync Manager and choose Custom. Check that the correct conduit is active.

#### **I am using Outlook® as my PIM, but I cannot do a HotSync operation.**

- ➔ Click the HotSync Manager and choose Custom. Check that the correct conduit is active.
- ➔ Check that the correct conduit is installed. Reinstall the HotSync Manager and make sure the correct conduit is selected.
- ➔ Make sure that Intellisync Lite is installed. See “Step 4: Installing the Palm Desktop for CLIÉ software onto your computer” in the Read This First manual for details.

#### **I cannot launch the HotSync Manager.**

- ➔ Make sure that you are not running another program, such as a network or facsimile applications, that use the serial port you selected in the Setup dialog box.
- ➔ Back up the Palm Desktop for CLIÉ software, uninstall it, and then reinstall it.
- ➔ Make sure that Local USB is selected.

Continued on next page

---

## Troubleshooting – Frequently Asked Questions

### I tried to perform a local HotSync operation, but it did not complete successfully.

#### Try each of these in turn:

- ➔ Make sure that HotSync Manager is running. If HotSync Manager is running, exit, and then restart it.
- ➔ Make sure that Local USB is selected in the HotSync Manager menu or the Palm Desktop for CLIÉ software menu.
- ➔ Check that the cradle is properly connected to the USB connector of your computer.
- ➔ Read the HotSync Log for the user account for which you are performing a HotSync operation.
- ➔ Make sure that your CLIÉ handheld is seated in the cradle correctly.
- ➔ Make sure that the gold-plated connectors on the cradle and your CLIÉ handheld are clean. Use a pencil eraser to clean them.

### I cannot perform a HotSync operation via modem.

#### Check the following on your computer:

- ➔ Make sure that your computer is turned on and that it does not shut down automatically as part of an energy-saving feature.
- ➔ Make sure that the modem connected to your computer is turned on and is connected to the outgoing phone line.
- ➔ Make sure that Modem is selected in the HotSync Manager menu.
- ➔ Make sure that the modem you are using with your CLIÉ handheld has an on-off switch. Your CLIÉ handheld cannot “wake up” a modem that has an auto-off feature.
- ➔ Make sure that the modem is connected properly to a serial port on your computer and it is connected to an incoming phone line.
- ➔ Confirm that the Setup String in the Setup dialog box configures your modem correctly. You may need to select a different Modem Type or enter a custom Setup String.

Continued on next page

---

## Troubleshooting – Frequently Asked Questions

- ➔ Confirm that the Speed setting in the Setup dialog box works for your modem. If you have problems using the “As Fast As Possible” option or a specific speed, try using a slower speed.
- ➔ Make sure that your modem resets before you try again. (Turn off your modem, wait a minute, then turn it on.)
- ➔ Confirm that the telephone cable is securely attached to your modem.
- ➔ Make sure that the dialing instruction dials the correct phone number.
- ➔ If you need to dial an outside line prefix, make sure you selected the Dial Prefix option on your CLIÉ handheld and have entered the correct code.

### **Check the following on your CLIÉ handheld:**

- ➔ If the telephone line you are using has Call Waiting, make sure you selected the Disable call waiting option under “Modem Sync Phone Setup” on your CLIÉ handheld and entered the correct code.
- ➔ Make sure that the telephone line you are using is not noisy. This can interrupt communications.
- ➔ Check the batteries in your modem and replace them if necessary.

### **I cannot perform an IR HotSync operation.**

- ➔ Make sure that the HotSync Manager is running and the Serial Port for local operations is set to the simulated port for infrared communication.
- ➔ On your CLIÉ handheld, make sure that the HotSync application is set to IR to a PC/Handheld.
- ➔ Make sure that the IR port of your CLIÉ handheld is aligned directly opposite to, and within a few inches of, the infrared device of your computer.

 *Continued on next page*

---

## Troubleshooting – Frequently Asked Questions

- ➔ IR HotSync operations do not work after you receive a low battery warning. Check the battery power of your CLIÉ handheld. Recharge the battery if necessary.
- ➔ If you have problems using a specific speed, select Prefs, Connection, IR to a PC/Handheld, Edit, and then Details. Then select a lower speed in the Details dialog box.

### **My CLIÉ handheld appears to freeze when I place it near my computer.**

- ➔ Move your CLIÉ handheld away from the computer's infrared port.
- ➔ Make sure that you turn the Beam Receive function off.

### **My CLIÉ handheld displays the message "Waiting for sender" when it is near my computer's infrared port.**

- ➔ Your computer's infrared port may be set to search automatically for the presence of other infrared devices. Do the following to turn off this option:
  - 1 In the Windows task bar, select Start, point to Settings, and then select Control Panel.
  - 2 Double-click Infrared.
  - 3 Click the Options tab.
  - 4 Clear the selection of the option "Search for and provide status for devices within range."
  - 5 Click Apply and OK.
- ➔ Move your CLIÉ handheld away from the computer's infrared port.
- ➔ Make sure that you turn the Beam Receive function off.

### **I cannot cancel a HotSync operation midway.**

- ➔ You may not be able to cancel a job a few seconds after you start a HotSync operation via a USB connection. Wait for a while and try again.

Continued on next page


---

## Troubleshooting – Frequently Asked Questions

### I cannot backup some data at a HotSync operation.

- ➔ Some data is designed not to be backed up by a HotSync operation.

### When I tap the HotSync button on the cradle, nothing happens on the Palm Desktop for CLIÉ software and my CLIÉ handheld times out.

- ➔ Check the Palm Desktop for CLIÉ software HotSync Setup options to confirm that you have the correct settings for local HotSync operations.
- ➔ Make a copy of your Palm folder. Uninstall, and then reinstall the Palm Desktop for CLIÉ software.
- ➔ Turn on your CLIÉ handheld and then tap the Home  icon. Tap the HotSync icon, then tap Local.

### When I perform a HotSync operation, my information does not transfer to the Palm Desktop for CLIÉ software.

- ➔ If you have performed a HotSync operation successfully, but you cannot find the data from your CLIÉ handheld on the Palm Desktop for CLIÉ software, check to see that you have the correct user name selected for viewing data.
- ➔ Click the HotSync Manager and then choose Custom. Check that all conduits are set to synchronize files.

### I want to synchronize my computer with more than one CLIÉ handheld.

- ➔ When the computer running the Palm Desktop for CLIÉ software is to synchronize with more than one CLIÉ handheld, each CLIÉ handheld must have a unique user name. Assign a unique user name to your CLIÉ handheld the first time you perform a HotSync operation.
- ➔ Please be aware that synchronizing with more than one CLIÉ handheld with the same user name causes unpredictable results, and potentially, loss of your personal information.




## Troubleshooting – Frequently Asked Questions

### Connection problems

#### I have trouble establishing a network connection to my ISP or dial-in server.

- ➔ Check the Expanded Service Connection Progress messages to identify the point where the connection fails in the log in procedure. Press the lower half of the scroll button at any point during log in to display these messages.
- ➔ Check the information in the Network Log so your ISP or your System Administrator can pinpoint where the log in procedure communication fails and why.

To view the Network Log, open the Network Preferences screen and tap the Menu  icon. Tap Options, then View Log. Tap the up and down arrows of the scroll bar to see the entire Network Log.

### Beaming problems

#### I cannot beam data to another Palm OS PDA.

- ➔ Confirm that your CLIÉ handheld and the other Palm OS PDA are between 4 inches (approximately 10 centimeters) and 8 inches (approximately 20 centimeters) apart, and that the path between the two handhelds is clear of obstacles. Beaming distance to other Palm OS PDA may be different.
- ➔ Move your CLIÉ handheld closer to the receiving handheld.
- ➔ Make sure that the Beam Receive function of the other Palm OS PDA is turned on.

Continued on next page

---

## Troubleshooting – Frequently Asked Questions

### When someone beams data to my CLIÉ handheld, I get a message telling me it is out of memory.

- ➔ Your CLIÉ handheld requires a memory space of at least approximately 1.1 times the data size that you are receiving.
- ➔ Perform a soft reset. See “Resetting your Sony CLIÉ Handheld” (page 24) for more information.

### I cannot beam Address Book data.

- ➔ You cannot beam Address Book data to a CLIÉ handheld in which Address Book has never been started. Start Address Book and then try beaming Address Book data again.
- ➔ You cannot beam images to a Palm OS PDA other than a Sony CLIÉ handheld.

## Recharging problems

### When I place my CLIÉ handheld on the cradle, it does not recharge.

- ➔ Confirm that your CLIÉ handheld is well seated in the cradle.
- ➔ Confirm that your cradle is plugged into an AC power adapter.
- ➔ Confirm that you are using the cradle and AC adapter that came with your CLIÉ handheld.
- ➔ Confirm your CLIÉ handheld is turned off. Otherwise, it will not fully charge.

---

## Troubleshooting – Frequently Asked Questions

### Password problems

#### I forgot the password, and my CLIÉ handheld is not locked.

- ➔ You can use Security to delete the password, but your CLIÉ handheld deletes all records marked as private. To back up all data including private records, perform a HotSync operation before you delete the password. Then follow these steps to restore your private records onto your CLIÉ handheld:
- 1 Perform a HotSync operation to back up your data.
  - 2 Tap Forgotten Password in Security to remove the password and delete all private records.
  - 3 Perform a HotSync operation to synchronize your data and restore the private records by transferring them from your computer to your CLIÉ handheld.

#### I forgot the password and my CLIÉ handheld is locked.

- ➔ If you assign a password and lock your CLIÉ handheld, you must perform a hard reset to continue using your CLIÉ handheld. See “Resetting your Sony CLIÉ Handheld” (page 24) for more information.

### Memory Stick® media problems

#### I cannot copy/move data from Memory Stick® media to my CLIÉ handheld.

- ➔ Your CLIÉ handheld requires a memory space of at least approximately 1.1 times the data size that you are copying/moving.

#### I inserted Memory Stick media, but the message “Please insert Memory Stick media” appears.

- ➔ Your Memory Stick media is not recognized by your CLIÉ handheld. Remove it and insert it again.

---

## Troubleshooting – Frequently Asked Questions

### **You cannot perform a HotSync operation before you install the Palm Desktop for CLIÉ software onto your computer**

If you perform a HotSync operation before you install the CLIÉ drivers, other drivers may be installed. Make sure to install the Palm Desktop for CLIÉ software first and then perform a HotSync operation.

### **Do not use a USB hub**

If you connect the cradle to your computer via a USB hub, you may not be able to perform a HotSync operation properly. Make sure to connect the cradle directly to a USB connector of your computer.

Some computers have the hub function built into their internal circuitry.

Contact your computer manufacturer if the USB connector of your computer is connected to an internal USB hub.

### **Check the USB driver being used**

If you are using or have used a communication device that uses a virtual COM port, its driver may conflict with the driver for your CLIÉ handheld, preventing a HotSync operation. Remove the relevant driver or reinstall the driver for your CLIÉ handheld. Or reinstall all software on your computer.

### **Check that the USB port of your computer is enabled**

If you are using Windows 95 pre-installed computer or another old type of computer equipped with a USB port, the USB port may be disabled by default. If another device such as a USB mouse cannot be used, check the BIOS setting of your computer.

Also check the Device Manager. Right-click on My Computer and then select Properties. Click Device Manager tab and check that USB controller is listed in the Device Manager screen.

---

# Getting Help

Sony offers several support options for your CLIÉ handheld. When you have questions or trouble, please refer to one of the following for a solution:

- **Read This First (supplied), Operating Instructions (this guide), and Add-on Application Guide (supplied)** explains how to use your CLIÉ handheld.
- **Your Sony CLIÉ Handheld support Web site**  
<http://www.sony.com/peg/support/>  
Provides the latest information on your CLIÉ handheld. On this Web site, you will find:
  - Frequently Asked Questions (FAQs)
  - Online Operating Instructions
  - Installation information
  - Software updates
  - Online knowledge base
- **The Sony e-mail support service** answers your questions by e-mail. Send your question, and a customer service representative will send you a reply. You can use the e-mail form at <http://www.sony.com/peg/support/>
- **The Sony fax-back service** provides you with answers to commonly asked questions. You can use this automated service to request a list of available topics and then select the topics that you want to receive. To contact the Sony fax-back service, call 1-877-760-SONY (7669) .
- **The Sony Customer Information Service Center** offers information about your CLIÉ handheld and other Sony products that work with your computer. To contact the Sony Customer Information Service Center, call 1-877-760-SONY (7669) .

---

# Specifications

**OS** Palm OS ver. 4.1

**CPU** Dragonball VZ 33MHz

## Memory

8 MB (DRAM)

4 MB (Flash memory)

User memory range:  
approx. 7 MB

## External input/output

Interface connector

IrDA (1.2)

Memory Stick slot

## LCD display

Frontlight TFT color display

320 × 320 dots, 65536 colors

## Power requirements

AC power adapter (supplied)

DC5.7V

(dedicated connector)

Battery

Lithium ion battery

(built-in)

## Battery life

15 days\* (based on an average  
of 30 minutes use per day)

\* The battery life span varies  
depending on the temperature  
and conditions of use.

## Audio frequency response

20 Hz to 20,000 Hz

## Audio recording time (when using a 128 MB Memory Stick media)

Approx. 120 min.

(bit rate: 132kbps)

Approx. 160 min.

(bit rate: 105kbps)

Approx. 240 min.

(bit rate: 66kbps)

## Audio Recording format

ATRAC3\*\*

MP3

\*\* The ATRAC3 content-protected  
music is supported when used  
with MagicGate Memory Stick  
media (not supplied).

## Sampling frequency

44.1 kHz

## Output

Headphones: stereo mini-jack

## Dimensions

Approx.  $2\frac{7}{8} \times 4\frac{3}{4} \times \frac{11}{16}$   
inches (71.0 x 118.5 x 16.8 mm)  
(w/h/d)

## Mass

Approx. 5.65 oz (160g)

(including the supplied stylus)

## Operating temperature

41°F - 95°F (5°C - 35°C)

Design and specifications are subject  
to change without notice.

---

# Limited Warranty Statement

## CLiÉ Personal Entertainment Organizer - Hardware Warranty

The limited warranty on the hardware of your CLiÉ Personal Entertainment Organizer product (the “Product”) covers parts and labor against defects in material or workmanship for a period of three (3) months from the original date of purchase for Products purchased in the United States (excluding territories) or Canada from SONY or a SONY authorized dealer. You can extend the warranty period for an additional nine (9) months by registering your Product within ninety (90) days of the purchase date. To register with Sony, register online at <http://www.sony.com/peg/support> for United States sales (excluding territories) or <http://www.sonymstyle.ca> for Canadian sales. You may also register by calling the respective phone numbers shown below. Once you register your Product, the limited warranty period is twelve (12) months from the original date of purchase.

For the purpose of this Limited Warranty "SONY" means SONY ELECTRONICS INC. for Products purchased in the United States (excluding territories) and SONY OF CANADA LTD. for Products purchased in Canada. SONY warrants the hardware of your Product against defects in material or workmanship as follows:

1. Labor: For a period of ninety (90) calendar days from the original date of purchase in the United States (excluding territories) or Canada from SONY or a SONY authorized dealer, SONY will, in the country in which the Product was purchased, repair defects in material or workmanship in the hardware of the Product, at no charge, or pay the associated labor charges to a SONY authorized service facility. The ninety (90) day warranty period is extendible only to the original purchaser, for an additional period of nine (9) months, for a total of twelve (12) months from date of purchase when the Product is registered prior to the expiry of ninety (90) days from the original date of purchase. After the applicable labor warranty period, you must pay for all labor charges.
2. Parts: If your Product in the United States (excluding territories) or Canada, from SONY or an authorized SONY dealer, for a period of ninety (90) calendar days from the original date of purchase, dealer, SONY will supply, at no charge, in the country in which the Product was purchased, new or rebuilt, at SONY's option, replacement parts in exchange for defective hardware parts. Any replacement hardware parts will be warranted for the remainder of the original warranty period or ninety (90) calendar days from installation by SONY's authorized service facility, whichever is longer. The ninety (90) day warranty period is extendible only to the original purchaser, for an additional period of nine (9) months, for a total of twelve (12) months from date of purchase when the Product is registered prior to the expiry of ninety (90) days from the original date of purchase. After the applicable parts warranty period, you must pay for any replacement parts. All defective parts replaced under this Limited Warranty will become the property of SONY.

---

## Limited Warranty Statement

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover the technical assistance or support for hardware or software usage and it does not cover any software products whether or not contained in the Product. SONY excludes all warranties and conditions, express or implied, in respect of any software provided with the Product and any such software is provided AS IS unless expressly provided for in any enclosed software limited warranty. Please refer to the End User License Agreement(s) included with the Product for your rights and obligations with respect to the software.

This Limited Warranty is non-transferable. Proof of purchase in the form of a bill of sale (which is evidence that the Product is within the warranty period) must be presented to obtain warranty service.

In addition, expedited delivery may be available for certain, limited replacement parts. Where expedited delivery service is available, you will be required to provide SONY with a credit card authorization to bill your credit card in the event you fail to return the original part(s) in the postage-paid envelope we provide. The credit card will be charged an amount equal to SONY's current list price for the part(s) only if the original part(s) has not been returned to Sony within thirty (30) days of the delivery of the replacement part(s). With respect to certain components, you may be entitled to express warranty service during the warranty period, subject to certain restrictions. Please contact SONY as indicated below for further information.

With respect of certain components you may be entitled to express warranty service during the warranty period, subject to certain restriction. Please contact SONY as indicated below for further information.

**With respect to all service provided, it is solely your responsibility, prior to Product being serviced, to backup all data stored in its memory. It is likely that the contents of the memory will be lost or reformatted in the course of service and SONY will not be responsible for any damage to or loss of any programs, data or other information stored on any media or any part of any Product serviced hereunder or any incidental, indirect or consequential damages resulting therefrom.**

**IF DURING THE REPAIR OF THE PRODUCT THE CONTENTS OF THE MEMORY ARE ALTERED, DELETED OR IN ANY WAY MODIFIED, SONY IS NOT RESPONSIBLE WHATSOEVER. YOUR PRODUCT WILL BE RETURNED TO YOU CONFIGURED AS ORIGINALLY PURCHASED (SUBJECT TO AVAILABILITY OF SOFTWARE AND ANY SUBSEQUENT REVISION).**



---

## Limited Warranty Statement

**Be sure to remove all third party hardware, software, features, parts, options, alterations, and attachments not warranted by SONY prior to sending the Product to SONY for service. SONY is not liable for any loss or damage to these items.**

This Limited Warranty does not cover any consumable items supplied with the Product; cosmetic damages; damage or loss to any software programs, data, or media; or damage due to (1) acts of God, accident misuse, abuse, negligence, commercial use or modifications of this Product; (2) improper operation or maintenance of this Product; (3) connection to improper voltage supply; or (4) attempted repair by any party other than a SONY authorized service facility. This warranty does not cover physical damage to the surface of the Product, including cracks or scratches on the LCD touchscreen or outside casing. This Limited Warranty does not apply when the malfunction results from the use of the Product in conjunction with accessories, products or ancillary or peripheral equipment, or where it is determined by SONY that there is no fault with the Product itself. This Limited Warranty is valid only in the United States (excluding territories) and Canada. This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product.

Repair or replacement of defective parts or hardware as provided under this Limited Warranty is the exclusive remedy of the consumer. **SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR OTHER DAMAGES INCLUDING BUT NOT LIMITED TO, LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWNTIME AND PURCHASER'S TIME OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITION, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER LEGAL THEORY RELATED TO THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.**

Some jurisdictions do not allow the exclusion or limitation of incidental, indirect or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specified legal rights, and you may have other rights that vary in different jurisdictions.

---

## Limited Warranty Statement

**Technical Support:** Although technical support is not provided free of charge under this Limited Warranty, SONY has established a telephone number for technical support. **Charges may apply for technical support**, unless and to the extent that free technical support for a limited period is provided in writing as a feature of your Product. Prior to placing your call, please have available the model and serial number for your Product, date of purchase, a list of all options installed in your Product and a detailed description of the problem.

For Product support, online knowledge base, frequently asked questions, and free updates via the Internet: <http://www.sony.com/peg/support/>. For Product information, service assistance, resolution of a service problem, or technical assistance, call: 1-877-760-SONY (7669) in the United States (excluding territories) or 1-866-557-SONY (7669) in Canada.

### **It Is Important That You Register Your CLiÉ Personal Entertainment Organizer**

By registering, you receive the following benefits:

1. Your ninety (90) day limited hardware warranty is automatically extended to a full one (1) year from the original date of purchase.
2. One (1)Year Hardware Telephone Support.

**Save this statement for future reference.**

©2001 Sony Electronics Inc. Reproduction in whole or in part without written permission is prohibited. All rights reserved. SONY is a registered trademark, and CLiÉ is a trademark, of Sony Corporation.

# Index

## A

Address Book	
Editing .....	53
Entering a new entry .....	47
Pasting an image .....	53
Sorting entries .....	51
Using menus .....	59
Viewing entries .....	49
Adjusting the frontlight level .....	23
Application	
Categorizing .....	90
Launcher (home) screen .....	89
Selecting/Starting .....	89
Setting applicaitons to start automatically .....	145
Starting an application in Memory Stick media .....	90
Troubleshooting .....	210
Application buttons	
Assigning applications to buttons .....	167
Selecting applications .....	89
Attaching notes .....	106
Automatic shut-off time .....	176

## B

BACK button .....	7, 170
Backing up data	
By a HotSync operation (to computer) ...	194
By MS Backup (to Memory Stick media)	195
By MS Gate (to Memory Stick media) ....	197
Battery considerations	
Tips and notes .....	205
Troubleshooting .....	218
Battery life .....	205

Beam Receive feature .....	178
Beaming	
Between two handhelds .....	138
Receiving data .....	140
Sending items or categories .....	139
Tips on beaming .....	140
Troubleshooting .....	217

## C

Calculator	
Using buttons .....	88
Using calculator .....	87
Using menus .....	88
Card Info .....	146
Categories	
Categorizing applications .....	90
Categorizing items .....	75, 93
New categories .....	95
Viewing items by categories	50, 62, 72, 94
Choosing fonts .....	109
Cleaning .....	204
Copying	
From CLIÉ handheld to Memory Stick media .....	153
From Memory Stick media to CLIÉ handheld .....	155
Restoring backup to your CLIÉ handheld .....	198
Cradle .....	112

Continued on next page

# Index

## D

Date Book	
Agenda view .....	38
Day view .....	34
Editing .....	40
Month view .....	37
Repeating or continuous events .....	30
Scheduling an event .....	27
Setting alarm .....	42
Using menus .....	45
Week view .....	35
Deleting	
Data in the Memory Stick media .....	158
Items .....	44, 57, 66, 74, 107
Digitizer .....	165
Dragging .....	9

## E

Edit menu .....	108
Entering data	
Computer keyboard .....	22
Graffiti writing .....	11
Onscreen keyboard .....	20
Expense	
Creating/printing an Expense report .....	82
Currency list .....	83
Default currency .....	84
Editing items .....	79
New currency symbol .....	85
Recording a new item .....	77
Using menus .....	86

## F

FAQ(Frequently Asked Questions) .....	207
File Link .....	136
Finding items	
Find option .....	96
Phone Lookup .....	98
Formats .....	171
Formatting the Memory Stick media ..	147
Frontlight	
Adjusting the level .....	23
Turning on and off .....	23
Full-screen dragging .....	9, 13, 168

## G

Getting Help .....	221
Graffiti writing	
Accented characters .....	18
Alphabets .....	12, 14
Basic procedures .....	12
Letters/numbers writing area .....	11
Non-English characters .....	18
Numbers .....	15
Onscreen help .....	13
Overview .....	11
Punctuation marks .....	16
ShortCuts .....	19, 180
Symbols and extended characters .....	17

Continued on next page

## Index

### H

- Hard reset ..... 25
- HOLD switch ..... 7
- HotSync button ..... 112, 169
- HotSync operation
  - File Link ..... 136
  - LANSync ..... 129, 132
  - Network Modem Sync ..... 129
  - Overview ..... 111
  - Selecting Conduit ..... 118
  - Setting setup options ..... 116
  - Troubleshooting ..... 212
  - Via cradle (Local HotSync) ..... 112
  - Via IR port ..... 120
  - Via modem ..... 123
  - Via network ..... 129

### I

- Importing data from a Windows application ..... 134
- IR port ..... 120, 138

### J

- Jog Dial navigator
  - Changing preferences ..... 170
  - Compatible applications ..... 10
  - Displaying the Pop-up application menu ..... 92
  - How to use (pressing/rotating) ..... 10
  - JogAssist function ..... 170
- JogAssist function ..... 170

### L

- Limited Warranty Statement ..... 223
- Locking your CLIÉ handheld ..... 103
- Lookup ..... 52

### M

- Making items private .. 43, 75, 100, 105
- Memo Pad
  - Creating new memos ..... 69
  - Editing memos ..... 74
  - Reviewing memos ..... 71
  - Using menus ..... 76
- Memory Stick media
  - Attaching a name ..... 146
  - Default folder ..... 152
  - Formatting ..... 147
  - Inserting and removing ..... 142
  - Installing applications without MS Gate 162
  - Notes on using ..... 143
  - Overview ..... 141
  - Protecting data ..... 144
  - Starting an application ..... 145
  - Troubleshooting ..... 219
  - Types ..... 141
  - Viewing media information ..... 146
- MS Backup
  - Backing up all CLIÉ data to Memory Stick media ..... 195
- MS Gate
  - Copying CLIÉ data to Memory Stick media ..... 153
  - Copying Memory Stick data to CLIÉ handheld ..... 155
  - Deleting data ..... 158
  - Formatting the Memory Stick media ..... 147
  - Notes on moving or copying data ..... 151
  - Starting ..... 149
  - Transferring data between two CLIÉ handhelds ..... 201
  - Using menus ..... 160

Continued on next page

# Index

## N

Network preferences .....	182
Log in script .....	188
Password .....	183
Selecting a connection .....	184
Selecting a service .....	182
Service template .....	185
Telephone setting .....	184
User name .....	183
Using menus .....	191
Notes on use .....	204

## O

Onscreen keyboard .....	20
Owner information .....	179

## P

Palm Desktop for CLIÉ	
Basic operations .....	114
Locating screen components .....	115
Starting .....	114
Password	
Deleting a password .....	101
Entering a password .....	100, 104, 183
Locking your CLIÉ handheld .....	103
Troubleshooting .....	219
Phone Lookup .....	98
PIM (Personal Information Management)	
Address Book .....	47
Calc (Calculator) .....	87
Common tasks .....	89

Date Book .....	27
Edit menu .....	108
Expense .....	77
Memo Pad .....	69
To Do List .....	61
POWER button .....	7
Precautions .....	204
Preferences	
Beam Receive feature .....	178
Buttons .....	167
Date & Time preferences .....	173
Digitizer .....	165
Formats .....	171
Full-screen pen stroke activities .....	168
General preferences .....	176
Graffiti ShortCuts .....	180
HotSync button .....	169
Network preferences .....	182
Overview .....	165
Owner information .....	179
Password .....	183
Setting daylight saving time .....	175
Setting the date .....	173
Setting the time .....	174
Setting the time zone .....	175
Time, date, and number formats .....	172
User name .....	183
Protecting data .....	100
Purging records .....	107

Continued on next page

# Index

## R

### Reset

- Hard reset ..... 25
- Reset button ..... 25
- Soft reset ..... 24

## S

Security ..... 100

Selecting text in an application ..... 108

### Setting

- Automatic shut-off time ..... 176
- Date ..... 173
- Daylight saving time ..... 175
- Number formats ..... 172
- Priorities ..... 64
- Sound ..... 177
- Time ..... 174
- Time zone ..... 175

Soft reset ..... 24

Sorting items ..... 51, 72

Specifications ..... 222

### Stylus

- How to use ..... 8
- Taking out the reset tip ..... 24

Synchronizing with external data ..... 136

## T

Tapping ..... 8

### To Do List

- Changing appearance ..... 67
- Checking off items ..... 63
- Creating items ..... 61

Setting priorities ..... 64

Setting the due data ..... 65

Using menus ..... 68

Viewing items ..... 62

### Transferring data between two CLIÉ handhelds

Using Memory Stick media ..... 201

Using Palm Desktop for CLIÉ ..... 199

### Troubleshooting

Applications ..... 210

Beaming ..... 217

Connection ..... 217

HotSync operations ..... 212

Memory Stick media ..... 219

Operations ..... 207

Password ..... 219

Recharging ..... 218

Tapping and writing ..... 209

Turning your CLIÉ handheld on and off ... 7

## U

USB driver ..... 220

User name ..... 183

For the latest support information,  
check our official Sony CLIE Web site

**<http://www.sony.com/clie/>**

<http://www.world.sony.com/>